

Disclaimer

The following online version of the Owner's Manual describes all models as well as all the standard and optional equipment of your vehicle. Country-specific differences in the language variants are possible. Note that your vehicle may not be fitted with all features described. This is also the case for safety-relevant systems and functions. Please contact your authorised Mercedes-Benz dealer if you would like to have a printed Owner's Manual for other vehicle models and vehicle model years. The online version is the current valid Owner's Manual version. Possible variations to your vehicle may not be taken into account as Mercedes-Benz constantly updates their vehicles and equipment to the state of the art and introduces changes in design and equipment. Please also read the printed Owner's Manual, any supplementary documents and the digital Owner's Manual in the vehicle.

Copyright

All Rights Reserved. All texts, images, graphics, are subject to Copyright and other laws for the protection of intellectual property. They may not be copied for commercial purposes or for transmission, nor changed and used on other websites.





GLC

Owner's manual

Mercedes-Benz



Front passenger airbag warning



⚠ WARNING Risk of injury or death due to an enabled co-driver airbag

If the co-driver airbag is enabled, a child on the co-driver seat may be struck by the co-driver airbag during an accident.

▶ **NEVER** use a rearward-facing child restraint system on a seat with an **ENABLED FRONT AIRBAG**. **DEATH** or **SERIOUS INJURY** to the **CHILD** can occur.

Observe the chapter "Children in the vehicle".

Thank you for buying Mercedes-Benz

Before you first drive off, read this operator's manual carefully and familiarise yourself with your vehicle. For your own safety and a longer operating lifespan of the vehicle, follow the instructions and warning notices in this operator's manual. Disregarding them may lead to damage to the vehicle or injury to people.

The standard equipment and product description of your vehicle may vary and depends on the following factors:

- Model
- Order
- National version
- Availability

Your vehicle may therefore differ, in individual cases, from that shown in the descriptions and illustrations.

The illustrations in this operator's manual show a left-hand drive vehicle. On right-hand drive vehicles, the layout of vehicle parts and controls differs accordingly.

Mercedes-Benz is constantly developing its vehicles further.

Mercedes-Benz therefore reserves the right to introduce changes in the following areas:

- Design
- Equipment
- Technical features

The following documents are integral parts of the vehicle:

- Digital operator's manual
- Printed operator's manual
- Service booklet
- Equipment-dependent supplements
- Supplementary documents

Keep these documents in the vehicle at all times. Ensure that all documents are in the vehicle or passed on in the event of sale or rental.

2545844301Z102



Symbols	5	Declarations of conformity and notes on driving in different countries	26	Opening and closing	80
At a glance	6	Diagnostics connection	35	Key	80
Cockpit	6	Qualified specialist workshop	36	Doors	84
Cockpit (plug-in hybrid)	8	Vehicle registration	36	Running boards	88
Indicator and warning lamps	10	Correct use of the vehicle	37	Load compartment	89
Overhead control panel	12	Information on the REACH regulation	37	Side windows	94
Door operating unit and seat adjustment	14	Notes for persons with electronic medical aids	37	Sliding sunroof	98
Emergencies and breakdowns	16	Implied warranty	38	Roller sunblinds	102
Digital Owner's Manual	18	QR code for rescue card	38	Anti-theft protection	102
Calling up the Digital Owner's Manual	18	Data storage	38	Seats and stowing	105
General notes	19	Copyright	42	Notes on the correct driver's seat position ..	105
Protection of the environment	19	Occupant safety	43	Notes on grab handles	105
Take-back of end-of-life vehicles	19	Restraint system	43	Seats	106
Mercedes-Benz GenuineParts	20	Seat belts	45	Steering wheel	115
Owner's Manual	21	Airbags	49	Easy entry and exit feature	117
Touch-sensitive controls	21	PRE-SAFE® system	57	Memory function	119
Mercedes me App	22	Automatic measures after an accident	58	Stowage areas	120
Operating safety	22	Safely transporting children in the vehicle	59	Cup holders	134
Notes on assembling the number plate on the front licence plate holder	25	Notes on pets in the vehicle	78	Sockets	137
				Wireless charging of the mobile phone and connection with the exterior aerial	138

Light and sight	140
Exterior lighting	140
Interior lighting	152
Windscreen wipers and windscreen washer system	153
Mirrors	157

Climate control	161
Overview of climate control systems	161
Operating the climate control system	163

Driving and parking	176
Driving	176
DYNAMIC SELECT button	197
Automatic transmission	202
Function of 4MATIC	206
Refuelling	206
Charging the high-voltage battery (plug-in hybrid)	213
Parking	231
Driving and driving safety systems	237
Trailer hitch	310
Bicycle rack function	315
Vehicle towing instructions	317

Driver display	319
Notes on the driver's display	319
Operating the driver's display	319
Driver display menus	320
Head-up display	321
Overview of status displays on the driver's display	323

MBUX multimedia system	325
Overview and operation	325
System settings	338
AMG TRACK PACE	342
Off-road menu	347
Navigation and traffic	348
Telephone	357
Mercedes me app	360
Mercedes-Benz emergency call system	370
Radio & media	377
Sound settings	381

Maintenance and care	382
ASSYST PLUS service interval display	382
Maintenance Management	383
Telediagnosics	383

Engine compartment	384
Cleaning and care	390

Breakdown assistance	399
Emergency	399
Flat tyre	401
Battery (vehicle)	406
Tow-starting or towing away	413
Electrical fuses	417

Wheels and tyres	421
Notes on noise or unusual handling characteristics	421
Notes on regularly inspecting wheels and tyres	421
Notes on snow chains	421
Activating or deactivating snow chain mode	422
Tyre pressure	422
Wheel change	426
Emergency spare wheel	435

Technical data	437
Notes on technical data	437
On-board electronics	437
Regulatory radio identification and notes	439
Vehicle identification plate, VIN and engine number overview	439
Operating fluids	441
Vehicle data	450
Trailer hitch	454

Display messages and warning/indicator lamps	458
Display messages	458
Warning and indicator lamps	538

Index	558
--------------------	------------

In this Owner's Manual, you will find the following symbols:

⚠ WARNING Danger due to not observing the warning notices

Warning notices draw your attention to hazards that may endanger your health or life, or the health or life of others.

▶ Observe the warning notices.

🌿 ENVIRONMENTAL NOTE Environmental damage due to failure to observe environmental notes

Environmental notes include information on environmentally responsible behaviour or environmentally responsible disposal.

▶ Observe environmental notes.

❗ NOTE Damage to property due to failure to observe notes on material damage

Notes on material damage inform you of risks which may lead to your vehicle being damaged.

▶ Observe notes on material damage.

i These symbols indicate useful instructions or further information that could be helpful to you.

▶ Instruction


(→ page) Further information on a topic

Display Display in the central display

↪ Highest menu level, which is to be selected in the multimedia system


➡ Relevant submenus, which are to be selected in the multimedia system

* Indicates a cause

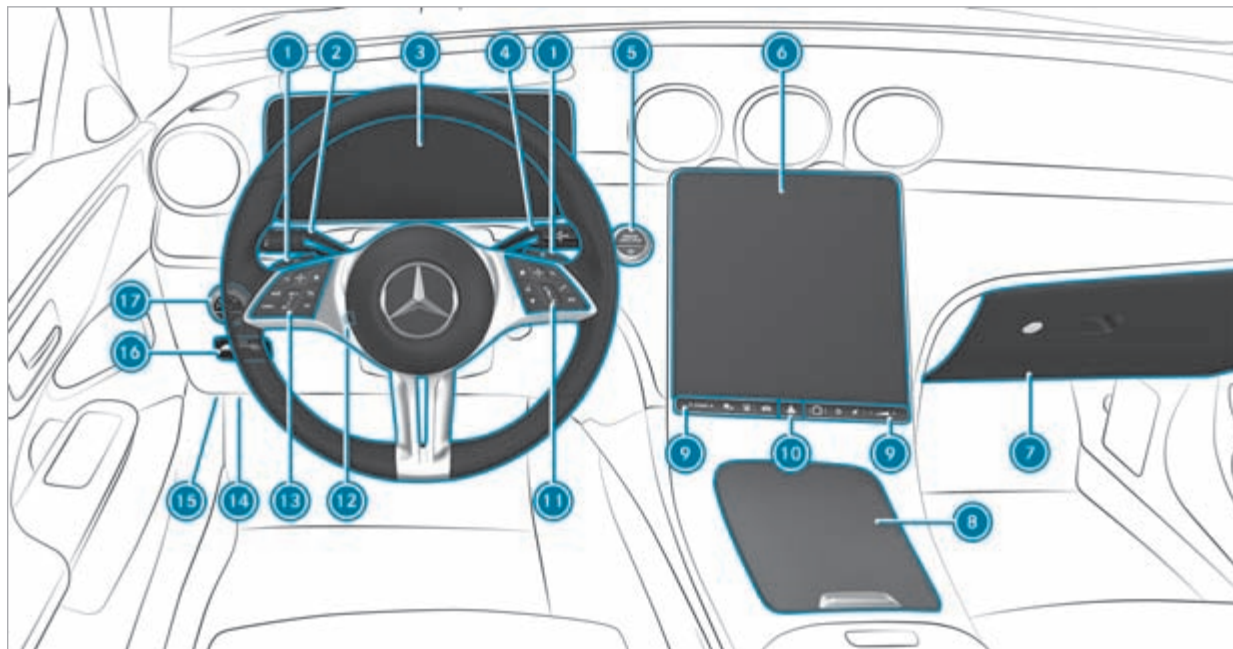

Left-hand-drive vehicles


①	Steering wheel gearshift paddles	→	204	①	Switching the MBUX multimedia system on/off	→	325
②	Combination switch	→	142	②	Switching sound on/off	→	325
③	Driver's display	→	319	③	Adjusting the volume	→	325
④	DIRECT SELECT lever	→	202	⑩	Hazard warning light system	→	143
⑤	 Start/stop button	→	180	⑪	Control panel for the MBUX multimedia system	→	331
	 ECO start/stop function	→	191	⑫	Adjusts the steering wheel	→	116
⑥	Central display	→	325	⑬	Control panel:		
⑦	Glove compartment	→	123		Driver's display	→	319
⑧	Stowage compartment	→	123		Cruise control or variable limiter	→	247
⑨	Switch panel for:				 Active Distance Assist DISTRONIC	→	252
	 DYNAMIC SELECT button	→	199	⑭	Diagnostics connection	→	35
	 Active Parking Assist	→	301	⑮	Opens the bonnet	→	384
	 Switching the stationary heater on/off	→	173	⑯	 Electric parking brake	→	233
	 Quick vehicle access			⑰	Light switch	→	140
	 Fingerprint sensor						

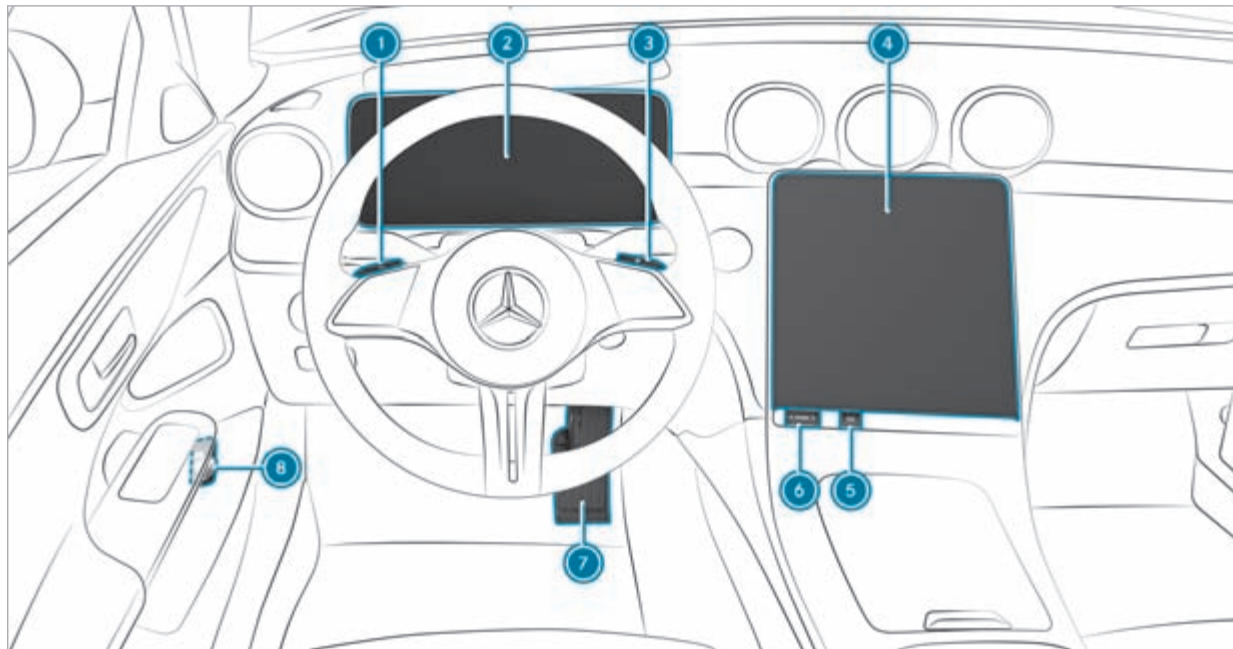

Left-hand-drive vehicles


①	 Increases recuperation	→	194
②	Driver's display:		
	 Operational readiness	→	323
	Power meter		
	Trip computer		
	ECO Assist	→	192
③	 Reduces recuperation	→	194

④	Central display:		
	Plug-in hybrid settings		
	Energy flow display		
⑤	Sets charging times		
⑥	 DYNAMIC SELECT button	→	197
⑦	 Haptic accelerator pedal	→	197
⑧	 Depressurises the fuel tank	→	210

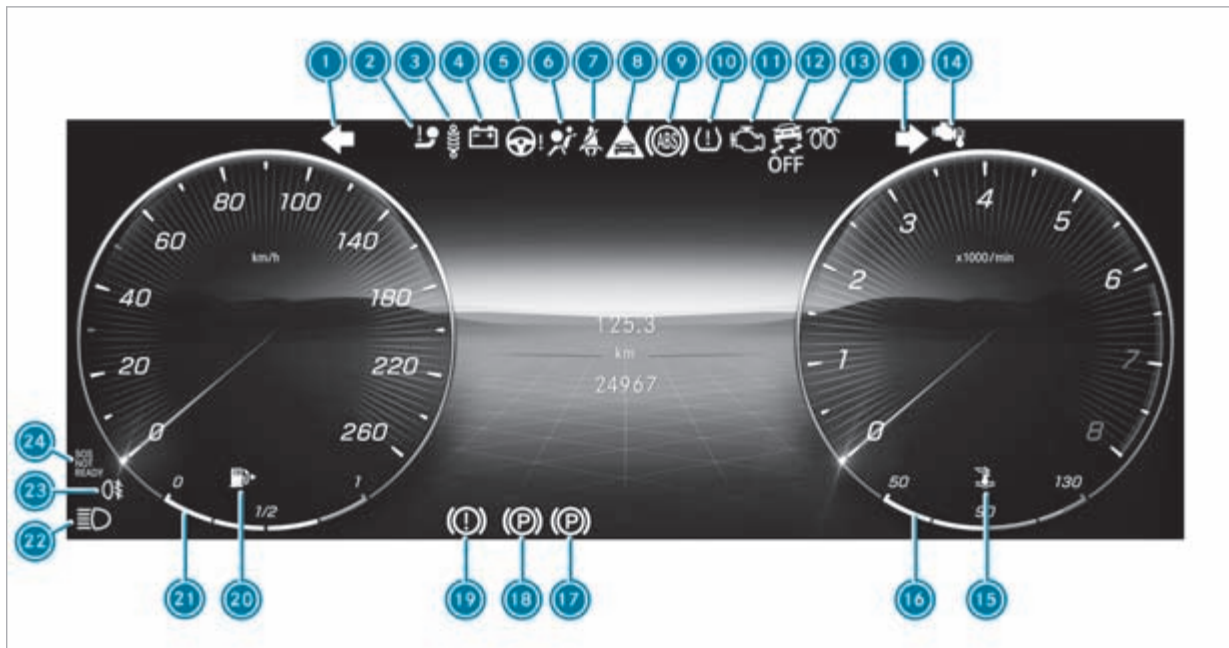


Driver's display


①		Turn signal lights	→	142
②		Trailer hitch	→	542
③		Suspension (red)	→	550
		Suspension (yellow)	→	550
④		Electrical fault	→	545
⑤		Power steering (red)	→	542
		Power steering (yellow)	→	542
		Rear axle steering (yellow)	→	542
⑥		Restraint system	→	540
⑦		Seat belt	→	540
⑧		Distance warning	→	550
⑨		ABS	→	553
⑩		Tyre pressure monitoring system	→	556
⑪		Engine diagnostics	→	545
⑫		ESP® OFF	→	553
		ESP®	→	553
⑬		Diesel engine: preglow		
⑭		Petrol engine: reduced power	→	201
⑮		Coolant temperature	→	545
⑯		Coolant temperature display		
⑰		Electric parking brake (yellow)	→	548
⑱		Electric parking brake (red)	→	548
⑲		Brakes (red)	→	548
		Brakes (yellow)	→	548
⑳		Reserve fuel with fuel filler flap location indicator	→	545
㉑		Fuel level		
㉒		High beam	→	142
		Low beam	→	140
		Standing lights	→	140
㉓		Rear fog light	→	141
㉔		Mercedes-Benz emergency call system	→	555

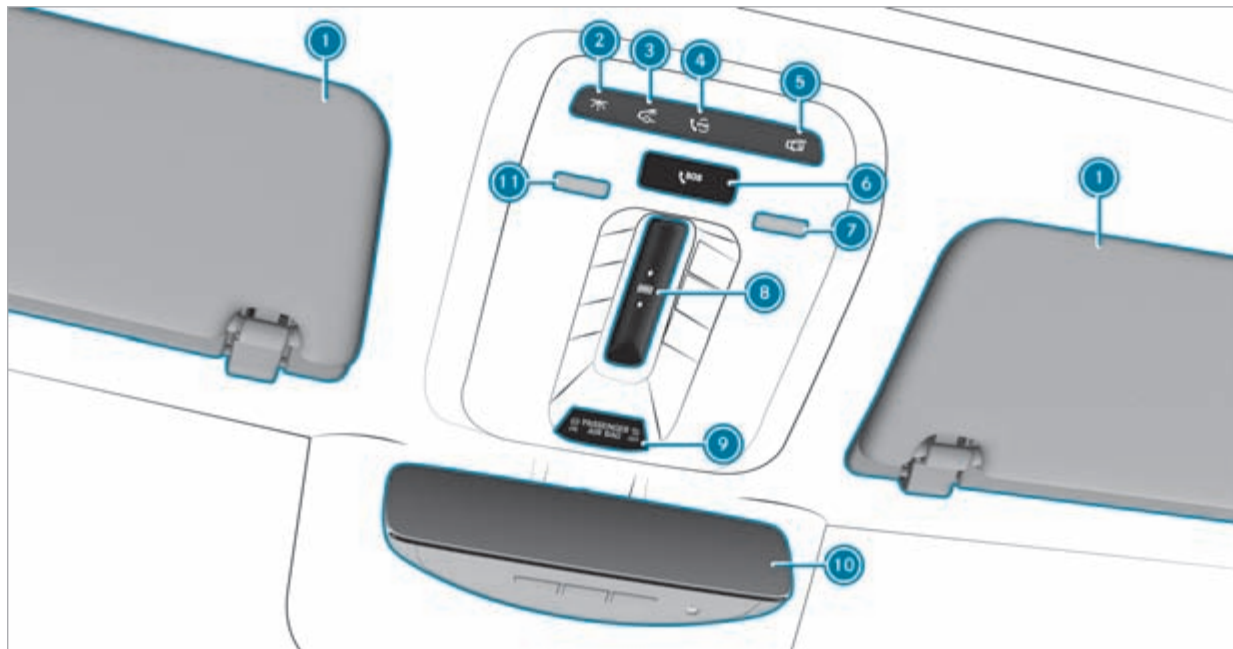

①	Sun visors (folding, available in extendable design as an optional extra)		
②	 Switches the front interior lighting on/off	→	152
③	 Switches the rear interior lighting on/off	→	152
④	 me button	→	360
⑤	 Switches automatic interior lighting control on/off	→	152
⑥	 SOS button	→	360
⑦	Switches the right-hand reading lamp on/off	→	152
⑧	 Opens/closes the panorama sliding sunroof	→	98
	 Opens/closes the panorama sliding sunroof roller sunblind	→	98
⑨	PASSENGER AIR BAG indicator lamps	→	54
⑩	Inside rearview mirror	→	158
⑪	Switches the left-hand reading lamp on/off	→	152

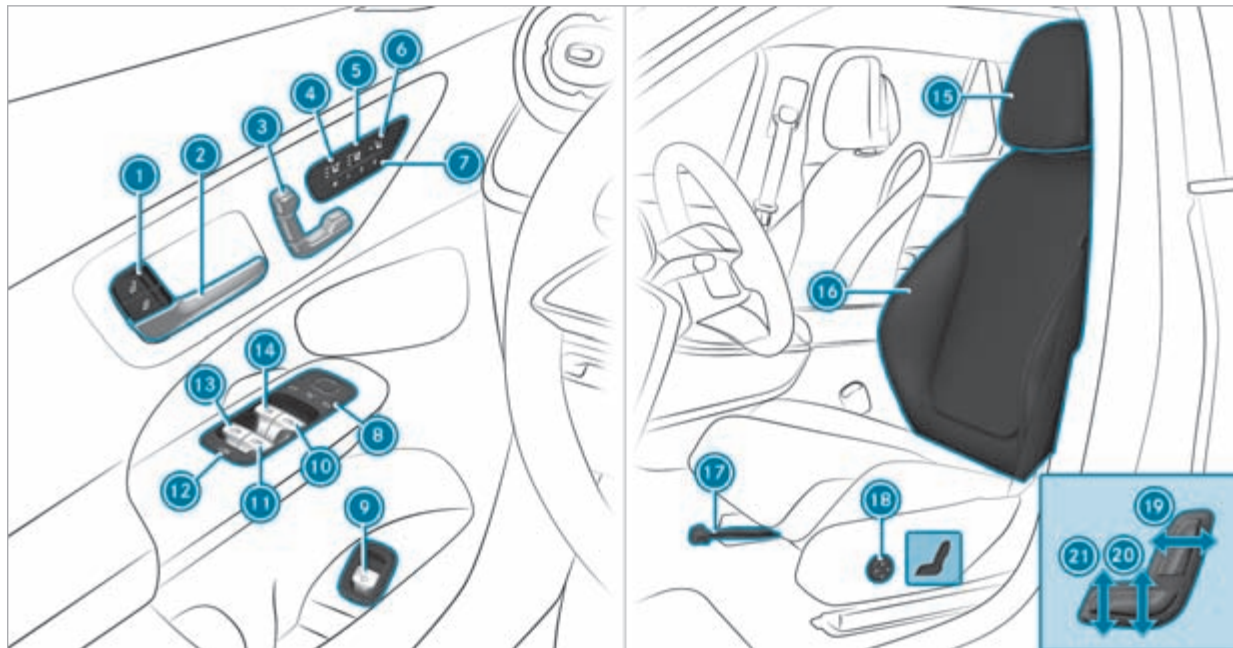

①	 	Locks/unlocks the vehicle	→	85	⑫		Opens/closes the rear left side window	→	94
②		Opens the door	→	85	⑬		Opens/closes the left side window	→	94
③		Adjusts the seats electrically	→	108	⑭		Adjusts the head restraints	→	109
④		Switching the seat heating on/off	→	113	⑮		Seat adjustment using the multimedia system	→	112
⑤		Switches the seat ventilation on/off	→	114	⑯		Adjusts the seat fore-and-aft position	→	106
⑥		Operating the memory function	→	120	⑰		Adjusting the 4-way lumbar support	→	109
⑦		Operates the outside mirrors	→	157	⑱		Adjusting the seat backrest inclination	→	106
⑧		Opens/closes the tailgate	→	89	⑲		Adjusting the seat height	→	106
⑨		Opens/closes the right side window	→	94	⑳		Adjusts the seat cushion inclination	→	106
⑩		Opens/closes the rear right side window	→	94					
⑪		Child safety lock for the rear side windows	→	78					

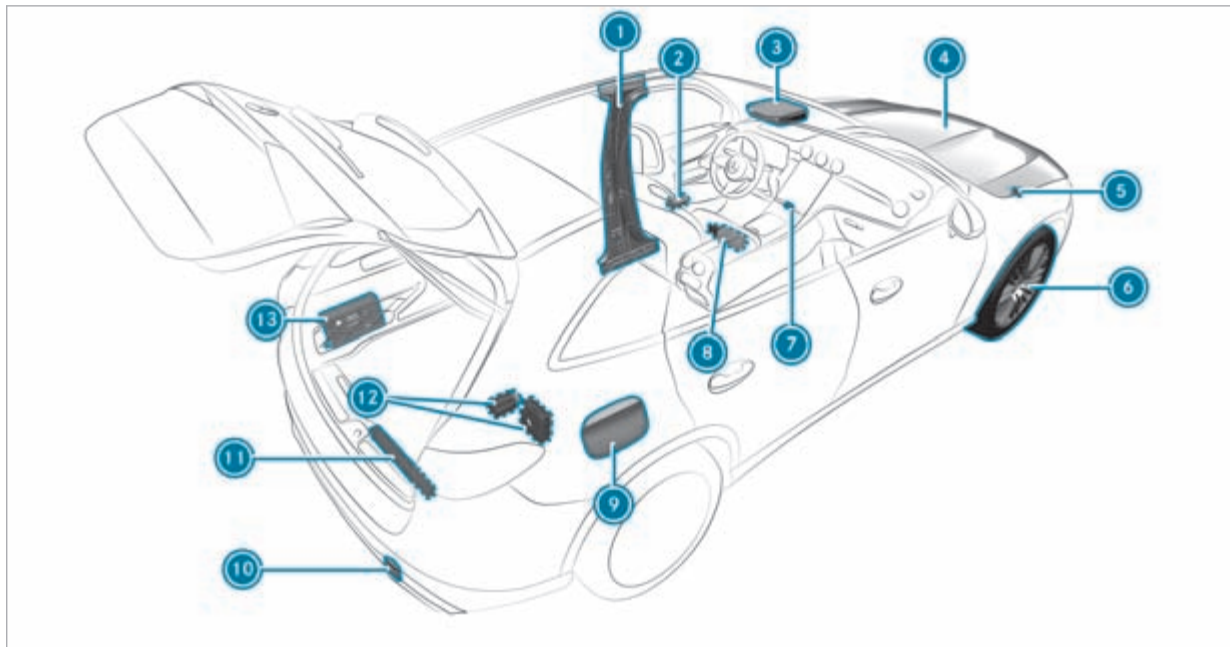

① B-pillar with:		
QR code for accessing the rescue card	→	38
② Safety vests	→	399
③  me button	→	360
 SOS button	→	360
④ To check and top up operating fluids	→	441
Starting assistance	→	411
⑤ Tow-starting or towing away	→	414
⑥ Flat tyre	→	401
⑦  Hazard warning light system	→	143

⑧ Fire extinguisher	→	400
⑨ Fuel filler flap with:		
information label on fuel type	→	206
information label on tyre pressure	→	423
QR code for accessing the rescue card	→	38
⑩ Tow-starting or towing away	→	414
⑪ Warning triangle	→	399
⑫ TIREFIT kit	→	402
⑬ First-aid kit (soft sided)	→	400

Calling up the Digital Owner's Manual


Multimedia system:

- ➔  ➔ Settings ➔ Info
- ➔ Owner's Manual
- ➔ Open Digital Owner's Manual

The Digital Owner's Manual describes the functions and operation of the vehicle and the multimedia system.

- ▶ Select one of the following menu items in the Digital Owner's Manual:
 - **Quick start:** find the first steps towards adjusting your seat (driver's side).
 - **Tips:** find information that prepares you for certain everyday situations with your vehicle.
 - **Animations:** watch animations of the vehicle functions.
 - **Messages:** receive additional information about the messages in the driver's display.
 - **Language:** select the language for the Digital Owner's Manual.

You can search for keywords using the search field **Search**, in order to find quick answers to questions about the operation of the vehicle.

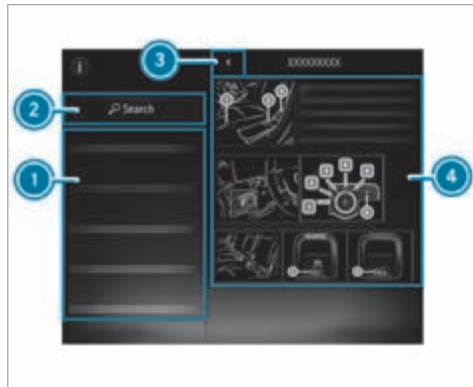

- ① Menu
- ② Search
- ③ Back
- ④ Contents section

Some sections in the Digital Owner's Manual, such as warning notes, can be expanded and collapsed.

Additional methods of calling up the Digital Owner's Manual:

Driver's display: call up brief information as display messages in the driver's display

MBUX Voice Assistant: call up via the voice control system

Global search: call up search results for contents of the Digital Owner's Manual in the home screen

For safety reasons, the Digital Owner's Manual is deactivated while driving.

Protection of the environment

 **ENVIRONMENTAL NOTE** Environmental damage due to operating conditions and personal driving style

The pollutant emission of the vehicle is directly related to the way you operate the vehicle.

Operate your vehicle in an environmentally responsible manner to help protect the environment. Please observe the following recommendations on operating conditions and personal driving style.

Operating conditions:

- ▶ Make sure that the tyre pressure is correct.
- ▶ Do not carry any unnecessary weight (e.g. roof luggage racks once you no longer need them).
- ▶ Adhere to the service intervals. A regularly serviced vehicle will contribute to environmental protection.

- ▶ Always have maintenance work carried out at a qualified specialist workshop.

Personal driving style:

- ▶ Do not depress the accelerator pedal when starting the engine.
- ▶ Do not warm up the vehicle while stationary.
- ▶ Drive carefully and maintain a suitable distance from the vehicle in front.
- ▶ Avoid frequent, sudden acceleration and braking.
- ▶ Change gear in good time and use each gear only up to $\frac{2}{3}$ of its maximum engine speed.
- ▶ Switch off the vehicle in stationary traffic, e.g. by using the ECO start/stop function.
- ▶ Drive in a fuel-efficient manner. Observe the ECO display for an economical driving style.

Plug-in hybrid

 **ENVIRONMENTAL NOTE** Environmental pollution caused by irresponsible disposal of the high-voltage battery

A high-voltage battery contains materials which are harmful to the environment.

- ▶ Dispose of faulty high-voltage batteries at a qualified specialist workshop.

Take-back of end-of-life vehicles

EU countries only:

Mercedes-Benz will take back your end-of-life vehicle for environment-friendly disposal in accordance with the European Union (EU) End-Of-Life Vehicles Directive.

A network of vehicle take-back points and dismantlers has been established for you to return your vehicle. You can leave it at any of these points free of charge. This makes an important contribution to closing the recycling circle and conserving resources.

For further information about the recycling and disposal of end-of-life vehicles, and the take-back conditions, please visit the national Mercedes-Benz website for your country.

Mercedes-Benz GenuineParts



ENVIRONMENTAL NOTE Environmental damage caused by not using recycled/reconditioned components

Mercedes-Benz AG offers recycled/reconditioned components and parts with the same quality as new parts. The same entitlement from the implied warranty is valid as for new parts.



Recycled/reconditioned components and parts from Mercedes-Benz AG.



NOTE Impairment of the operating efficiency of the restraint systems from installing accessory parts or from repairs or welding

Airbags and seat belt tensioners, as well as control units and sensors for the restraint systems, may be installed in the following areas of your vehicle:

- doors
- door pillars
- Sill
- Seats
- Cockpit
- Driver's display
- Centre console
- lateral roof frame



Do not install accessory parts such as audio systems in these areas.



Do not carry out repairs or welding.



Have accessories retrofitted at a qualified specialist workshop.

You could jeopardise the operating safety of your vehicle if you use parts, tyres and wheels as well as accessories relevant to safety which have not been approved by Mercedes-Benz. Safety-relevant systems (e.g. the brake system) may malfunction. Only use Mercedes-Benz GenuineParts or parts of equal quality. Only use tyres, wheels and accessory parts that have been specifically approved for your vehicle model.

Mercedes-Benz tests original parts and conversion parts and accessory parts that have been specifically approved for your vehicle model for their reliability, safety and suitability. Despite ongoing market research, Mercedes-Benz is unable to assess other parts. Mercedes-Benz therefore accepts no responsibility for the use of such parts in Mercedes-Benz vehicles, even if they have been officially approved or independently approved by a testing centre.

Certain parts are only officially approved for installation or modification if they comply with legal requirements. All Mercedes-Benz GenuineParts meet the approval requirements. The use of non-approved parts may invalidate the vehicle's general operating permit.

This is the case in the following situations:

- The vehicle type is different from that for which the vehicle's general operating permit was granted.
- Other road users could be endangered.
- The exhaust gas or noise level gets worse.

Always specify the vehicle identification number (VIN) (→ page 439) when ordering Mercedes-Benz GenuineParts.

Owner's Manual

This Owner's Manual and the Digital Owner's Manual in the vehicle describe the following models and the standard and special equipment for your vehicle:

- The models and the standard and special equipment available at the time of this Owner's Manual going to press.
- The models and the standard and special equipment only available in certain countries.

- The models and the standard and special equipment, which will only be available at a later date.

Note that your vehicle may not be fitted with all features described. This is also the case for systems relevant to safety. Therefore, the equipment on your vehicle may differ from that in the descriptions and illustrations.

The original purchase agreement for your vehicle contains a list of the equipment in your vehicle at the time of delivery.

Should you have any questions concerning equipment and operation, please consult a Mercedes-Benz Service Centre.

 Please note that all speed specifications in these operating instructions are approximate and the values are subject to a certain tolerance.

The Owner's Manual, Supplement, further supplementary documents and Service Booklet are important documents and should be kept in the vehicle.

Touch-sensitive controls

In addition to conventional switches and buttons, your vehicle is equipped with touch-sensitive controls.

These are located in the following areas of your vehicle:

- Roof and door control panel
- Climate control
- Steering wheel
- MBUX multimedia system

The controls have touch-sensitive user interface surfaces. The surfaces are controlled by pressing or swiping to adjust settings or to trigger functions, for example.

When handling touch-sensitive user interface surfaces, observe the following points to avoid problems operating:

- Do not affix stickers or similar objects on the surfaces
- Keep the surfaces protected from moisture and wet conditions

- Keep the surfaces free of dust and dirt (→ page 396).

Some touch-sensitive control elements have a symbol and integrated indicator lamps. When operating, make sure to press on the symbol of the control element.

Mercedes me App

Notes about the on-demand feature

You can also activate various functions (on-demand feature) subsequently via Mercedes me after purchasing your vehicle.

Information is available at any Mercedes-Benz Service Centre.

Activating on-demand feature using Mercedes me

Requirements:

- The vehicle has a wireless connection.
- The vehicle is linked to the Mercedes me user account.

Ordering and activating on-demand feature

- ▶ Add the desired on-demand feature for the vehicle to the shopping basket in the Mercedes me Store.
- ▶ Complete the order.
The on-demand feature is activated when operating the vehicle.

Speeding up activation

- ▶ Switch the vehicle off and lock it.
- ▶ Unlock the vehicle after about two minutes and switch on the vehicle.
The on-demand feature has been activated. For some features, a notification also appears in the vehicle's multimedia system.

If the activation was not successful, repeat the process.

Operating safety

⚠ WARNING Risk of accident due to malfunctions or system failures

If you do not have the prescribed service/maintenance work or any required repairs carried out, this could result in malfunctions or system failures.

- ▶ Always have the prescribed service and maintenance work as well any required repairs carried out at a qualified specialist workshop.

⚠ WARNING Risk of accident or injury due to improper modifications to electronic components

Modifications to electronic components, their software or wiring can impair their functionality and/or the functionality of other networked components or safety-relevant systems.

This can endanger the vehicle's operating safety.

- ▶ You must not tamper with wiring, electronic components, or their software.
- ▶ Always have work on electrical and electronic devices carried out at a qualified specialist workshop.

If you modify the on-board electronics, the general operating permit is rendered invalid.

Observe the "On-board electronics" section in "Technical data".

⚠ WARNING Risk of fire due to flammable material coming into contact with hot parts of the exhaust system

If combustible materials, e.g. leaves, grass or twigs, come into contact with hot parts of the exhaust system, they may ignite.

- ▶ When driving off-road or on unpaved surfaces, check the underside of the vehicle at regular intervals.
- ▶ In particular, remove any trapped parts of plants or other flammable material.

- ▶ If damage should occur, immediately inform a qualified specialist workshop.

! **NOTE** Damage to the vehicle due to driving too fast and due to impacts to the vehicle underbody or suspension components

In the following situations, in particular, there is a risk of damage to the vehicle:

- the vehicle becomes grounded, e.g. on a high kerb or an unpaved road
- the vehicle is driven too fast over an obstacle, e.g. a kerb, speed bump or pothole
- a heavy object strikes the underbody or suspension components

In situations such as these, damage to the body, underbody, suspension components, wheels or tyres may not be visible. Components damaged in this way can unexpectedly fail or, in the case of an accident, may no longer absorb the resulting force as intended.

If the underbody panelling is damaged, flammable materials such as leaves, grass or twigs can collect between the underbody and the underbody panelling. These materials may ignite if they come into contact with hot parts of the exhaust system.

- ▶ Have the vehicle checked and repaired immediately at a qualified specialist workshop.

or

- ▶ If driving safety is impaired while continuing your journey, pull over and stop the vehicle immediately, while paying attention to road and traffic conditions, and contact a qualified specialist workshop.

Plug-in hybrid

Hybrid vehicles have a combustion engine and at least one electric motor. The energy supply for operating the vehicle electrically is provided by the high-voltage on-board electrical system.

⚠ DANGER Risk of death and fire due to modified and/or damaged components of the high-voltage on-board electrical system


The vehicle's high-voltage on-board electrical system is under high voltage. If you modify component parts in the vehicle's high-voltage on-board electrical system or touch damaged component parts, you may be electrocuted. In addition, modified and/or damaged components may cause a fire.

In the event of an accident or impact to the vehicle underbody, components of the high-voltage electrical system may be damaged although the damage is not visible.

- ▶ Never make any modifications to the high-voltage on-board electrical system.
- ▶ Do not switch on or use the vehicle if its high-voltage on-board electrical system components have been modified or damaged.

- ▶ Never touch damaged components of the high-voltage on-board electrical system.
- ▶ After an accident, do not touch any components of the high-voltage on-board electrical system.
- ▶ After an accident, have the vehicle transported away.
- ▶ Have the components of the high-voltage on-board electrical system checked at a qualified specialist workshop and replaced if necessary.

The components of the vehicle's high-voltage on-board electrical system are marked with yellow warning stickers. The cables of the high-voltage on-board electrical system are orange.

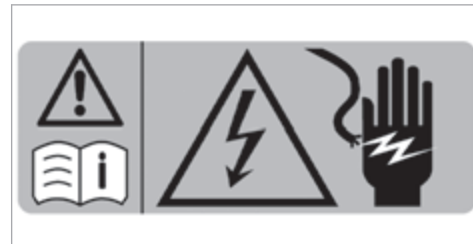

High-voltage components that can become very hot are marked with an additional warning sticker:



Vehicles with hybrid systems generate significantly less noise when stationary and when being driven than vehicles with combustion engines.

When driving in electric mode, the vehicle may not be heard by other road users due to the significantly reduced noise generated.

It is for this reason that the vehicle is equipped with a sound generator, which serves as an acoustic vehicle alerting system (AVAS).

Vehicles with a 48 V on-board electrical system

⚠ DANGER Risk of fatal injury by touching damaged high-voltage components


Vehicles with a 48 V on-board electrical system contain individual high-voltage components. These high-voltage components are under high voltage.

If you modify component parts of these high-voltage components or touch damaged component parts, you may be electrocuted.

High voltage components may be damaged in an accident, although the damage may not be visible.

- ▶ Never perform modifications to component parts of high-voltage components.
- ▶ Never touch damaged component parts of high-voltage components.
- ▶ Never touch component parts of high-voltage components after an accident.

Vehicles with a 48 V on-board electrical system contain high voltage components. These components are marked with a high voltage label:

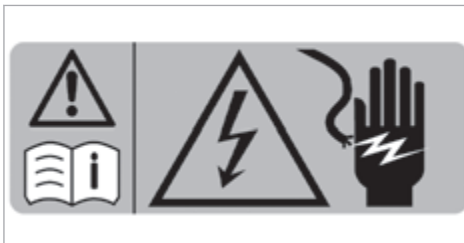

All work on high voltage components must be carried out at a qualified specialist workshop.

Notes on assembling the number plate on the front licence plate holder

! **NOTE** Malfunctions and system failures due to incorrect assembly of the licence plate on the front licence plate holder

If the licence plate is incorrectly assembled on the front licence plate holder, sensors, cameras or driving and safety systems may malfunction or fail.

Observe the following points when assembling the licence plate on the front licence plate holder:

- ▶ Assemble the licence plate directly on the licence plate holder without advertising media or other holders.
- ▶ Assemble the licence plate so that it does not protrude above or to the side of the licence plate adapter.

Declarations of conformity and notes on driving in different countries

Electromagnetic compatibility

The electromagnetic compatibility of the vehicle components has been checked and certified according to the currently valid version of Regulation UN-R 10.

Vehicle installed radio components

Only for EU and EFTA countries and countries that recognise the EU manufacturer's declaration of conformity:



The following information applies to all wireless components of the vehicle and of the information systems and communication devices integrated in the vehicle:

The manufacturers of the wireless components ensure that all wireless components installed in

the vehicle comply with Directive 2014/53/EU. The full texts of the EU declarations of conformity are available at the following web address:

https://moba.i.daimler.com/markets/ece-row/baix/cars/certificates-of-conformity/en_GB/index.html



You can obtain further information from a Mercedes-Benz service centre.

For Israel only:

It is prohibited to make any change to a vehicle-installed radio component that could affect the wireless specifications of the device, including software changes, replacement of the original antenna, or adding the option to connect the device to an external antenna, without first obtaining approval from the Communications Ministry, because of concern about wireless interference.

For the United Kingdom only:



The following information applies to all wireless components of the vehicle and of the information systems and communication devices integrated in the vehicle:

The manufacturers of the radio components declare that all radio equipment installed in the vehicle is in compliance with the relevant statutory requirements. The full texts of the declara-

tions of conformity are available at the following web address:

https://moba.i.daimler.com/markets/ece-row/baix/cars/certificates-of-conformity/en_GB/index.html



For Brazil only:




Note on two-way radio systems in the vehicle:
These systems are not protected against harmful interference and must not cause interference in properly approved systems.

For Jamaica only:

All wireless vehicle components have received type approval from the SMA.

For Nigeria only:

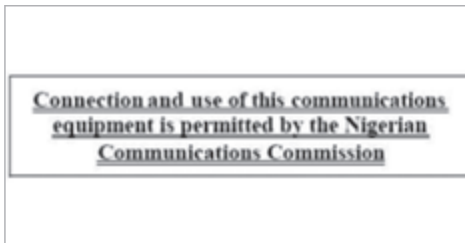

Connection and use of the radio communications equipment in this vehicle is permitted by the Nigerian Communications Commission

For Russia only:



The manufacturers of the wireless components installed in the vehicle hereby declare that all wireless components installed in the vehicle comply with the technical regulations for two-way radios. You can obtain further information from a Mercedes-Benz service centre.

For Ukraine only:



The manufacturers of the wireless components installed in the vehicle hereby declare that the wireless components installed in the vehicle comply with the technical regulations for two-way radios. You can obtain further information from a Mercedes-Benz service centre.

Type of wireless applications and specifications in accordance with 2014/53/EU

Besides the typical frequencies for mobile communication cars by Mercedes-Benz make use of the following automotive radio applications.

Type of wireless applications and specifications in accordance with 2014/53/EU

Technology	Frequency range	Transmission output/magnetic field strength
Remote Keyless Entry	20 kHz (9–90 kHz)	≤ 72 dB μ A/m at 10m
Wireless Power Transmission	105 kHz (90–119 kHz)	≤ 42 dB μ A/m at 10m
Remote Keyless Entry	120 kHz (119–135 kHz)	≤ 42 dB μ A/m at 10m
Wireless Power Transmission	127 kHz (119–135 kHz)	≤ 66 dB μ A/m at 10m with the magnetic field strength level decreasing 3dB/octave above 119 kHz
Near-field communication	13.553–13.567 MHz	≤ 42 dB μ A/m at 10m
Remote Keyless Entry, Garage Door Opener, Tire Pressure Monitoring	433 MHz (433.05–434.79 MHz)	≤ 10 mW ERP

Technology	Frequency range	Transmission output/magnetic field strength
Block Heater Remote Control, Garage Door Opener	868 MHz (868.0–868.6 MHz)	≤ 25 mW ERP
Block Heater Remote Control, Garage Door Opener	869 MHz (868.7–869.2 MHz)	≤ 25 mW ERP
Bluetooth, Klear, RLAN, wireless Headphones	2.4 GHz ISM band (2400–2483.5 MHz)	≤ 100 mW EIRP
RLAN	5.1 GHz UNII-1 (5150–5250 MHz)	≤ 25 mW EIRP
Interior Monitoring Radar, RLAN	5.8 GHz UNII-3 (5725–5875 MHz)	≤ 25 mW EIRP
Remote Keyless Entry	7.25 GHz UWB (6.0–8.5 GHz)	≤ -41.3 dBm/MHz EIRP mean ≤ 0 dBm/MHz EIRP peak
76 GHz radar	76–77 GHz	≤ 55 dBm peak EIRP
Carsharing Module	NFC: 13.553–13.567 MHz Bluetooth®: 2402–2480 MHz	NFC: ≤ 42 dBμA/m at 10 m Bluetooth®: ≤ +4 dBm (class 2)

Technology	Frequency range	Transmission output/magnetic field strength
Rear Seat Entertainment System	Bluetooth®: 2400–2483.5 MHz WLAN 2.4 GHz: 2400–2483.5 MHz WLAN 5 GHz: 5150–5250 MHz 5725–5875 MHz	Bluetooth®: -0.8 dBm WLAN 2.4 GHz: 14.5 dBm WLAN 5 GHz: 20.5 dBm 13.3 dBm
Two-way radio (Tel7 telephone control unit)	E-GSM (900 MHz) GSM (1800 MHz)	+33 dBm +30 dBm
	UMTS (Band I, III, VIII)	+24 dBm (+1 / -3 dB)
	LTE (Band 1, 3, 7, 8, 20, 28)	+23 dBm (±2 dB)
HERMES (Hardware for Enhanced Remote, Mobility & Emergency Services)	WLAN (2400–2483.5 MHz) WLAN (5736–5833 MHz)	< 20 dBm < 14 dBm

Technology	Frequency range	Transmission output/magnetic field strength
	GSM (E-GSM 900, Class 4)	< +33 dBm (± 2 dB)
	GSM (E-GSM 1800, Class 1)	< +30 dBm (± 2 dB)
	GSM (E-GSM 900 8-PSK, Class E2)	< +27 dBm (± 3 dB)
	GSM (E-GSM 1800 8-PSK, Class E2)	< +26 dBm (± 3 dB/-4 dB)
	UMTS (2100 WCDMA FDD B1, Class 3)	< +24 dBm (± 1 dB/-3 dB)
	LTE (FDD B I, B III, B38, B39, B40, B41, Class 3)	< +23 dBm (± 2 dB)
	GPS (1575,42 MHz +/- 2 MHz)	Receiving only
RAMSES (Router And Mobile ServiceS)	GSM (E-GSM 850 / E-GSM 900, Class 4)	< +32.5 dBm (± 1 dB)
	GSM (E-GSM 1800 / E-GSM 1900, Class 4)	< +29.5 dBm (± 1 dB)
	UMTS (WCDMA FDD I, II, III, IV, V, VIII, XIX, Class 3)	< +23.5 dBm (± 1 dB)
	LTE (FDD B1, B2, B3, B4, B5, B7, B8, B9, B18, B19, B21, B28, Class 3)	< +23 dBm (± 1 dB)
	LTE (TDD B38, B40, B41, Class 3)	< +23 dBm (± 1 dB)
	GNSS (1559-1610 MHz)	Receiving only

Information about the specific absorption rate

For France only:

The values have been determined and tested in accordance with the Décret n° 2019-1186 guide-line regarding the indication of the specific absorption rate (SAR) of wireless vehicle components.

Further information and updates are available at the following web address:

https://moba.i.daimler.com/baix/cars/SAR/fr_FR/index.html

**Information about the specific absorption rate**

Vehicle components	SAR value in W/kg	Applicable limit value
Compensator ECE DE003 & ECE DE004	< 0.2 W/kg	2 W/kg
DAI RSE	1.8 W/kg	2 W/kg
HERMES communication module	< 0.4 W/kg	2 W/kg

Vehicle components	SAR value in W/kg	Applicable limit value
RAMSES communication module	0.036 W/kg	2 W/kg
NRCS2P	0.003 W/kg	2 W/kg
NTG6	0.199 W/kg	4 W/kg
NTG7	0.08 W/kg	2 W/kg
NTG7RSU	0.07 W/kg	2 W/kg
Tablet PC SM-T230NZ	0.7 W/kg	4 W/kg
Radio data transmission telephone system	0.24 W/kg	2 W/kg

Importer information for wireless components

For Moldova only:

Importer

S.C. GRAND PREMIUM S.R.L. Moldova
mun. Chisinau, str. Hîncești sos., 2/2

For Turkey only:

Importer

Mercedes Benz Otomotiv Ticaret ve Hizmetler
A.Ş. Genel Merkez

Akçaburgaz Mah. Süleyman Şah Cad. No: 6/1
34522 Esenyurt/İstanbul

For Ukraine only:

Importer

PJSC "AUTOCAPITAL"
Velyka Vasylykivska str. 15/2
01004 Kyiv
Ukraine

For the United Kingdom only: Importer

Mercedes-Benz Cars UK Limited
Delaware Drive, Tongwell
Milton Keynes, MK15 8BA
England

Importer of Mercedes-Benz spare parts

Mercedes-Benz Parts Logistics
Delaware Drive, Tongwell

Milton Keynes, MK15 8BA
England

Jack

Copy and translation of the original declaration of conformity:

EC declaration of conformity

1.

The undersigned, representing

Manufacturer:

BRANO a.s.

747 41 Hradec nad Moravicí, Opavská 1000,

The Czech Republic

ID No.: 64-387-5933

VAT No.: CZ64-387-5933

herewith declares under our sole responsibility that the product:

2. a)

Name:

Jack

Type, Number:

A) A 164 580 02 18, A 166 580 01 18

B) A 240 580 00 18

C) A 639 580 02 18

D) A 639 580 03 18

E) A 910 580 00 00

F) A 247 580 00 00, A 293 580 00 00

Year of manufacture: 2020

Complies with all relevant provisions

Directive No. 2006/42/EC

b)

Description and purpose of use:

Car jack is intended solely for lifting of the concrete car, in accordance with the instruction label on the car jack.

3.

References of harmonized and other standards or specifications

ISO 4063, EN ISO 14341-A, AS 2693, DBL 8230.10, DBL 7382.20, DBL 7392.10, DBL 8451.15, MBN 10435,

Technical documentation of the product is stored at the premise of the manufacturer. The person responsible for assembling the technical documentation of the product: Head of the Technical Department Brano a.s.

4.

Hradec nad Moravicí

Place

5.

05.10.2020

Date

Engineer Petr Petr

[Signature]

Director of division ZZ

TIREFIT kit

Copy and translation of the original declaration of conformity:

EC declaration of conformity

In accordance with EC Directive 2006/42/EC

We hereby declare that the product

Product designation: Daimler electric air pump

Model designation: 0851ve, DT/UW 200046 - IBK-LK2

MB part no.: A 000 583 8200

complies with the following relevant regulations:
2014/30/EU

Applied harmonised standards, in particular:

DIN EN 55014-1: 2012

DIN EN 55014-2: 2016

Manufacturer: Dunlop Tech GmbH

Address: Offenbacher Landstrasse 8, 63456 Hanau

Authorised representative: IMS dept.

Date: December 2019

Signature: IMS-AE, IMS-AE-L

Diagnostics connection

The diagnostics connection is a technical interface in the vehicle. It is used, for example, during repair and maintenance work or for reading out vehicle data in a specialist workshop. Diagnostic

devices should therefore only be connected in a qualified specialist workshop.

⚠ WARNING Risk of accident due to connecting devices to the diagnostics connection

If you connect devices to the diagnostics connection of the vehicle, the function of vehicle systems and operating safety may be impaired.

► For safety reasons, we recommend that you only use and connect products approved by a Mercedes-Benz service centre.

⚠ WARNING Risk of accident due to objects in the driver's footwell

Objects in the driver's footwell may impede pedal travel or block a depressed pedal.

This jeopardises the operating and road safety of the vehicle.


- Stow all objects in the vehicle securely so that they cannot get into the driver's footwell.
- Always fit the floor mats securely and as prescribed in order to ensure that there is always sufficient room for the pedals.
- Do not use loose floor mats and do not place floor mats on top of one another.

! NOTE Battery discharging from using devices connected to the diagnostics connection

Using devices at the diagnostics connection drains the battery.

- Check the charge level of the battery.
- If the charge level is low, charge the battery, e.g. by driving a considerable distance.

Please also note the information about the 12 V battery and short-distance trips in the "Driving and Parking" chapter (→ page 183).

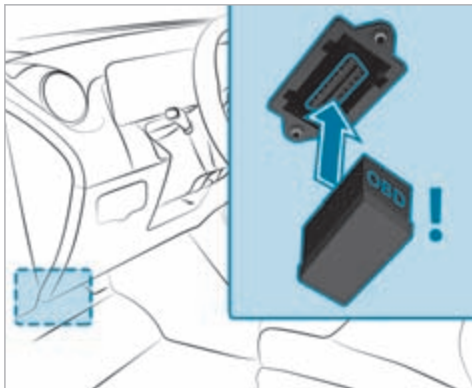

Connecting and using another device with the diagnostics connection can have the following effects:

- Malfunctions in the vehicle system
- Permanent damage to vehicle components

Please refer to the warranty terms and conditions for this matter.

Moreover, connecting equipment to the diagnostics connection can lead to emissions monitoring information being reset, for example. This may lead to the vehicle failing to meet the requirements of the next emissions inspection during the main inspection.

Qualified specialist workshop

A qualified specialist workshop has the necessary special skills, tools and qualifications to correctly carry out any necessary work on your vehicle. This particularly applies to safety-relevant work.

Always have the following work carried out on your vehicle at a qualified specialist workshop:

- Safety-relevant work
- Service and maintenance work
- Repair work
- Modifications as well as installations and conversions
- Work on electronic components
- **Plug-in hybrid:** work on the hybrid system

- **Vehicles with 48 V on-board electrical system:** work on the high-voltage component of the 48 V on-board electrical system

Mercedes-Benz recommends a Mercedes-Benz service centre.

Vehicle registration

Mercedes-Benz may ask its service centres to carry out technical inspections on certain vehicles. The quality or safety of the vehicle is improved as a result of the inspection.

Mercedes-Benz can only inform you about vehicle checks if Mercedes-Benz has your registration data.

It is possible that your vehicle has not yet been registered in your name in the following cases:

- if your vehicle was not purchased at an authorised specialist dealer.
- if your vehicle has not yet been examined at a Mercedes-Benz service centre.

It is advisable to register your vehicle with a Mercedes-Benz service centre.

Inform Mercedes-Benz as soon as possible about any change in address or vehicle ownership. You can do this at a Mercedes-Benz service centre, for example.

Correct use of the vehicle

If you remove any warning stickers, you or others could fail to recognise certain dangers. Leave warning stickers in position.

Observe the following information in particular when driving your vehicle:

- the safety notes in this Owner's Manual, vehicle-specific supplements and further supplementary documents
- technical data for the vehicle
- traffic rules and -regulations
- laws and safety standards pertaining to motor vehicles

Information on the REACH regulation

EU and EFTA countries only:

the REACH regulation (Regulation (EC) No. 1907/2006, Article 33) stipulates a duty to supply information about substances of very high concern (SVHCs).

Mercedes-Benz AG acts to the best of its knowledge to prevent these SVHCs from being used and to enable customers to safely handle these substances. There are SVHCs known to Mercedes-Benz AG, according to supplier information and internal product information, found in individual components of this vehicle in quantities of over 0.1 percent by weight.

Further information can be obtained at the following addresses:

- <https://reach.daimler.com/de/home/>
- <https://reach.daimler.com/en/home/>

Notes for persons with electronic medical aids

Mercedes-Benz AG cannot, despite carefully developing vehicle systems, completely rule out the interaction of vehicle systems with electronic medical aids such as cardiac pacemakers.

In addition, there are components installed in the vehicle that, regardless of the operating status of the vehicle, can generate magnetic fields on a par with permanent magnets. These fields can be found, for example, in the area around the multimedia and sound system or also in the area of the seats, depending on the vehicle equipment.

For this reason, the following can occur in isolated cases, depending on the aids used:

- Medical aids malfunctioning
- Adverse health effects

Observe the notes and warnings of the manufacturer of the medical aids; if in doubt, contact the device manufacturer and/or your doctor. If there is continuing uncertainty concerning the possibility of medical aids malfunctioning, Mercedes-Benz AG recommends using only few electrical vehicle systems and/or maintaining a distance from the components.

Plug-in hybrid

When charging the high-voltage battery, keep a distance of at least an arm's length between the medical aid and the following components:

- the power supply equipment
This includes charging stations in the form of a wallbox or a public charging point, for example.
- vehicle components carrying live voltage
This includes the charging cable and the charging control box, for example.

Only have repairs and maintenance work in the area of the following components carried out at a qualified specialist workshop:

- vehicle components carrying live voltage
- transmission aerials
- multimedia system and sound system

If you have any queries or suggestions, consult a qualified specialist workshop.

Implied warranty

! **NOTE** Damage to the vehicle arising from violation of these operating instructions.

Damage to the vehicle can arise from violation of these operating instructions.

This damage is not covered either by the Mercedes-Benz implied warranty or by the New- or Used-Vehicle Warranty.

► Follow the instructions in these operating instructions on proper operation of your vehicle as well as on possible vehicle damage.

QR code for rescue card

QR codes are attached in the fuel filler flap and on the opposite side on the B-pillar. In the event of an accident, rescue services can use the QR code to quickly find the appropriate rescue card for your vehicle. The current rescue card contains the most important information about your vehicle (e.g. the routing of the electric lines) in compact form.

Further information can be obtained at <https://www.mercedes-benz.de/qrcode>

Data storage

Data processing in the vehicle

Electronic control units

Electronic control units are fitted in your vehicle. Control units process data which, for example, they receive from vehicle sensors, generate themselves or exchange between themselves. Some control units are required for the safe operation of your vehicle, some assist you when driving, such as driver assistance systems, while others enable convenience or infotainment functions.

The following provides you with general information regarding data processing in the vehicle. Additional information regarding exactly which data in your vehicle are collected, saved and transmitted to third parties, and for what purpose, can be found in the information directly related to the functional characteristics in question in their respective operating instructions. This information is also available online and, depending on the vehicle equipment, digitally.

Personal data

Every vehicle is identified by a unique vehicle identification number. Depending on the country, this vehicle identification number can be used by, for example, governmental authorities to determine the identity of the owner. There are other possibilities to use data collected from the vehicle to identify the owner or driver, such as the licence plate number.

Therefore, data generated or processed by control units may be attributable to a person or, under certain conditions, become attributable to a person. Depending on which vehicle data are available, it may be possible to make inferences about, for example, your driving behaviour, your location, your route or your use patterns.

Legal requirements regarding the disclosure of data

If legally required to do so, manufacturers are, in individual cases, legally obliged to provide governmental entities, upon request and to the extent required, data stored by the manufacturer. For example, this may be the case during the investigation of a criminal offence.

Governmental entities are themselves, in individual cases and within the applicable legal framework, authorised to read out data from the vehicle. In the case of an accident, information that can help with an investigation can, therefore, be taken from the airbag control unit, for example.

Operational data in the vehicle

This is data regarding the operation of the vehicle, which have been processed by control units.

This includes the following data, for example:

- vehicle status information such as the speed, longitudinal acceleration, lateral acceleration, number of wheel revolutions or the fastened seat belts display
- ambient conditions, such as temperature, rain sensor or distance sensor

Generally, the use of these data is temporary; they will not be stored beyond the period of operation and will only be processed within the vehicle itself. Control units often contain data memories for vehicle keys, for example. Their use permits the temporary or permanent documentation of technical information about the vehicle's operating

state, component loads, maintenance requirements and technical events or faults.

Depending on the vehicle equipment, the following data are stored:

- operating status of system components, such as fill levels, tyre pressure or battery status
- malfunctions or faults in important system components, such as lights or brakes
- system reactions in special driving situations, such as airbag deployment or the intervention of stability control systems
- information on events leading to vehicle damage

In certain cases, it may be required to store data that would have otherwise been used only temporarily. This may be the case if the vehicle has detected a malfunction, for example.

If you use services, such as repair services and maintenance work, stored operational data as well as the vehicle identification number can be read out and used. They can be read out by service network employees, such as workshops

and manufacturers or third parties, such as breakdown services. The same is true in the case of warranty claims and quality assurance measures.

In general, the readout is performed via the legally prescribed port for the diagnostics connection in the vehicle. The operational data that are read out document technical states of the vehicle or of individual components and assist in the diagnosis of malfunctions, compliance with warranty obligations and quality improvement. To that end, these data, in particular information about component loads, technical events, malfunctions and other faults may be transmitted along with the vehicle identification number to the manufacturer. Furthermore, the manufacturer is subject to product liability. For this reason the manufacturer also uses operational data from the vehicle, for example, for recalls. These data can also be used to examine the customer's warranty and guarantee claims.

Fault memories in the vehicle can be reset by a service outlet or at your request as part of repair or maintenance work.

Convenience and infotainment functions

You can store convenience settings and individual settings in the vehicle and change or reset them at any time.

Depending on the vehicle equipment, this includes the following settings, for example:

- seat and steering wheel positions
- suspension and climate control settings
- individual settings, such as interior lighting

Depending on the selected equipment, you can import data into vehicle infotainment functions yourself.

Depending on the vehicle equipment, this includes the following data, for example:

- multimedia data, such as music, films or photos for playback in an integrated multimedia system
- address book data for use in connection with an integrated hands-free system or an integrated navigation system
- entered navigation destinations
- data about the use of Internet services

These data for convenience and infotainment functions may be saved locally in the vehicle or they may be located on a device which you have connected to the vehicle, such as a smartphone, USB flash drive or MP3 player. If you have entered these data yourself, you can delete them at any time.

This data is transmitted from the vehicle to third parties only at your request. This applies, in particular, when you use online services in accordance with the settings that you have selected.

Smartphone integration (e.g. Android Auto or Apple CarPlay®)

If your vehicle is accordingly equipped, you can connect your smartphone or another mobile end device to the vehicle. You can then control them by means of the control elements integrated in the vehicle. Images and audio from the smartphone can be output via the multimedia system. Certain information is simultaneously transferred to your smartphone. Depending on the type and integration, this includes position data, day/night mode and other general vehicle statuses. For more information please consult the Owner's Manual of the vehicle/infotainment system.

This integration allows the use of selected smartphone apps, such as navigation or music player apps. There is no further interaction between the smartphone and the vehicle; in particular, vehicle data is not directly accessible. The type of additional data processing is determined by the provider of the app being used. Which settings you can make, if any, depends on the specific app and the operating system of your smartphone.

Online services

Wireless network connection

If your vehicle has a wireless network connection, it enables data to be exchanged between your vehicle and additional systems. The wireless network connection is made possible by the vehicle's own transmitter and receiver or by a mobile end device that you have brought into the vehicle, for example, a smartphone. Online functions can be used via the wireless network connection. This includes online services and applications/apps provided to you by the manufacturer or by other providers.

Manufacturer's services

Regarding the manufacturer's online services, the individual functions are described by the manufacturer in a suitable place, for example, in the Owner's Manual or on the manufacturer's website, where the relevant data protection information is also given. Personal data may be used for the provision of online services. Data are exchanged via a secure connection, such as the manufacturer's designated IT systems. Any personal data which are collected, processed and used, other than for the provision of services, is done so exclusively on the basis of legal permission. This is the case, for example, for a legally prescribed emergency call system, a contractual agreement or when consent has been given.

You can have services and functions, some of which are subject to a fee, activated or deactivated. This excludes legally prescribed functions and services, such as an emergency call system.

Third party services

If you use online services from other providers (third parties), these services are the responsibility of the provider in question and subject to that provider's data protection conditions and terms of

use. As a general rule, the manufacturer has no influence on the content exchanged.

For this reason, when services are provided by third parties, please ask the service provider in question for information about the type, extent and purpose of the collection and use of personal data.

Data protection rights

Depending on your country or the equipment and range of functions of your vehicle as well as the services you use and the services on offer, you are entitled to different data protection rights. Further information on data protection and your data protection rights can either be found on the manufacturer's website or you will receive this information as part of the various services and service offers. There you will also find the contact information for the manufacturer and its data protection officers.

At a workshop, for example, with the support of a specialist and possibly for a fee, you can have data read out which is stored only locally in the vehicle.

Copyright

Information on licences for free and open-source software used in your vehicle can be found on the data carrier in your vehicle document wallet and with updates on the following website:

<https://www.mercedes-benz.com/opensource>

Restraint system

Protection provided by the restraint system

The restraint system includes the following components:

- Seat belt system
- Airbags
- Child restraint system
- Child seat anchors

The restraint system can help prevent the vehicle occupants from coming into contact with parts of the vehicle interior in the event of an accident. In the event of an accident, the restraint system can also reduce the forces to which the vehicle occupants are subjected.

A seat belt can only provide the best level of protection if it is worn correctly. Depending on the detected accident situation, seat belt tensioners and/or airbags supplement the protection offered by a correctly worn seat belt. Seat belt tensioners and/or airbags are not deployed in every accident.

In order for the restraint system to provide the intended level of protection, each vehicle occupant must observe the following information:

- Fasten seat belts correctly.
- Sit in an almost upright seat position with their back against the seat backrest.
- Sit with their feet resting on the floor, if possible.
- Always secure persons under 1.50 m tall in an additional restraint system suitable for Mercedes-Benz vehicles.

However, no system available today can completely eliminate injuries and fatalities in every accident situation. In particular, the seat belt and airbag generally do not protect against objects penetrating the vehicle from the outside. It is also not possible to completely rule out the risk of injury caused by the airbag deploying.

Limitations of the protection provided by the restraint system

⚠ WARNING Risk of injury or death due to modifications to the restraint system

Vehicle occupants may no longer be protected as intended if alterations are made to the restraint system.

- ▶ Never alter the parts of the restraint system.
- ▶ Never tamper with the wiring or any electronic component parts or their software.

If it is necessary to modify the vehicle to accommodate a person with disabilities, contact a qualified specialist workshop.

Mercedes-Benz recommends that you use driving aids which have been approved for your vehicle by Mercedes-Benz.

Restraint system functionality

When the vehicle is switched on, a self-test is performed, during which the  restraint system warning lamp lights up. It goes out no later than a few seconds after the vehicle is started. The components of the restraint system are then functional.

Malfunctioning restraint system

A malfunction has occurred in the restraint system if:

- the  restraint system warning lamp does not light up when the vehicle is switched on
- the  restraint system warning lamp lights up continuously or repeatedly during a journey

All vehicles, except plug-in hybrid:

⚠ WARNING Risk of injury due to malfunctions in the restraint system

Components in the restraint system may be activated unintentionally or not deploy as intended in an accident.

- ▶ Have the restraint system checked and repaired immediately at a qualified specialist workshop.

Plug-in hybrid:

⚠ DANGER Risk of fatal injuries due to restraint system malfunctions

Components in the restraint system may be activated unintentionally or not deploy as planned in an accident. In the event of an accident, the high-voltage on-board electrical system may not be deactivated as intended.

You may suffer an electric shock if you touch the damaged components of the high-voltage on-board electrical system.

- ▶ Have the restraint system checked and repaired immediately at a qualified specialist workshop.
- ▶ After an accident, switch off the vehicle immediately.

Function of the restraint system in an accident

How the restraint system works depends on the severity of the impact detected and the apparent type of accident:

- Frontal impact
- Rear impact
- Side impact
- Rollover

The activation thresholds for the components of the restraint system are determined based on the evaluation of the sensor values measured at various points in the vehicle. This process is pre-emptive in nature. The triggering/deployment of the components of the restraint system must take place in good time at the start of the collision.

Factors which can only be seen and measured after a collision has occurred cannot play a decisive role in airbag deployment. Nor do they provide an indication of airbag deployment.

The vehicle may be deformed significantly without an airbag being deployed. This is the case if only parts which are relatively easily deformed are affected and the rate of vehicle deceleration is

not high. Conversely, an airbag may be deployed even though the vehicle suffers only minor deformation. If very rigid vehicle parts such as longitudinal members are hit, this may result in sufficiently high levels of vehicle deceleration.

Depending on the detected deployment situation, the components of the restraint system can be activated or deployed independently of each other:

- Seat belt tensioner: frontal impact, rear impact, side impact, rollover
- Driver's airbag, front passenger airbag: frontal impact
- Knee airbag: frontal impact
- Side airbag: side impact
- Centre airbag: side impact
- Window airbag: side impact, rollover, frontal impact
- PRE-SAFE® Impulse Side: side impact

Only when the PASSENGER AIR BAG OFF indicator lamp is off can the front passenger airbag deploy in the event of an accident. If the front passenger seat is occupied, make sure, both

before and during the journey, that the status of the front passenger airbag is correct (→ page 54).

⚠ WARNING Risk of burns from hot airbag components

The airbag parts are hot after an airbag has been deployed.

- ▶ Do not touch the airbag parts.
- ▶ Have a deployed airbag replaced at a qualified specialist workshop as soon as possible.

Mercedes-Benz recommends that you have the vehicle towed to a qualified specialist workshop after an accident. Take this into account, particularly if a seat belt tensioner is triggered or an airbag deployed.

If the seat belt tensioners are triggered or an airbag is deployed, you will hear a bang, and a small amount of powder may also be released:

- The bang will not generally affect your hearing.
- In general, the powder released is not hazardous to health but may cause short-term

breathing difficulties to persons suffering from asthma or other pulmonary conditions.

Provided it is safe to do so, leave the vehicle immediately or open the window in order to prevent breathing difficulties.

Seat belts

Protection provided by the seat belt

Always fasten your seat belt correctly before starting a journey. A seat belt can only provide the best level of protection if it is worn correctly.

⚠ WARNING Risk of injury or death due to incorrectly fastened seat belt

If the seat belt is not worn correctly, it cannot perform its intended protective function.

In addition, an incorrectly fastened seat belt can also cause injuries, for example, in the event of an accident or when braking or changing direction suddenly.

- ▶ Always ensure that all vehicle occupants have their seat belts fastened correctly and are sitting properly.

Always observe the instructions about the correct driver's seat position and adjusting the seat (→ page 105).

In order for the correctly worn seat belt to provide the intended level of protection, each vehicle occupant must observe the following information:

- The seat belt must not be twisted and must fit tightly and snugly across the body.
- The seat belt must be routed across the centre of the shoulder and as low down across the hips as possible.
- The shoulder section of the seat belt should not touch your neck nor be routed under your arm or behind your back.
- Avoid wearing bulky clothing, e.g. a winter coat.
- Push the lap belt down as far as possible across your hips and pull tight with the shoulder section of the belt. Never route the lap belt across your abdomen.

Pregnant women must also take particular care with this.

- Never route the seat belt across sharp, pointed, abrasive or fragile objects.
- Only one person should use each seat belt at any one time.
- Never secure objects with a seat belt if the seat belt is also being used by one of the vehicle's occupants.

Also ensure that no objects, e.g. a cushion, are ever placed between a person and the seat.

If children are travelling in the vehicle, be sure to observe the instructions and safety notes on "Children in the vehicle" (→ page 60).

Always observe the instructions for loading the vehicle when securing objects, luggage or loads (→ page 120).

Limitations of the protection provided by the seat belt

⚠ WARNING Risk of injury or death due to incorrect seat position

The seat belt will not offer the intended level of protection if you have not moved the seat backrest to an almost vertical position.

In particular, you may slip under the seatbelt and injure yourself.

- ▶ Adjust the seat properly before beginning your journey.
- ▶ Always ensure that the seat backrest is in an almost vertical position and that the shoulder section of your seat belt is routed across the centre of your shoulder.

⚠ WARNING Risk of injury or death when additional restraint systems are not used for persons with a smaller stature

Persons under 1.50 m tall cannot wear the seat belt correctly without a suitable additional restraint system.

- ▶ Always secure persons under 1.50 m tall in a suitable restraint system.

⚠ WARNING Risk of injury or death due to damaged or modified seat belts

Seat belts cannot provide protection in the following situations:

- the seat belt is damaged, has been modified, is extremely dirty, bleached or dyed
- the seat belt buckle is damaged or extremely dirty
- modifications have been made to the seat belt tensioner, seat belt anchorage or seat belt retractor

Seat belts may sustain non-visible damage in an accident, e.g. due to glass splinters.

Modified or damaged seat belts could tear or fail in the event of an accident, for example.

Modified seat belt tensioners could accidentally trigger or fail to function as intended.

- ▶ Never modify the seat belt system, for example the seat belt, seat belt buckle, seat belt tensioner, seat belt anchorage and seat belt retractor.
- ▶ Make sure that the seat belts are undamaged, not worn and clean.
- ▶ Always have the seat belts checked immediately after an accident at a qualified specialist workshop.

Mercedes-Benz recommends that you use seat belts which have been approved for your vehicle by Mercedes-Benz.

⚠ WARNING Risk of injury or death from deployed pyrotechnic seat belt tensioners

Pyrotechnic seat belt tensioners that have been deployed are no longer operational and are unable to perform their intended protective function.

- ▶ Therefore, have deployed pyrotechnic seat belt tensioners immediately replaced at a qualified specialist workshop.

Mercedes-Benz recommends that you have the vehicle towed to a qualified specialist workshop after an accident.


! NOTE Damage caused by trapping the seat belt

If an unused seat belt is not fully retracted, it may become trapped in the door or in the seat mechanism.

- ▶ Always ensure that an unused seat belt is fully retracted.

Fastening and adjusting seat belts

If the seat belt is pulled quickly or sharply, the seat belt retractor locks. The seat belt strap cannot be pulled out any further.

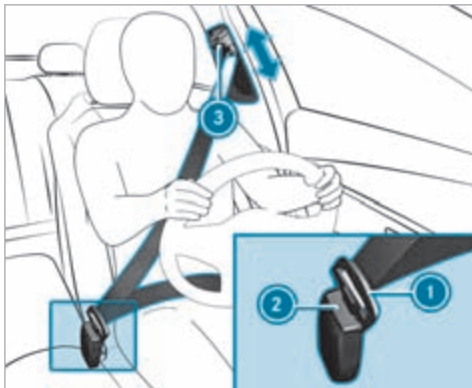

- ▶ Always engage seat belt tongue ① of the seat belt into seat belt buckle ② of the corresponding seat.
- ▶ **To adjust the seat belt height:** press button ③ on the seat belt outlet and slide the seat belt outlet to the desired position.
- ▶ **To engage the seat belt outlet:** release button ③ and ensure that the seat belt outlet engages.

① A seat belt can only provide the best level of protection if it is worn correctly. Observe the notes on fastening the seat belt (→ page 45).

! **NOTE** Deployment of components of the restraint system when the front passenger seat is unoccupied and a seat belt is buckled

When the front passenger seat is unoccupied and the seat belt tongue of the seat belt is engaged in the seat belt buckle, components of the restraint system may deploy unnecessarily on the front passenger side, e.g. the seat belt tensioner.

▶ Only buckle the seat belts as intended.

① Observe the notes on stowage areas (→ page 120). Information on fitting a child restraint system and on children travelling in the vehicle can be found in the "Children in the vehicle" section (→ page 63).

Seat belt adjustment function

Vehicles with PRE-SAFE®: after a front seat belt has been fastened, the automatic seat belt adjustment may apply a certain tightening force. Do not hold the seat belt tightly while it is adjusting.

You can activate and deactivate the seat belt adjustment function using the multimedia system (→ page 48).

Activating/deactivating seat belt adjustment via the multimedia system

Multimedia system:

➔ ➔ Settings ➔ Vehicle
➔ Occupant protection

▶ Activate or deactivate **Belt adjustment**.

Releasing seat belts

▶ Press the release button in the seat belt buckle and guide the seat belt back with the seat belt tongue.

Seat belt warning function for the driver and front passenger

The  seat belt warning lamp in the driver's display is a reminder that all vehicle occupants must wear their seat belts correctly.

In addition, a warning tone may sound.

As soon as the driver and front passenger fasten their seat belts, the seat belt warning goes out.

Function of the rear seat belt status display

The rear seat belt status display is only available for certain countries.



When the vehicle is switched on, the rear seat belt status display informs you for a certain amount of time which rear seat belt is not fastened.

The status of the rear seat belt can be recognised by the colour of the symbol in the driver's display:

- Grey: the seat belt tongue of a rear seat belt is not engaged in the seat belt buckle of the corresponding seat.
- Green: the seat belt tongue of a rear seat belt is engaged in the seat belt buckle of the corresponding seat.

Every vehicle occupant must always fasten their seat belt correctly before starting a journey.


- Red: a vehicle occupant in the rear passenger compartment has released the seat belt buckle using the release button and may not be properly secured.

If a vehicle occupant unfastens a seat belt in the rear, the rear seat belt status display appears again.

In addition, a warning tone may sound.

Airbags


Overview of airbags

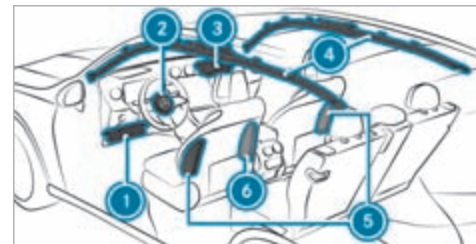

Driver's/front passenger seat:

- ① Knee airbag
- ② Driver's airbag
- ③ Front passenger airbag
- ④ Window airbag
- ⑤ Side airbag
- ⑥ Centre airbag¹⁾

¹⁾ Only for certain countries.

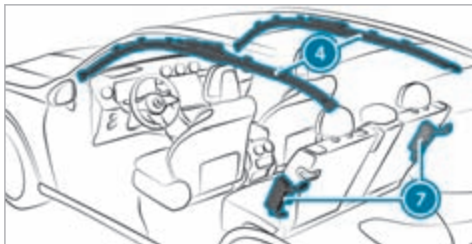

Rear seats:

- ④ Window airbag
- ⑦ Side airbag

The installation location of an airbag is identified by the AIRBAG symbol. An additional arrow symbol ► indicates the installation location for certain airbags.

When enabled, an airbag can provide additional protection for the respective vehicle occupant.

Potential protection provided by each airbag:

- Knee airbag: thigh, knee and lower leg
- Driver's airbag, front passenger airbag: head and ribcage

- Side airbag: ribcage, also pelvis for front seat occupants
- Centre airbag: head and ribcage
- Window airbag: head

Information on child restraint systems on the front passenger seat

⚠ WARNING Risk of injury or death due to an enabled co-driver airbag

If the co-driver airbag is enabled, a child on the co-driver seat may be struck by the co-driver airbag during an accident.

► NEVER use a rearward-facing child restraint system on a seat with an ENABLED FRONT AIRBAG. DEATH or SERIOUS INJURY to the CHILD can occur.

When fitting a child restraint system to the front passenger seat, observe the vehicle-specific information (→ page 75). Also, always observe the notes on rearward-facing or forward-facing child restraint systems on the front passenger seat (→ page 75).

Information on automatic front passenger airbag shutoff

Only when the PASSENGER AIR BAG OFF indicator lamp is off can the front passenger airbag deploy in the event of an accident. If the front passenger seat is occupied, make sure, both before and during the journey, that the status of the front passenger airbag is correct (→ page 54).

! NOTE Deployment of components of the restraint system when the front passenger seat is unoccupied

In an accident, the components of the restraint system may deploy unnecessarily on the front passenger side if:

- There are heavy objects on the front passenger seat.
 - The seat belt tongue is engaged in the seat belt buckle of the front passenger seat and the front passenger seat is unoccupied.
- Stow objects in a suitable place.

- ▶ Only one person should use each seat belt at any one time.

Depending on the detected accident situation, the window airbag on the front passenger side may deploy. The airbag is deployed regardless of whether the front passenger seat is occupied.

Information on the centre airbag

When triggered, the centre airbag deploys between the front seats. Do not stow any objects in the deployment area of the centre airbag.

Protection provided by the airbags

Depending on the accident situation, an airbag may supplement the protection offered by a correctly fastened seat belt.

⚠ WARNING Risk of injury or death due to an incorrect seat position

If you deviate from the correct seat position, the airbag cannot perform its intended protective function.

Each vehicle occupant must make sure of the following:

- Fasten seat belts correctly. Pregnant women must take particular care to ensure that the lap belt never lies across the abdomen.
 - Adopt the correct seat position and keep as far away as possible from the airbags.
 - Observe the following information.
- ▶ Always make sure that there are no objects between the airbag and vehicle occupant.

To avoid the risks resulting from the deployment of an airbag, each vehicle occupant must observe the following information in particular:

- Before starting your journey, adjust your seat correctly; the driver's seat and front passenger seat should be moved as far back as possible.

When doing so, always observe the information on the correct driver's seat position (→ page 105).

- Only hold the steering wheel by the steering wheel rim. This allows the airbag to be fully deployed.
- Always lean against the seat backrest when the vehicle is in motion. Do not lean forwards or against the door or side window. You may otherwise be in the deployment area of the airbags.
- The occupants must always keep their feet on the floor. Do not put your feet on the cockpit, for example. Your feet may otherwise be in the deployment area of the airbag.
- If children are travelling in the vehicle, observe the additional notes (→ page 60).
- Always stow and secure objects correctly.

Objects in the vehicle interior may prevent an airbag from functioning correctly. Each vehicle occupant must always make sure of the following in particular:

- There are no people, animals or objects between the vehicle occupants and an airbag.
- There are no objects between the seat, door and door pillar (B-pillar).

- There are no hard objects, e.g. coat hangers, hanging on the grab handles or coat hooks.
- There are no accessories, such as mobile navigation devices, mobile phones or cup holders, within the deployment area of an airbag, e.g. on the cockpit, on the door, on the side window or on the side trim.

In addition, no connecting cables, tensioning straps or retaining straps must be routed or attached to the vehicle within the deployment area of an airbag. Always comply with the accessory manufacturer's installation instructions and, in particular, the notes on suitable places for installation.

- There are no heavy, sharp-edged or fragile objects in the pockets of your clothing. Store such objects in a suitable place.

Limitations of the protection provided by airbags

WARNING Risk of injury due to modifications to the cover of an airbag

If you modify the cover of an airbag or affix objects such as stickers to it, the airbag can no longer function as intended.

- ▶ Never modify the cover of an airbag.
- ▶ Do not attach any objects to the cover.

The installation location of an airbag is identified by the AIRBAG symbol (→ page 49).

Objects in the deployment area of an airbag may prevent the airbag from functioning correctly.

WARNING Risk of injury from objects in the deployment area of an airbag

Objects in the deployment area of an airbag can hinder or prevent the correct deployment of the airbag.

The airbag may then deploy in an uncontrolled manner and may even cause additional injuries to the vehicle occupants by deploying.

This may be the case in particular if the airbag is integrated into the seat.

- ▶ Always stow and secure objects correctly.
- ▶ Before commencing your journey, make sure that no objects are stowed in the deployment area of an airbag.

Observe the notes on loading the vehicle (→ page 120). When triggered, the centre airbag deploys between the front seats (→ page 49).

WARNING Risk of injury or death due to the use of unsuitable seat covers

Due to unsuitable seat covers, the airbags cannot protect vehicle occupants as intended. In addition, the operation of the automatic front passenger airbag shutoff could be restricted.

- ▶ You should only use seat covers that have been approved for the corresponding seats by Mercedes-Benz.

⚠ WARNING Risk of injury due to malfunctioning sensors in the door

The function of the airbags can be impaired due to modifications or incorrect work performed on the doors or door trim, or if the doors are damaged.

- ▶ Never modify the doors or parts of the doors.
- ▶ Always have work on the doors or door trim carried out at a qualified specialist workshop.

⚠ WARNING Risk of injury due to deployed airbag

A deployed airbag no longer offers any protection.

- ▶ Have the vehicle towed to a qualified specialist workshop in order to have the deployed airbag replaced.

Have deployed airbags replaced immediately.

Status of the front passenger front airbag

■ Function of the automatic front passenger airbag shutoff

The automatic front passenger airbag shutoff is able to detect whether the front passenger seat is occupied by a person or a child restraint system. The front passenger airbag is enabled or disabled accordingly.

⚠ WARNING Risk of injury or death due to objects under the co-driver seat

Objects trapped under the co-driver seat can interfere with the function of the automatic co-driver airbag shutoff or damage the system.

- ▶ Do not store any objects under the co-driver seat.
- ▶ When the co-driver seat is occupied, make sure that no objects are trapped under the co-driver seat.

When fitting a child restraint system to the front passenger seat, observe the vehicle-specific information (→ page 75). Also, always observe the notes on rearward-facing or forward-facing child

restraint systems on the front passenger seat (→ page 75).

A person on the front passenger seat must observe the following information:

- Fasten seat belts correctly (→ page 45).
- Sit in an almost upright seat position with their back against the seat backrest.
- Sit with their feet resting on the floor, if possible.

The front passenger airbag may otherwise be disabled by mistake, for example, in the following situations:

- The front passenger transfers their weight by supporting themselves on a vehicle armrest.
- The front passenger sits in such a way that their weight is raised from the seat surface.

⚠ WARNING Risk of injury or death due to a disabled front passenger airbag

The front passenger airbag is disabled when the PASSENGER AIR BAG OFF indicator lamp is lit.

A person in the front passenger seat could then, for example, come into contact with the vehicle interior, especially if the person is sitting too close to the cockpit.

If the front passenger seat is occupied, always ensure that:

- the classification of the person in the front passenger seat is correct and the front passenger airbag is enabled or disabled in accordance with the person in the front passenger seat.
- the front passenger seat has been moved as far back as possible.
- the person is seated correctly.

► Both before and during the journey, ensure that the status of the front passenger airbag is correct.

If the front passenger seat is occupied, the classification of the person or child restraint system on the front passenger seat takes place after the front passenger airbag shutoff self-test. The PASSENGER AIR BAG indicator lamps display the status of the front passenger airbag.

Always observe the notes on the function of the PASSENGER AIR BAG indicator lamps (→ page 54).

■ Function of the PASSENGER AIR BAG indicator lamps



Vehicles without automatic front passenger airbag shutoff have a special sticker affixed to the side of

the cockpit on the front passenger side (→ page 74).

Self-test of automatic front passenger airbag shut-off

When the vehicle is switched on, a self-test is performed during which the two PASSENGER AIR BAG ON and OFF indicator lamps light up simultaneously.

The status of the front passenger airbag is displayed via the PASSENGER AIR BAG indicator lamps after the self-test:

- **ON is lit:** the front passenger airbag may deploy during an accident.
The indicator lamp goes out after 60 seconds.
- **ON and OFF are not lit:** the front passenger airbag may deploy during an accident.
- **OFF is lit:** the front passenger airbag is disabled. It will then not be deployed in the event of an accident.

If the PASSENGER AIR BAG ON indicator lamp is off, only the PASSENGER AIR BAG OFF indicator lamp shows the status of the front passenger air-

bag. The PASSENGER AIR BAG OFF indicator lamp may be lit continuously or be off.

If the PASSENGER AIR BAG OFF indicator lamp and the  restraint system warning lamp light up simultaneously, the front passenger seat may not be used. Also in this case, do not fit a child restraint system to the front passenger seat. Have the automatic front passenger airbag shutoff checked and repaired immediately at a qualified specialist workshop.

Status display

If the front passenger seat is occupied, ensure, both before and during the journey, that the status of the front passenger airbag is correct for the current situation.

After fitting a rearward-facing child restraint system to the front passenger seat: PASSENGER AIR BAG OFF must be lit continuously.

⚠ WARNING Risk of injury or death when using a rearward-facing child restraint system while the front passenger airbag is enabled

If you secure a child in a rearward-facing child restraint system on the front passenger seat and the PASSENGER AIR BAG OFF indicator lamp is off, the front passenger airbag can deploy in the event of an accident.

The child could be struck by the airbag.

- ▶ Always ensure that the front passenger airbag is disabled. The PASSENGER AIR BAG OFF indicator lamp must be lit.
- ▶ NEVER use a rearward-facing child restraint system on a seat with an ENABLED FRONT AIRBAG. This can result in the DEATH of or SERIOUS INJURY to the CHILD.

When fitting a child restraint system to the front passenger seat, observe the vehicle-specific information (→ page 75).

Depending on the child restraint system and the stature of the child, the PASSENGER AIR BAG OFF

indicator lamp may be off. In this case, do not fit the rearward-facing child restraint system to the front passenger seat.

Instead, fit the rearward-facing child restraint system to a suitable rear seat.

After fitting a forward-facing child restraint system to the front passenger seat: depending on the child restraint system and the stature of the child, PASSENGER AIR BAG OFF may be lit continuously or be off. Always observe the following information.

⚠ WARNING Risk of injury or death due to incorrect positioning of the forward-facing child restraint system

If you secure a child in a forward-facing child restraint system on the front passenger seat that is positioned too close to the cockpit, in the event of an accident, the child could:

- come into contact with the vehicle interior if the PASSENGER AIR BAG OFF indicator lamp is lit, for example
- be struck by the airbag if the PASSENGER AIR BAG OFF indicator lamp is off.

- ▶ Always move the front passenger seat as far back as possible and fully retract the seat cushion length adjustment. While doing so, always make sure that the shoulder belt strap is correctly routed from the seat belt outlet of the vehicle to the shoulder belt guide on the child restraint system. The shoulder belt strap must be routed forwards and downwards from the seat belt outlet. If necessary, adjust the seat belt outlet and the front passenger seat accordingly.
- ▶ Always comply with the child restraint system manufacturer's installation instructions.

When fitting a child restraint system to the front passenger seat, observe the vehicle-specific information (→ page 75).

If a person is sitting on the front passenger seat: PASSENGER AIR BAG OFF may be lit continuously or be off, depending on the person's stature.

A person on the front passenger seat must always observe the following information:

- If the front passenger seat is occupied by an adult or a person with a stature corresponding to that of an adult, the PASSENGER AIR BAG OFF indicator lamp must be off. This indicates that the front passenger airbag is enabled.
If the PASSENGER AIR BAG OFF indicator lamp is lit continuously, an adult or person with a build corresponding to that of an adult must not use the front passenger seat.
Instead, they should use a rear seat.
- If the front passenger seat is occupied by a person of smaller stature (e.g. a teenager or small adult), the PASSENGER AIR BAG OFF indicator lamp is either lit continuously or remains off, depending on the classification.
 - If the PASSENGER AIR BAG OFF indicator lamp is off: move the front passenger seat as far back as possible, or the person of smaller stature should use a rear seat.
 - If the PASSENGER AIR BAG OFF indicator lamp is lit continuously: the person of

smaller stature should not use the front passenger seat.

⚠ WARNING Risk of injury or death when the PASSENGER AIR BAG OFF indicator lamp is lit

If the PASSENGER AIR BAG OFF indicator lamp remains lit after the self-test, the front passenger airbag is disabled.

If the front passenger seat is occupied, always ensure that:

- The classification of the person in the front passenger seat is correct and the front passenger airbag is enabled or disabled in accordance with the person in the front passenger seat.
- The person is seated properly with a correctly fastened seat belt.
- The front passenger seat has been moved as far back as possible.

Be sure to also observe the following further related subjects:

- Child restraint system on the front passenger seat (→ page 75)
- Suitable positioning of the child restraint system (→ page 63)

PRE-SAFE® system

Function of PRE-SAFE® (anticipatory occupant protection)

PRE-SAFE® is able to detect certain critical driving situations and implement pre-emptive measures to protect the vehicle occupants.

PRE-SAFE® can implement the following measures independently of each other:

- Tightening the seat belts on the driver's seat and front passenger seat.
- Closing the side windows.
- **Vehicles with sliding sunroof:** closing the sliding sunroof.

- **Vehicles with memory function:** moving the front passenger seat to a more favourable seat position.
- **Vehicles with multicontour seat:** increasing the air pressure in the seat side bolsters of the seat backrest.
- PRE-SAFE® Sound: provided that the multimedia system is switched on, generating a brief noise signal to stimulate the innate protective mechanism of a person's hearing.

! **NOTE** Damage caused by objects in the footwell or behind the seat

The automatic adjustment of the seat position may result in damage to the seat and/or the object.

► Stow objects in a suitable place.

Reversing the PRE-SAFE® system measures

If an accident did not occur, the pre-emptive measures that were taken are reversed.

You will need to perform certain settings yourself.

- If the seat belt pre-tensioning is not reduced, move the seat backrest back slightly. The locking mechanism releases.

Function of PRE-SAFE® PLUS (anticipatory occupant protection plus)

PRE-SAFE® PLUS can detect certain impacts, particularly an imminent rear impact, and take pre-emptive measures to protect the vehicle occupants. These measures cannot necessarily prevent an imminent impact.

PRE-SAFE® PLUS can implement the following measures independently of each other:

- Tightening the seat belts on the driver's seat and front passenger seat.
- Activating the rear hazard warning lights at a higher flashing frequency.
- Increasing brake pressure when the vehicle is stationary. This brake application is cancelled automatically when the vehicle pulls away.

If an accident did not occur, the pre-emptive measures that were taken are reversed.

System limits

The system will not initiate any action in the following situations:

- when reversing
or
- when the vehicle is towing a trailer and there is a risk of a rear impact

The system will not initiate any braking application in the following situations:

- whilst driving
or
- when entering or exiting a parking space while using Active Parking Assist

Function of PRE-SAFE® Impulse Side

If an imminent side impact is detected, PRE-SAFE® Impulse Side can pre-emptively move the front seat vehicle occupant's upper body towards the centre of the vehicle. It does this by rapidly inflating an air cushion in the outer seat side bolster of the seat backrest on the side on which the

impact is anticipated. This increases the distance between the door and the vehicle occupant.

If PRE-SAFE® Impulse Side has been deployed or is faulty, the **PRE-SAFE impulse side inoperative** See **Owner's Manual**(→ page 459) display message appears.

Automatic measures after an accident

Depending on the type and severity of the accident, and depending on the vehicle's equipment, the following measures can be implemented, for example:

- automatic braking (post-collision brake)
- activating the hazard warning lights
- triggering an automatic emergency call (→ page 371)
- switching off the engine

To start the vehicle again, switch the vehicle off and on once more (→ page 180). Depending on the type and severity of the accident, you may no longer be able to start the vehicle.

- switching off the fuel supply

- **vehicles with hybrid drive:** switching off the hybrid system and high-voltage on-board electrical system
- unlocking the vehicle doors
- lowering the side windows
- displaying the emergency guide in the central display
- switching on the interior lighting

Function of the post-collision brake

Depending on the accident situation, the post-collision brake can minimise the severity of a further collision or even avoid it.

If an accident is detected, the post-collision brake can implement automatic braking. When the vehicle has come to a standstill, the electric parking brake is automatically applied.

The driver can cancel automatic braking by taking the following actions:

- braking more strongly than automatic braking
- fully depressing the accelerator pedal with force

Safely transporting children in the vehicle

Always observe when children are travelling in the vehicle

- ① Also strictly observe the safety notes for the specific situation. In this way you can recognise potential risks and avoid dangers if children are travelling in the vehicle (→ page 60).

Be diligent

Bear in mind that negligence when securing a child in the child restraint system may have serious consequences. Always be diligent in securing a child carefully before every journey.

Never allow babies and children to travel sitting on the lap of another vehicle occupant.

To improve protection for children younger than 12 years old or under 1.50 m in height, Mercedes-Benz recommends you observe the following information:

- Always secure the child in a child restraint system suitable for this Mercedes-Benz vehicle.
- The child restraint system must be appropriate to the age, weight and size of the child.

- The vehicle seat must be suitable for fitting a child restraint system (→ page 63).

Accident statistics show that children secured on the rear seats are generally safer than children secured on the front seats. For this reason, Mercedes-Benz strongly advises that you fit a child restraint system to a rear seat.

The generic term child restraint system

The generic term child restraint system is used in this Owner's Manual. A child restraint system is, for example:

- a baby car seat
- a rearward-facing child seat
- a forward-facing child seat
- a child booster seat with a backrest and seat belt guide

Mercedes-Benz recommends using a child booster seat with a backrest.

The child restraint system must be appropriate to the age, weight and size of the child.

Observe laws and legal requirements

Always observe the legal requirements when using a child restraint system in the vehicle.

Make sure that the child restraint system is approved in accordance with the valid test specifications and guidelines. Further information can be obtained at a qualified specialist workshop. Mercedes-Benz recommends that you use a Mercedes-Benz Service Centre for this purpose.

Only use approved child restraint systems

Only child restraint systems that meet the following UNECE standards are permitted for use in the vehicle:

- UN-R44
- UN-R129 (i-Size child restraint systems)

Information on child restraint system approval categories and details on the approval label on the child restraint system (→ page 64).

Detecting risks, avoiding danger

Securing systems for child restraint systems in the vehicle

Only use the following securing systems for child restraint systems:

- the ISOFIX or i-Size securing rings
- the vehicle's seat belt system
- the Top Tether anchorages

Fitting an ISOFIX or an i-Size child restraint system is preferred.

Simply attaching to the securing rings on the vehicle can reduce the risk of fitting the child restraint system incorrectly.

When securing a child with the integrated seat belt of the ISOFIX or i-Size child restraint system, always comply with the permissible gross weight for the child and child restraint system (→ page 67).

Advantage of a rearward-facing child restraint system

It is preferable to transport a baby or a small child in a suitable rearward-facing child restraint sys-

tem. In this case, the child sits in the opposite direction to the direction of travel and faces backwards.

Babies and small children have comparatively weak neck muscles in relation to the size and weight of their head. The risk of injury to the cervical spine during an accident can be reduced in a rearward-facing child restraint system.

Always secure a child restraint system correctly

⚠ WARNING Risk of injury or death due to incorrect installation of the child restraint system

The child can then not be protected or restrained as intended.

- ▶ Be sure to comply with the manufacturer's installation instructions for the child restraint system and its correct use.
- ▶ Make sure that the entire base of the child restraint system always rests on the sitting surface of the seat.

- ▶ Never place objects (e.g. cushions) under or behind the child restraint system.
- ▶ Use child restraint systems only with the original cover designed for them.
- ▶ Always replace damaged covers with genuine covers.

⚠ WARNING Risk of injury or death due to unsecured child restraint systems in the vehicle

If the child restraint system is incorrectly fitted or not secured, it can become detached.

The child cannot then be protected or restrained as intended.

The unused child restraint system can become detached and strike vehicle occupants.

- ▶ Always comply with the manufacturer's installation instructions for the child restraint system and its correct use.

- ▶ Always fit child restraint systems correctly, even if they are transported unused in the vehicle.

- Always observe the child restraint system manufacturer's installation and operating instructions as well as the vehicle-specific information:
 - Fitting the ISOFIX or i-Size child restraint system to the rear seat (→ page 67).
 - Securing the child restraint system with the seat belt on the rear seat (→ page 73).
 - Securing the child restraint system with the seat belt on the front passenger seat (→ page 75). Observe the specific instructions for the rearward-facing and forward-facing child restraint systems (→ page 75).

If the front passenger seat is occupied, ensure, both before and during the journey, that the status of the front passenger airbag is correct for the current situation (→ page 54).

- Observe the warning labels in the vehicle interior and on the child restraint system.
- Also secure Top Tether if present.

Do not modify the child restraint system

⚠ WARNING Risk of injury due to modifications to the child restraint system

The child restraint system can no longer function properly. This poses an increased risk of injury.

- ▶ Never modify a child restraint system.
- ▶ Only affix accessories which have been specially approved for this child restraint system by the child restraint system's manufacturer.

Mercedes-Benz recommends Mercedes-Benz care products for cleaning child restraint systems recommended by Mercedes-Benz.

Only use child restraint systems which are in proper working condition

⚠ WARNING Risk of injury or death caused by the use of damaged child restraint systems

Child restraint systems or their retaining systems that have been subjected to stress in an accident may not be able to perform their intended protective function.

It may be the case that the child cannot be properly restrained.

- ▶ Always immediately replace child restraint systems that have been damaged or involved in an accident.
- ▶ Have the securing systems for the child restraint systems checked at a qualified specialist workshop before installing a child restraint system again.

Avoid direct sunlight

⚠ WARNING Risk of burns when the child seat is exposed to direct sunlight

If the child restraint system is exposed to direct sunlight or heat, parts could heat up. Children could suffer burns from these parts, particularly on metallic parts of the child restraint system.

- ▶ Always make sure that the child restraint system is not exposed to direct sunlight.
- ▶ Protect the child restraint system with a blanket, for example.
- ▶ If the child restraint system has been exposed to direct sunlight, allow it to cool before securing a child into it.
- ▶ Never leave children unattended in the vehicle.

Observe when stopping or parking

⚠ WARNING Risk of accident and injury due to leaving children unattended in the vehicle

If children are left unattended in the vehicle, they could, in particular:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

In addition, the children could also set the vehicle in motion by, for example:

- releasing the parking brake.
- changing the transmission position.
- starting the vehicle.

- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.

- ▶ Keep the vehicle key out of the reach of children.

⚠ WARNING Risk of fatal injury due to exposure to extreme heat or cold in the vehicle

If persons, particularly children, are subjected to prolonged exposure to intense heat or cold, there is a risk of severe injury or even death.

- ▶ Never leave persons, particularly children, unattended in the vehicle.

Overview of recommended child restraint systems

- ① Further information on the correct child restraint system can be obtained at a qualified specialist workshop. Mercedes-Benz recommends that you use a Mercedes-Benz Service Centre for this purpose.

Securing with ISOFIX

Weight category 0+ (up to 13 kg and up to approx. 15 months)

Type ¹	BABY SAFE plus
Size category	E
Approval	E1 04 301 146
Order number ²	B6 6 86 8224
1 Manufacturer: Britax Römer.	2 With colour code 9H95.

Weight category I (9 to 18 kg and from approximately 9 months to 4 years)

Type ¹	DUO plus
Size category	B1
Approval	E1 04 301 133
Order number ²	A 000 970 43 02
1 Manufacturer: Britax Römer.	2 With colour code 9H95.

Securing with the vehicle seat belt

Weight category 0 (up to 10 kg and approximately 6 months) and weight category 0+ (up to 13 kg and approximately 15 months)

Type ¹	BABY SAFE plus II
Approval	E1 04 301 146
Order number ²	A 000 970 38 02
1 Manufacturer: Britax Römer.	2 With colour code 9H95.

Weight category I (9 to 18 kg and from approximately 9 months to 4 years)

Type ¹	DUO plus
Approval	E1 04 301 133
Order number ²	A 000 970 43 02
1 Manufacturer: Britax Römer.	2 With colour code 9H95.

Weight category II/III (15 to 36 kg and from approximately 3 to 12 years)

Type ¹	KIDFIX XP
Approval	E1 04 301 304
Order number ²	A 000 970 49 02
Type ¹	AMG KIDFIX XP
Approval	E1 04 301 304
Order number ²	A 000 970 33 02
1 Manufacturer: Britax Römer.	2 With colour code 9H95.

Overview of suitable seats in the vehicle for fitting a child restraint system

Left/right rear seat

Preferred securing system:



ISOFIX child seat anchor (→ page 66)

or



i-Size child seat anchor (→ page 67)

-  Also secure Top Tether if present (→ page 69).

Alternative securing system:

-  Vehicle seat belt (→ page 71)

Front passenger seat

Securing system:

-  Vehicle seat belt (→ page 71)

Be sure to observe:

- If the front passenger seat is occupied, ensure, both before and during the journey, that the status of the front passenger airbag is correct for the current situation (→ page 54).
- Notes on automatic front passenger airbag shutoff (→ page 53).

Centre rear seat

Securing system:

-  Vehicle seat belt (→ page 71)

Approval categories for child restraint systems

Only use approved child restraint systems

Only child restraint systems that meet the following UNECE standards are permitted for use in the vehicle:


- UN-R44
- UN-R129 (i-Size child restraint systems)

Identification on the child restraint system

Information about the approval category, weight category and approval number, for example, is on the approval label on the child restraint system.

There may be further information such as the ISO-FIX size categories, depending on the approval category of the child restraint system.

Approval categories in accordance with UN-R44

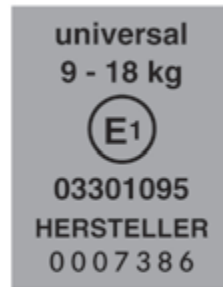


Example of an approval label

- **Universal:** child restraint systems in the "Universal" category are approved for installation in vehicles. They can be used, in accordance with overviews of the suitability of seats for securing child restraint systems, on seats labelled U, UF or IUF.

The identification IUF refers to ISOFIX child restraint systems in the "Universal" category. These child restraint systems must also be secured using Top Tether or support points.

- **Semi-Universal:** child restraint systems in the "Semi-Universal" category may only be used if the vehicle and vehicle seat are listed in the child restraint system manufacturer's vehicle model list.
- **Vehicle-specific:** child restraint systems in the "vehicle-specific" category may only be used if the vehicle and vehicle seat are listed in the child restraint system manufacturer's vehicle model list.

Approval categories in accordance with UN-R129

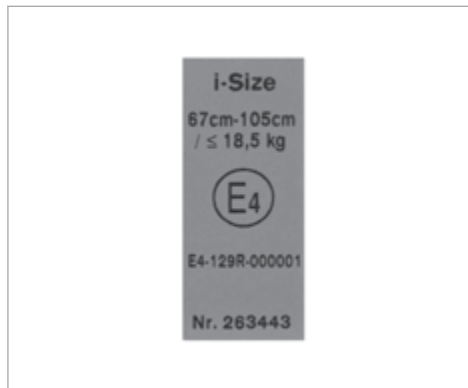

Example of an approval label

- **i-Size:** child restraint systems in the "i-Size" category are approved for installation in vehicles with i-Size mounting brackets. They can be used, in accordance with overviews of the suitability of seats for securing child restraint systems, on seats labelled i-U.

The identification i-U refers to i-Size child restraint systems in the "Universal" category. These child restraint systems must also be secured using Top Tether or support points.

Observe the suitability of vehicle seats

Depending on the approval category, there are forward-facing and rearward-facing child restraint systems. Their use can be restricted for certain vehicle seats:

- Suitability of seats for attaching ISOFIX child restraint systems (→ page 66)
- Suitability of seats for securing i-Size child restraint systems (→ page 67).
- Suitability of seats for attaching belt-secured child restraint systems (→ page 71)

Fitting an ISOFIX or i-Size child restraint system on the left and right rear seats

■ Overview of suitability of the seats for attaching ISOFIX child restraint systems

ISOFIX is a standardised securing system for specially designed child restraint systems.



The symbol indicates seats suitable for attaching an ISOFIX child restraint system in accordance with UN R44 (→ page 64).

Attach only child restraint systems that are approved in accordance with UN R44 as per the following ISOFIX tables.

Carry cot

Size class – Equipment	Left/right rear seat
F – ISO/L1	X
G – ISO/L2	X
X Not suitable for an ISOFIX child restraint system in this weight group and/or size class.	

Weight group 0 (up to 10 kg and up to approx. 6 months)

Size class – Equipment	Left/right rear seat
E – ISO/R1	IL
IL Suitable for ISOFIX child restraint systems according to the table in "Overview of the recommended child restraint systems", or if the vehicle and the seat are listed on the child restraint system manufacturer's vehicle model list.	

Weight group 0+ (up to 13 kg and up to approx. 15 months)

Size class – Equipment	Left/right rear seat
E – ISO/R1	IL
D – ISO/R2	IL

Size class – Equipment	Left/right rear seat
C – ISO/R3	IL (1)
IL Suitable for ISOFIX child restraint systems according to the table in "Overview of the recommended child restraint systems", or if the vehicle and the seat are listed on the child restraint system manufacturer's vehicle model list.	
(1) When using a child restraint system of size class (ISO/R3), move the front seat into the highest position. Make sure that the seat backrest of the front seat does not rest against the child restraint system.	

Weight group 1 (9–18 kg and approx. 9 months to 4 years)

Size class – Equipment	Left/right rear seat
D – ISO/R2	IL
C – ISO/R3	IL (1)
B – ISO/F2	IUF

Size class – Equipment	Left/right rear seat
B1 – ISO/F2X	IUF
A – ISO/F3	IUF

IL Suitable for ISOFIX child restraint systems according to the table in "Overview of the recommended child restraint systems", or if the vehicle and the seat are listed on the child restraint system manufacturer's vehicle model list.

IUF Suitable for forward-facing ISOFIX child restraint systems of the "Universal" category in this weight group.

(1) When using a child restraint system of size class (ISO/R3), move the front seat into the highest position. Make sure that the seat backrest of the front seat does not rest against the child restraint system.

■ Overview of suitability of the seats for attaching i-Size child restraint systems

i-Size is a standardised securing system for specially designed child restraint systems.



The symbol indicates seats suitable for attaching an i-Size child restraint system in accordance with UN R129 (→ page 64).

Child restraint systems that are permitted in accordance with UN R44 as per the ISO-FIX tables (→ page 66) or UN R129 as per the following i-Size tables may be attached.

i-Size child restraint systems (ISO/R2, ISO/F2X, ISO/B2, ISO/B3)

Front passenger seat	Left/right rear seat
X	i-U
X Not suitable for an i-Size child restraint system in the "Universal" category.	i-U Suitable for forward-facing and rearward-facing i-Size child restraint systems in the "Universal" category.

■ Fitting the ISOFIX or i-Size child restraint system on the left and right rear seats

⚠ WARNING Risk of accident if the rear bench seat, rear seat and seat backrest are not engaged

The rear bench seat, rear seat and seat backrest may fold forwards, even while the vehicle is in motion.

- As a result, the vehicle occupant will be pressed into the seat belt with increased force. The seat belt will not be able to protect as intended and could cause additional injury.
- Objects or loads in the boot or load compartment cannot be restrained by the seat backrest.

▶ Make sure that the rear bench seat, the rear seat and the seat backrest are engaged before every trip.

If the left and right seat backrests are not engaged and locked in place, this will be shown on the instrument display.

If the centre seat backrest is not engaged and locked in place, the red lock verification indicator will be visible.

⚠ WARNING Risk of injury or death if the permissible gross mass of the child and child restraint system together is exceeded.

Too much load may be placed on the ISOFIX or i-Size child restraint systems and the child may not be restrained correctly in the event of an accident, for example.

▶ If the child is secured in an ISOFIX or i-Size child restraint system with integrated seat belts, the total mass of the child and child restraint system must not exceed 33 kg.

Always comply with the information about the mass of the child:

- in the manufacturer's installation and operating instructions for the child restraint system used

- on a label on the child restraint system, if present

Regularly check that the permissible gross mass of the child and child restraint system is still complied with.

When fitting a child restraint system, observe the following:


- ✓ Always observe the correct use of the seats and consider their suitability for attaching a child restraint system.
ISOFIX child seat anchor (→ page 66)
or
i-Size child seat anchor (→ page 67)
- ✓ Always comply with the manufacturer's installation and operating instructions for the child restraint system used.
- ✓ Make sure that the child's feet do not touch the front seat. If necessary, move the front seat slightly forwards.

 When fitting an ISOFIX child restraint system, also observe the following:

- ✓ **When using a baby car seat in weight group 0/0+ and a rearward-facing child restraint system in weight group 1 on a rear seat:** adjust the front seat so that the seat does not touch the child restraint system.
- ✓ **When using a forward-facing child restraint system in weight group 1:** remove the head restraint from the respective seat, if possible. In addition, the backrest of the child restraint system must lie as flat as possible against the backrest of the vehicle seat.
After the child restraint system has been removed, replace the head restraint immediately and adjust all head restraints correctly.
- ✓ If the head restraint of the child seat cannot be fully extended when it is installed in the vehicle; this will result in restrictions on the maximum size setting for child restraint systems in weight group 2 or 3.
Contact with the roof when the head restraint is fully extended and locked in place will not result in any restrictions on use.

- ✓ The child restraint system must not be put under strain between the roof and the seat cushion and/or be fitted facing in the wrong direction. Where possible, adjust the seat cushion inclination accordingly.
- ✓ The child restraint system must not be put under strain by the head restraint. Adjust the head restraints as appropriate.
- ✎ When fitting an i-Size child restraint system, also observe the following:
 - ✓ **When using a rearward-facing child restraint system:** adjust the front seat so that it does not touch the child restraint system.
 - ✓ **When using a forward-facing child restraint system:** remove the head restraint from the respective seat, if possible. In addition, the backrest of the child restraint system must lie as flat as possible against the backrest of the vehicle seat.

After the child restraint system has been removed, replace the head restraint immediately and adjust all head restraints correctly.

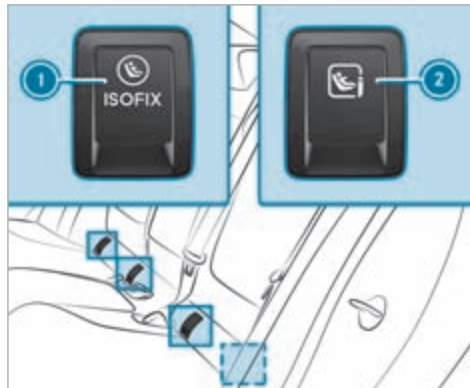

- ① ISOFIX mounting bracket
- ② i-Size mounting bracket

Before every journey, make sure that the ISOFIX child restraint system or the i-Size child restraint system is engaged correctly in both mounting brackets in the vehicle.

! NOTE Damage to the seat belt for the centre seat during installation of the child restraint system

▶ Make sure that the seat belt is not trapped.

▶ Attach the ISOFIX or i-Size child restraint system to both mounting brackets in the vehicle.

Fastening a Top Tether

! WARNING Risk of injury or death if the rear seat backrests are not locked after Top Tether belts are fitted

The rear seat backrests may fold forwards when you are driving.

As a result, child restraint systems will no longer be able to perform their intended protective function. This may also cause additional injuries.



▶ Always lock rear seat backrests after fitting Top Tether belts.

- ▶ Observe the lock verification indicator.

If the rear seat backrest is not engaged and locked in place, the red lock verification indicator will be visible.

 If the child restraint system is equipped with a Top Tether belt:

The risk of injury may be reduced by Top Tether. The Top Tether belt enables an additional connection between the child restraint system attached with ISOFIX or i-Size and the vehicle.

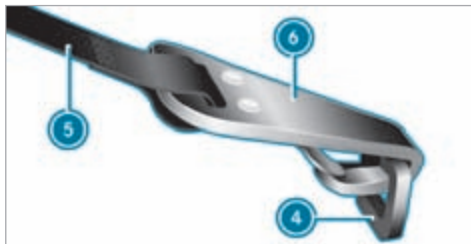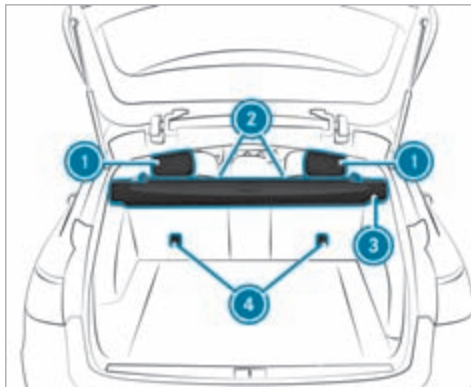

- ▶ If necessary, slide head restraint ① upwards (→ page 111).
- ▶ Fit the ISOFIX or i-Size child restraint system with Top Tether. In doing so, comply with the child restraint system manufacturer's installation instructions.
- ▶ Guide Top Tether belt ⑤ under head restraint ① between the two head restraint bars.
- ▶ Guide Top Tether belt ⑤ downwards between load compartment cover ③ and seat backrest ②.
- ▶ Hook Top Tether hook ⑥ of Top Tether belt ⑤ into Top Tether anchorage ④ without twisting.
- ▶ Tension Top Tether belt ⑤. In doing so, comply with the child restraint system manufacturer's installation instructions.
- ▶ If necessary, slide head restraint ① downwards (→ page 111). Make sure that you do not interfere with the correct routing of Top Tether belt ⑤.

Securing the child restraint system with the seat belt

■ Notes on the suitability of seats for attaching belt-secured child restraint systems

Rear seats

Weight category 0: to 10 kg	
Left/right rear seat	U, L
Centre rear seat ¹	U, L
Weight category 0+: to 13 kg	
Left/right rear seat	U, L
Centre rear seat ¹	U, L
Weight category I: 9 to 18 kg	
Left/right rear seat	U, L
Centre rear seat ¹	U, L
Weight category II: 15 to 25 kg	
Left/right rear seat	U, L

Centre rear seat ¹	U, L
Weight category III: 22 to 36 kg	
Left/right rear seat	U, L
Centre rear seat ¹	U, L
UN-R129 child restraint systems	
Left/right rear seat	U, L, B2, B3
Centre rear seat ¹	U, L, B2, B3

¹ Child restraint systems with a supporting bracket are not suitable for this seat.

U Suitable for child restraint systems of the "Universal" category in this weight category.

L Suitable for semi-universal child restraint systems according to the table in "Recommended child restraint systems", or if the vehicle and the seat are listed in the child restraint system manufacturer's vehicle model list.

B2, B3 Suitable for the installation of child restraint systems complying with ISO/B2 and ISO/B3 child seat cushion test equipment.

Notes on child restraint systems on the front passenger seat

- If it is absolutely necessary for you to fit a child restraint system to the front passenger seat, be sure to observe the information on child restraint systems on the front passenger seat (→ page 75).
- Observe the specific instructions for the rearward-facing and forward-facing child restraint systems. If the front passenger seat is occupied, ensure, both before and during the jour-

ney, that the status of the front passenger airbag is correct for the current situation (→ page 54).

Front passenger seat

Weight category 0: to 10 kg	
Front passenger airbag enabled ¹	X
Front passenger airbag disabled ^{1, 2}	U, L
Weight category 0+: to 13 kg	
Front passenger airbag enabled ¹	X
Front passenger airbag disabled ^{1, 2}	U, L
Weight category I: 9 to 18 kg	
Front passenger airbag enabled ¹	UF, L
Front passenger airbag disabled ^{1, 2}	U, L
Weight category II: 15 to 25 kg	
Front passenger airbag enabled ¹	UF, L
Front passenger airbag disabled ^{1, 2}	U, L

Weight category III: 22 to 36 kg	
Front passenger airbag enabled ¹	UF, L
Front passenger airbag disabled ^{1, 2}	U, L
UN-R129 child restraint systems	
Front passenger airbag enabled ¹	UF, L, B2, B3
Front passenger airbag disabled ^{1, 2}	U, L, B2, B3

1 Adjust the seat cushion inclination so that the front edge of the seat cushion is in the highest position and the rear edge of the seat cushion is in the lowest position.
2 The vehicle is equipped with automatic front passenger airbag shutoff. The PASSENGER AIR BAG OFF indicator lamp must be lit.
X Not suitable for children in this weight category.
U Suitable for child restraint systems of the "Universal" category in this weight category.
L Suitable for semi-universal child restraint systems according to the table in "Recommended child restraint systems", or if the vehicle and the seat are listed in the child restraint system manufacturer's vehicle model list.
UF Suitable for forward-facing child restraint systems of the "Universal" category in this weight category.
B2, B3 Suitable for the installation of child restraint systems complying with ISO/B2 and ISO/B3 child seat cushion test equipment.

■ Securing the child restraint system with the seat belt on the rear seat

⚠ WARNING Risk of accident if the rear bench seat, rear seat and seat backrest are not engaged

The rear bench seat, rear seat and seat backrest may fold forwards, even while the vehicle is in motion.

- As a result, the vehicle occupant will be pressed into the seat belt with increased force. The seat belt will not be able to protect as intended and could cause additional injury.
- Objects or loads in the boot or load compartment cannot be restrained by the seat backrest.

▶ Make sure that the rear bench seat, the rear seat and the seat backrest are engaged before every trip.

If the rear seat backrest is not engaged and locked in place, the red lock verification indicator will be visible.

When fitting a belt-secured child restraint system, observe the following:

- ✓ Always comply with the manufacturer's installation and operating instructions for the child restraint system used.
- ✓ For a child restraint system in the "Universal" or "Semi-Universal" category, make sure that the system has been approved for the vehicle seat.
Observe the notes under "Suitability of seats for attaching belt-secured child restraint systems" (→ page 71).
- ✓ **When using a weight category 0/0+ baby car seat and a weight category I rearward-facing child restraint system on a rear seat:** adjust the front seat so that the seat does not touch the child restraint system.
- ✓ **When using a weight category I forward-facing child restraint system:** remove the head restraint from the respective seat, if possible.

After the child restraint system has been removed, replace the head restraint immediately and adjust all head restraints correctly.

- ✓ The backrest of the forward-facing child restraint system must, as far as possible, be resting on the seat backrest of the rear seat.
- ✓ If the head restraint of the child seat cannot be fully extended when it is installed in the vehicle, this will result in restrictions on the maximum size setting for child restraint systems in weight category II or III.
Contact with the roof when the head restraint is fully extended and locked in place will not result in any restrictions on use.
- ✓ The child restraint system must not be put under strain between the roof and the seat cushion and/or be fitted facing the wrong direction. Where possible, adjust the seat cushion inclination accordingly.
- ✓ The child restraint system must not be put under strain by the head restraint. Adjust the head restraints as appropriate.
- ✓ Make sure that the child's feet do not touch the front seat. If necessary, move the front seat slightly forwards.

- ▶ Install the child restraint system.
The entire base of the child restraint system must always rest on the seat surface of the rear seat.
- ▶ Always make sure that the shoulder belt strap is correctly routed from the seat belt outlet of the vehicle to the shoulder belt guide on the child restraint system.
The shoulder belt strap must be routed forward from the seat belt outlet.

■ Notes on vehicles without automatic front passenger airbag shutoff



Sticker visible when the front passenger door is open

Vehicles without automatic front passenger airbag shutoff have a special sticker affixed to the side of the cockpit on the front passenger side.

Make sure you observe the following information:

- Never fit a rearward-facing child restraint system to the front passenger seat
- Always fit a rearward-facing child restraint system to a suitable rear seat
 - Observe the overview on suitability of seats for attaching belt-secured child restraint systems (→ page 71).
 - Secure the child restraint system with the seat belt on the rear seat (→ page 73).
- Notes on rearward-facing and forward-facing child restraint systems on the front passenger seat (→ page 75)

■ Notes on rearward-facing and forward-facing child restraint systems on the front passenger seat


⚠ WARNING Risk of injury or death when using a rearward-facing child restraint system while the front passenger airbag is enabled

If you secure a child in a rearward-facing child restraint system on the front passenger seat and the PASSENGER AIR BAG OFF indicator lamp is off, the front passenger airbag can deploy in the event of an accident.

The child could be struck by the airbag.

- ▶ Always ensure that the front passenger airbag is disabled. The PASSENGER AIR BAG OFF indicator lamp must be lit.
- ▶ NEVER use a rearward-facing child restraint system on a seat with an ENABLED FRONT AIRBAG. This can result in the DEATH of or SERIOUS INJURY to the CHILD.

Observe the specific instructions for the rearward-facing and forward-facing child restraint systems (→ page 75).

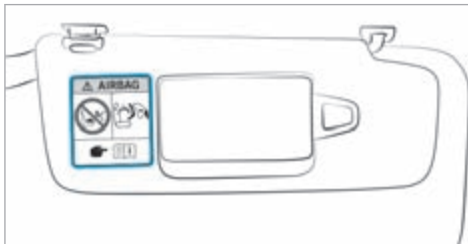

Warning notice on the front passenger sun visor

Always observe the status of the front passenger airbag on the PASSENGER AIR BAG OFF indicator lamp:

- If it is absolutely necessary to fit a child restraint system to the front passenger seat, always observe the information on automatic front passenger airbag shutoff (→ page 53).
- When using a rearward-facing child restraint system on the front passenger seat, the front

passenger airbag must always be disabled. This is only the case if the PASSENGER AIR BAG OFF indicator lamp is lit continuously (→ page 54).

- If the PASSENGER AIR BAG OFF indicator lamp is off, the front passenger airbag is enabled. The front passenger airbag may deploy during an accident.

■ Securing the child restraint system with the seat belt on the front passenger seat

When fitting a belt-secured child restraint system on the front passenger seat, always observe the following:

- ✓ Observe the notes on rearward-facing and forward-facing child restraint systems on the front passenger seat (→ page 75).
- ✓ Observe the child restraint system manufacturer's installation and operating instructions.
- ✓ For a child restraint system in the "Universal" or "Semi-Universal" category, make sure that the system has been approved for the vehicle seat.

Observe the notes under "Suitability of seats for attaching belt-secured child restraint systems" (→ page 71).

- ✓ When using a forward-facing child restraint system in weight category I: remove the head restraint from the respective seat, if possible. After the child restraint system has been removed, replace the head restraint immediately and adjust all head restraints correctly.
- ✓ The backrest of the forward-facing child restraint system must, as far as possible, be resting on the seat backrest of the front passenger seat.
- ✓ If the head restraint of the child seat cannot be fully extended when it is installed in the vehicle, this will result in restrictions on the maximum size setting for child restraint systems in weight category II or III.
Contact with the roof when the head restraint is fully extended and locked in place will not result in any restrictions on use.
- ✓ The child restraint system must not be put under strain between the roof and the seat

cushion and/or be fitted facing the wrong direction.

- ✓ The child restraint system must not be put under strain by the head restraint. Adjust the head restraints as appropriate.
- ✓ Never place objects (e.g. cushions) under or behind the child restraint system.

⚠ WARNING Risk of injury or death due to objects between the seat surface and the child restraint system

Objects between the seat surface and the child restraint system could affect the function of the automatic front passenger airbag shut-off.

- ▶ Do not place any objects between the seat surface and the child restraint system.
- ▶ Always make sure that the child restraint system is correctly fitted.

- ▶ Set the front passenger seat as far back as possible and move the seat into the highest position if possible.
- ▶ Fully retract the seat cushion length adjustment.
- ▶ Adjust the seat cushion inclination so that the front edge of the seat cushion is in the highest position and the rear edge of the seat cushion is in the lowest position.
- ▶ Set the seat backrest to the most vertical position possible.
- ▶ Install the child restraint system.
The entire base of the child restraint system must always rest on the sitting surface of the front passenger seat.
- ▶ Always make sure that the shoulder belt strap is correctly routed from the seat belt outlet of the vehicle to the shoulder belt guide on the child restraint system.
The shoulder belt strap must be routed forwards and downwards from the seat belt outlet.
- ▶ If necessary, adjust the seat belt outlet and the front passenger seat accordingly.

Child safety locks

■ Activating or deactivating the child safety lock for the rear doors

⚠ WARNING Risk of accident and injury due to leaving children unattended in the vehicle

If children are left unattended in the vehicle, they could, in particular:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

In addition, the children could also set the vehicle in motion by, for example:

- releasing the parking brake.
- changing the transmission position.
- starting the vehicle.

- ▶ Never leave children unattended in the vehicle.

- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.
- ▶ Keep the vehicle key out of the reach of children.

⚠ WARNING Risk of fatal injury due to exposure to extreme heat or cold in the vehicle

If persons, particularly children, are subjected to prolonged exposure to intense heat or cold, there is a risk of severe injury or even death.

- ▶ Never leave persons, particularly children, unattended in the vehicle.

⚠ WARNING Risk of accident and injury due to children left unattended in the vehicle

If children are travelling in the vehicle, they could, in particular:


- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

- ▶ Always activate the installed child safety locks if children are travelling in the vehicle.
- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.

Vehicles for the United Kingdom: observe the important safety notes in the "Notes on the additional door lock" section.


There are child safety locks for the rear doors and the rear side windows.

The child safety lock on the rear doors secures each door separately. The doors can no longer be opened from the inside.

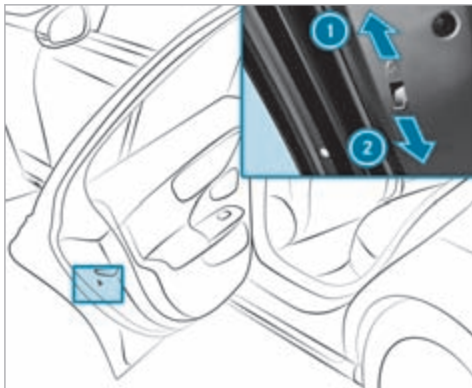

- ▶ Press the lever in direction ① (activate) or ② (deactivate).
- ▶ Make sure that the child safety locks are working properly.

■ Activating and deactivating the child safety lock for the rear side windows

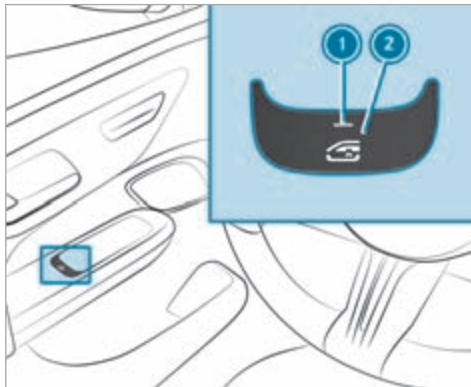

- ▶ **To activate/deactivate:** press button ②.
- The rear side window can be opened or closed in the following cases:
- indicator lamp ① is lit: via the switch on the driver's door

- indicator lamp ① is off: via the switch on the corresponding rear door or driver's door

Notes on pets in the vehicle

⚠ WARNING Risk of accident and injury due to animals left unsecured or unattended in the vehicle

If you leave animals in the vehicle unattended or unsecured, they could press buttons or switches, for instance.

An animal may:

- activate vehicle equipment and become trapped, for example
- switch systems on or off and endanger other road users

Unsecured animals may be thrown about the vehicle in the event of an accident, or sudden steering and braking manoeuvres, and injure vehicle occupants.

- ▶ Never leave animals unattended in the vehicle.
- ▶ Always correctly secure animals while driving, e.g. using a suitable animal carrier.

Key

Overview of key functions

⚠ WARNING Risk of accident and injury due to leaving children unattended in the vehicle

If children are left unattended in the vehicle, they could, in particular:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

In addition, the children could also set the vehicle in motion by, for example:

- releasing the parking brake.
- changing the transmission position.
- starting the vehicle.

▶ Never leave children unattended in the vehicle.

- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.
- ▶ Keep the vehicle key out of the reach of children.

⚠ NOTE Damage to the key caused by magnetic fields

- ▶ Keep the key away from strong magnetic fields.



Vehicle key

- ① Indicator lamp
- ② To lock

③ Unlocks (with embossed surface)

④ Opens/closes the tailgate

ⓘ If indicator lamp ① does not light up after pressing the or button, the battery is weak or possibly discharged. Replace the battery as soon as possible.

Replace the key battery (→ page 82).

The key locks and unlocks the following components:

- Doors
- Fuel filler flap
- Socket flap (plug-in hybrid)
- Tailgate

If the vehicle is not opened within approximately 40 seconds after unlocking, it locks again. Anti-theft protection is primed again.

Do not keep the key together with electronic devices or metal objects. This can affect the key's functionality.

Activating/deactivating the acoustic locking verification signal

Multimedia system:

→  ► Settings ► Vehicle
► Open/close

► Activate or deactivate the **Acoustic lock**.

Please observe:

The selected setting for the acoustic locking verification signal must comply with the relevant national road and traffic regulations. In some countries, including Germany, using the acoustic locking verification signal is forbidden by traffic laws (in accordance with §16 Para. 1 and §30 Para. 1 of the German national road traffic regulations). The driver of the vehicle must comply with these regulations. In countries where the use of this function is forbidden, this function is not activated in the vehicle and must not be activated.

Changing the unlocking settings

Possible unlocking functions of the key:

- Central unlocking

- Unlocking the driver's door and fuel filler flap
- **Plug-in hybrid:** unlocking the driver's door and fuel filler flap/socket flap

► **To switch between settings:** press the  and  buttons simultaneously for approximately six seconds until the indicator lamp flashes twice.

Options if the unlocking function for the driver's door and fuel filler flap has been selected:

- **To unlock the vehicle centrally:** press the  button twice.
- **Vehicles with KEYLESS-GO:** if you touch the inner surface of the door handle on the driver's door, only the driver's door and the fuel filler flap are unlocked.

Options if the unlocking function for the driver's door and fuel filler flap/socket flap has been selected (plug-in-hybrid):

- **To unlock the vehicle centrally:** press the  button twice.
- **Vehicles with KEYLESS-GO:** if you touch the inner surface of the door handle on the driver's door, only the driver's door and the fuel

er's door, only the driver's door and the fuel filler flap/socket flap are unlocked.

Deactivating the function of the key

Vehicles with KEYLESS-GO: if you deactivate the function of the key, the KEYLESS-GO functions are also deactivated. Access or drive authorization by KEYLESS-GO is then no longer possible with that particular key. Activate the function of the key so that all its functions will again be available.

You can also deactivate the function of the key to reduce the energy consumption of the key if you do not use the vehicle or a key for an extended period of time.

► **Deactivate:** Press  and hold the key button.

► With the key button  pressed, immediately press key button  twice in quick succession.


The indicator light of the key lights up once briefly and once for a long time.

► **To activate:** press any button on the key.

- ① When the vehicle is started with the key in the stowage compartment of the centre console, the function of the key is automatically activated (→ page 180).


Removing/inserting the emergency key

Removing the emergency key

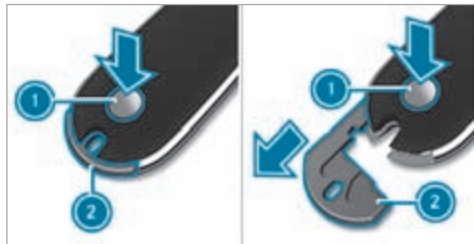

- ▶ Press release button ①. Emergency key ② is pushed out slightly.
- ▶ Fully remove emergency key ②.

Inserting the emergency key

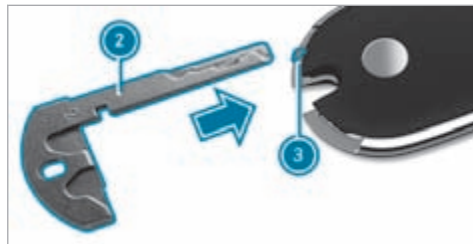

- ▶ Insert emergency key ② at marking ③ until it engages.
- ① You can use emergency key ② to attach the key to a key ring.

Replacing the key battery

⚠ DANGER Risk of fatal injuries due to swallowing batteries

Batteries contain toxic and corrosive substances. If batteries are swallowed or otherwise

enter the body, severe internal burns can occur within two hours.

There is a risk of fatal injury.

- ▶ Keep batteries out of the reach of children.
- ▶ If the battery compartment cover and/or lid do not close securely, stop using the key and keep it away from children.
- ▶ If batteries are swallowed or otherwise enter the body, seek immediate medical attention.



ENVIRONMENTAL NOTE Environmental damage due to improper disposal of batteries



Batteries contain pollutants. It is illegal to dispose of them with the household rubbish.



Dispose of batteries in an environmentally responsible manner. Take discharged batteries to a qualified specialist workshop or to a collection point for used batteries.

Requirements:


- You require a CR 2032 3 V cell battery.

Mercedes-Benz recommends that you have the battery replaced at a qualified specialist workshop.

- Remove the emergency key (→ page 82).



- Press emergency key ② into the opening in the key in the direction of the arrow until cover ① opens. When doing so, do not hold cover ① closed.

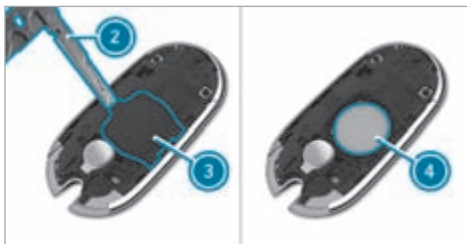

- Insert emergency key ② into the opening and lift up covering ③ and remove it.
- Repeatedly tap the key against your palm until battery ④ falls out of the key.
- Insert the new battery with the positive pole facing upwards. Use a lint-free cloth to do so.
- Make sure that the surface of the battery is free of lint, grease and other impurities.
- Insert the front tabs of covering ③ into the housing and then press on both sides to close it.
- Make sure that covering ③ is completely closed.
- Insert the front tabs of cover ① into the housing and then press until it is completely closed.
- Insert the emergency key again (→ page 82).

Problems with the key, troubleshooting

You can no longer lock or unlock the vehicle

Possible causes:

- The key battery is weak or discharged.
- ▶ Check the battery using the indicator lamp (→ page 80).
- ▶ Replace the key battery, if necessary (→ page 82).
- ▶ Use the replacement key.
- ▶ Use the emergency key to lock or unlock (→ page 87).
- ▶ Have the key checked at a qualified specialist workshop.

There is interference from a powerful radio signal source

Possible causes if the function of the key is impaired:

- high voltage power lines
- mobile phones
- electronic devices (notebooks, tablets)

- shielding due to metal objects or induction loops for electrical gate systems or automatic barriers

▶ Make sure that there is sufficient distance between the key and the potential source of interference.

You have lost a key

- ▶ Have the key deactivated at a qualified specialist workshop.
- ▶ If necessary, have the mechanical lock replaced as well.

Doors

Notes on the additional door lock

The additional door lock is only available for vehicles for the United Kingdom.

⚠ WARNING Risk of injury to persons inside the vehicle when the additional door lock is activated

If the additional door lock is activated, the doors can no longer be opened from the inside.

- ▶ Never leave persons, in particular children, unattended in the vehicle.
- ▶ If there are persons in the vehicle, do not activate the additional door lock.

The additional door lock is automatically activated in the following situations:

- The vehicle is locked using the key.
- The vehicle is locked using KEYLESS-GO.

If the vehicle has been locked via Mercedes me connect, the additional door lock is not activated (→ page 365).

If the additional door lock is activated, the doors cannot be opened from the inside.

i After locking you can issue a signal with the horn.

You can prevent the additional door lock from being activated by deactivating interior protection before locking the vehicle (→ page 104).


Unlocking/opening the doors from the inside

- **United Kingdom only:** observe the notes on the additional door lock (→ page 84).



- Pull the door ① handle.

Centrally locking and unlocking the vehicle from the inside

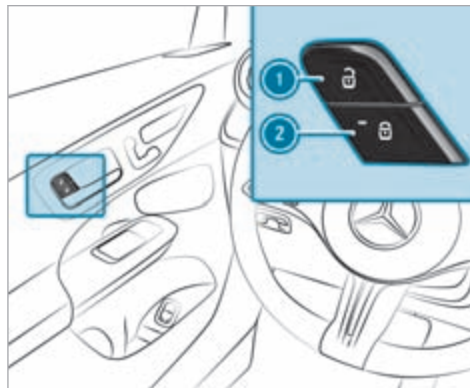

- **To unlock:** press ① button.
- **To lock:** press button ②. The red indicator lamp on button ② lights up once the vehicle is locked.

This does not lock or unlock the fuel filler flap.

Plug-in hybrid: the socket flap is also locked and unlocked. The socket flap can be opened even if a key is detected in the car.

The vehicle is not unlocked:

- if you have locked the vehicle using the key
- if you have locked the vehicle using KEYLESS-GO

Locking/unlocking the vehicle with KEYLESS-GO

Requirements:

- The key is outside the vehicle.
- The distance between the key and the vehicle does not exceed 1 m.
- The driver's door and the door on which the door handle is used are closed.


! **NOTE** Vehicle damage due to unintentional opening of the tailgate

- when using an automatic car wash
- when using a high pressure cleaner

- ▶ Deactivate the function of the key in these situations.
- or
- ▶ Make sure that the key is at a minimum distance of 3 m away from the vehicle.

Observe the notes:

- on washing the vehicle in a car wash (→ page 390)
- on using a high pressure cleaner (→ page 392)

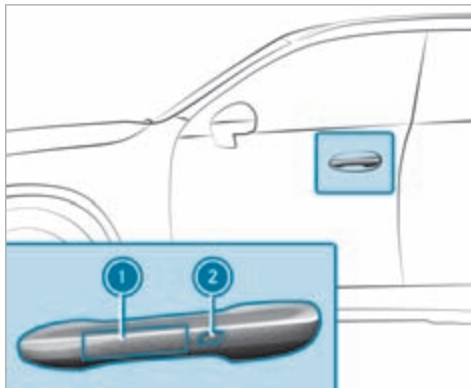

- ▶ **To unlock the vehicle:** touch the inner surface of the door handle.
- ▶ **To lock the vehicle:** touch sensor surface ① or ②.
- ▶ **Convenience closing:** touch recessed sensor surface ② for an extended period.

❗ Further information on convenience closing (→ page 96).

Problems with KEYLESS-GO, troubleshooting

You can no longer lock or unlock the vehicle using KEYLESS-GO

Possible causes:

- The function of the key has been deactivated.
- The key battery is weak or discharged.

- ▶ Activate the function of the key (→ page 81).
- ▶ Check the battery using the indicator lamp (→ page 80).
- ▶ Replace the key battery, if necessary (→ page 82).
- ▶ Use the replacement key.
- ▶ Use the emergency key to lock or unlock (→ page 87).
- ▶ Have the vehicle and key checked at a qualified specialist workshop.

There is interference from a powerful radio signal source

Possible causes if the function of KEYLESS-GO is impaired:

- high voltage power lines

- mobile phones
- electronic devices (notebooks, tablets)
- shielding due to metal objects or induction loops for electrical gate systems or automatic barriers

▶ Make sure that there is sufficient distance between the key and the potential source of interference.

Activating or deactivating the automatic locking feature

Multimedia system:

→  >> Settings >> Vehicle
 >> Open/close

- ① The vehicle is locked automatically when the vehicle is switched on and the wheels are turning faster than walking pace.
- ▶ Activate or deactivate **Automatic locking**.

In the following situations, there is a danger of being locked out when the function is activated:


- The vehicle is being towed or pushed.

- If the vehicle is being tested on a roller dynamometer.


Locking/unlocking the vehicle with the emergency key

Unlocking a left-hand vehicle door with the emergency key element

- ① If you unlock and open the driver's door with the emergency key, this triggers the burglar alarm system.
- ▶ Remove the emergency key (→ page 82).

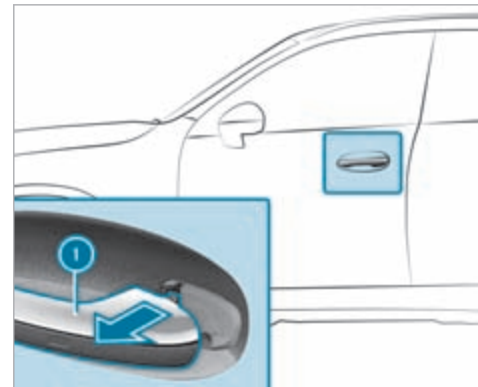


- ▶ Slightly pull and hold door handle ①.

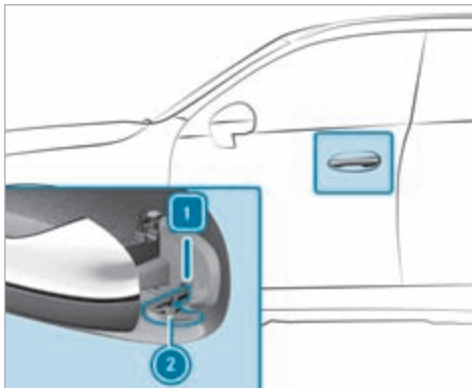

- ▶ Insert emergency key ② into the lock cylinder as shown.
- ▶ Turn the ② emergency key anti-clockwise to ① position.
- ▶ Turn the emergency key ② back to its starting position.
- ▶ Remove emergency key ② and release door handle ①.

Locking the doors

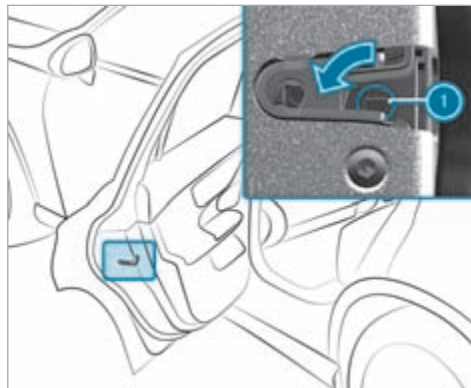

- ▶ Insert a suitable object, e.g. the emergency key, into opening ① on the door lock.
- ▶ **To lock the left-hand side of the vehicle:** turn the emergency key anti-clockwise as far as it will go.

- ▶ **To lock the right-hand side of the vehicle:** turn the emergency key clockwise as far as it will go.

If the locked door is then closed, it can no longer be opened from the outside.

Running boards

Notes

Your vehicle is equipped with running boards. Observe the following instructions for using the running boards.

Keep the running boards and footwear free of dirt and step only on the studded area. This will make your footing safer.

! **NOTE** Damage to the vehicle body or underbody due to low ground clearance

The running boards are attached to the vehicle body via the underbody. This limits the ground clearance.

- ▶ Drive over obstacles, such as kerbs, particularly carefully and slowly.

Load compartment

Opening the tailgate

⚠ DANGER Risk of poisoning from exhaust gases

Combustion engines emit poisonous exhaust gases, such as carbon monoxide. Exhaust gases can enter the vehicle interior if the tailgate is open when the engine is running, especially if the vehicle is in motion.


- ▶ Always switch off the engine before opening the tailgate.
- ▶ Never drive with the tailgate open.

! NOTE Damage to the tailgate caused by obstacles above the vehicle

The tailgate swings rearwards and upwards when it is opened.

- ▶ Make sure that there is sufficient space behind and above the tailgate.

- ▶ If the tailgate is unlocked, pull the tailgate handle and release it again immediately.
- ▶ **Vehicles with HANDS-FREE ACCESS:** make a kicking movement with your foot below the bumper (→ page 91).

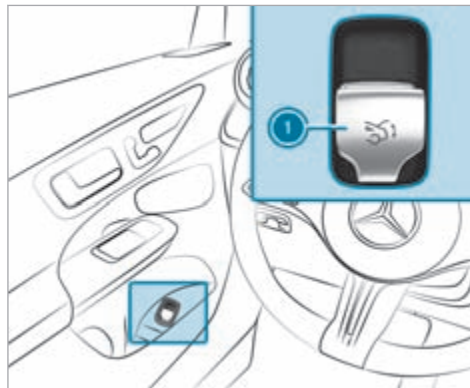

- ▶ Pull remote operating switch ① until the tailgate opens.

or

- ▶ Press and hold the  button on the key.
- ▶ If the tailgate has stopped in an intermediate position, pull it upwards. Release it as soon as it begins to open.

If an obstacle obstructs the tailgate during the automatic opening process, blockage detection will stop the tailgate. The automatic blockage detection function is only an aid. It is not a substitute for your attentiveness.

Closing the tailgate

⚠ WARNING Risk of injury from unsecured items in the vehicle

If objects, luggage or loads are not secured or not secured sufficiently, they could slip, tip over or be thrown around and thereby hit vehicle occupants.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- ▶ Always stow objects in such a way that they cannot be thrown around.

- ▶ Before the journey, secure objects, luggage or loads against slipping or tipping over.

Observe the notes on loading the vehicle.

Notes on closing the tailgate: your vehicle is equipped with automatic key recognition. If a key belonging to the vehicle is detected in the vehicle, the tailgate will not be locked.

Note that the tailgate will not be locked in the following situation:

- You have locked the vehicle and close the tailgate while a key belonging to the vehicle is inside the vehicle.
- and
- A second key belonging to the vehicle is not detected outside the vehicle.

Automatic key recognition is only an aid and is not a substitute for your attentiveness.

- ▶ Before locking, ensure that at least one key belonging to the vehicle is outside the vehicle.

- ▶ **To close the tailgate:** pull the tailgate downwards slightly. Release it as soon as it begins to close.

⚠ WARNING Risk of becoming trapped during automatic closing of the tailgate


Parts of the body could become trapped. There may be people in the closing area.

- ▶ Make sure that nobody is in the vicinity of the closing area during the closing process.


Use one of the following options to stop the closing process:

- Press the  button on the key.
- Press or pull the remote operating switch on the driver's door.
- Press the closing or locking button on the tailgate.
- Pull the tailgate handle.

Vehicles with HANDS-FREE ACCESS: it is also possible to stop the closing process by making a kicking movement below the rear bumper.

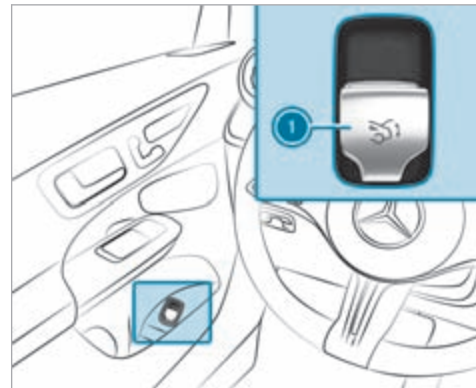

- ▶ Switch on the power supply or the vehicle.
- ▶ Push remote operating switch ① until the tailgate is fully closed.

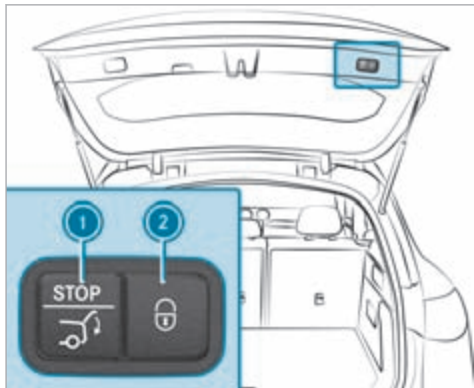

- ▶ Press closing button ① on the tailgate.

Vehicles with KEYLESS-GO

- ▶ Press locking button ② on the tailgate. If a key is detected outside the vehicle, the tailgate will close and the vehicle will be locked.
- ▶ Press and hold the  button on the key. The key must be in the vicinity of the vehicle.

Vehicles with HANDS-FREE ACCESS

- ▶ Make a kicking movement with your foot below the bumper (→ page 91).

Automatic reversing function for the tailgate

The tailgate is equipped with automatic blockage detection with a reversing function. If an obstacle obstructs the tailgate during the automatic closing process, it will automatically open again slightly. Automatic blockage detection with the reversing function is only an aid and is not a substitute for your attentiveness.

- ▶ During the closing process, make sure that no body parts are in the closing area.

⚠ WARNING Risk of becoming trapped despite reversing function

The reversing function will not react:

- to soft, light and thin objects, e.g. fingers.
- towards the end of the closing procedure.


In these situations in particular, the reversing function cannot prevent someone being trapped.

- ▶ Make sure that no body parts are in the closing area.

If someone is trapped, either:

- Press the  button on the key.
- Press or pull the remote operating switch on the driver's door.
- Press the closing or locking button on the tailgate.
- Pull the tailgate handle.

HANDS-FREE ACCESS function

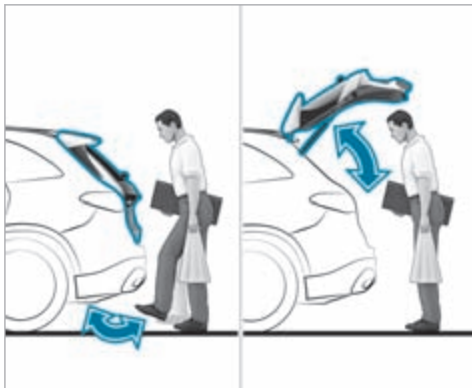

With HANDS-FREE ACCESS you can open, close or stop the closing process of the tailgate by performing a kicking movement under the rear bumper.

The kicking movement triggers the opening or closing process alternately.

Observe the notes when opening (→ page 89) and closing (→ page 89) the tailgate.

i Two warning tones sound when the tailgate is opening or closing.

⚠ WARNING Risk of burns caused by a hot exhaust system

The vehicle exhaust system can become very hot. If you use HANDS-FREE ACCESS, you could burn yourself by touching the exhaust system.

► Always ensure that you only make a kicking movement within the detection range of the sensors.

! NOTE Vehicle damage due to unintentional opening of the tailgate or a door

- when using an automatic car wash
- when using a high pressure cleaner

► Deactivate the function of the key in these situations.

or


► Make sure that the key is at a minimum distance of 3 m (high-pressure cleaner)

or 6 m (automatic car wash) away from the vehicle.

When making the kicking movement, make sure that you are standing firmly on the ground. You could otherwise lose your balance, e.g. on ice.

Observe the following notes:

- The key is behind the vehicle.
- Stand at least 30 cm away from the vehicle while performing the kicking movement.
- Do not come into contact with the bumper while making the kicking movement.
- Do not carry out the kicking movement too slowly.
- The kicking movement must be towards the vehicle and back again.

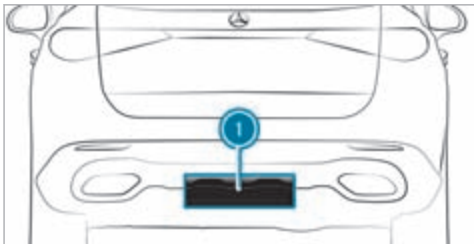

① Detection range of the sensors

If several consecutive kicking movements are not successful, wait ten seconds.

System limits

The system may be impaired or may not function in the following cases:

- The sensors are dirty, e.g. due to road salt or snow.
- The kicking movement is made using a prosthetic leg.

The tailgate can open or close unintentionally in the following situations:

- A person's arms or legs are moving in the sensor detection range, e.g. when polishing the vehicle or picking up objects.
- Objects are moved or placed behind the vehicle, e.g. the hose of a fuel dispenser, a charging cable or luggage
- Clamping straps, tarpaulins or other coverings are pulled over the bumper.
- A protective mat with a length reaching over the boot sill down into the detection range of the sensors is used.
- The protective mat is not secured correctly.
- Work is being done on the trailer hitch, trailers or rear bicycle racks.

Deactivate the function of the key (→ page 81) or do not carry the key about your person in such situations.

Limiting the opening angle of the tailgate

Activating the opening angle limiter

You can limit the opening angle of the tailgate in the top half of its opening range up to a point shortly before the end position.

- ▶ Stop the opening procedure of the tailgate at the desired position.
- ▶ Press and hold the closing button on the tailgate until you hear a short acoustic signal. The opening angle limiter will be activated. The tailgate will then stop in the stored position when opened.

To open the tailgate fully, pull the handle on the outside of the tailgate again after it has stopped automatically.


Deactivating the opening angle limiter

- ▶ Press and hold the closing button on the tailgate until two short acoustic signals sound.

Unlocking the tailgate with the emergency key

Requirements:

- The rear seat backrest has been folded forward.
- The load compartment cover has been removed.

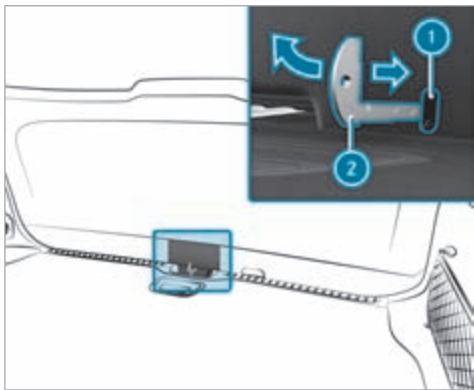

- ▶ Remove the emergency key (→ page 82).

- ▶ Insert emergency key ② into opening ① in the trim and push it in the direction of the arrow.
The tailgate will be unlocked.

Side windows

Opening and closing the side windows

- ⚠ **WARNING** Risk of becoming trapped when opening a side window

When you open a side window, parts of the body could be drawn in or become trapped between the side window and window frame.

- ▶ When opening, make sure that nobody is touching the side window.
- ▶ If someone is trapped, release the button immediately or pull it in order to close the side window again.

- ⚠ **WARNING** Risk of becoming trapped when closing a side window

When closing a side window, body parts could be trapped in the closing area in the process.

- ▶ When closing, make sure that no body parts are in the closing area.
- ▶ If someone is trapped, release the button immediately or press the button in order to reopen the side window.


- ⚠ **WARNING** Risk of becoming trapped when children operate the side windows

Children could become trapped if they operate the side windows, particularly when unattended.

- ▶ Activate the child safety lock for the rear side windows.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.
- ▶ Never leave children unattended in the vehicle.

Requirements:

- The power supply or the vehicle has been switched on.

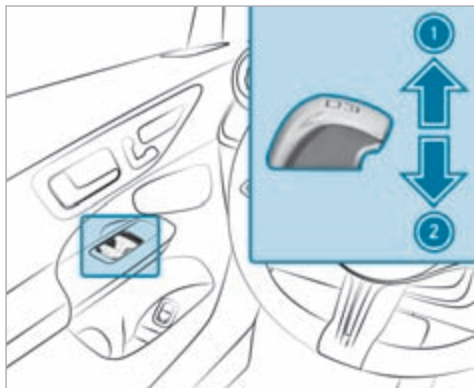

- ① Closing
- ② Opening

The buttons on the driver's door take precedence.

- ▶ **To start automatic operation:** press the  button beyond the point of resistance or pull and release it.
- ▶ **To interrupt automatic operation:** press or pull the  button again.

When the vehicle is switched off, you can continue to operate the side windows.

The function is also available until the doors are closed again.

Automatic reversing function of the side windows

If an obstacle impedes a side window during the closing process, the side window will open again automatically. The automatic reversing function is only an aid and is not a substitute for your attentiveness.

- ▶ During the closing process, make sure that no body parts are in the closing area.

⚠ WARNING Risk of becoming trapped despite there being reversing protection on the side window

The reversing function does not react:

- to soft, light and thin objects, e.g. fingers.
- during resetting.

The reversing function cannot prevent someone from becoming trapped in these situations.

- ▶ During the closing process, make sure that no body parts are in the closing area.
- ▶ If someone becomes trapped, press the  button to open the side window again.

Automatic function of the side windows

In the following cases, the side windows will be closed automatically when the vehicle is switched off:

- if it starts to rain

Rain is detected by a rain sensor on the wind-screen.

- in extreme temperatures
- after a certain time (depending on the on-board electrical system voltage)
- if there is a malfunction in the power supply

The side windows will be closed as far as the ventilation position.

Vehicles with a panorama sliding sunroof: the side windows will be closed completely if the sliding sunroof is open.

If the side windows are obstructed during automatic closing, the side window concerned will open again slightly. After another automatic closing process, the automatic function may be deactivated. After about ten seconds, the automatic function is active again.

Convenience opening (ventilating the vehicle before starting a journey)

⚠ WARNING Risk of entrapment when opening a side window

When opening a side window, parts of the body could be drawn in or become trapped between the side window and window frame.

- ▶ When opening, make sure that nobody is touching the side window.
- ▶ Release the button immediately if somebody becomes trapped.

Requirements:

- The key is in the immediate vicinity of the vehicle.
- ▶ Press and hold the  button on the key. The following functions are performed:
- The vehicle is unlocked.
 - The side windows are opened.
 - The panoramic sliding roof is opened.

- The seat ventilation of the driver's seat is switched on.

❗ If the roller sunblind of the panoramic sliding sunroof is closed, the roller sunblind is opened first.

▶ **To interrupt convenience opening:** release  the button.

▶ **To continue convenience opening:** press and hold the  button again.

Convenience closing (closing the vehicle from outside)

⚠ WARNING Risk of entrapment due to not paying attention during convenience closing

When the convenience closing feature is operating, parts of the body could become trapped in the closing area of the side window and the sliding sunroof.

- ▶ When the convenience closing feature is operating, monitor the entire closing

process and make sure that no body parts are in the closing area.

Requirements:

- The key is in the immediate vicinity of the vehicle.
- ▶ Press and hold the  button on the key.
The following functions are performed:
 - The vehicle is locked.
 - The side windows are closed.
 - The panoramic sliding roof is closed.
- ▶ **To interrupt convenience closing:** release the  button.
- ▶ **To continue convenience closing:** press and hold the  button again.
- ❗ Convenience closing also functions with KEYLESS-GO (→ page 85).

Resolving problems with the side windows

⚠ WARNING Risk of becoming trapped or fatally injured if reversing protection is not activated

If you close a side window again immediately after it has been blocked, the side window will close with increased or maximum force. The reversing function is then not active and body parts may become trapped.

- ▶ Make sure that no parts of the body are in the closing area.
- ▶ To stop the closing process, release the button or press the button again to reopen the side window.

A side window cannot be closed and you cannot see the cause.

- ▶ Check to see whether any objects are in the window guide.
- ▶ Adjust the side windows.

Adjusting the side windows

If a side window is obstructed during closing and reopens again immediately:

- ▶ Immediately after this, pull and hold the corresponding button again until the side window has closed and hold the button for at least one more second (re-adjustment).
The side window will be closed without the automatic reversing function.

If the side window is obstructed again and reopens again immediately:

- ▶ Immediately after this, pull and hold the corresponding button again until the side window has closed and hold the button for at least one more second (follow-up adjustment).
The side window will be closed without the automatic reversing function.

The side windows cannot be opened or closed using the convenience opening feature.

Possible causes:

- The key battery is weak or discharged.
- ▶ Check the battery using the indicator lamp (→ page 80).

- ▶ Replace the key battery, if necessary (→ page 82).

Sliding sunroof

Opening and closing the sliding sunroof

- ❗ The term "sliding sunroof" refers to the panorama sliding sunroof.

⚠ WARNING Risk of becoming trapped when the sliding sunroof is being opened and closed

Body parts may become trapped in the range of movement.

- ▶ During the opening and closing process, make sure that no body parts are in the sweep of the sliding sunroof.
- ▶ If someone is trapped, release the control panel immediately.

or

- ▶ Touch the control panel during automatic operation.
The opening/closing process will be stopped.

⚠ WARNING Risk of entrapment if the sliding sunroof is operated by children

Children operating the sliding sunroof could get caught in the moving parts, particularly if unattended.

- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.

⚠ WARNING Risk of becoming trapped when the roller sunblind is being opened and closed

Body parts may become trapped between the roller sunblind and frame or sliding roof.

- ▶ During the opening or closing process, make sure that no body parts are in the roller sunblind's range of movement.
- ▶ If someone is trapped, release the control panel immediately.

or

- ▶ Touch the control panel during automatic operation.
The opening/closing process will be stopped.

❗ NOTE Malfunction due to snow and ice

Snow and ice may cause the sliding sunroof to malfunction.

- ▶ Open the sliding sunroof only if it is free of snow and ice.

❗ NOTE Damage caused by protruding objects


Objects that protrude from the sliding sunroof may damage the seals.

- ▶ Do not allow anything to protrude from the sliding sunroof.

! NOTE Damage to panorama sliding sunroof caused by roof luggage rack

If the panorama sliding sunroof is opened when a roof luggage rack is fitted, the panorama sliding sunroof may be damaged by the roof luggage rack.

- ▶ Do not open the panorama sliding sunroof if a roof luggage rack is fitted.

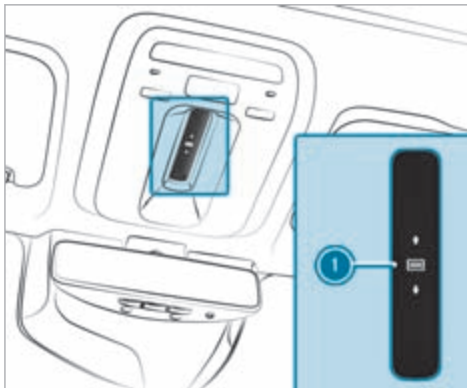

The sliding sunroof and the roller sunblind are operated using control panel ①.

The panorama sliding sunroof can be operated only when the roller sunblind is open.

- ▶ **To open:** swipe backwards across control panel ① and hold.
- ▶ **To close:** swipe forwards across control panel ① and hold.

- ▶ **To raise or lower:** press control panel ① briefly.
- ▶ **To start automatic operation:** swipe forwards or backwards across control panel ①.
- ▶ **To cancel automatic operation:** press control panel ① again.
The opening/closing process will be stopped.

Automatic reversing function of the sliding sunroof

If an obstacle obstructs the sliding sunroof during the closing process, the sliding sunroof will open again automatically. The automatic reversing function is only an aid and is not a substitute for your attentiveness.

- ▶ During the closing process, make sure that no body parts are in the closing area.

⚠ WARNING Risk of becoming trapped despite reversing function

The reversing function will not react:

- to soft, light and thin objects, e.g. fingers.
- towards the end of the closing procedure.

- during resetting.

- ▶ During the closing process, make sure that no body parts are in the closing area.
- ▶ If someone is trapped, release the control panel immediately.

or

- ▶ Touch the control panel during automatic closing.
The closing process will be stopped.

Automatic reversing function of the roller sunblind

If an obstacle obstructs the roller sunblind during the closing process, the roller sunblind will open again automatically. The automatic reversing function is only an aid and is not a substitute for your attentiveness.

- ▶ When closing the roller sunblind, make sure that no body parts are in the range of movement.

WARNING Risk of becoming trapped despite reversing function

In particular, the reversing function does not react to soft, light and thin objects, e.g. fingers.

- ▶ When closing the roller sunblind, make sure that no body parts are in the range of movement.
- ▶ If someone is trapped, release the control panel immediately.

or

- ▶ Touch the control panel during automatic closing.
The closing process will be stopped.

Automatic functions of the sliding sunroof

- ❗ The term "sliding sunroof" refers to the panorama sliding sunroof.

The sliding sunroof will be closed automatically when the vehicle has been switched off in the following situations:

- if it starts to rain

Rain is detected by a rain sensor on the windscreen.

- in extreme temperatures
- after a certain time (depending on the on-board electrical system voltage)
- if there is a malfunction in the power supply

The sliding sunroof will rise at the rear in order to continue ventilating the vehicle interior.

If the sliding sunroof is obstructed during an automatic closing procedure, the roof will be opened again slightly. The automatic function for the sliding sunroof and the side windows will then be deactivated.

Rain closing function when driving

Vehicles with a panorama sliding sunroof: if it starts to rain, the raised sliding sunroof will automatically be lowered while the vehicle is in motion.

Automatic lowering function

Vehicles with a panorama sliding sunroof: if the sliding sunroof is raised at the rear, it will automatically be lowered slightly at higher speeds. At low speeds, it will be raised again automatically.

⚠ WARNING Risk of becoming trapped by automatic lowering of the sliding sunroof

At higher speeds, the raised sliding sunroof will automatically be lowered slightly at the rear.

- ▶ Make sure that nobody reaches into the sliding sunroof's range of movement while the vehicle is in motion.
- ▶ If someone becomes trapped, touch the control panel.

Rectifying problems with the sliding sunroof

⚠ WARNING Risk of becoming trapped or fatal injuries when the sliding sunroof is closed again

If you close the sliding sunroof again immediately after it has been blocked or reset, the sliding sunroof will close with increased or maximum force.

There is a risk of becoming trapped or even of fatal injuries!

- ▶ Make sure that no parts of the body are in the closing area.
- ▶ If someone is trapped, release the control panel immediately.

or

- ▶ Touch the control panel during automatic closing.
The closing process will be stopped.

The sliding sunroof cannot be closed and you cannot see the cause.

i The term "sliding sunroof" refers to the panorama sliding sunroof.

If the sliding sunroof is obstructed during closing and reopens again slightly:

- ▶ Immediately after automatic reversing, swipe forwards across the control panel (→ page 98) and hold until the sliding sunroof is closed.
The sliding sunroof will be closed with increased force.

If the sliding sunroof is obstructed again and opens again slightly:

- ▶ Repeat the previous step.
The sliding sunroof will be closed again with increased force.

The sliding sunroof or the roller sunblind is not operating smoothly.

- ▶ Reset the sliding sunroof and the roller sunblind.

Resetting the sliding sunroof and the roller sunblind

- ▶ Swipe forwards across the control panel (→ page 98) and hold repeatedly until the sliding sunroof is completely closed.
- ▶ Press and hold the control panel for another second.
- ▶ Press and hold the control panel until the front roller sunblind is completely closed.
- ▶ Press and hold the control panel for another second.
- ▶ Use automatic operation to fully open and then close the sliding sunroof.


Roller sunblinds

Extending the rear side window roller sunblinds

! NOTE Damage to the inertia reel due to it snapping back

If suddenly snapped back, the inertia reel may be damaged.

- ▶ Always move the roller sun blind by hand.
- ▶ Do not drive with the roller sun blind hooked in and rear side windows opened at the same time.

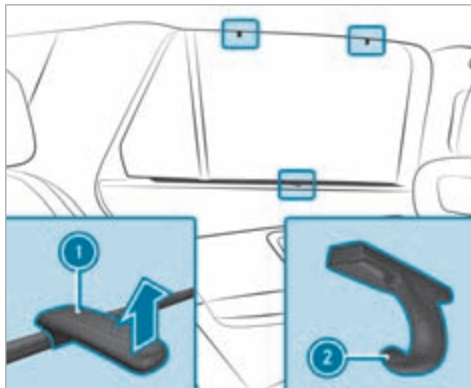

- ▶ Pull the roller sunblind out by tab ① and hook it onto brackets ② at the top of the window.

Anti-theft protection

Function of the immobiliser

The immobiliser prevents your vehicle from being started without the correct key.

The immobiliser is automatically activated when the vehicle is switched off, and deactivated when the vehicle is switched on.

ATA (Anti-Theft Alarm system)


Function of the ATA system

If the ATA system is primed, a visual and audible alarm is triggered in the following situations:

- when a door is opened
- when the tailgate is opened
- when the bonnet is opened
- when interior protection is triggered (→ page 104)
- when tow-away protection is triggered (→ page 103)

The ATA system is primed automatically after approximately ten seconds in the following situations:

- after locking the vehicle with the key
- after locking the vehicle using KEYLESS-GO

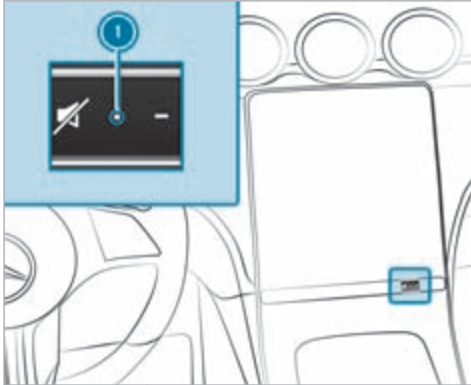

Indicator lamp ① flashes when the ATA system is primed.

The ATA system is deactivated automatically in the following situations:

- after unlocking the vehicle with the key
- after unlocking the vehicle using KEYLESS-GO

- after pressing the start/stop button with the key in the stowage compartment (→ page 180)

Deactivating the ATA

▶ Press the ,  or  button on the

or

▶ Press the start/stop button with the key in the stowage compartment (→ page 180)

Deactivating the alarm using KEYLESS-GO

▶ Grasp the outside door handle with the key outside the vehicle.

Function of tow-away protection

An audible and visual alarm is triggered if an alteration to your vehicle's angle of inclination is detected while tow-away protection is primed.

Tow-away protection is automatically primed after approximately 60 seconds:

- after locking the vehicle with the key
- after locking the vehicle using KEYLESS-GO

Tow-away protection is only primed when the following components are closed:

- Doors
- Tailgate

Tow-away protection is automatically deactivated:

- after pressing the  or  button on the key
- after pressing the start/stop button with the key in the stowage compartment (→ page 180)
- after unlocking the vehicle using KEYLESS-GO
- when using HANDS-FREE ACCESS

Information on collision detection on a parked vehicle (→ page 235).

Priming/deactivating tow-away protection

Multimedia system:

➡  ➡ Settings ➡ Vehicle
➡ Opening/closing ➡ Vehicle protection

▶ Prime or deactivate **Tow-away protection**.

Tow-away protection is primed again in the following cases:

- The vehicle is unlocked again.
- A door is opened.
- The vehicle is locked again.

Function of interior protection

When interior protection is primed, a visual and audible alarm is triggered if movement is detected in the vehicle interior.

Interior protection is primed automatically after approximately ten seconds:

- after locking the vehicle with the key
- after locking the vehicle using KEYLESS-GO

Interior protection is only primed when the following components are closed:

- Doors
- Tailgate

Interior protection is automatically deactivated:

- after pressing the  or  button on the key

- after pressing the start/stop button with the key in the stowage compartment (→ page 180)
- after unlocking the vehicle using KEYLESS-GO
- when using HANDS-FREE ACCESS

The following situations can lead to a false alarm:

- when there are moving objects such as mascots in the vehicle interior
- when a side window is open
- when a panoramic sliding sunroof is open

Priming/deactivating interior protection

Multimedia system:

  **» Settings » Vehicle**
» Opening/closing » Vehicle protection

 Prime or deactivate **Interior motion sensor**.

Interior protection is primed again in the following cases:

- The vehicle is unlocked again.
- A door is opened.
- The vehicle is locked again.

Notes on the correct driver's seat position

⚠ WARNING Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

You could lose control of the vehicle in the following situations in particular:

- if you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
- if you fasten your seat belt while the vehicle is in motion

► Before starting the vehicle: in particular, adjust the driver's seat, head restraint, steering wheel and mirror, and fasten your seat belt.



Ensure the following when adjusting steering wheel ①, seat belt ② and driver's seat ③:

- You are sitting as far away from the driver's airbag as possible, taking the following points into consideration:
- You are sitting in an upright position
- Your thighs are slightly supported by the seat cushion

- Your legs are not fully extended and you can depress the pedals properly
- The back of your head is supported at eye level by the centre of the head restraint
- You can hold the steering wheel with your arms slightly bent
- You can move your legs freely
- You can see all the displays on the driver's display clearly
- You have a good overview of the traffic conditions
- Observe the notes on correctly fastening the seatbelt (→ page 45).

Notes on grab handles

⚠ WARNING Risk of injury due to excessive load on the grab handles

If you apply your full body weight to the grab handle or pull it abruptly, the grab handle may be damaged or come loose from its anchorage. This may result in injuries.

- ▶ Use the grab handles only to stabilise the seating position or to assist in getting in and out of the seat.

Seats

Adjusting the front seat manually and electrically

- ⚠ WARNING** Risk of becoming trapped if the seats are adjusted by children

Children could become trapped if they adjust the seats, particularly when unattended.

- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.
- ▶ Never leave children unattended in the vehicle.

You can adjust the seats when the vehicle is switched off.

- ⚠ WARNING** Risk of becoming trapped during seat adjustment

When you adjust a seat, you or other vehicle occupants could become trapped, e.g. on the seat guide rail.

- ▶ Make sure when adjusting a seat that no one has any body parts in the sweep of the seat.

Observe the safety notes on "Airbags" and "Children in the vehicle".

- ⚠ WARNING** Risk of accident due to the driver's seat not being engaged

The driver's seat may move unexpectedly while driving.

This could cause you to lose control of the vehicle.

- ▶ Always make sure that the driver's seat is engaged before starting the vehicle.

- ⚠ WARNING** Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

You could lose control of the vehicle in the following situations in particular:

- if you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
- if you fasten your seat belt while the vehicle is in motion

- ▶ Before starting the vehicle: in particular, adjust the driver's seat, head restraint, steering wheel and mirror, and fasten your seat belt.

- ⚠ WARNING** Risk of becoming trapped if the seat height is adjusted carelessly

If you adjust the seat height carelessly, you or other vehicle occupants could be trapped and thereby injured.

Children in particular could accidentally press the electrical seat adjustment buttons and become trapped.

- ▶ While moving the seats, make sure that hands or other body parts do not get under the lever assembly of the seat adjustment system.

⚠ WARNING Risk of injury due to head restraints not being fitted or being adjusted incorrectly

If head restraints have not been installed or have not been adjusted correctly, there is an increased risk of injury in the head and neck area, e.g. in the event of an accident or when braking.

- ▶ Always drive with the head restraints fitted.
- ▶ Before driving off, make sure for every vehicle occupant that the centre of the head restraint supports the back of the head at about eye level.

Adjust the head restraint fore-and-aft position so that it is as close as possible to the back of your head.

⚠ WARNING Risk of injury or death due to incorrect seat position

The seat belt will not offer the intended level of protection if you have not moved the seat backrest to an almost vertical position.

In particular, you may slip under the seatbelt and injure yourself.

- ▶ Adjust the seat properly before beginning your journey.
- ▶ Always ensure that the seat backrest is in an almost vertical position and that the shoulder section of your seat belt is routed across the centre of your shoulder.

⚠ WARNING Risk of injury or death due to objects under the co-driver seat

Objects trapped under the co-driver seat can interfere with the function of the automatic co-driver airbag shutoff or damage the system.

- ▶ Do not store any objects under the co-driver seat.
- ▶ When the co-driver seat is occupied, make sure that no objects are trapped under the co-driver seat.

⚠ WARNING Risk of injury due to excessive load on the grab handles

If you apply your full body weight to the grab handle or pull it abruptly, the grab handle may be damaged or come loose from its anchorage. This may result in injuries.

- ▶ Use the grab handles only to stabilise the seating position or to assist in getting in and out of the seat.

! NOTE Damage to the seats when adjusting


The seats may be damaged by objects when adjusting the seats.

- ▶ When adjusting the seats, make sure that there are no objects in the footwell, under or behind the seats.

! NOTE Damage to the roof lining during adjustment

The roof lining may be damaged when you adjust the front seats.

- ▶ Adjust the head restraint first before adjusting the seat height.

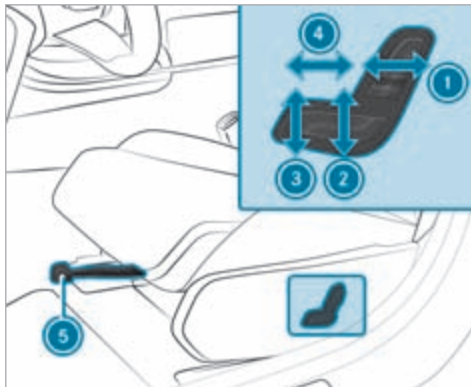


- ① Seat backrest inclination
- ② Seat height
- ③ Seat cushion inclination
- ④ Seat cushion length
- ⑤ Seat fore-and-aft position

- ▶ **To adjust the seat fore-and-aft position:** lift lever ⑤ and slide the seat into the desired position.

- ▶ Make sure that the seat is engaged.

Adjusting the front seat electrically

The switches for adjusting the seats do not move. You will therefore receive no direct feedback on the switch while pressing the switch. Feedback is provided only by the movement of the seat.

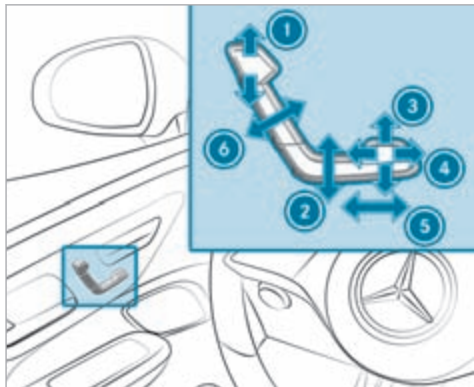


- ① Head restraint height
- ② Seat height
- ③ Seat cushion inclination
- ④ Seat cushion length
- ⑤ Seat fore-and-aft position
- ⑥ Seat backrest inclination

► Save the settings with the memory function (→ page 120).

ⓘ The head restraint height will be adjusted automatically when you adjust the seat height or the seat fore-and-aft position.

Adjusting the 4-way lumbar support

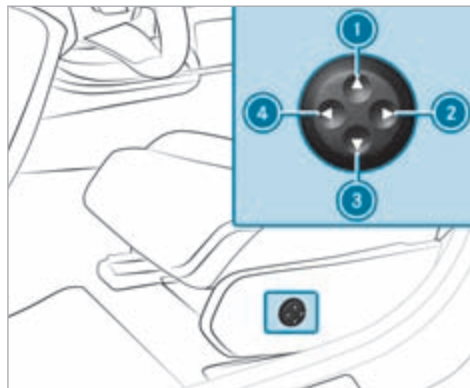

- ① Higher
- ② Softer

- ③ Lower
- ④ Firmer

► Use buttons ① to ④ to adjust the contour of the backrest.

Head restraints

Adjusting the head restraints on the front seats

⚠ WARNING Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

You could lose control of the vehicle in the following situations in particular:

- if you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
- if you fasten your seat belt while the vehicle is in motion

► Before starting the vehicle: in particular, adjust the driver's seat, head restraint,

steering wheel and mirror, and fasten your seat belt.


⚠ WARNING Risk of injury due to incorrectly adjusted head restraints

If head restraints have not been adjusted correctly, there is an increased risk of injury in the head and neck area, e.g. in the event of an accident or sudden braking.

- ▶ Before driving off, make sure for every vehicle occupant that the centre of the head restraint supports the back of the head at about eye level.


Adjust the head restraint fore-and-aft position so that it is as close as possible to the back of your head.

Seats with manual and electric seat adjustment

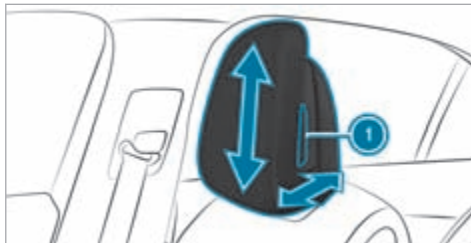

- ▶ Take hold of the head restraint on both sides and press release knob ①.
- ▶ **To move forwards or backwards:** pull the head restraint forwards or push it backwards.
- ▶ **To move upwards or downwards:** push the head restraint upwards or downwards.
- ▶ Let go of release knob ①.


Seats with electric seat adjustment

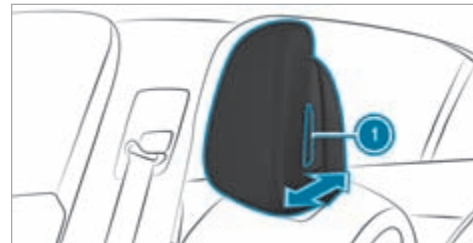

- ▶ Take hold of the head restraint on both sides and press release knob ①.
- ▶ **To move forwards or backwards:** pull the head restraint forwards or push it backwards.
- ▶ **To move upwards or downwards:** adjust the head restraint using the buttons on the door operating unit (→ page 108).
- ▶ Let go of release knob ①.

■ Adjusting the head restraints of the rear seats manually


- ❶ Move all head restraints up at least to the first detent, even in the steeper seating position (cargo position) (→ page 128). If a head restraint is in the lowest, non-locked position, the respective seat must not be used.

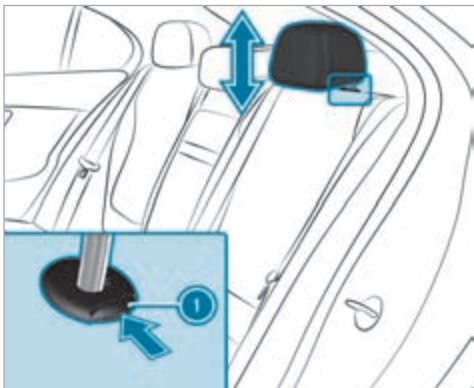

- ▶ **To raise:** push release knob ❶ in the direction of the arrow and pull the head restraint up until it engages.
- ▶ **To lower:** press release knob ❶ in the direction of the arrow and push the head restraint down until it engages.
- ▶ **To set the centre head restraint in the first position:** pull the head restraint up until it engages.

■ Fitting/removing the rear seat head restraints

Removing

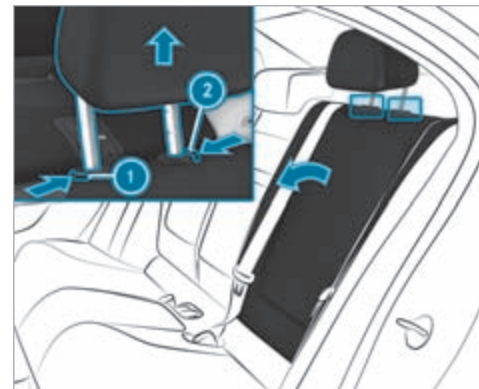

- ▶ Release the rear seat backrest and fold it forwards slightly (→ page 124).
- ▶ Press release knob ❷ and pull the head restraint upwards as far as it will go. Release knob ❶ will extend.

- ▶ Push both release knobs ❶ and ❷ at the same time in the direction of the arrow and pull out the head restraint.
- ▶ Fold the rear seat backrest back until it engages.

Fitting

- ▶ Release the rear seat backrest and fold it forwards slightly (→ page 124).
- ▶ Insert the head restraint such that the notches on the bar are on the left when viewed in the direction of travel.
- ▶ Push the head restraint down until it engages.
- ▶ Fold the rear seat backrest back until it engages.

Configuring the seat settings

Multimedia system:

→  ▶ **Comfort** ▶ **Seat**

Adjusting the air cushions

- ▶ In the corresponding menu, adjust the air cushions for **Lumbar** or **Side bolsters**.

Setting the seat heating balance

- ▶ Select **Heating settings**.
- ▶ Select **Seat heating balance**.
- ▶ Adjust the heat distribution for the desired seat.

Setting automatic seat adjustment

⚠ WARNING Risk of becoming trapped during adjustment of the driver's seat after calling up a driver profile

Selecting a user profile may trigger an adjustment of the driver's seat to the position saved under the user profile. You or other vehicle occupants could be injured in the process.

- ▶ Make sure that when the position of the driver's seat is being adjusted via the multimedia system, no people or body parts are in the seat's range of movement.

If there is a risk of someone becoming trapped, stop the adjustment process immediately:

- ▶ a) Tap the warning message on the central display.
- or
- ▶ b) Press a memory function position button or a seat adjustment switch on the driver's door.
The adjustment process will be stopped.

Multimedia system:

→  ▶ **Comfort** ▶ **Seat**
▶ **Position seat automatically**

Manually adjusting driver's seat and steering wheel position to body size

The vehicle calculates a suitable driver's seat and steering wheel position on the basis of the driver's body size and sets this directly.

- ▶ **To set the unit of measurement:** select **cm** or **ft/in**.
- ▶ Set the size using the scale.

- ▶ Select **Start positioning**.
The driver's seat and steering wheel position is adjusted to the body size that has been set.

- ① You can also configure these settings via the Mercedes me user account for your user profile. By synchronising the profiles in the vehicle and the Mercedes me connect profiles, you can carry over these settings for your vehicle. Further information about synchronising user profiles .
- ① If the driver's seat and steering wheel position calculated by the vehicle is not practical or comfortable, it can be manually adapted at any time via the control buttons.
The outside mirrors are not set via this function. Instead, they have to be set manually via the operating switches.

Overview of massage programmes

- **Relaxing Massage**: Relaxing back massage with increasing wave motions and then soothing movements
- **Activating Massage**: Activating massage with upward-moving massage waves

- **Classic Massage**: Relaxing back massage
- **Mobilizing Massage**: Mobilising massage with upward-moving massage waves. Can promote slower, deeper respiration. This can improve the supply of oxygen to cells and the brain.
- **Depth waves**: Wave-like movements in the cushion can promote blood flow and metabolic processes in the lower back and legs
- **Deep workout**: Wave-like movements in the cushion are combined with wave movements from the backrest and can stimulate blood circulation and metabolism in the lower back, buttocks and legs
- ① The Depth waves and Deep workout programmes are available only for the driver's seat.

Selecting a massage programme for the front seats

Multimedia system:

→  » **Comfort** » **Massage**

- ▶ Select a massage programme (→ page 113).

- ▶ Start the programme for the desired seat .

- ▶ **To set the massage intensity**: switch **High intensity** on or off.

- ① The availability of this function is dependent on the vehicle's equipment.

Resetting seat settings

Multimedia system:

→  » **Comfort** » **Seat**

- ▶ Select **Reset**.

- ▶ Select  for the desired seat.

Switching the seat heating on/off

⚠ WARNING Risk of burns due to repeatedly switching on the seat heating

Repeatedly switching on the seat heating can cause the seat cushion and seat backrest padding to become very hot.

In particular, the health of persons with limited temperature sensitivity or a limited ability to react to high temperatures may be affected or they may even suffer burn-like injuries.

- ▶ Do not repeatedly switch on the seat heating.

To protect against overheating, the seat heating may be temporarily deactivated after it has been switched on repeatedly.

! **NOTE** Damage to the seats caused by objects or documents when the seat heater is switched on

When the seat heater is switched on, overheating may occur due to objects or documents placed on the seats e.g. seat cushions or child seats. This could cause damage to the seat surface.

- ▶ Make sure that no objects or documents are on the seats when the seat heater is switched on.

Requirements:

- The power supply is switched on.




- ▶ Press button ① for the respective seat repeatedly until the desired heating level is reached. Depending on the heating level, up to three indicator lamps will light up. If all indicator lamps are off, the seat heating is switched off.

- ① The seat heating will automatically switch down from the three heating levels after 8, 10 and 20 minutes until the seat heating switches off.
- ① If you switch the power supply off and on again within 20 minutes, the previous setting of the seat heating for the driver's seat will remain active.

Switching the seat ventilation on/off

Requirements:

- The power supply is switched on.

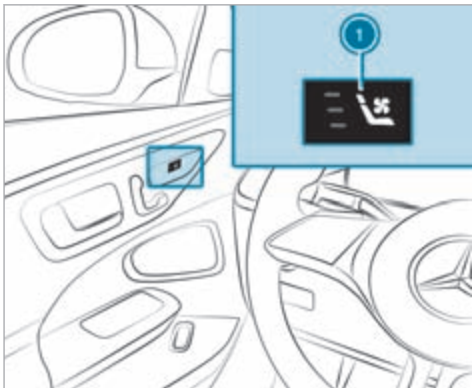

- ▶ Press button ① for the respective seat repeatedly until the desired blower setting is reached. Depending on the blower setting, up to three indicator lamps will light up. If all indicator lamps are off, the seat ventilation is switched off.

① If you switch the power supply off and on again within 20 minutes, the previous seat

ventilation setting for the driver's seat will remain active.

Steering wheel

Adjusting the steering wheel manually

⚠ WARNING Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

You could lose control of the vehicle in the following situations in particular:


- if you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
 - if you fasten your seat belt while the vehicle is in motion
- ▶ Before starting the vehicle: in particular, adjust the driver's seat, head restraint, steering wheel and mirror, and fasten your seat belt.

⚠ WARNING Risk of entrapment for children when adjusting the steering wheel

Children could injure themselves if they adjust the steering wheel.

- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.

Unlocking

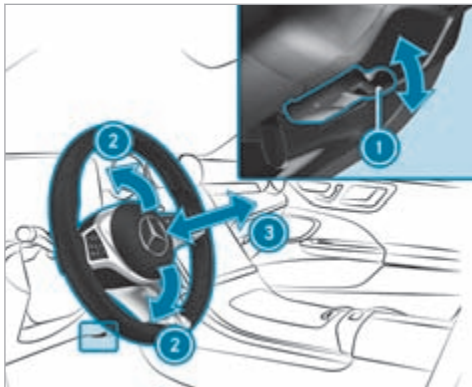

- ▶ Fold release lever ① down as far as it will go.
- ▶ Adjust height ② and distance ③ to the steering wheel.

Locking

- ▶ Fold release lever ① up as far as it will go.

- ▶ Check and make sure that the steering column is locked by moving the steering wheel.

Adjusting the steering wheel electrically

⚠ WARNING Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

You could lose control of the vehicle in the following situations in particular:


- if you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
 - if you fasten your seat belt while the vehicle is in motion
- ▶ Before starting the vehicle: in particular, adjust the driver's seat, head restraint, steering wheel and mirror, and fasten your seat belt.

⚠ WARNING Risk of entrapment for children when adjusting the steering wheel

Children could injure themselves if they adjust the steering wheel.

- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.

The steering wheel can be adjusted when the power supply is disconnected.

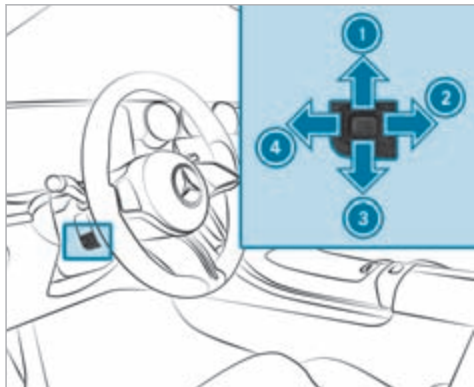

- ① To move up
- ② To move back
- ③ To move down
- ④ To move forward

▶ Save the settings with the memory function (→ page 120).

Linking the steering wheel heater to the seat heating

Requirements:

- The power supply or the vehicle has been switched on.

Multimedia system:

→ » Comfort » Seat
» Heating settings

- ▶ Tap on **Additional steering wheel heater**.
The steering wheel heater will be linked to the seat heating.

When the function has been activated, the steering wheel heater will automatically be activated and deactivated when you switch the seat heating on and off.

When you switch the vehicle off, the steering wheel heater will switch off.

- ❗ The steering wheel heater can also be activated via the MBUX voice assistant.

Easy entry and exit feature

Using the easy entry and exit feature

⚠ WARNING Risk of accident when pulling away during the adjustment process of the easy entry and exit feature

You could lose control of the vehicle.

- ▶ Always wait until the adjustment process is complete before driving off.

⚠ WARNING Risk of becoming trapped during adjustment of the easy entry and exit feature

You and other vehicle occupants – particularly children – could become trapped.

- ▶ Ensure that no one has a body part in the sweep of the steering wheel or driver's seat.

If there is a risk of becoming trapped by the steering wheel:

- ▶ Move the adjustment lever of the steering wheel.
The adjustment process will be stopped.

If there is a risk of becoming trapped by the driver's seat:

- ▶ Press the seat adjustment switch.
The adjustment process will be stopped.
- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.

Vehicles with memory function: you can stop the adjustment process by pressing one of the memory function position switches.

⚠ WARNING Risk of becoming trapped if children activate the easy entry and exit feature–

Children could become trapped if they activate the easy entry- and exit feature, particularly when unattended.

- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.

In order to use the easy entry and exit feature, the automatic seat adjustment function must have been switched on (→ page 112).

When the easy entry and exit feature is active, the steering wheel and driver's seat will move as follows:

- The steering wheel will move upwards.
- The driver's seat will move forward or backward to a seat position suitable for getting out of the vehicle.

This will occur in the following situations:

- You switch off the vehicle when the driver's door is open.
- You open the driver's door when the vehicle is switched off.

i The steering wheel will then move upwards only if it is not already as high as it will go.

The driver's seat will then move backwards only if it is not already at the rear of the seat adjustment range.

The steering wheel and the driver's seat will move back to the last driving position in the following cases:

- You switch the power supply or the vehicle on when the driver's door is closed.
- You close the driver's door when the vehicle is switched on.

The last drive position will be saved when:

- If you switch off the vehicle.
- **Vehicles with memory function:** you call up the seat settings via the memory function.
- **Vehicles with memory function:** you save the seat settings via the memory function.

Vehicles with memory function: press one of the memory function position switches to stop the adjustment process.

Setting the easy entry and exit feature

Requirements:

- The automatic seat adjustment has been activated (→ page 112).

Multimedia system:

→  » Settings » Vehicle
» Easy entry and exit feature

- ▶ Select **Steering wheel and seat, Steering wheel only** or **Off**.

❗ If you are using an individual user profile, this information is used for the easy entry and exit feature. This will cause the driver's seat and steering wheel to move into the correct position automatically.

Memory function

Function of the memory function

⚠ WARNING Risk of an accident if the memory function is used while driving

If you use the memory function on the driver's side while driving, you could lose control of the vehicle as a result of the adjustments being made.

- ▶ Only use the memory function on the driver's side when the vehicle is stationary.

⚠ WARNING Risk of entrapment when adjusting the seat with the memory function

When the memory function adjusts the seat, you and other vehicle occupants – particularly children – could become trapped.

- ▶ During the adjusting process of the memory function, ensure that no body

parts are in the area of movement of the seat or the steering wheel.

- ▶ If someone becomes trapped, press a preset position button or seat adjustment switch immediately. The adjustment process is stopped.

⚠ WARNING Risk of entrapment if the memory function is activated by children

Children could become trapped if they activate the memory function, particularly when unattended.

- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.

You can use the memory function when the vehicle is switched off.


Seat adjustments for up to three people can be stored and called up using the memory function.

You can save the following settings for the front seat:

- Seat, backrest, head restraint position and contour of the seat backrest in the lumbar region
- Seat heating: distribution of the heated sections of the seat cushion and seat backrest
- Driver's side: steering wheel position and position of the outside mirrors on the driver's and front passenger sides

Operating the memory function

Storing

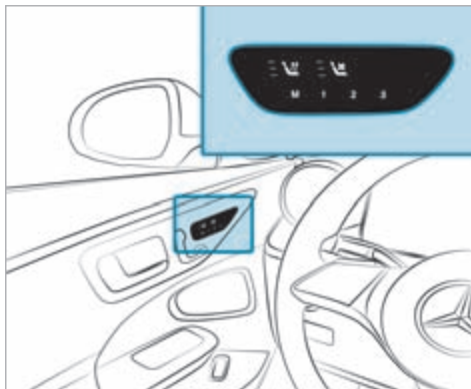

- ▶ Set the seat, the steering wheel, the head-up display and the outside mirror to the desired position.
- ▶ Press the **[M]** button and then release it.

- ▶ Press one of the preset position buttons **[1]**, **[2]** or **[3]** within three seconds. An acoustic signal sounds. The settings are stored.
- ▶ **To call up:** press the preset position button **[1]**, **[2]** or **[3]**. The seat is moved to the stored position. After releasing the button, the front seat, outside mirror, head-up display and steering column continue to move into the stored position automatically.

Stowage areas

Notes on loading the vehicle

⚠ DANGER Risk of poisoning from exhaust gases

Combustion engines emit poisonous exhaust gases, such as carbon monoxide. Exhaust gases can enter the vehicle interior if the tailgate is open when the engine is running, especially if the vehicle is in motion.

- ▶ Always switch off the engine before opening the tailgate.
- ▶ Never drive with the tailgate open.

Objects in the deployment area of an airbag may prevent the airbag from functioning correctly. Observe the notes on protection provided by the airbag (→ page 51).

⚠ WARNING Risk of injury from unsecured items in the vehicle

If objects, luggage or loads are not secured or not secured sufficiently, they could slip, tip over or be thrown around and thereby hit vehicle occupants.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- ▶ Always stow objects in such a way that they cannot be thrown around.
- ▶ Before the journey, secure objects, luggage or loads against slipping or tipping over.

⚠ WARNING Risk of injury due to objects being stowed incorrectly

If objects in the vehicle interior are stowed incorrectly, they can slide or be thrown around and hit vehicle occupants. In addition, cup holders, open stowage spaces and mobile phone brackets cannot always retain all objects they contain.

There is a risk of injury, particularly in the event of braking manoeuvres or abrupt changes in direction.

- ▶ Always stow objects so that they cannot be thrown around in such situations.
- ▶ Always make sure that objects do not protrude from stowage spaces, luggage nets or stowage nets.
- ▶ Close the lockable stowage spaces before starting a journey.
- ▶ Stow and secure objects that are heavy, hard, pointed, sharp-edged, fragile or too large in the load compartment.

⚠ WARNING Risk of accident from objects in the driver's footwell and front-passenger footwell

Objects in the driver's footwell and front-passenger footwell may impede pedal travel or block a depressed pedal.

This jeopardises the operating and road safety of the vehicle.

- ▶ Stow all objects in the vehicle securely so that they cannot get into the driver's footwell or front-passenger footwell.
- ▶ Always fit the floor mats securely and as prescribed in order to ensure that there is always sufficient clearance for the pedals.
- ▶ Do not use loose floor mats and do not lay multiple floor mats on top of one another.

Vehicles with automatic front passenger airbag shut-off: objects trapped under the front passenger seat may interfere with the function of the automatic front passenger airbag shut-off or damage the system. Please observe the notes on

the function of the automatic front passenger air-bag shut-off (→ page 53).

⚠ WARNING - Risk of accident or injury when using the cup holder while the vehicle is in motion

The cup holder cannot hold a container secure while the vehicle is in motion.

If you use a cup holder while the vehicle is in motion, the container may be flung around and liquids could be spilled. The vehicle occupants may come into contact with the liquid and if it is hot, they could be scalded. You could be distracted from traffic conditions and you may lose control of the vehicle.

- ▶ Only use the cup holder when the vehicle is stationary.
- ▶ Only use the cup holder for containers of the right size.
- ▶ Always close the container, particularly if the liquid is hot.

! NOTE Damage to the cup holder

When the rear armrest is folded back the cup holder could become damaged.

- ▶ Only fold the rear armrest back when the cup holder is closed.

⚠ WARNING Risk of injury due to an open load compartment floor

If you drive with the load compartment floor open, objects could be flung around and hit vehicle occupants as a result. There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- ▶ Always close the load compartment floor before a journey.

⚠ WARNING Risk of burns from the tailpipe and tailpipe trims

The exhaust tailpipe and tailpipe trims can become very hot. If you come into contact with these parts of the vehicle, you could burn yourself.

- ▶ Always be particularly careful around the tailpipe and the tailpipe trims and supervise children especially closely in this area.
- ▶ Allow vehicle parts to cool down before touching them.

The driving characteristics of your vehicle are dependent on the distribution of the load within the vehicle. You should bear the following in mind when loading the vehicle:

- Do not exceed the permissible total mass or the permissible axle loads of the vehicle (with the load and including occupants).
information can be found on the vehicle identification plate (→ page 439).
- The load must not protrude above the upper edge of the seat backrests.
- always use the partition net when transporting objects in the load compartment.
- Always place the load behind unoccupied seats if possible.


- secure the load using the tie-down eyes and distribute the load evenly.

Notes on driving with a roof load


- Distribute the roof load and the load inside the vehicle evenly, placing heavy objects at the bottom. Also comply with the notes on loading the vehicle.
- Drive attentively, and avoid abrupt starts, braking and steering as well as rapid cornering.
- When transporting roof loads and when the vehicle is fully loaded or fully occupied, select drive programs **E** and **C**. These are designed to focus on stability (→ page 197).

Stowage spaces in the vehicle interior

Overview of the front stowage compartments

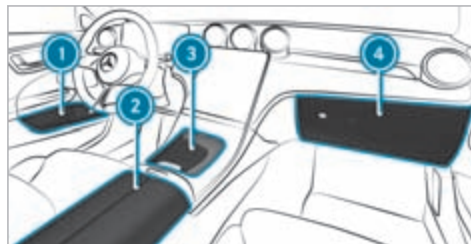

- ① Stowage spaces in the doors
- ② Stowage and telephone compartment beneath the armrest with multimedia and USB ports as well as stowage space, e.g. for an MP3 player
- ③ Stowage compartment in the front centre console with cup holders, USB ports and charging module for wireless charging of mobile phones
- ④ Glove compartment

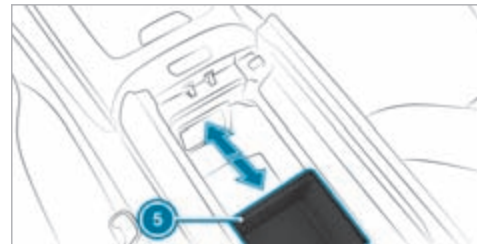

Under armrest ② there is also a sliding stowage compartment ⑤, which can be used in the front or rear position. Push the compartment to the desired position until it engages.

For cleaning, the stowage compartment can be moved to the middle position and removed. The rubber mat in the stowage compartment can be removed for cleaning.



Depending on the vehicle version, there is a stowage compartment in the rear centre console ⑥. The rubber mat in the stowage compartment can be removed for cleaning.

Through-loading feature in the rear bench seat (EASY-PACK Quickfold)

Folding the rear seat backrests forward

⚠ WARNING Risk of becoming trapped when adjusting the seats

When you adjust a seat, you may trap yourself or a vehicle occupant.

► When adjusting a seat, make sure that no one has any body parts in the sweep of the seat.

⚠ WARNING Risk of an accident because the seat backrest is not engaged

The seat backrest may fold forwards.

There is a risk of the following, in particular:

- The vehicle occupant may be pressed against the seat belt. The seat belt cannot protect as intended and could cause additional injury.
- A child restraint system is no longer properly supported or properly positioned and may no longer fulfil its function as intended.
- The seat backrest cannot restrain objects or goods in the boot or load compartment.

Always ensure that the seat backrest is engaged, especially:

- After the seat has been adjusted.

- After the load compartment enlargement has been folded forwards

Make sure that the red marking of the lock verification indicator is no longer visible. Otherwise, the seat backrest is not locked.

Always ensure that all vehicle occupants have their seat belts fastened correctly and are sitting properly. Particular attention must be paid to children.

Requirements:

- The rear seat backrest head restraints are fully inserted.
- The rear armrest has been folded up.


Folding the rear outer seat backrests forward manually

You can fold the right-hand seat backrest forward separately.

The left seat backrest can be folded forwards only together with the centre seat backrest.

If you no longer require the folded-down rear seat backrest as a load area, fold the backrest back into place.

- ▶ Ensure that the centre seat backrest is in an upright position and engaged with the left seat backrest (→ page 128).

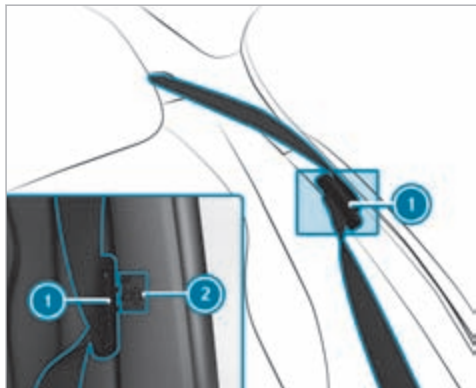

- ▶ Press the seat belt tongue of seat belt ① into marked position ②.
- ▶ Move the driver's or front passenger seat forwards, if necessary.




- ▶ Pull release lever ①.
 - ▶ Fold the corresponding seat backrest forwards.
- ① If you wish to fold only one of the outer seat backrests forwards, fold the right seat backrest forwards.

Folding the rear outer seat backrests forward electrically

- ① Depending on the vehicle equipment, you can fold the outer seat backrests forward electrically.

If you no longer require the folded-down rear seat backrest as a load area, fold the backrest back into place.


- ▶ Ensure that the centre seat backrest is in an upright position and engaged with the left seat backrest (→ page 128).

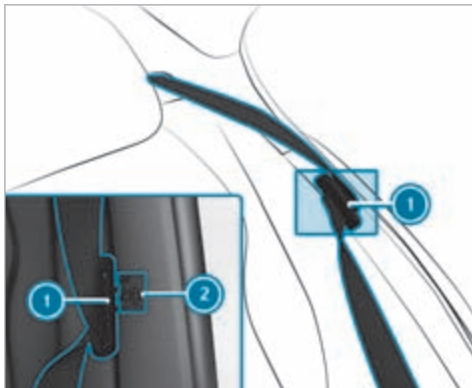

- ▶ Press the seat belt tongue of seat belt ① into marked position ②.



- ▶ In the rear: pull release lever ①.

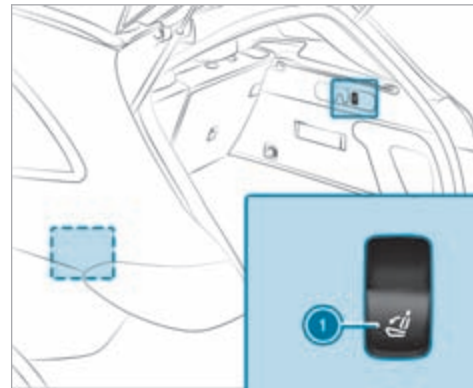


- ▶ **To fold the left seat backrest forward:** briefly pull on left button ①.
The left seat backrest can be folded forwards electrically only together with the centre seat backrest.
If the left seat backrest is not engaged with the centre seat backrest, this will be shown on the driver's display.

- ▶ **To fold the right seat backrest forward:** briefly pull on right button ①. The right seat backrest will fold forwards.

Folding the centre rear seat backrest forwards separately

If you no longer require the folded-down seat backrest as a load area, fold the backrest back into place.

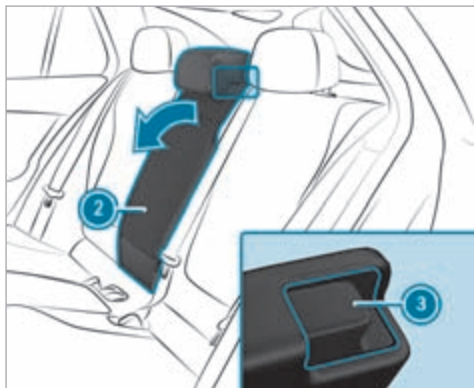


- ▶ Press release catch ③.
- ▶ Fold seat backrest ② forwards.

Folding back the rear seat backrest

! **NOTE** Damage caused by trapping the seat belt when folding back the seat backrest

The seat belt could become trapped and thus be damaged when the seat backrest is folded back.

- ▶ Make sure that the seat belt is not trapped when folding back the seat backrest.

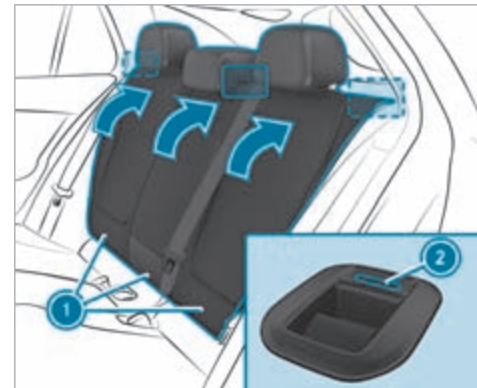


- ▶ Move the driver's or front passenger seat forwards, if necessary.
- ▶ Swivel seat backrest ① back until it engages. If the seat backrest is not engaged and locked in place, red lock verification indicator ② will be visible.

■ Locking the release catch of the centre rear seat backrest

Requirements:

- The left and centre seat backrests are engaged and joined together.

You can lock the centre seat backrest release catch if you want to secure the load compartment against unauthorised access. The centre seat backrest can then be folded forwards only together with the left seat backrest.

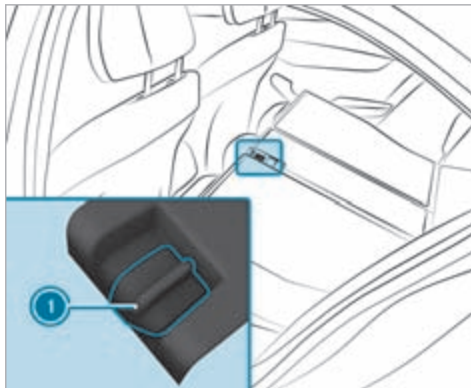


- ▶ Fold the centre and left seat backrests forwards.
- ▶ **To lock or unlock:** slide catch ① upwards or downwards.

■ Adjusting the angle of the rear seat backrests (cargo position)

To enlarge the load compartment, you can adjust the seat backrests so that they are ten degrees steeper (cargo position).

- ① Observe the changes in the requirements for adjusting the head restraints when using the cargo position (→ page 111).

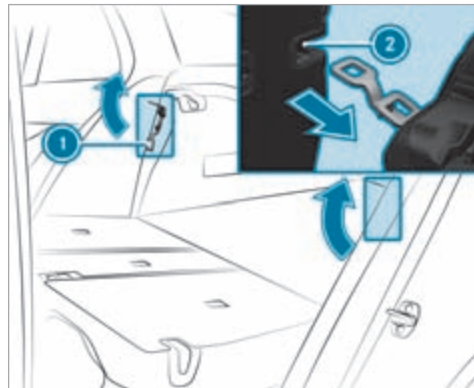

- ▶ Fold seat backrest forwards (→ page 124).
- ▶ Move bracket ① in the direction of the arrow.



- ▶ Push seat backrest ② back to bracket ① until the backrest engages. If the seat backrest is not engaged and locked in place, red lock verification indicator ③ will be visible.

Load compartment cover

■ Extending/retracting the load compartment cover

⚠ WARNING Risk of injury or death due to poorly secured objects

The load compartment cover alone cannot secure or restrain heavy objects, items of luggage or heavy loads.

You could be hit by an unsecured load, particularly in the event of abrupt changes in direction, sudden braking or an accident.


- ▶ Always stow objects in such a way that they cannot be thrown around.
- ▶ Secure objects, luggage or loads against slipping or tipping over, e.g. by using lashing material, even if you are using the load compartment cover.

! NOTE Damage to the load compartment cover when loading the vehicle

The load compartment cover may be damaged when the vehicle is being loaded.

- ▶ Do not place any objects above the lower edge of the side windows or on the load compartment cover.

The load compartment cover is attached behind the seat backrest of the rear bench seat.

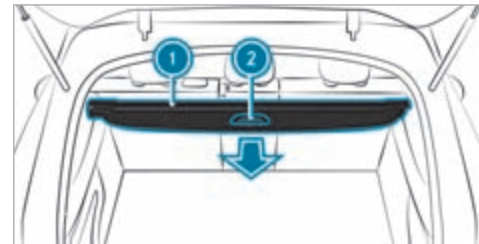


- ▶ **To extend:** pull load compartment cover ① back by grab handle ② and hook it into the holders on the left and right.
- ▶ **To retract:** unhook load compartment cover ① from the holders on the left and right and guide it forwards by grab handle ② until it is fully retracted.

■ Installing and removing the load compartment cover

Requirements:

- The load compartment cover is retracted.

Removing the load compartment cover

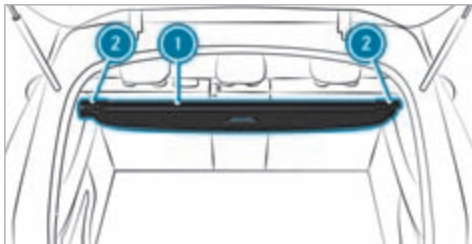


- ▶ Press in the end cap of load compartment cover ① on the right- or left-hand side.
- ▶ Push load compartment cover ① into recess ② on the opposite side.
- ▶ Take load compartment cover ① out by lifting it upwards.

Installing the load compartment cover

- ▶ Press in the end cap of load compartment cover ① on the opposite side and insert load compartment cover ① into other recess ②.
- ▶ Slide the end cap outwards.

Stowing the load compartment cover

Depending on the vehicle version, the load compartment cover can be stowed under the load compartment floor.

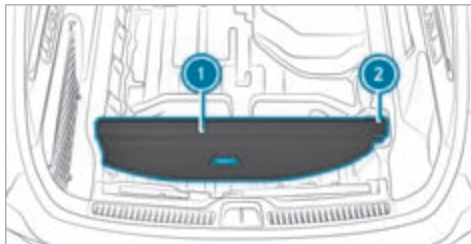

- ▶ **To insert:** position load compartment cover ① to the left under the trim and engage it in mounting ②.

- ▶ **To remove:** press the end cap of the load compartment cover inward and remove it from mounting ②.

Attaching/removing the partitioning net

⚠ WARNING Risk of injury or death due to poorly secured objects


The partitioning net alone cannot secure or restrain heavy objects, items of luggage or heavy loads.

You could be hit by an unsecured load, particularly in the event of abrupt changes in direction, sudden braking or an accident.


- ▶ Always stow objects in such a way that they cannot be thrown around.
- ▶ Secure objects, luggage or loads against slipping or tipping over, e.g. by using lashing material, even if you are using the partitioning net.

For safety reasons, always use a partitioning net when transporting a load.

Damaged partitioning nets can no longer fulfil their functions and must be replaced. Visit a qualified specialist workshop.

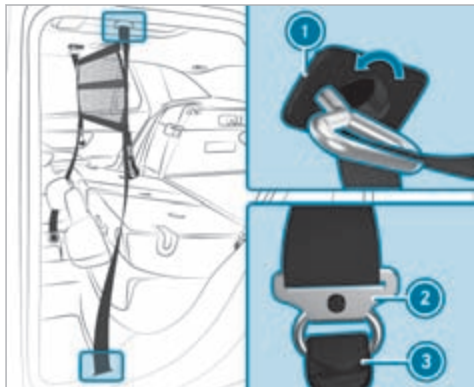

Partitioning net in the front position

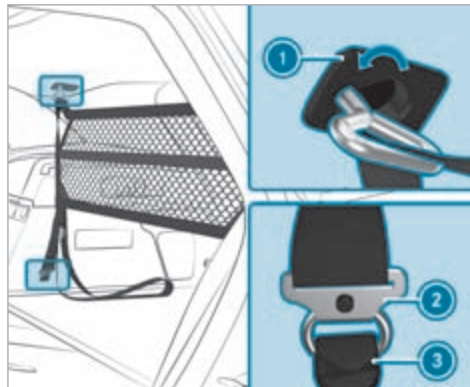


Partitioning net in the rear position

- ▶ **To attach:** extend and unfold the partitioning net.
- ▶ Attach the upper hooks of the partitioning net to holders ① on the roof lining.
- ▶ Attach lower hooks ② in eyelets ③ on the left and right.

- ▶ Pull on the loose ends of the lashing straps until the partitioning net is tight.
- ▶ After driving a short distance, check the tension of the partitioning net and re-tension it if necessary.
- ▶ **To remove:** pull the belt clamps until the lashing straps are loose.
- ▶ Remove lower hooks ② from eyelets ③ on the left and right.
- ▶ Detach upper hooks from holders ①.

Overview of the tie-down eyes

Observe the notes on loading the vehicle (→ page 120).

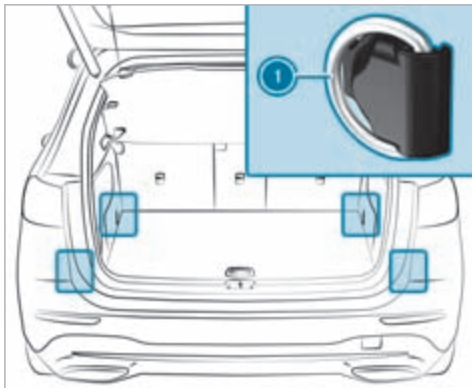


① Tie-down eyes

Objects or items of luggage may be flung around and hit vehicle occupants.

- ▶ Only hang light objects on the bag hooks.
- ▶ Never hang hard, sharp-edged or fragile objects on the bag hooks.

Observe the notes on loading the vehicle (→ page 120).

Subject the bag hooks to a maximum load of 3 kg and do not attach any goods to them.

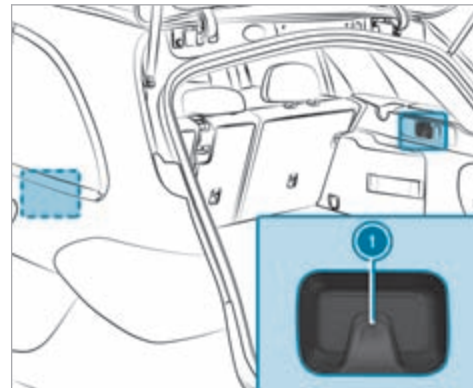

① Bag hooks

Overview of bag hooks

⚠ WARNING Risk of injury when using bag hooks with heavy objects

The bag hooks cannot restrain heavy objects or items of luggage.

Attaching a roof luggage rack

⚠ WARNING Risk of accident due to exceeding the maximum roof load

The vehicle centre of gravity and the usual driving characteristics as well as the steering and braking characteristics alter.

If you exceed the maximum roof load, the driving characteristics, as well as steering and braking, will be greatly impaired.

- ▶ Never exceed the maximum roof load and adjust your driving style.

You will find information on the maximum roof load in the "Technical data" section.

! NOTE Damage to the vehicle due to not observing the maximum permitted headroom clearance

If the vehicle height is greater than the maximum permitted headroom clearance, the roof and other parts of the vehicle may be damaged.


- ▶ Observe the signposted headroom clearance.
- ▶ If the vehicle height is greater than the permitted headroom clearance, do not enter.
- ▶ Observe the changed vehicle height with add-on roof equipment.

! NOTE Damage to the panorama sliding sunroof due to non-approved roof luggage racks

The panorama sliding sunroof may be damaged by the roof luggage rack if you attempt to open it when using a roof luggage rack not tested and approved for Mercedes-Benz.

- ▶ When a roof luggage rack is fitted, open the panorama sliding sunroof only if this has been tested and approved for Mercedes-Benz.

The panorama sliding sunroof may be raised to allow ventilation of the vehicle interior.

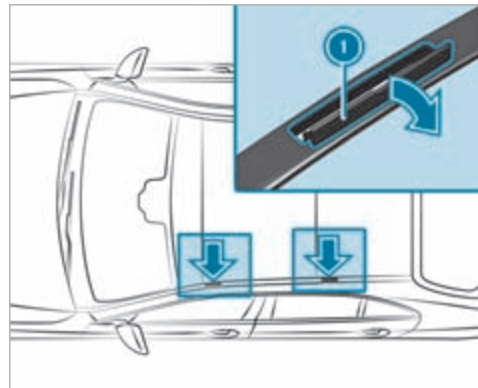

! NOTE Damage to the covers

The covers may be damaged and scratched when being opened.

- ▶ Do not use metallic or hard objects.

- ▶ Carefully fold covers ① upwards in the direction of the arrow.

- ▶ Secure the roof luggage rack to the fastening points beneath covers ①.
- ▶ Comply with the installation instructions of the roof luggage rack manufacturer.
- ▶ Secure the load on the roof luggage rack.

Cup holders

Fitting or removing the cup holder in the centre console

⚠ WARNING - Risk of accident or injury when using the cup holder while the vehicle is in motion

The cup holder cannot hold a container secure while the vehicle is in motion.

If you use a cup holder while the vehicle is in motion, the container may be flung around and liquids could be spilled. The vehicle occupants may come into contact with the liquid and if it is hot, they could be scalded. You could be distracted from traffic conditions and you may lose control of the vehicle.

- ▶ Only use the cup holder when the vehicle is stationary.
- ▶ Only use the cup holder for containers of the right size.
- ▶ Always close the container, particularly if the liquid is hot.


⚠ WARNING Risk of injury due to objects being stowed incorrectly

If objects in the vehicle interior are stowed incorrectly, they can slide or be thrown around and hit vehicle occupants. In addition, cup holders, open stowage spaces and mobile phone brackets cannot always retain all objects they contain.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- ▶ Always stow objects in such a way that they cannot be thrown around in such situations.


- ▶ Always make sure that objects do not protrude from stowage spaces, luggage nets or stowage nets.
- ▶ Close the lockable stowage spaces before starting a journey.
- ▶ Always stow and secure heavy, hard, pointed, sharp-edged, fragile or bulky objects in the boot.

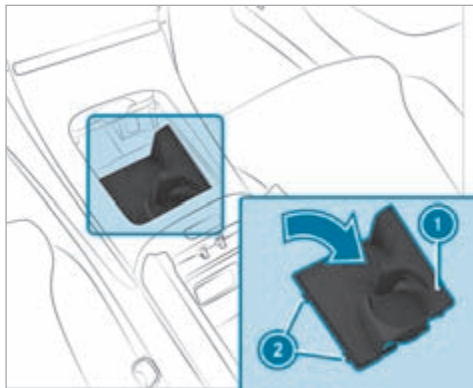To fit


- ▶ Insert two lugs ② into the recesses in the trim and swing cup holder ① into the compartment until it engages.

To remove

The cup holder can be removed for cleaning.

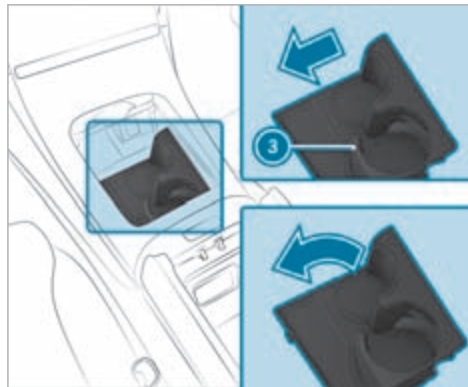

- ▶ Push the side wall of rear beverage compartment ③ to the left until the cup holder releases and swing the cup holder out upwards.

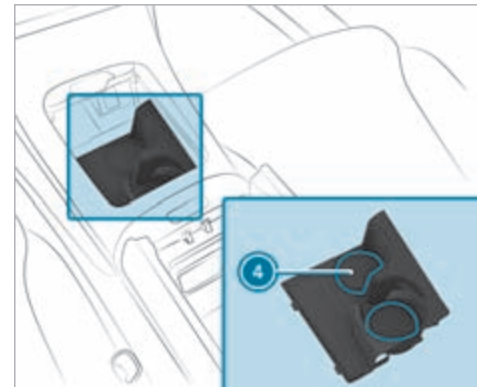


Insert mats ④ in the cup holder beverage compartments can be removed for cleaning.

- ▶ To do so, use a suitable tool to push the insert mats out of their mounting from the rear of the removed cup holder.
- ▶ Reinsert the cup holder after cleaning.

Using the cup holder

- ❗ Check whether the beverage container is held firmly by the cup holder. Some beverage containers will not be secured adequately in the cup holder due to their shape or size.

The side wall of the front beverage compartment can be retracted and extended manually.

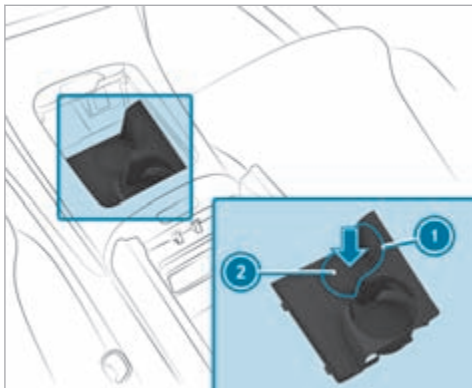

- ▶ Gently push a beverage container into the bottom ② of the beverage compartment. The side panel will automatically extend to the left to secure the beverage container.

Alternatively, you can extend the side wall of the beverage compartment by pressing lightly on grooved surface ①.

Retracting the side wall

When the front beverage compartment is not in use, the side panel can be retracted manually. The cup holder's holding function will then no longer be available.



- ▶ Push the side panel back in the direction of the arrow until it engages in correct position ③.

Sockets


Using the 12 V socket

Requirements:

- Only connect devices up to a maximum of 180 W (15 A).

Depending on the vehicle equipment, the vehicle has the following 12 V sockets:

- In the front passenger footwell
- In the load compartment

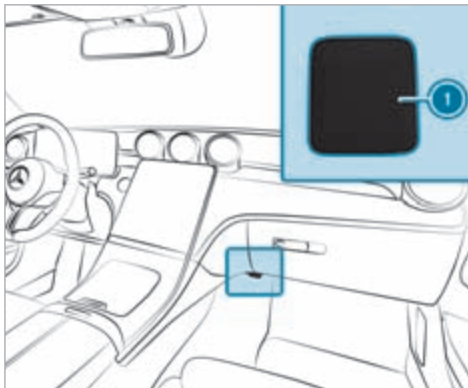

Example: 12 V socket in the front passenger footwell

- ▶ Fold up socket cap ①.
- ▶ Insert the plug of the device.

USB ports

Depending on its equipment, the vehicle has the following USB ports:

- In the stowage compartment in the front centre console
- In the stowage compartment under the front armrest
- in the rear centre console

Depending on the vehicle equipment, the vehicle has either one or two USB ports in the stowage compartment in the front centre console and beneath the front armrest.

Depending on the vehicle equipment, the vehicle has two USB connections in the rear centre console.

You can charge a USB device, such as a mobile phone, at the USB ports using a suitable charging cable. Depending on the vehicle equipment, devices can be charged with up to 20 V (5 A) when the vehicle is switched on.

Wireless charging of the mobile phone and connection with the exterior aerial

Notes on wirelessly charging the mobile phone

⚠ WARNING Risk of injury due to objects being stowed incorrectly

If objects in the vehicle interior are stowed incorrectly, they can slide or be thrown around and hit vehicle occupants. In addition, cup holders, open stowage spaces and mobile phone receptacles cannot always retain all objects within.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- ▶ Always stow objects so that they cannot be thrown around in such situations.
- ▶ Always make sure that objects do not protrude from stowage spaces, luggage nets or stowage nets.
- ▶ Close the lockable stowage spaces before starting a journey.

- ▶ Always stow and secure heavy, hard, pointed, sharp-edged, fragile or bulky objects in the boot/load compartment.

Observe the notes on loading the vehicle.

⚠ WARNING Risk of fire from placing objects in the mobile phone stowage compartment

Placing other objects in the mobile phone stowage compartment could constitute a fire hazard.

- ▶ Apart from a mobile phone, do not place any other objects in the mobile phone stowage compartment, especially those made of metal.

! NOTE Damage to objects caused by placing them in the mobile phone stowage compartment

If objects are placed in the mobile phone stowage compartment, these may be damaged by electromagnetic fields.

- ▶ Do not place credit cards, storage media, ski passes or other objects sensitive to electromagnetic fields in the mobile phone stowage compartment.

! NOTE Damage to the mobile phone stowage compartment caused by liquids

If liquids enter the mobile phone stowage compartment, the compartment may be damaged.

- ▶ Ensure that no liquids enter the mobile phone stowage compartment.

Always observe the notes for persons with electronic medical aids (→ page 37).

- Depending on the vehicle equipment, the mobile phone is connected to the vehicle's exterior aerial via the charging module.
- The charging function and wireless connection of the mobile phone to the vehicle's exterior aerial are only available if the vehicle is switched on.


- Small mobile phones may not be able to be charged in every position of the mobile phone stowage compartment.
- Large mobile phones which do not rest flat in the mobile phone stowage compartment may not be able to be charged or connected with the vehicle's exterior aerial.
- The mobile phone may heat up during the charging process. This may also depend on the applications (apps) currently open in the background.
- To ensure more efficient charging and connection with the vehicle's exterior aerial, remove the protective cover from the mobile phone. Protective covers which are necessary for wireless charging are an exception.

Wirelessly charging a mobile phone in the front

Requirements:

- The mobile phone is suitable for wireless charging.

A list of compatible mobile phones can be found at: <https://www.mercedes-benz-mobile.com/>

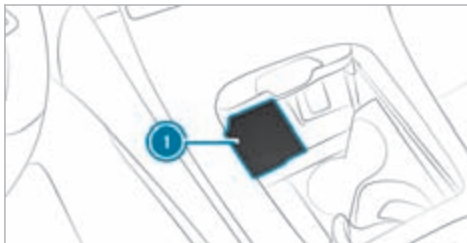

- ▶ Place the mobile phone in the front stowage compartment as centrally as possible with the display facing upwards on mat ❶ next to the USB connections.

When the charging symbol is shown in the driver's display, the mobile phone is being charged. In addition, faults when charging the mobile phone are shown in the central display.

- ❶ The mat can be removed for cleaning, e.g. using clean, lukewarm water.

Radio equipment approval numbers for Brazil

This device operates on a secondary basis, that is to say it has no protection against harmful interference, not even from the same type of stations, and must not cause interference with systems operating on a primary basis.

This product is permitted in accordance with the procedure defined in Directive 242/2000 by the Brazilian telecommunications agency ANATEL and meets the applicable technical requirements.

Further information is available on the ANATEL website. <https://www.anatel.gov.br>

- ▶ Further information on the declaration of conformity for vehicle components which receive and/or transmit radio waves.

Exterior lighting

Notes on adjusting the lights when driving abroad

If the automatic setting is selected in the **Low beam** menu, the headlamps are automatically adjusted when the vehicle crosses the border into countries in which traffic drives on the other side of the road. They retain their full functionality. If necessary, the headlamps can also be adjusted manually in the **Low beam** menu (→ page 151).

In the following cases, check the headlamp setting and change it manually if necessary:

- If the **Low beam setting (left/right-side traffic) Manual adjustment only** display message is displayed.
- If the **Check low beam setting (left/right-side traffic)** display message is displayed.

Following manual adjustment:


- Oncoming traffic will not be dazzled.
- The edge of the road will not be illuminated as far or as high.
- The "motorway mode" and "enhanced fog light" functions will not be available.

Information about lighting systems and your responsibility

The various lighting systems of the vehicle are only aids. The driver of the vehicle is responsible for correct vehicle illumination in accordance with the prevailing light and visibility conditions, legal requirements and traffic situation.

Light switch

Operating the light switch

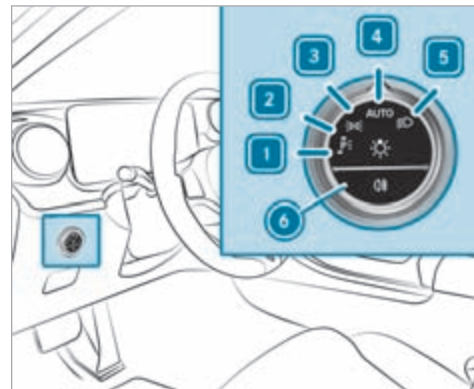

- | | | |
|---|-------------|--|
| 1 | | Left-hand parking lights |
| 2 | | Right-hand parking lights |
| 3 | | Standing lights and licence plate lighting |
| 4 | AUTO | Automatic driving lights (preferred light switch position) |

- 5  Low beam/high beam
- 6  Switches the rear fog light on/off

When low beam is activated, the  indicator lamp for the standing lights will be deactivated and replaced by the  low-beam indicator lamp.

- Always park your vehicle safely using sufficient lighting, in accordance with the relevant legal stipulations.

! **NOTE** Battery discharging by operating the standing lights

Operating the standing lights over a period of hours puts a strain on the battery.

- Where possible, switch on the right  or left  parking light.

For vehicles that are wider than 2 m or longer than 6 m, single-sided parking lighting is not permitted in some countries. In this case, the standing lights are also switched on in the parking lights position.

If the battery is insufficiently charged, the standing lights or parking lights will be switched off automatically to facilitate the next engine start.

The exterior lighting (except standing and parking lights) will switch off automatically when the driver's door is opened.

- Observe the notes on locator lighting (→ page 151).

Switching on accident scene lighting

- Switch off the vehicle.
- Switch on the hazard warning lights (→ page 143).
- Turn the light switch from the **AUTO** position to the  position.
The low beam will be switched on despite the vehicle being switched off.

The accident scene lighting will be switched off if:

- you switch off the hazard warning lights.
- you turn the light switch back to **AUTO**.
- the battery is insufficiently charged.

Automatic driving lights function

When the vehicle is switched on, the standing lights, low beam and daytime running lights will be switched on automatically depending on the light conditions.

! **WARNING** Risk of accident when the dipped beam is switched off in poor visibility

When the light switch is set to **AUTO**, the dipped beam may not be switched on automatically if there is fog, snow or other causes of poor visibility such as spray.

- In such cases, turn the light switch to .

The automatic driving lights are only an aid. You are responsible for the vehicle lighting.

Switching the rear fog light on/off


Requirements:

- The light switch is in the  or **AUTO** position.

- Press button .

Please observe the country-specific laws on the use of rear fog lamps.

Operating the combination switch for the lights

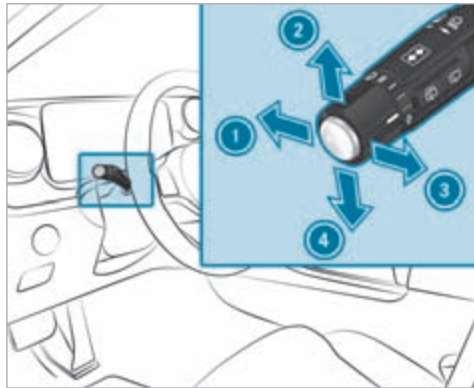

- ① High beam
- ② Turn signal light, right
- ③ Headlamp flashing
- ④ Turn signal light, left

- ▶ Use the combination switch to select the desired function.

Switching on high beam

- ▶ Turn the light switch to the  or **AUTO** position.
- ▶ Push the combination switch in the direction of arrow ①.
When the high beam is activated, the indicator lamp for low beam  will be deactivated and replaced by the indicator lamp for high beam .

Switching off high beam

- ▶ Push the combination switch in the direction of arrow ① or pull it in the direction of arrow ③.

Headlamp flashing

- ▶ Pull the combination switch in the direction of arrow ③.

Turn signal light


- ▶ **To indicate briefly:** push the combination switch briefly to the point of resistance in the direction of arrow ② or ④.
The corresponding turn signal light will flash three times.

- ▶ **To indicate permanently:** push the combination switch beyond the point of resistance in the direction of arrow ② or ④.

Vehicles with Active Lane Change Assist:

- A turn signal indicator activated by the driver may continue to operate for the duration of the lane change.
- If the driver indicated directly beforehand but a lane change was not immediately possible, the turn signal indicator may activate automatically.

Activating/deactivating the hazard warning lights

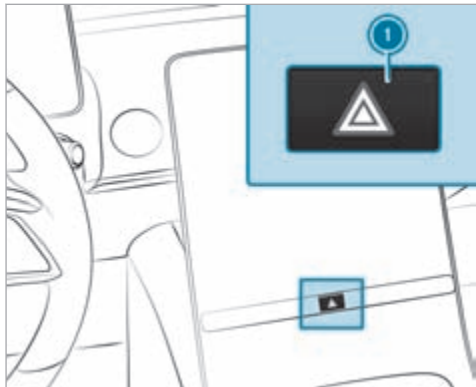

▶ Press button ①.

The hazard warning lights will switch on automatically if:

- the airbag has been deployed.
- the vehicle is braked heavily from a speed of more than 70 km/h to a standstill.

When you pull away again, the hazard warning light system will switch off automatically at approximately 10 km/h. You can also switch off the hazard warning light system using the warning lamp button.

Adaptive functions of the DIGITAL LIGHT

Intelligent Light System function

With this system, the headlamps adapt to the driving and weather situation. It also provides extended functions for improved illumination of the road.

The system comprises the following functions:

- Active headlamps (→ page 143)
- Cornering light (→ page 144)
- Motorway mode (→ page 144)
- Enhanced fog light function (→ page 144)
- Bad weather light (→ page 145)
- City lighting (→ page 145)
- Off-road light (→ page 145)
- Topographical compensation (→ page 145)

The system is active only when it is dark.

Active headlamps function



- The headlamps follow the steering movements.
- Relevant areas are better illuminated during a journey.

The functions are active when the low beam is switched on.

Depending on the vehicle's equipment, the course of the lane in which you are driving will also be evaluated and the active headlamps function will adjust the light in advance.

■ Cornering light function



The cornering light improves the illumination of the carriageway over a wide angle in the turning direction, enabling better visibility on tight bends, for example. The cornering light will be activated only when low beam is switched on.

The function will be active in the following cases:

- At speeds below 40 km/h when the turn signal light is switched on or the steering wheel is turned
- At speeds between 40 km/h and 70 km/h and when the steering wheel is turned

Roundabout and junction function: the cornering light will be activated on both sides based on an evaluation of the vehicle's current navigation position. It will remain active until after the vehicle has left the roundabout or junction.

■ Motorway mode function

Motorway mode increases the range and brightness of the cone of light, enabling better visibility.



The function will be active if a motorway journey is detected by means of:

- the vehicle's speed
- the multifunction camera
- the navigation system

The function is not active in the following cases:

- at speeds below 80 km/h

■ Enhanced fog light function

The enhanced fog light function reduces self-dazzling and improves the illumination of the edge of the carriageway.



The function is automatically activated under the following conditions:

- At speeds below 70 km/h and when the rear fog light is switched on.

The function is automatically deactivated under the following conditions:

- When speeds greater than 100 km/h are reached.
- When the rear fog light is switched off.

■ Function of the bad weather light

The bad weather light reduces reflections in rainy conditions by dimming individual areas of the headlamps. The driver and other road users are dazzled less as a result.

■ The city lighting function

City lighting improves the illumination of roadsides in urban areas using a broad distribution of light.

The function is active in the following cases:

- At low speeds
- In illuminated parts of urban areas

■ Function of the off-road light

The off-road light improves illumination during off-road driving. The low beam is distributed symmetrically and across a wide angle, and brightness is increased slightly. This makes it easier to find your way when driving off road and to detect obstacles

at an early stage. The active headlamps will be deactivated during this time so that steering movements do not change the illumination.

The function is active when the low beam is switched on if you are not driving at a speed greater than 50 km/h and the  (Offroad) drive program has been selected.

■ Function of the topographical compensation

Based on available map data, the lighting system responds pre-emptively to different road heights. This means that the headlamp range remains virtually constant when you are driving on uphill or downhill gradients.

- ❗ Only vehicles with a multimedia system with navigation have this function.

■ Assistance functions of the DIGITAL LIGHT

DIGITAL LIGHT visually expands on the driver assistance systems by projecting the assistant displays in front of the vehicle while it is in motion. DIGITAL LIGHT can therefore help the driver in critical situations.

- ❗ The availability of the functions is dependent on the country.

- ❗ The assistance functions of the DIGITAL LIGHT are available on-demand (→ page 22).

The system is active in the following cases:

- The light switch is in the **AUTO** position.
- The high beam is switched on.
- ❗ Depending on the country in which you are currently driving, certain functions may be disabled due to different legal requirements, even if they are enabled in the multimedia system. When a border is crossed, the vehicle will automatically adapt to the valid requirements.

Spotlight



The spotlight function runs in the background and flashes the headlamps at detected persons within the lane markings in four short bursts. The driver is also made aware of the position of the person by a symbol projection.

The function is active under the following conditions:

- You are driving outside illuminated areas.
- The system detects a lane marking.

Warnings



If Traffic Sign Assist detects a corresponding situation, a triangle will be projected onto the road in the following situations at speeds of at least 30 km/h:

- You are driving in the opposite direction to the permissible direction of travel, e.g. on a motorway slip road.
- You are driving towards a stop sign without reducing your speed.
- You are driving towards a red traffic light without reducing your speed.


Observe the system limitations of Traffic Sign Assist (→ page 272).

Notes




If Traffic Sign Assist detects a roadworks zone, the system will provide support as follows:

- A corresponding symbol will be projected onto the road when you enter a roadworks zone.
- When you drive through a roadworks zone, guide lines will be projected onto the road that roughly match the width of the vehicle. The guide lines will be suppressed for a while on tight bends.

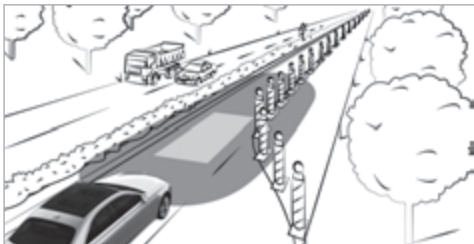

Observe the system limitations of Traffic Sign Assist (→ page 272).

Collision warning

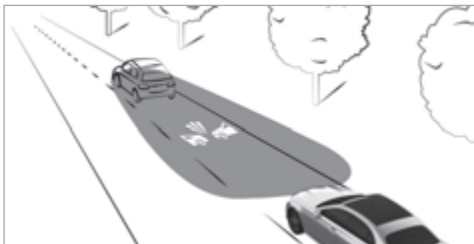

If you fall below the safe distance at speeds of at least 30 km/h, a collision warning symbol will be projected onto the road.

Observe the system limitations of Active Brake Assist (→ page 265).

Lane change warning



During assisted lane changes at speeds of at least 30 km/h, the course of the lane change will be brightened. This enables you to identify possible dangers in the new lane at an early stage.

Observe the system limitations of Active Lane Change Assist (→ page 262).

Lane keeping and blind spot warning



At speeds of at least 30 km/h, a triangle that indicates a lane correction and its direction will be projected onto the road in the following cases:

- The lane is left unintentionally.
Observe the system limitations of Active Lane Keeping Assist (→ page 279).
- You switch on the turn signal light while an object or obstacle is in your blind spot.
Observe the system limitations of Active Blind Spot Assist (→ page 276).

Switching the Intelligent Light System on/off

Requirements:

- The vehicle is switched on.

Multimedia system:

→  **Settings** **» Lights**
» DIGITAL LIGHT

- ▶ Activate or deactivate **Dynamic low beam**.

Activating or deactivating enhanced assistance functions

- ① The availability of the functions is dependent on the country.
- ① This function is an on-demand feature (→ page 22).
- ▶ Select **Supporting projections**.
- ▶ Activate or deactivate the desired projections.
- ▶ Switch **Projection for greeting/farewell** on or off.
 If the locator lighting or the exterior switch-off delay time is activated, a high-resolution greeting or farewell scene will be played back for a short period of time when the vehicle is

opened or switched off. You can choose between the **Digital Rain** and **Star Wave** sequences.

- ① More information on locator lighting (→ page 151)
 More information on the exterior switch-off delay time (→ page 151)

Adaptive Highbeam Assist

Adaptive Highbeam Assist function

⚠ WARNING Risk of accident despite Adaptive Highbeam Assist

Adaptive Highbeam Assist does not react to:

- road users without lights, e.g. pedestrians
- road users with poor lighting, e.g. cyclists
- road users whose lighting is obstructed, e.g. by a barrier

On very rare occasions, Adaptive Highbeam Assist may fail to recognise other road users with their own lighting, or may recognise them too late.

In these, or in similar situations, the automatic high beam will not be deactivated or will be activated despite the presence of other road users.

- ▶ Always observe the road and traffic conditions carefully and switch off the high beam in good time.

Adaptive Highbeam Assist cannot take into account road, weather or traffic conditions.

Detection may be restricted in the following cases:

- in poor visibility, e.g. fog, heavy rain or snow
- if there is dirt on the sensors or the sensors are obscured

Adaptive Highbeam Assist is only an aid. You are responsible for adjusting the vehicle's lighting to the prevailing light, visibility and traffic conditions.

- ① Adaptive Highbeam Assist is available on demand (→ page 22).



Adaptive Highbeam Assist automatically switches between the following types of light:

- Low beam
- High beam

At speeds greater than 30 km/h:

- If no other road users are detected, high beam will switch on automatically.

The high beam will switch off automatically in the following cases:

- At speeds below 25 km/h
 - If other road users are detected
 - If street lighting is sufficient
- i** The system's optical sensor is located behind the windscreen near the overhead control panel.

Switching Adaptive Highbeam Assist on/off

Switching on

- ▶ Turn the light switch to the **AUTO** position.
- ▶ Switch on the high beam using the combination switch.
If Adaptive Highbeam Assist is activated, the  indicator lamp will light up on the driver display.

Switching off

- ▶ Switch off the high beam using the combination switch.

Adaptive Highbeam Assist Plus

Adaptive Highbeam Assist Plus function

⚠ WARNING Risk of accident despite Adaptive Highbeam Assist Plus

Adaptive Highbeam Assist Plus does not react to:

- road users without lights, e.g. pedestrians
- road users with poor lighting, e.g. cyclists
- road users whose lighting is obstructed, e.g. by a barrier

On very rare occasions, Adaptive Highbeam Assist Plus may fail to recognise other road users with their own lighting, or may recognise them too late.

In these, or in similar situations, the automatic high beam will not be deactivated or will be activated despite the presence of other road users.

- ▶ Always observe the road and traffic conditions carefully and switch off the high beam in good time.

Adaptive Highbeam Assist Plus cannot take into account road, weather or traffic conditions.

Detection may be restricted in the following cases:

- in poor visibility, e.g. fog, heavy rain or snow
- if there is dirt on the sensors or the sensors are obscured

Adaptive Highbeam Assist Plus is only an aid. You are responsible for adjusting the vehicle's lighting to the prevailing light, visibility and traffic conditions.



Adaptive Highbeam Assist Plus automatically switches between the following types of light:

- Low beam
- Partial high beam
- High beam
- ULTRA RANGE Highbeam

ULTRA RANGE Highbeam increases the brightness of the cone of light to the legally permitted maximum.

Partial high beam does not include other road users in the high beam area. It does not dazzle them but enables full high-beam illumination for the driver apart from the excluded vehicles. Highly reflective signs are also illuminated with reduced brightness.

At speeds below 25 km/h or when there is sufficient street lighting:

- Partial high beam and high beam will be switched off automatically.

At speeds greater than 30 km/h:

- If no other road users are detected, high beam will switch on automatically.
- If other road users are detected, partial high beam will switch on automatically.

at speeds below 40 km/h:

- The ULTRA RANGE Highbeam will switch off automatically.

At speeds above 50 km/h:

- If no other road users are detected, the road is straight and it is not raining heavily, the ULTRA RANGE Highbeam will be switched on automatically.
- If other road users are detected, the ULTRA RANGE Highbeam will automatically switch off and the partial high beam will switch on.
- If highly reflective signs are detected, ULTRA RANGE Highbeam will be switched off automatically.

 The system's optical sensor is located behind the windscreen near the overhead control panel.

■ Switching Adaptive Highbeam Assist Plus on/off

Switching on

- ▶ Turn the light switch to the **AUTO** position.
- ▶ Switch on high beam using the combination switch.
If Adaptive Highbeam Assist Plus is activated, the  indicator lamp will light up on the

driver's display. When partial high beam or high beam is active, the corresponding blue indicator lamp will also light up.

Switching off

- ▶ Switch off high beam using the combination switch.

Setting low beam

Multimedia system:

 **Settings** **Lights**
DIGITAL LIGHT **Low beam**

- ▶ Select **Right-side traffic**, **Left-side traffic** or **Automatic**.

Setting the exterior lighting switch-off delay time

Multimedia system:

 **Settings** **Lights**
Interior/exterior lighting
Exterior lighting delayed switch off

- ▶ Set the switch-off delay time.
When the vehicle's engine is switched off, the exterior lighting will be activated for the set time.

Activating/deactivating the locator lighting

Multimedia system:


 **Settings** **Lights**
Interior/exterior lighting

- ▶ Activate or deactivate **Locator lighting**.

When the function is activated, the exterior lighting will light up for 40 seconds after the vehicle is unlocked or the driver's door is opened when the vehicle is parked and not locked. When you start the vehicle, the locator lighting will be deactivated and the automatic driving lights activated.

Interior lighting

Adjusting the interior lighting

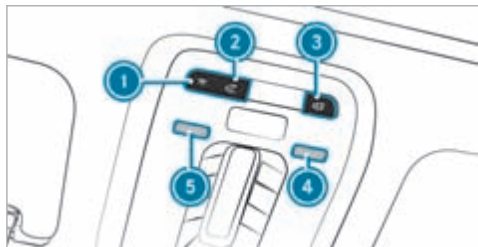

- ➊  Switches the front interior lighting on/off.
- ➋  Switches the rear interior lighting on/off.
- ➌  Switches automatic interior lighting control on/off.

▶ **To switch reading lamps on/off:** hold your hand under the respective reading lamp ➍ or ➎.

Operating unit inside the grab handle (rear)



- ➏  Rear reading lamp

▶ **To switch on or off:** press button ➏.

Adjusting the ambient lighting

Multimedia system:

➡  ➡ **Comfort** ➡ **Ambient lighting**

Setting the colour

- ▶ Select **Colour**.
- ▶ Select **Monochrome** or **Multi-colour**.
- ▶ Set the desired colour or colour scheme.

Adjusting the brightness

- ▶ Select **Brightness**.
- ▶ Adjust the brightness.
- ➊ Depending on the ambient light conditions, the ambient lighting will automatically switch between day and night modes.

Activating the brightness for zones

- ▶ Select **Brightness**.
- ▶ Switch off **Link zones**.
The **Direct**, **Indirect** and **Accents** zones can be set separately.

Activating effects

⚠ WARNING Risk of an accident despite activated effects of ambient lighting and active ambient lighting

To use the Warning Assistance effects, the respective functions must be activated in the driver assist menu.

- ▶ Make sure that the functions and assists are switched on.

- ① Observe the notes on driving systems and your responsibility; you may otherwise fail to recognise dangers (→ page 237).

- ▶ Select **Effects**.
- ▶ Activate the desired effect.

- ① Depending on the vehicle equipment, different effects are available.

Operating feedback effects

- **Climate**: If changes are made to the temperature setting in the vehicle, the colour of the ambient lighting will change briefly.

Warning assistance effects

- **Warning when exiting**: If an object is detected in the blind spot while you are getting out of the vehicle, the ambient lighting in the affected door will flash red.

Further information on the exit warning (→ page 276).

Multi-colour animation

- The chosen colour combination will change at predefined intervals.

Switching the interior lighting switch-off delay time on/off

Multimedia system:

→  » Settings » Lights


» Interior/exterior lighting

» Interior lighting delayed switch off

- ▶ Switch **Interior lighting delayed switch off** on or off.
If this function is active, the interior lighting will be switched on for a short time after the end of the journey.

Windscreen wipers and windscreen washer system

Switching the windscreen wipers on/off

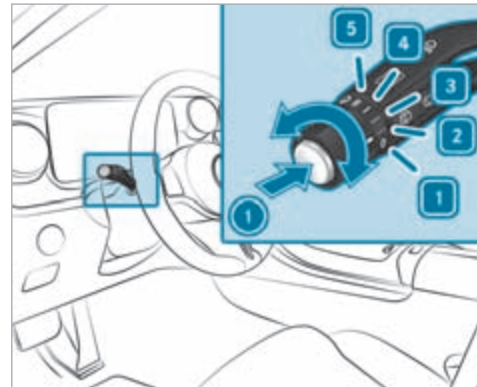

- 1** **0** Windscreen wipers off
- 2** **...** Automatic wiping, normal
- 3** **....** Automatic wiping, frequent

4  Continuous wiping, slow

5  Continuous wiping, fast


► Turn the combination switch to the corresponding position 1 - 5.

► **Single wipe/washing:** push the button on the combination switch in the direction of arrow ①.

-  Single wipe
-  Wipes with washer fluid

① Observe the notes on washing the vehicle in a car wash (→ page 390).

Switching the rear window wiper on/off

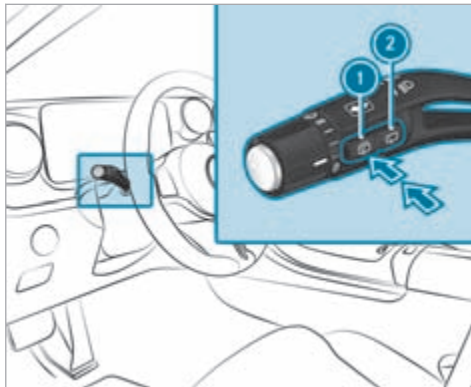

①  Single wipe/washing

②  Intermittent wiping

► **Single wipe:** press button ① as far as the point of resistance.

► **Wiping with washer fluid:** press button ① beyond the point of resistance.

► **Switching intermittent wiping on/off:** press button ②. The  symbol will appear on the driver's display when the rear window wiper is switched on.

Replacing the windscreen wiper blades

⚠ WARNING Risk of becoming trapped if the windscreen wipers are switched on while wiper blades are being replaced

If the windscreen wipers begin to move while you are changing the wiper blades, you can be trapped by the wiper arm.

► Always switch off the windscreen wipers and vehicle before changing the wiper blades.


Moving the wiper arms into the replacement position

► Switch the vehicle on and then off again immediately.

- ▶ Within around 15 seconds, press and hold the  button on the combination switch for approximately three seconds (→ page 153). The wiper arms will move into the replacement position.


Removing the wiper blades

- ▶ Fold the wiper arms away from the wind-screen.

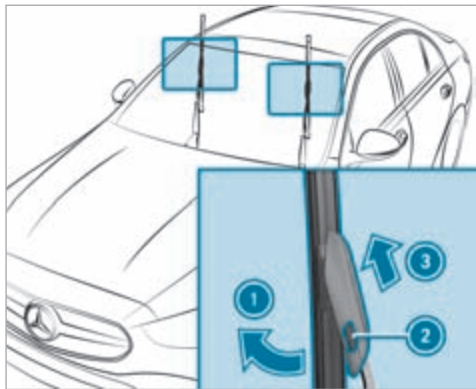

- ▶ Hold the wiper arm with one hand. With the other hand, turn the wiper blade away from the wiper arm in the direction of arrow ① as far as it will go.
- ▶ Press release button ②.
- ▶ Remove the wiper blade from the wiper arm in the direction of arrow ③.


Fitting the wiper blades

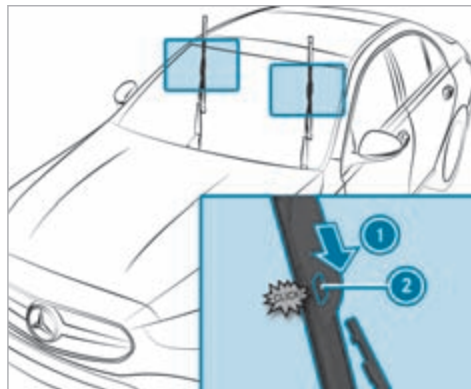

- ▶ Push the new wiper blade into the wiper arm in the direction of arrow ① until release knob ② engages.
- ▶ Make sure that the wiper blade is seated correctly.
- ▶ Fold the wiper arms back onto the wind-screen.
- ▶ Switch on the vehicle.
- ▶ Press the  button on the combination switch. The wiper arms will return to their original positions.
- ▶ Switch off the vehicle.
- ① Check the condition of the wiper blades regularly and replace them in the event of visible damage or ongoing smearing.

Maintenance display

There is a maintenance display at the tip of the newly mounted wiper blade.

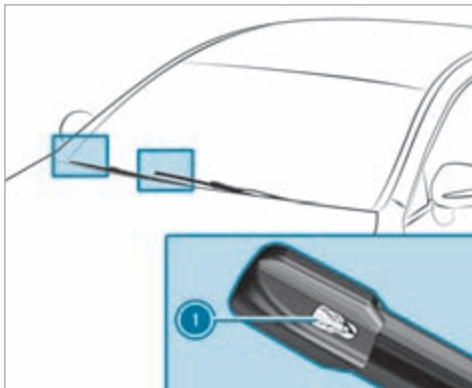

- ▶ Remove protective film ① from the maintenance display.

When the colour of the maintenance display changes from black to yellow, the wiper blades should be replaced.

Replacing the rear window wiper blade


⚠ WARNING Risk of becoming trapped if the windscreen wipers are switched on while wiper blades are being replaced

If the windscreen wipers begin to move while you are changing the wiper blades, you can be trapped by the wiper arm.

- ▶ Always switch off the windscreen wipers and vehicle before changing the wiper blades.


Removing the wiper blade

- ▶ Switch off the vehicle.

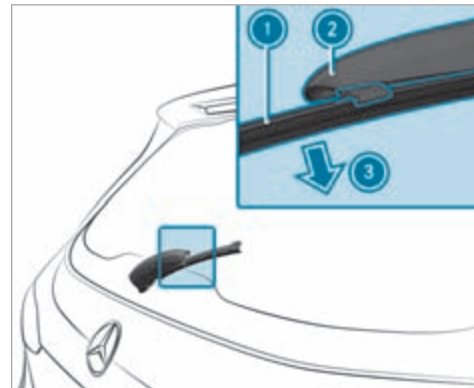

- ▶ Fold wiper arm ② away from the rear window until it engages in the replacement position.
- ▶ Unclip wiper blade ① from wiper arm ② and remove it in the direction of arrow ③.

Fitting the wiper blade

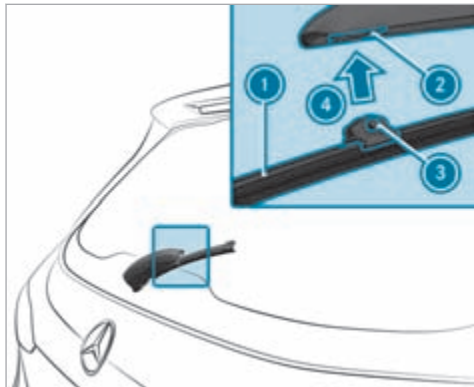

- ▶ Position wiper blade ① with both lugs ③ on holder ② on the wiper arm.
- ▶ Push wiper blade ① in the direction of arrow ④ until it engages in holder ②.
- ▶ Make sure that wiper blade ① is seated correctly.

- ▶ Fold the wiper arm from the replacement position back onto the rear window.

Mirrors

Operating the outside mirrors

- ⚠ **WARNING** Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

You could lose control of the vehicle in the following situations in particular:


- if you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
 - if you fasten your seat belt while the vehicle is in motion
- ▶ Before starting the vehicle: in particular, adjust the driver's seat, head restraint, steering wheel and mirror, and fasten your seat belt.

- ⚠ **WARNING** Risk of accident due to misjudgement of distance when using the outside mirror

The outside mirrors reflect objects on a smaller scale. The objects in view are in fact closer than they appear.

- ▶ Therefore, always look over your shoulder in order to ensure that you are aware of the actual distance between you and the road users driving behind you.

Adjusting the outside mirrors

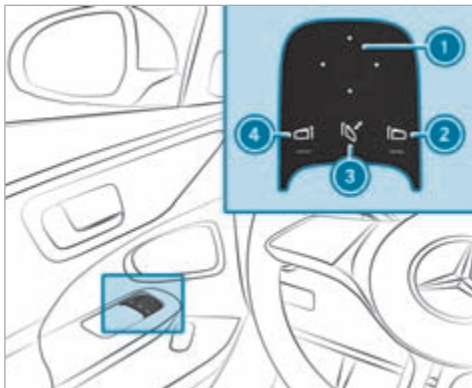

- ▶ Use button ② or ④ to select the desired mirror.
- ▶ Use button ① to adjust the position of the selected mirror.

Folding the outside mirrors in/out (vehicles with electrically folding outside mirrors)

- ▶ Briefly press button ③.

- ❗ If the battery has been disconnected or has discharged, the outside mirrors must be moved briefly using button ③. Only then will the automatic mirror folding function work properly.

Engaging the outside mirrors

If an outside mirror has been forcibly disengaged, proceed as follows.

- ▶ Vehicles without electrically folding outside mirrors: manually move the outside mirror into the correct position.
- ▶ Vehicles with electrically folding outside mirrors: press and hold button ③. You will hear a click and the mirror will audibly engage. The outside mirror will now be set to the correct position.

Automatic anti-dazzle mirrors function

⚠ WARNING Risk of acid burns and poisoning due to the anti-dazzle mirror electrolyte

Electrolyte may escape if the glass in an automatic anti-dazzle mirror breaks.

The electrolyte is hazardous to health and causes irritation. It must not come into contact with your skin, eyes, respiratory organs or clothing or be swallowed.

- ▶ If you come into contact with electrolyte, observe the following:
 - Immediately rinse the electrolyte from your skin with water and seek medical attention.
 - If electrolyte comes into contact with your eyes, immediately rinse them thoroughly with clean water and seek medical attention.
 - If the electrolyte is swallowed, immediately rinse your mouth out thoroughly. Do not induce vomiting. Seek medical attention immediately.

- Immediately change out of clothing which has been contaminated with electrolyte.
- If an allergic reaction occurs, seek medical attention immediately.

When light from a headlamp hits the sensor on the inside rearview mirror, the inside rearview mirror automatically dims.

System limits

The system will not go into anti-dazzle mode if:

- The vehicle is switched off.
- Reverse gear is engaged
- The interior lighting is switched on.

Front-passenger outside mirror parking position function

The parking position makes parking easier.

The front-passenger outside mirror will swivel downwards in the direction of the rear wheel on the front passenger's side when:

- the parking position is stored (→ page 159).

- the front-passenger mirror is selected.
- reverse gear is engaged.

The front-passenger outside mirror will move back to its original position when:

- you shift the transmission to another transmission position.
- you are travelling at a speed greater than 15 km/h.
- you press the button for the outside mirror on the driver's side.

Storing the parking position of the front-passenger outside mirror using reverse gear

Storing



- ▶ Select the front-passenger outside mirror using button ②.
- ▶ Engage reverse gear.
- ▶ Move the front-passenger outside mirror into the desired parking position using button ①.

Calling up

- ▶ Select the front-passenger outside mirror using button ②.
- ▶ Engage reverse gear.
The front-passenger outside mirror will move into the stored parking position.

Activating/deactivating the automatic mirror folding function

Multimedia system:

→  >> Settings >> Vehicle
>> Opening/closing

- ▶ Activate or deactivate Automatic mirror fold-in.


Overview of climate control systems

Notes on climate control

An interior filter in combination with the prefilter in the engine compartment must always be used so that the air conditioning system, pollution level monitoring and the air filtration work correctly. Use filters recommended and approved by Mercedes-Benz. Always have maintenance work carried out at a qualified specialist workshop.

Overview of the THERMATIC climate bar

The indicator lamps indicate that the corresponding functions are activated.

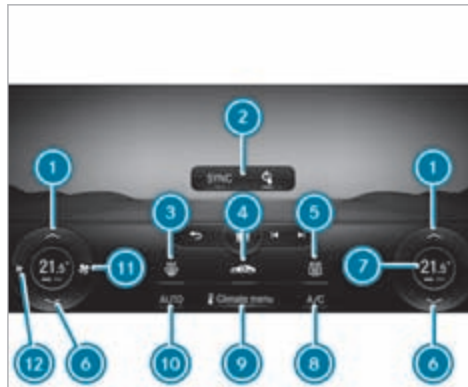

- ① ▲ Increases the temperature
- ② Upper display area of the climate bar with the examples of switching climate control on/off (→ page 163) and **SYNC** synchronisation function (→ page 166)
- ③ Demists the windscreen
- ④ Switches air-recirculation mode on/off (→ page 166) or


Calls up the fine particulate status display (→ page 164)

Plug-in hybrid vehicles: Activates/deactivates pre-entry climate control

- ⑤ Switches the rear window heater on/off
- ⑥ ▼ Reduces the temperature
- ⑦ Depending on vehicle equipment and settings: temperature display, demist function display, display for pre-entry climate control or auxiliary heating
- ⑧ **A/C** Switches the A/C function on/off (→ page 165)
- ⑨ Calls up the air conditioning menu (→ page 164)
- ⑩ **AUTO** Sets climate control to automatic mode (→ page 165)
- ⑪ Increases the airflow or switches on climate control (→ page 163)
- ⑫ Reduces the airflow or switches off climate control (→ page 163)
- ① The availability of individual functions is country- and equipment-dependent.

Overview of the THERMOTRONIC climate bar

The indicator lamps indicate that the corresponding functions are activated.

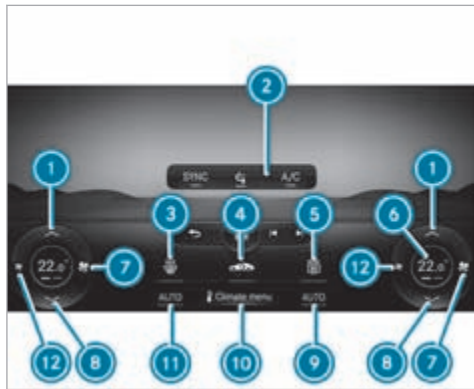

Front climate bar on the central display (example)

- ① ▲ Increases the temperature

- ② Upper display area of the climate bar with the examples of switching off climate control (→ page 163), switching the A/C function on/off (→ page 165) and synchronisation function (→ page 166)

- ③ Demists the windscreen

- ④ Switches air-recirculation mode on/off (→ page 166) or

Calls up the fine particulate status display (→ page 164) or

Activates/deactivates residual heat utilisation (→ page 166)

Plug-in hybrid vehicles: Activates/deactivates pre-entry climate control

- ⑤ Switches the rear window heater on/off

- ⑥ Depending on vehicle equipment and settings: temperature display, display for the defrost function, airflow, pre-entry climate control or auxiliary heating

- ⑦ Increases the airflow or switches on climate control (→ page 163)

- ⑧ ▼ Reduces the temperature

- ⑨ Sets climate control to automatic mode, right (→ page 165)

- ⑩ Calls up the air conditioning menu (→ page 164)


- ⑪ Sets climate control to automatic mode, left (→ page 165)

- ⑫ Reduces the airflow or switches off climate control (→ page 163)

- ① The climate bar will remain visible even when the vehicle is parked or the air conditioning is switched off (→ page 163).

- ① The availability of individual functions is country- and equipment-dependent.

Overview of the rear operating unit

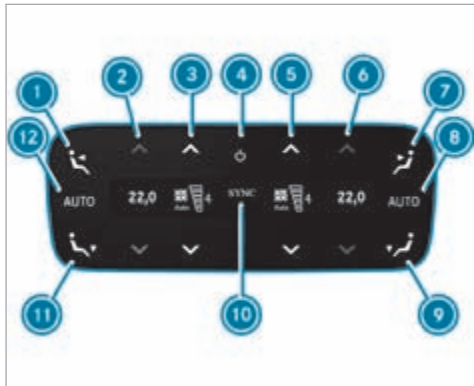

- ① Sets air distribution to the centre and side air vents in the rear passenger compartment, left
- ② Sets the temperature in the rear passenger compartment, left
- ③ Sets the airflow in the rear passenger compartment, left, or switches climate control on/off (→ page 164)

- ④ Switches climate control on/off (→ page 164)
- ⑤ Sets the airflow in the rear passenger compartment, right, or switches climate control on/off (→ page 164)
- ⑥ Sets the temperature in the rear passenger compartment, right
- ⑦ Sets air distribution to the centre and side air vents in the rear passenger compartment, right
- ⑧ Sets rear climate control to automatic mode, right
- ⑨ Sets the air distribution to the right rear footwell vents
- ⑩ Synchronisation is activated (→ page 166)
- ⑪ Sets the air distribution to the rear left footwell vents
- ⑫ Sets rear climate control to automatic mode, left

The settings for the second row of seats can be configured via the rear operating unit or the multimedia system (→ page 165) depending on the vehicle's equipment.

Operating the climate control system

Switching climate control on/off

Switching on climate control

- ▶ Set the airflow to level 1 or higher via  on the climate bar on the central display

or

- ▶ Press **AUTO**, ,  or **MENU**.

Switching off climate control

- ▶ Set the airflow to level 0 via  on the climate bar on the central display

or

- ▶ Press .

If climate control is switched off, the windows may mist up more quickly. Switch climate control off only briefly.

- ⓘ If you switch off climate control by pressing , fragrancing, if enabled, will also be switched off automatically.

Switching climate control on/off via the rear operating unit

Switching on

- ▶ Press button .

or

- ▶ Set the airflow to level 1 or higher using buttons  and .

or

- ▶ Press buttons , ,  or .

Switching off

- ▶ Press button .

or

- ▶ Set the airflow to level 0 using buttons  and .

-  If rear climate control is switched off via button , **OFF** will be shown on the rear display.

Switching the A/C function on/off using the air conditioning control panel

The A/C function heats, cools and dehumidifies the vehicle's interior air.

- ▶ Press the  button.

Switch off the A/C function only briefly; otherwise, the windows may mist up more quickly.

Condensation may drip from the underside of the vehicle when cooling mode is active. This is not indicative of a fault.

Calling up the air conditioning menu via the climate bar or the air conditioning control panel

The air conditioning menu can be called up via the climate bar. The climate bar is always shown on the lower edge of the central display.

- ▶ Select the **Climate menu** entry in the climate bar.
The **First row of seats** menu is opened.

Jumping directly to the Air quality menu

- ▶ Select the  fine particle status display. The **Air quality** menu is opened. An animation of the automatic air cleaning taking place is shown.

-  The fine particle status display is on the home screen next to the temperature display on the

right and it informs you of the current particulate levels inside and outside of the vehicle. The measurement values are shown with the $\mu\text{g}/\text{m}^3$ units (microgrammes per cubic metre).

The fine particle value measured in the vehicle interior can be influenced by the incoming air in heating mode, especially at a high blower setting. This can lead to an unrepresentative display of the fine particle value.

Defrosting the windscreen via the climate bar

Switching on

- ▶ Press  on the climate bar on the central display.

Switching off

- ▶ Press , **AUTO** or  on the climate bar on the central display
- or
- ▶ set the airflow to 0.

- ⓘ When the defrost function is activated, some functions (e.g. the temperature setting) will automatically be deactivated.

Activating/deactivating the A/C function via the air conditioning menu

Multimedia system:

➞ Climate menu ➞ First row of seats

Depending on the external conditions, improved cooling and dehumidification of the interior air are supported when the A/C function is activated. If it is not possible to operate the A/C function on the climate bar on the central display, switch the function on or off in the climate menu of the central display.

- ▶ Select **A/C** (A/C).

Setting climate control to automatic mode

In automatic mode, the set vehicle interior temperature is controlled automatically and maintained at a constant level by the air supply.

- ▶ Press **AUTO** on the climate bar on the central display.

- ⓘ You can increase or reduce the airflow by pressing  on the climate bar on the multimedia system.

- ▶ **To switch to manual operation:** switch off automatic mode or adjust an aspect of air distribution, e.g. .

Setting air distribution using the air conditioning menu

Multimedia system:

➞ Climate menu

- ▶ Select **First row of seats** or **Second row of seats**.
- ▶ To set the air distribution: select ,  or .
- ▶ Set the airflow.

- ⓘ When the air conditioning system is switched on, at least one zone is always active. However, several air distribution options can be selected at the same time, for example to set

the climate control for the interior and the footwells simultaneously. In doing so, the  climate control for the windscreen can only be selected for the first seat row. When automatic mode is active, the buttons for setting the air distribution are automatically deactivated. When the air conditioning system is switched off, the buttons remain operable and the last setting is saved.

Setting rear climate control using the air conditioning menu

Multimedia system:

➞ Climate menu

Setting the temperature

- ▶ Select **Second row of seats**.
- ▶ Set the temperature.

Setting the airflow

- ▶ Select **Second row of seats**.
- ▶ Set the air flow with  or .

Controlling the rear climate control automatically

- ▶ Select **AUTO**.

ⓘ When the defrost function is activated, some functions (e.g. the temperature setting) are automatically deactivated. To deactivate the defrost function, press either , **AUTO** or  set the air flow to level 0 (→ page 164).

Deactivating rear climate control

- ▶ Select **REAR OFF**.

Switching the synchronisation function on/off via the air conditioning menu

Multimedia system:

- ➡ **Climate menu** ➡ **First row of seats**

The synchronisation function controls the climate control centrally. The driver's settings for temperature, airflow and air distribution are automatically adopted for each climate zone.

- ▶ Select **SYNC** (SYNC).

Demisting the windows

Windows misted up on the inside

- ▶ Press **AUTO** on the climate bar on the central display.
- ▶ If the windows remain misted up: press  on the climate bar on the central display.

Windows misted up on the outside

- ▶ Switch on the windscreen wipers.

Switching air-recirculation mode on/off via the multimedia system

Multimedia system:

- ➡ **Climate menu** ➡ **First row of seats**

- ▶ Press  on the upper display area of the climate bar.

The interior air will be recirculated.

Air-recirculation mode will automatically switch to fresh air mode after a while.

- ⓘ If air-recirculation mode is switched on, the windows may mist up more quickly. Switch on air-recirculation mode only briefly.

Switching air-recirculation mode on/off

- ▶ Press  on the climate bar on the central display.
The interior air will be recirculated.

Air-recirculation mode will automatically switch to fresh air mode after a while.

- ⓘ If air-recirculation mode is switched on, the windows may mist up more quickly. Switch on air-recirculation mode only briefly.

Switching residual heat mode on/off via the climate bar

Requirements:

- The residual heat function is available.
- The vehicle is parked.
- The coolant temperature is sufficiently high.

It is possible to make use of the residual heat from the engine to continue heating or ventilating the front compartment of the vehicle for approximately 30 minutes, depending on the temperature set.

- ▶ **To switch on or off:** select **Residual heat** on the climate bar of the central display.

The residual heat function will automatically switch off after some time.

- ❗ If residual engine heat utilisation is activated, the two buttons for setting the temperature and air distribution will automatically be deactivated.

Activating/deactivating ionisation

Multimedia system:

➞ **Climate menu** ➞ **Air quality**

Ionisation improves the quality of the vehicle's interior air. Ionisation of the interior air is odourless.

- ▶ Select **Ionisation**.

- ❗ The function can only be performed if the AUTO mode is activated or the air distribution is set to the side air vent. The function is restricted if the side air vents on the driver's side are closed.

Fragrance system

■ Activating/deactivating the fragrance system using the multimedia system

Requirements:

- Automatic climate control is activated.
- The glove compartment is closed.
- A flacon is inserted.

Multimedia system:

➞ **Climate menu** ➞ **Air quality**

The fragrance system distributes a pleasant fragrance throughout the vehicle interior from a flacon located in the glove box.

- ▶ Navigate down until the climate control bar is active.
- ▶ Select **Air freshener**.
- ▶ Activate or deactivate fragrancing.

■ Setting the fragrance system

Requirements:

- The climate control system is switched on.
- The glove compartment is closed.

- A flacon is inserted.

Multimedia system:

➞ **Climate menu** ➞ **Air quality**

- ▶ Select **Air freshener**.
- ▶ Keep pressing until the desired intensity is reached.

■ Inserting or removing the flacon of the fragrance system

⚠ WARNING Risk of injury from liquid perfume

If children open the flacon, they could drink the liquid perfume or it could come into contact with their eyes.

- ▶ Do not leave children unattended in the vehicle.
- ▶ Consult a doctor immediately if liquid perfume has been drunk.
- ▶ If liquid perfume comes into contact with your eyes or skin, rinse your eyes with clean water.

- If symptoms continue, consult a doctor.




ENVIRONMENTAL NOTE Environmental damage due to improper disposal of full flacons



Full flacons must not be disposed of with household waste.



Full flacons must be taken to a harmful substance collection point.

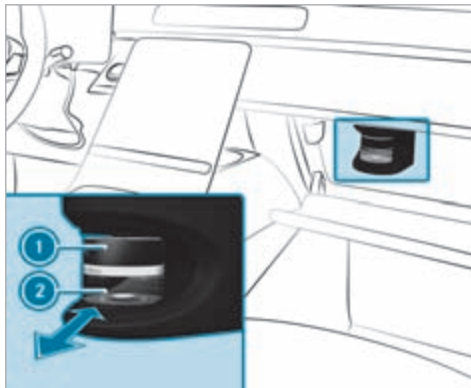

- ① Cap
- ② Flacon

- **To insert:** slide the flacon into the holder as far as it will go.
- **To remove:** after opening the glove box, wait for approximately seven seconds and pull out the flacon.

If you do not use genuine Mercedes-Benz interior perfumes, observe the manufacturers' safety notices on the perfume packaging.

Dispose of the genuine Mercedes-Benz interior perfume flacon when it is empty and do not refill it.

Refillable flacon

- Unscrew the cap of the empty flacon.
- Fill the flacon with a maximum of 15 ml.
- Screw the cap back onto the flacon.

Always refill the empty refillable flacon with the same perfume. Observe the separate information sheet with the flacon.

Pre-entry climate control via the key (plug-in hybrid)

■ Function of pre-entry climate control when the vehicle is unlocked

The seats can be briefly pre-warmed or pre-cooled before you get into the vehicle.

Depending on the vehicle's equipment, the following functions will be activated as needed during pre-cooling:

- Automatic climate control
- Blower
- Seat ventilation

Depending on the vehicle's equipment, the following functions will be activated as needed during pre-warming:

- Automatic climate control
- Blower
- Seat heating
- Steering wheel heater
- Mirror heater
- Rear window heater

Depending on the vehicle's equipment, the following functions will also be adjusted during pre-entry climate control if they have already been switched on during regular vehicle operation:

- Fragrancing
- Ionisation

■ Setting pre-entry climate control when the vehicle is unlocked in the multimedia system

Multimedia system:

➞ Climate menu ➞ Pre-entry climate ctrl

- ▶ Activate or deactivate the function.

Selecting seats

- ▶ Select **Driver**, **Passenger**, **Rear left** or **Rear right**.

The seat-specific functions of pre-entry climate control, such as seat heating, will be performed for the selected seats.

If pre-entry climate control is enabled, an LED on the climate bar of the central display will light up blue for a cooled vehicle and red for a heated vehicle.

■ Activating/deactivating pre-entry climate control when the vehicle is unlocked

Requirements:

- The high-voltage battery is charged sufficiently.
- The function has been activated via the multimedia system.

- ▶ **To switch on:** unlock the vehicle.

The climate control functions are activated for up to five minutes for pre-heating and pre-cooling.

Pre-entry climate control when the vehicle is unlocked cannot be activated more than twice when the vehicle is switched off.

- ▶ **To switch off:** press  on the climate bar on the central display.

Depending on the vehicle equipment, the following functions will remain active once the vehicle has been started:

- Seat heating
- Seat ventilation
- Fragrancing
- Ionisation

Pre-entry climate control for departure time (plug-in hybrid)

■ Pre-entry climate control for departure time function

⚠ WARNING Risk of fatal injury due to exposure to extreme heat or cold in the vehicle

If persons, particularly children, are subjected to prolonged exposure to intense heat or cold, there is a risk of severe injury or even death.

▶ Never leave persons, particularly children, unattended in the vehicle.

⚠ WARNING Risk of burns due to repeatedly switching on the seat heating

Repeatedly switching on the seat heating can cause the seat cushion and seat backrest padding to become very hot.

In particular, the health of persons with limited temperature sensitivity or a limited ability to react to high temperatures may be affected or they may even suffer burn-like injuries.

▶ Do not repeatedly switch on the seat heating.

To protect against overheating, the seat heating may be temporarily deactivated after it has been switched on repeatedly.

i This function is available only for vehicles with 48 V on-board electrical systems.

The air inside the vehicle can be heated, ventilated or cooled to the set temperature when the vehicle is parked.

When the vehicle is connected to power supply equipment, priority will be given to charging the 48 V battery to a specified minimum charge.

When the vehicle is connected to power supply equipment, priority will be given to charging the high-voltage battery to a specified minimum charge.

The running time of pre-entry climate control may be reduced in the following circumstances:

- The vehicle is not connected to power supply equipment.
- The 48 V battery is not fully charged.

The running time of pre-entry climate control may be reduced in the following circumstances:

- The vehicle is not connected to power supply equipment.
- The high-voltage battery is not fully charged.

With active pre-entry climate control, the charge level of the 48 V battery may be reduced, even if the charging cable connector is connected.

With active pre-entry climate control, the charge level of the 48 V battery may be reduced, even if the charging cable connector is connected.

If present, seat ventilation will be activated in cooling and ventilation modes.

Depending on the vehicle's equipment, the following functions will be activated in heating mode, if available:

- Seat heating
- Steering wheel heater
- Mirror heater
- Rear window heater
- Windscreen heater

When the set temperature changes, climate control mode will switch automatically as follows:

- from heating mode to ventilation or cooling mode, or
- from cooling mode to ventilation or heating mode, or
- from ventilation mode to heating or cooling mode

■ Setting pre-entry climate control for departure time via the multimedia system

Multimedia system:

➞ Climate menu ➞ Pre-entry climate ctrl

Setting the departure time

- ① The set departure times are used for the vehicle's pre-entry climate control and for predictions regarding the approximate state of charge and range at the time selected. Additional information on the charging settings: .
- ➞ Select **Edit departure time**  .
- ➞ Select a departure time or set a new departure time.

Setting the repeat days

- ➞ Select **Edit departure time**  .
- ➞ Set the desired departure time and select the corresponding weekdays on which this departure time is to apply.
- ➞ Press **OK** to confirm.

Selecting seats

- ➞ Select **Driver**, **Passenger**, **Rear left** or **Rear right**.
Pre-entry climate control will take place for the selected seats.

■ Activating/deactivating pre-entry climate control for departure time

Requirements:

- The high-voltage battery is charged sufficiently.
- The function has been activated via the multimedia system.
- ➞ **To activate:** set the departure time (→ page 171).
Pre-entry climate control for departure time will switch on a maximum of 55 minutes

before the selected departure time. It will remain active for another five minutes if departure is delayed.

- ➞ **To deactivate the pre-entry climate control for departure time early:** press  on the climate bar on the central display (see Owner's Manual for the vehicle) or switch off the preselection of the time on the climate menu.

If present, the following functions will remain active once the vehicle has been started:

- Seat heating
- Seat ventilation

Depending on the vehicle's equipment, the following functions will also be adjusted during pre-entry climate control if they have already been switched on during regular vehicle operation:

- Fragrancing
- Ionisation

Activating/deactivating immediate pre-entry climate control

⚠ WARNING Risk of fatal injury due to exposure to extreme heat or cold in the vehicle

If persons, particularly children, are subjected to prolonged exposure to intense heat or cold, there is a risk of severe injury or even death.

▶ Never leave persons, particularly children, unattended in the vehicle.

⚠ WARNING Risk of burns due to repeatedly switching on the seat heating

Repeatedly switching on the seat heating can cause the seat cushion and seat backrest padding to become very hot.

In particular, the health of persons with limited temperature sensitivity or a limited ability to react to high temperatures may be affected or they may even suffer burn-like injuries.

▶ Do not repeatedly switch on the seat heating.

To protect against overheating, the seat heating may be temporarily deactivated after it has been switched on repeatedly.

Requirements:

- The vehicle is switched off.

Air conditioning of the vehicle interior can continue for up to 50 minutes, e.g. if the journey is interrupted.

- ▶ Press  on the climate bar on the central display (see vehicle Owner's Manual). The red or blue indicator lamp below  on the climate bar on the central display will light up or go out.
- ▶ Set the temperature using the  arrows on the climate bar on the central display (see vehicle Owner's Manual).

The colours of the indicator lamp have the following meanings:

- **Blue:** stationary ventilation is switched on.
- **Red:** the stationary heater is switched on.

Stationary heater/ventilation

Stationary heater/ventilation function

- ① The following function is equipment-dependent.
- The air inside the vehicle is heated or ventilated to the set temperature.
- The air inside the vehicle cannot be cooled down to temperatures below the outside temperature.
- If the outside temperature changes, ventilation mode will automatically switch to heating mode or heating mode will automatically switch to ventilation mode.

The stationary heater and the exhaust gas outlet are situated behind the right front wheel.

Switching the stationary heater/ventilation on/off via the operating unit

⚠ DANGER Risk of fatal injury due to poisonous exhaust gases

If the tailpipe is blocked or sufficient ventilation is not possible, poisonous exhaust gases such as carbon monoxide may enter the vehicle. This is the case in enclosed spaces or if the vehicle gets stuck in snow, for example.

- ▶ Always switch the stationary heater off in enclosed spaces without an air extraction system, e.g. in garages.
- ▶ Keep the tailpipe and the area around the vehicle free from snow when the vehicle or the auxiliary heating is running.
- ▶ Open a door or a roof hatch on the windward side of the vehicle to ensure an adequate supply of fresh air.

⚠ WARNING Risk of fire due to hot stationary heater components and exhaust gases

Flammable materials such as leaves, grass or twigs may ignite.

- ▶ When the stationary heater is switched on, make sure that:
 - hot vehicle parts do not come into contact with flammable materials.
 - the exhaust gas can flow out of the stationary heater exhaust pipe unhindered.
 - the exhaust gas does not come into contact with flammable materials.

⚠ NOTE Battery discharge caused by stationary heater or stationary ventilation operation

Operating the stationary heater or stationary ventilation drains the battery.

- ▶ After heating or ventilating the vehicle twice, drive for a longer period of time.

Requirements:

- The vehicle has a stationary heater.
- The outside temperature is below 15°C.
- The fuel tank is sufficiently full.

i If the fill level of the fuel tank is too low, auxiliary heating mode may be restricted.

▶ Set the temperature using the  and  arrows on the climate bar on the central display.

▶ Press the  button.
The red or blue indicator lamp on the  button will light up or go out.

The colours of the indicator lamp have the following meanings:

- **Blue:** stationary ventilation is switched on.
- **Red:** the stationary heater is switched on.
- **Yellow:** the departure time is preselected.

The stationary heater/ventilation will switch off automatically after 50 minutes.

Operation using the app: the stationary heater/ventilation can also be operated via the Mercedes me connect app. You can find further information

in the separate Owner's Manual at https://moba.i.daimler.com/markets/ece-row/baix/cars/connectmeen_GB/#emotions/Startseite.html.

■ Setting the stationary heater/ventilation via the multimedia system

Requirements:

- The vehicle is fitted with the stationary heater equipment.

Multimedia system:

➡ Climate menu ➡ Stationary heater

Selecting the departure time

- ▶ Select **Time A**, **Time B** or **Time C**.

Setting the departure time

- ▶ Select **Time A**, **Time B** or **Time C**.
- ▶ Select the pen beside the time.
- ▶ Set a time.

Air vents

■ Adjusting the front air vents


⚠ WARNING Risk of burns or frostbite due to being too close to the air vents

Very hot or very cold air can flow from the air vents.

- ▶ Make sure that all vehicle occupants always maintain a sufficient distance from the air vents.
- ▶ If necessary, direct the airflow to another area of the vehicle interior.


To guarantee the flow of fresh air through the air vents into the vehicle interior, note the following:

- Always keep the vents and ventilation grilles in the vehicle interior clear.
- Keep the air inlet free of residue build-up (→ page 390).

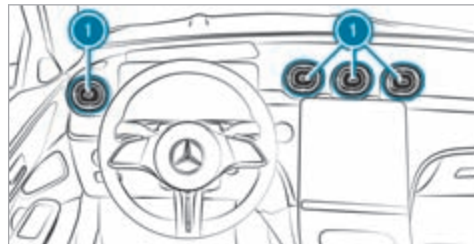

- ▶ **To open or close:** hold the centre of air vent ① and turn it to the left (open) or right (closed) as far as it will go.
- ▶ **To set the airflow direction:** hold the centre of air vent ① and move it up or down or to the left or right.

■ Adjusting the rear air vents

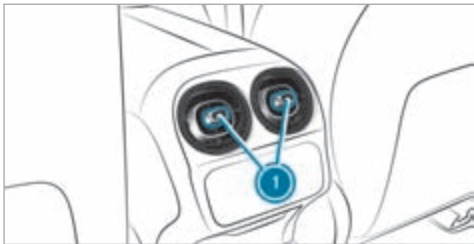

- ▶ **To open or close:** turn controller ❶ to the left or right as far as it will go.
- ▶ **To set the airflow direction:** hold the centre of controller ❶ and move it up or down or to the left or right.

Driving

Notes on plug-in hybrids

Notes on plug-in hybrid operation

⚠ WARNING Risk of chemical burns and poisoning from damaged high-voltage battery

If the housing of the high-voltage battery has been damaged, electrolyte and gases may leak out.

- ▶ Avoid contact with the skin, eyes or clothing.
- ▶ Immediately rinse electrolyte splashes off with water and seek medical attention straight away.

⚠ DANGER Risk of fire and explosion from excessive internal pressure of the high-voltage battery

In the event of a vehicle fire, flammable gas can escape and ignite.

- ▶ Stop the charging process immediately in case of unusual odours, smoke or burn marks.
- ▶ Leave the danger zone immediately. Secure the danger zone at a sufficient distance.
- ▶ Call the fire service.

The hybrid system combines a combustion engine with an electric motor.

Characteristics when the vehicle is at a standstill:

- The combustion engine is generally switched off.
- Idle speed occurs only in certain instances.

Characteristics when the vehicle is started:

- If the high-voltage battery is sufficiently charged, the vehicle can be started with the electric drive system without the combustion engine (noiseless start).
- If the high-voltage battery for the electric drive system is not sufficiently charged or the vehicle conditions for a silent start are not met,

the vehicle will start with the combustion engine.

- ① Depending on the system, it may be that even though the high-voltage battery is charged, electric mode has restricted or no availability. Once the combustion engine has been operated for long enough, electric mode will be again available without restriction.

Characteristics with moderate power output requests:

- The combustion engine is switched off as often as possible during the journey.
- The vehicle can, depending on the drive program selected and the state of charge of the high-voltage battery, be accelerated electrically up to speeds of approximately 140 km/h.

Characteristics with high power output requests:

- The electric motor supports the combustion engine (boost effect), e.g. when you pull away or accelerate.
- The high-voltage battery is discharging.

Characteristics when the accelerator pedal is released during the journey:

- The electric motor will be operated as an alternator when in overrun mode and during braking.
- The high-voltage battery is charging.

Notes on electric mode:

- Vehicles with hybrid systems generate significantly less noise when stationary and when being driven than vehicles with combustion engines.
- When you are driving in electric mode, the vehicle may not be heard by other road users due to the significantly reduced noise generated.

It is for this reason that the vehicle is equipped with a sound generator, which serves as an acoustic vehicle alert system (AVAS).

- If not all the vehicle conditions for electric mode are met, the combustion engine will be switched on.

i Vehicles with diesel particulate filters: during the regeneration of the diesel particulate fil-

ter, the drive programmes are not available or are restricted and the charge level of the high-voltage battery may change.

Notes on the acoustic vehicle alert system:

- The sound generator generates speed-dependent vehicle noise emissions when the vehicle is driving forwards or reversing at a speed of up to around 30 km/h.
- This helps other road users, particularly pedestrians and cyclists, to hear your vehicle better.
- When you drive at speeds above 20 km/h the acoustic vehicle alert system will gradually switch off.
- The sound generator will be off when the vehicle is stationary.

■ Manual disconnection of the high-voltage on-board electrical system

⚠ DANGER Risk of death and fire due to modified and/or damaged components of the high-voltage on-board electrical system

The vehicle's high-voltage on-board electrical system is under high voltage. If you modify component parts in the vehicle's high-voltage on-board electrical system or touch damaged component parts, you may be electrocuted. In addition, modified and/or damaged components may cause a fire.

In the event of an accident or impact to the vehicle underbody, components of the high-voltage electrical system may be damaged although the damage is not visible.

- ▶ Never make any modifications to the high-voltage on-board electrical system.
- ▶ Do not switch on or use the vehicle if its high-voltage on-board electrical system

components have been modified or damaged.

- ▶ Never touch damaged components of the high-voltage on-board electrical system.
- ▶ After an accident, do not touch any components of the high-voltage on-board electrical system.
- ▶ After an accident, have the vehicle transported away.
- ▶ Have the components of the high-voltage on-board electrical system checked at a qualified specialist workshop and replaced if necessary.


Requirements:

Only disconnect the high-voltage on-board electrical system manually in the following situations:

- The  restraint system warning lamp lights up in the driver's display, e.g. after an accident.

- The vehicle is badly damaged, e.g. after an accident, and the restraint system components have not been triggered.

Operating the high-voltage disconnect device

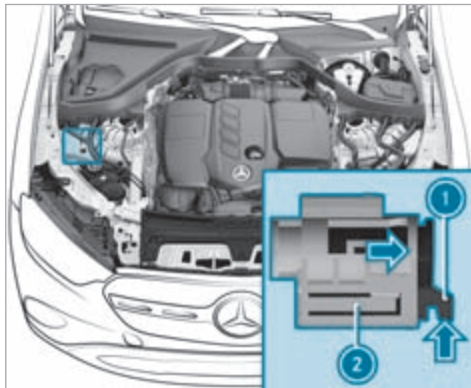

- ▶ Switch off the vehicle.
- ▶ Shift the transmission to position **P**.
- ▶ Apply the electric parking brake.

- ▶ Secure the vehicle against rolling away.
- ▶ Open the bonnet.
- ▶ Press release tab ① in the direction of the arrow and pull it out.
- ▶ Pull high-voltage disconnect device ② in the direction of the arrow until it engages. The high-voltage on-board electrical system is switched off.

All work on the hybrid drive system (including after disconnecting the high-voltage on-board electrical system manually) may only be carried out in a qualified specialist workshop.

Switching on the power supply or the vehicle

⚠ WARNING Risk of accident and injury due to leaving children unattended in the vehicle

If children are left unattended in the vehicle, they could, in particular:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

In addition, the children could also set the vehicle in motion by, for example:


- releasing the parking brake.
- changing the transmission position.
- starting the vehicle.

- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.

- ▶ Keep the vehicle key out of the reach of children.

Requirements:

- The key is in the vehicle and is recognised.
- The brake pedal is not depressed.

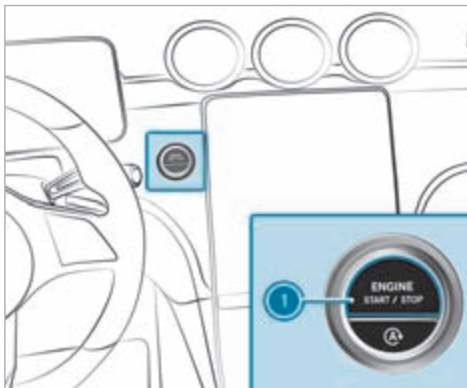

- ▶ **To switch on the power supply:** press button ① once.
You can, for example, switch on the wind-screen wiper.

The power supply will be switched off again if the following conditions are met:

- You open the driver's door.
- You press button ① twice more.

- ▶ **To switch on the vehicle:** press button ① twice.
Indicator and warning lamps will light up on the driver's display.

The vehicle will be switched off again if one of the following conditions is met:

- You do not start the vehicle within 15 minutes and the transmission is in position **P** or the electric parking brake is applied.
- You press button ① once.

Starting the vehicle

Starting the vehicle with the start/stop button

⚠ DANGER Risk of fatal injuries due to exhaust gases

Combustion engines emit poisonous exhaust gases such as carbon monoxide. Breathing in these exhaust gases is hazardous to health and results in poisoning.

- ▶ Never leave the engine and, if present, the stationary heater, running in an enclosed space without sufficient ventilation.

⚠ WARNING Risk of fire due to flammable material in the engine compartment or the exhaust system

Flammable materials may ignite.

- ▶ Therefore, check regularly that there are no flammable materials in the engine compartment or on the exhaust system.


Requirements:

- The key is in the vehicle and is recognised.
- ▶ Shift the transmission to position **P** or **N**.
- ▶ Depress the brake pedal and press button **①** once.
- ▶ If the vehicle does not start: switch off non-essential consumer equipment and press button **①** once.
- ▶ If the vehicle still does not start and the **Place the key in the marked space See Owner's Manual** display message appears on the driver's display: start the vehicle with the key in the marked space (emergency operation mode) (→ page 180).
- i** You can switch off the vehicle while driving. To do this, press and hold button **①** for about three seconds or press button **①** three times within three seconds. Be sure to observe the safety notes concerning this under "Driving tips" (→ page 183).

Observe any information regarding display messages that may be displayed on the driver's display.

Starting the vehicle with the key in the marked space (emergency operation mode)

If the vehicle does not start and the **Place the key in the marked space See Owner's Manual** display message appears on the driver's display, you can start the vehicle in emergency operation mode.

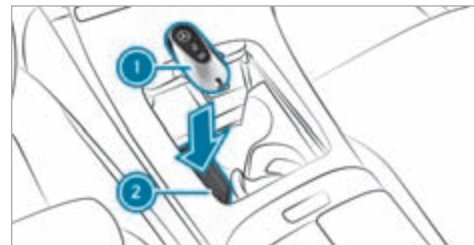

- ▶ Make sure that marked space **②** of the cup holder is empty.
 - ▶ Remove key **①** from the key ring.
 - ▶ Place key **①** in marked space **②** of the cup holder.
- The vehicle will start after a short time.

When you remove key ❶ from marked space ❷, the vehicle can be driven. For further engine starts, however, key ❶ must be located in marked space ❷ during the entire journey.

- ▶ Have key ❶ checked at a qualified specialist workshop.

If the vehicle does not start:

- ▶ Leave key ❶ in marked space ❷ of the cup holder.
- ▶ Depress the brake pedal and start the vehicle using the start/stop button.

- ❶ You can switch on the power supply or the vehicle with the start/stop button.

Observe any information regarding display messages that may be displayed on the driver's display.

Starting the vehicle via Remote Online Services

Cooling or heating the vehicle interior before starting the journey

Ensure the following before starting the engine:

- The legal stipulations in the area where your vehicle is parked allow engine starting via smartphone.
- It is safe to start and run the engine where your vehicle is parked.
- The fuel tank is sufficiently full.
- The starter battery is sufficiently charged.

Charging the starter battery before starting the journey

You can receive a message on your smartphone when the state of charge of the starter battery is low. You can then start the vehicle with the smartphone to charge the battery. The vehicle is automatically switched off after ten minutes.

Ensure the following before starting the engine:

- The legal stipulations in the area where your vehicle is parked allow engine starting via smartphone.

- It is safe to start and run the engine where your vehicle is parked.
- The fuel tank is sufficiently full.

Starting the vehicle (Remote Online)

⚠ WARNING Risk of crushing or entrapment due to unintentional starting of the engine

Limbs could be crushed or trapped if the engine is started unintentionally during service or maintenance work.

- ▶ Always secure the engine against unintentional starting before carrying out maintenance or repair work.

Requirements:

- Park position **P** is selected.
- The anti-theft alarm system is not activated.
- The hazard warning light system is switched off.
- The bonnet is closed.
- The doors are closed and locked.
- The windows and sliding sunroof are closed.

- ▶ Start the vehicle using the smartphone.
After every engine start, the engine runs for ten minutes.

You can carry out a maximum of two consecutive starting attempts. You must start the engine with the key before trying to start the vehicle again with the smartphone.

You can switch off the vehicle at any time as follows:

- Via the Smartphone App
- By pressing the  or  button on the key

- ❗ Further information can be found in the smartphone app.

Securing the vehicle against starting before carrying out maintenance or repair work:

- ▶ Switch on the hazard warning light system.
or
- ▶ Unlock the doors.
or
- ▶ Open a side window or the sliding sunroof.

Running-in notes

To preserve the engine during the first 1,500 km:

- Drive at varying road speeds and engine speeds.
- Do not drive at speeds greater than 140 km/h.
- Drive the vehicle in driving mode  or .
- Shift to the next highest gear at the very latest when the needle reaches the last third before the red area in the rev counter.
- Do not shift down manually in order to brake.
- Avoid overstraining the vehicle, e.g. driving at full throttle.
- Do not depress the accelerator pedal past the pressure point (kickdown).
- Only increase the engine speed gradually and accelerate the vehicle to full speed after 1,500 km.

This also applies when the engine or parts of the drivetrain have been replaced.

Please also observe the following running-in notes:

- In certain driving and driving safety systems, the sensors adjust automatically while a certain distance is being driven after the vehicle has been delivered or after repairs. Full system effectiveness is not reached until the end of this teach-in process.
- Brake pads, brake discs and tyres that are either new or have been replaced only achieve optimum braking effect and grip after several hundred kilometres of driving. Compensate for the reduced braking effect by applying greater force to the brake pedal.

Notes on optimised acceleration

If all necessary requirements and activation conditions are fulfilled, the best possible acceleration can be achieved from a standstill.

Do not use the optimised acceleration on public roads. Individual wheels could spin and you could lose control of the vehicle. There is an increased risk of skidding and/or accident.

Be sure to observe the safety notes and information on ESP® (→ page 240).

Pulling away with optimised acceleration

⚠ WARNING Risk of skidding and having an accident from wheels spinning

When you use optimised acceleration, individual wheels could spin and you could lose control of the vehicle.

If ESP® is deactivated, there is a risk of skidding and accident!

- ▶ Make sure that no persons or obstacles are in the close vicinity of your vehicle.

Requirements:

- the vehicle is run in (→ page 182).
- the vehicle and tyres are in good condition.
- you are on a high-grip roadway.
- the engine and transmission are at normal operating temperature.

! NOTE Increased wear due to optimised acceleration

When pulling away with optimised acceleration, all components of the drivetrain are subjected to a very high load.

This can lead to increased component wear.

- ▶ Do not always pull away with optimised acceleration.

- ▶ Engage the **[D]** drive position (→ page 204).
- ▶ Move the steering wheel to the straight-ahead position.
- ▶ Select the sportiest available drive program **[S']** or **[S]** (→ page 199).
- ▶ Deactivating ESP® (→ page 242).
- ▶ Depress and hold the brake pedal firmly with your left foot.
- ▶ With your right foot, fully depress the accelerator pedal.

- ▶ After no more than five seconds, take your left foot quickly off the brake, but keep the accelerator pedal depressed.
The vehicle will pull away at maximum acceleration.

- ▶ Switch on ESP® once the acceleration procedure is complete.

Ending optimised acceleration

- ▶ Remove your foot from the accelerator pedal.
- ▶ Reactivate ESP®.

- ⓘ After you pull away with optimised acceleration, components of the drivetrain can become very hot, which means that optimised acceleration values may be reached again only after a few minutes.

Notes on driving

⚠ WARNING Risk of accident due to objects in the driver's footwell

Objects in the driver's footwell may impede pedal travel or block a depressed pedal.

This jeopardises the operating and road safety of the vehicle.

- ▶ Stow all objects in the vehicle securely so that they cannot get into the driver's footwell.
- ▶ Always fit the floor mats securely and as prescribed in order to ensure that there is always sufficient room for the pedals.
- ▶ Do not use loose floor mats and do not place floor mats on top of one another.

! WARNING Risk of accident due to incorrect footwear

Incorrect footwear includes, for example:

- shoes with platform soles
- shoes with high heels
- slippers

There is a risk of an accident.

- ▶ Always wear suitable footwear so that you can operate the pedals safely.

! WARNING Risk of accident if the vehicle is switched off while driving

If you switch off the vehicle while driving, safety functions are restricted or no longer available.

This may affect the power steering system and the brake force boosting, for example.

You will need to use considerably more force to steer and brake, for example.

- ▶ Do not switch off the vehicle while driving.

! DANGER Risk of fatal injuries due to exhaust gases

Combustion engines emit poisonous exhaust gases such as carbon monoxide. Breathing in these exhaust gases is hazardous to health and results in poisoning.

- ▶ Never leave the engine and, if present, the stationary heater, running in an enclosed space without sufficient ventilation.

! WARNING Risk of skidding and of an accident due to shifting down on slippery road surfaces

If you shift down on slippery road surfaces to increase the engine braking effect, the drive wheels may lose traction.

- ▶ Do not shift down on slippery road surfaces to increase the engine braking effect.

! DANGER Risk of fatal injury due to poisonous exhaust gases

If the tailpipe is blocked or sufficient ventilation is not possible, poisonous exhaust gases such as carbon monoxide may enter the vehicle. This is the case, for example, if the vehicle gets stuck in the snow.

- ▶ Keep the tailpipe and the area around the vehicle free from snow when the engine or the stationary heater is running.

- ▶ Open a window on the side of the vehicle facing away from the wind to ensure an adequate supply of fresh air.

! WARNING Risk of accident due to the brake system overheating

If you leave your foot on the brake pedal when driving, the brake system may overheat.

This increases the braking distance and the brake system can even fail.

- ▶ Never use the brake pedal as a footrest.
- ▶ Do not depress the brake pedal and the accelerator pedal at the same time while driving.

! NOTE Engine damage due to excessively high engine speeds

The engine will be damaged if you drive with the engine in the overrevving range.

- ▶ Do not drive with the engine in the overrevving range.

! NOTE Causing wear to the brake linings by permanently depressing the brake pedal

- ▶ Do not permanently depress the brake pedal while driving.
- ▶ To use braking effect of the engine, shift to a lower gear in good time.

! NOTE Damage to the drivetrain and engine when pulling away

- ▶ Do not warm up the engine while the vehicle is stationary. Pull away immediately.
- ▶ Avoid high engine speeds and driving at full throttle until the engine has reached its operating temperature.

! NOTE Damage to the catalytic converter due to non-combusted fuel

The engine is not running smoothly and is misfiring.

Non-combusted fuel may get into the catalytic converter.

- ▶ Only depress the accelerator pedal slightly.
- ▶ Have the cause rectified immediately at a qualified specialist workshop.

! NOTE Reduced battery life due to frequent short-distance trips

The 12 V battery may not be sufficiently charged when the vehicle is used only for short-distance trips. This reduces the life of the battery.

- ▶ Drive longer distances regularly to charge the battery.

! NOTE Damage to the vehicle due to not observing the maximum permitted headroom clearance

If the vehicle height is greater than the maximum permitted headroom clearance, the roof and other parts of the vehicle may be damaged.

- ▶ Observe the signposted headroom clearance.
- ▶ If the vehicle height is greater than the permitted headroom clearance, do not enter.
- ▶ Observe the changed vehicle height with add-on roof equipment.

i Please bear in mind that all the speed values stated in this Owner's Manual are approximate and are subject to a certain tolerance.

Notes on driving with a roof load, trailer or fully laden vehicle

When driving with a loaded roof luggage rack or trailer as well as with a fully laden or fully occupied vehicle, the vehicle's driving and steering characteristics change.

You should bear the following in mind:

- Do not exceed the permissible roof load and towing capacity. Also observe the information in the Technical Data.
- Distribute the roof load and the load inside the vehicle evenly, placing heavy objects at the

bottom. Also comply with the notes on loading the vehicle (→ page 120).

- Drive attentively, and avoid abrupt starts, braking and steering as well as rapid cornering.

Advice on driving on salt-strewn roads

The braking effect is limited on salt-strewn road surfaces.

Therefore, observe the following notes:

- Due to salt build-up on the brake disks and brake pads, the braking distance can increase considerably or result in one-sided braking.
- Maintain a much greater safety distance to the vehicle travelling ahead.

Remove salt build-up as follows:

- Brake occasionally, paying attention to the traffic conditions
- Carefully depress the brake pedal at the end of the journey and when starting the next journey

Notes on aquaplaning

Aquaplaning can take place if a certain depth of water has built up on the road surface.

Observe the following notes during heavy precipitation or in conditions in which aquaplaning may occur:

- Reduce speed
- Avoid tyre ruts
- Avoid sudden steering movements
- Brake carefully

i Also observe the notes on regularly checking wheels and tyres (→ page 421).

Notes on driving through water on the road

Water ingress can damage the engine, electrics and transmission.

Water can also enter the air intake of the engine and cause engine damage.

Observe the following if you have to drive through water:

- Observe the maximum permissible fording depth (→ page 452).
- Drive at a maximum speed of 10 km/h; water can otherwise enter the vehicle interior or engine compartment.

- Vehicles travelling in front, or oncoming vehicles, can create waves which may exceed the maximum permissible depth of the water.

The braking effect of the brakes is reduced after fording. Brake carefully, paying attention to the traffic conditions until braking power has been fully restored.

Function of rear axle steering

- ⓘ This function is an on-demand feature (→ page 22).

The rear axle steering is an electromechanical auxiliary steering on the rear axle which adjusts the steering of the rear wheels according to the position of the front wheels, depending on the speed. This results in greater manoeuvrability and improved driving stability, e.g. when cornering.

Rear axle steering has the following characteristics:

- reduced steering effort and turning circle resulting in reduced parking effort
- improved driving stability, e.g. when cornering

- more direct steering resulting in improved handling of the vehicle

Observe the notes on snow chains and snow chain mode (→ page 422).

Notes on off-road driving

⚠ WARNING Risk of accident if you do not keep to line of fall on inclines

If you drive at an angle or turn on an incline, the vehicle could slip sideways, tip and roll-over.

- ▶ Always drive on inclines in the line of fall (straight up or down) and do not turn.

⚠ WARNING Risk of fire due to flammable material coming into contact with hot parts of the exhaust system

If combustible materials, e.g. leaves, grass or twigs, come into contact with hot parts of the exhaust system, they may ignite.

- ▶ When driving off-road or on unpaved surfaces, check the underside of the vehicle at regular intervals.
- ▶ In particular, remove any trapped parts of plants or other flammable material.
- ▶ If damage should occur, immediately inform a qualified specialist workshop.

When driving off-road, sand, mud and water or water mixed with oil, etc., may get into the brakes. This may lead to a reduction in braking effect or even a total brake failure as a result of increased wear. The braking characteristics will vary depending on the material that has entered the system. Clean the brakes after driving off-road. If you then notice reduced braking effect or hear scraping noises, have the brake system checked at a qualified specialist workshop. Adapt your driving style to the changed braking characteristics.

! **NOTE** Damage caused by driving over obstacles

The vehicle can be damaged by:

- driving onto high kerbs or unpaved roads.
- quickly driving over obstacles such as kerbs, speed bumps or potholes.
- heavy objects hitting the underbody or chassis components.

- ▶ Do not drive over obstacles that could damage the vehicle.
- ▶ Check the vehicle regularly for damage during off-road driving.
- ▶ Adjust the vehicle speed to suit the road surface conditions.
- ▶ If there is damage, consult a qualified specialist workshop immediately.



ENVIRONMENTAL NOTE Environmental damage due to non-observance of prohibition signs

Environmental protection has priority. Treat nature with respect.

- ▶ Be sure to observe prohibition signs.

Check-list before driving off-road

Check the following points before driving off-road:

- Fuel level
- **Vehicles with a diesel engine:** AdBlue® level
- Engine oil level: fill engine oil to the maximum level to ensure full gradeability (→ page 387)
- Tyre-change tool kit and spare wheel
- Tyres and wheels
- ❗ Further information about special all-terrain tyres for retrofitting can be obtained from a qualified specialist workshop.

Off-road driving

Read this section before driving your vehicle off-road. Practise by driving over gentler off-road terrain first.

- Observe the notes on the cross-country ABS (→ page 240).
- Select the (→ page 199) drive program before driving off-road.
- **Vehicles with AIRMATIC:** select a vehicle level suitable for off-road terrain (→ page 284). To avoid damaging the vehicle, make sure there is always sufficient ground clearance.
- Always keep the engine running and in gear when driving on downhill gradients and slopes. Observe the notes on driving in mountainous terrain.
- Do not drive on unknown terrain that is not easily visible and stay on marked paths.
- Always keep the doors and windows closed while the vehicle is in motion.
- Deactivate Active Distance Assist DISTRONIC, cruise control and the variable limiter.
- Adapt your driving style to the terrain.

- Do not use the HOLD function on steep downhill or uphill gradients with slippery or loose surfaces.

Driving on sand

When driving on sand, also observe the following instructions:

- Select a higher vehicle level.
- Shift to a lower gear.
- Drive quickly to overcome the rolling resistance; the vehicle may otherwise dig itself in.
- Drive in the tracks of other vehicles if possible. Make sure that the following prerequisites are met:
 - the tyre ruts are not too deep
 - the sand is firm enough
 - the ground clearance is sufficient

Fording

Also observe the following information when fording:

- **Vehicles with AIRMATIC:** select the highest possible vehicle level (→ page 284).

- Drive no faster than 10 km/h.
- Observe the maximum permissible depth for driving through water (→ page 452).
- Switch off automatic climate control (→ page 165).
- **Vehicles with stationary heater/ventilation:** switch the stationary heater/ventilation off (→ page 173).
- Ensure that a bow wave does not form as you drive.
- Do not stop in the water and do not switch off the engine. Ensure the ECO start/stop function is switched off (→ page 191).

Driving in mountainous terrain

Also observe the following information when driving in mountainous terrain:

- Observe the values of the approach/departure angle and the maximum gradient-climbing ability (→ page 452).
- Avoid high engine speeds.
- Use the braking power of the engine when driving downhill.

- Shift to a lower gear on uphill gradients and on long, steep downhill gradients.
- Activate DSR before driving downhill, if necessary (→ page 257).

Check-list after driving off-road

Driving off-road places greater demands on your vehicle than driving on normal roads. Check the entire vehicle for damage and foreign bodies every time after driving off-road. Foreign bodies in the wheels or drivetrain can lead to imbalances and therefore vibrations.

- If the  driving mode is selected: select another driving mode.
- Deactivate DSR.
- Lower the vehicle level again to a level suitable to the road conditions, e.g. to the normal level.
- Apply the brakes to dry them after fording.
- Check that the service brake is working normally after a long downhill stretch.
- Clean the following components every time after driving off-road:
 - licence plate number

- headlamps and tail lamps
- tyres, wheels and wheel arches
- underbody
- After driving through sand, mud, water or gravel, have the following components checked and cleaned:
 - brake disks and brake pads
 - tyres and wheels
 - axle joints

ECO start/stop function

■ ECO start/stop function

- ❗ **Plug-in hybrid:** this function is not available.
- ❗ Depending on the engine, the ECO start/stop function is not available in all drive programs. Observe the status display on the driver's display concerning this.

The engine will be switched off automatically in the following situations if all vehicle conditions for an automatic engine stop are met:

- You brake the vehicle to a standstill in transmission position **[D]** or **[N]**.

- You depress the brake pedal when travelling at a low speed.

If the system has detected one of the following situations, the engine will not stop:

- You stop at a stop sign and there is no vehicle in front of you.
- The vehicle that stopped in front of you starts up again.
- You manoeuvre, turn the steering wheel sharply or engage reverse gear.

❗ If the system detects an intelligent stop inhibitor, e.g. a stop sign, the engine will not stop. If you activate the HOLD function or engage the park position **[P]**, the engine can be switched off in spite of an intelligent stop inhibitor.

The engine will restart automatically in the following cases:

- You engage transmission position **[D]** or **[R]**.
- You depress the accelerator pedal.
- The vehicle requires an automatic engine start.

- You release the brake pedal.
- You release the brake pedal on a downhill gradient and the vehicle does not roll.
- The vehicle rolls on a downhill gradient and does not automatically enter glide mode at 20 km/h.

Displaying the ECO start/stop function on the driver's display:


- The  symbol (green) appears when the vehicle is at a standstill: the engine was switched off by the ECO start/stop function.
- The  symbol (yellow) appears when the vehicle is at a standstill: not all vehicle conditions for an engine stop have been met.
- Neither the  symbol nor the  symbol appears when the vehicle is at a standstill: an intelligent stop inhibitor, e.g. a stop sign, has been detected.
- The  symbol appears: the ECO start/stop function is deactivated or there is a malfunction.

If the engine was switched off by the ECO start/stop function and you leave the vehicle, a warning tone will sound and the engine will not be restarted. In addition, the following display message will appear on the driver's display:

Vehicle is operational Switch off vehicle before exiting

If you do not switch off the vehicle, it will automatically be switched off after three minutes.

Switching the ECO start/stop function on/off

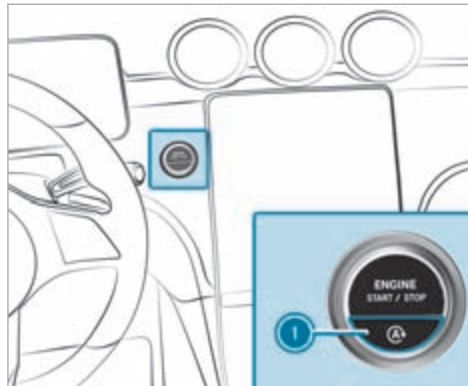

▶ Press button ①.

A display will appear on the driver's display when you switch the ECO start/stop function on/off.

i  will be continuously shown on the driver's display while the ECO start/stop function is deactivated.

ECO display function



The ECO display shows an evaluation of your driving style on the driver's display depending on the situation. This enables you to check the efficiency of your driving style and adjust it if necessary. The **ECO display** menu shows a ball ② that will roll forwards or backwards on a stylised road in the direction of travel according to the driving characteristics.

Above and below the road, lines mark the area for an efficient driving style ③. Ball ② will light up in green if it is rolling within these lines. Outside the lines, the ball will light up in orange.

The ECO display assesses the following criteria for an economical driving style:

- coasting at the right times
- consistent speed
- moderate acceleration

The overall assessment of your driving style "from start" is indicated using stars ❶. It starts with five empty stars, which you can fill one after the other if you drive efficiently. When all five stars are filled, a glow will appear in the background.

- ❶ You can call up the **ECO display** function via the **Classic** menu (→ page 320).

ECO Assist function (vehicles with 48 V on-board electrical system)

For plug-in hybrids, note the ECO Assist information (→ page 194).

- ❶ ECO Assist is active only in drive programs **E** and **C**.

ECO Assist analyses data for the vehicle's expected route. This allows the system to optimally adjust the driving style for the route ahead, save

fuel and recuperate. If the system detects an event ahead and the vehicle nears the event, ECO Assist will calculate the optimum speed for maximum fuel economy and recuperative energy based on the distance, speed and downhill gradient.

If the deceleration provided by ECO Assist is not sufficient, you must also brake with the service brake. This is especially the case if, for example, you pull away again in slow-moving traffic and the distance to the vehicle in front is very short.




- ❶ "Foot off the accelerator" recommendation
❷ Route event ahead

If a route event that can be dealt with more efficiently by adjusting your driving style is detected ahead, corresponding symbol ❷ and the  symbol will be displayed in grey.

If you release the accelerator pedal, the  symbol will turn green and recuperation in overrun mode will be initiated. If the deceleration is not sufficient, also apply the service brake.

The display will disappear as soon as ECO Assist cannot identify any further recommendations from the route ahead.

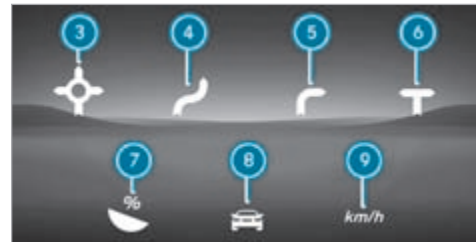

The following route events can be detected by ECO Assist:

- ③ Roundabout
- ④ S-bend
- ⑤ Sharp bend
- ⑥ T-junction
- ⑦ Downhill gradient
- ⑧ Vehicle in front
- ⑨ Speed limit
- ① In drive program , ECO Assist only reacts to route event ⑧ "Vehicle in front."

System limits

If the calculated route is adhered to when route guidance is active, ECO Assist will operate with greater accuracy. The basic function is also available without active route guidance. Not all information and traffic situations can be foreseen. The quality depends on the map data.

ECO Assist is only an aid. The driver is responsible for keeping a safe distance from the vehicle in front, for vehicle speed and for braking in good time.

The system may be impaired or may not function in the following situations:

- If there is poor visibility, e.g. due to insufficient illumination of the road, highly variable shade conditions, rain, snow, fog or heavy spray.
- If there is glare, e.g. from oncoming traffic, direct sunlight or reflections.
- If there is dirt on the windscreen in the vicinity of the multifunction camera or if the camera is misted up, damaged or obscured.
- If the traffic signs are hard to detect, e.g. due to dirt, snow or insufficient lighting, or because they are obscured.
- If the information on the navigation system's digital map is incorrect or out of date.
- If signs are ambiguous, e.g. road signs in road-works or in adjacent lanes.

Regenerative brake system (plug-in hybrid)

■ Function of the regenerative brake system

Depending on the selected recuperation level, the electric motor is operated as an alternator when in overrun mode and during braking in order to

charge the high-voltage battery while driving. As soon as you take your foot off the accelerator pedal when the vehicle is in motion and in transmission position , recuperation in overrun mode is initiated.

The higher the recuperation, the more sharply the vehicle is braked when coasting and the more electrical energy is fed into the high-voltage battery.

The deceleration in overrun mode may not be sufficient depending on the driving conditions. Decelerating to a standstill is not possible. Also brake with the service brake if necessary. Always adapt your speed to the driving conditions and keep a sufficient distance.

The recuperative brake system has the following characteristics:

- supports braking with electronically controlled brake force boosting
- converts the kinetic energy of the vehicle into electric energy

- i** If you brake hard, the mechanical brake is also used. This means that the maximum recuperative energy cannot be recovered. The more you drive and brake in an anticipatory manner, the more efficiently energy can be recuperated.

System limits

The braking effect of the electric motor during recuperation in overrun mode may be reduced or may not be available at all in the following situations:

- when the high-voltage battery charge level increases
- if the high-voltage battery is not yet at a normal operating temperature

In these cases, the desired deceleration is set by the brake control system.

Manually setting recuperative deceleration

- i** You can use the steering wheel gearshift paddles to adjust the intensity of recuperation in drive programs **[H]**, **[B]** and **[EL]**.



The following recuperation levels are available:

- **[D] [AUTO]** Intelligent and anticipatory recuperation with ECO Assist (→ page 194)
- **[D] +** No recuperation: the vehicle rolls freely
- **[D]** Normal recuperation
- **[D] -** Increased recuperation: strong deceleration in overrun mode, e.g. for driving on downhill gradients

Standard setting:

- **[D] [AUTO]**: if the ECO Assist function is activated in the multimedia system (→ page 196).
- **[D]**: if the ECO Assist function is deactivated in the multimedia system.

- i** **[D] [AUTO]** is only available if the ECO Assist function is activated in the multimedia system and if the function of the radar sensors is not impaired. Also observe the information on vehicle sensors and cameras (→ page 237).

▶ **To increase recuperation:** briefly pull gearshift paddle **1**.

▶ **To reduce recuperation:** briefly pull gearshift paddle **2**.

▶ **Standard setting:** pull and hold gearshift paddle **1** or **2** or engage transmission position **[D]** again.

- i** When the vehicle is started again, the standard setting is also set.

The driver's display shows the currently selected recuperation level next to the transmission position display.

ECO Assist (plug-in hybrid)

ECO Assist function

- i** The following function depends on the equipment and the country.

ECO Assist analyses data for the vehicle's expected route. This allows the system to optimally adjust the driving style for the route ahead, save fuel and recuperate. If the system detects an event ahead and the vehicle nears the event, ECO Assist will calculate the optimum speed for maximum fuel economy and recuperative energy based on the distance, speed and downhill gradient.

If the deceleration provided by ECO Assist is not sufficient, you must also brake with the service brake. This is especially the case if, for example, you pull away again in slow-moving traffic and the distance to the vehicle in front is very short.

The function will be active in the following circumstances:

- The function is activated in the multimedia system (→ page 196).
- The **D** **AUTO** recuperation level is selected (→ page 194).
- **M** manual gearshifting is not activated.
- Drive program **S** or **S+** is not selected.




- ① "Foot off the accelerator" recommendation
- ② Route event ahead

If a route event that can be dealt with more efficiently by adjusting your driving style is detected ahead, corresponding symbol ② and the  symbol will be displayed in grey.

If you release the accelerator pedal, the  symbol will turn green and recuperation in over-run mode will be initiated. If the deceleration is not sufficient, also apply the service brake.

The display will disappear as soon as ECO Assist cannot identify any further recommendations from the route ahead.

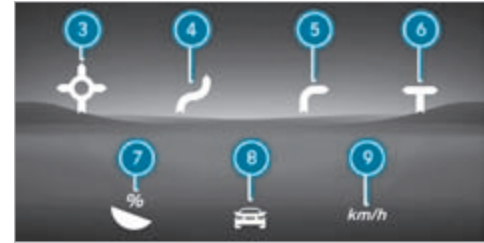

The following route events can be detected by ECO Assist:

- ③ Roundabout
- ④ S-bend
- ⑤ Sharp bend
- ⑥ T-junction
- ⑦ Downhill gradient
- ⑧ Vehicle in front
- ⑨ Speed limit
- ⓘ Depending on the vehicle equipment, not all future route events may be detected by the system.

System limits

If the calculated route is adhered to when route guidance is active, ECO Assist will operate with greater accuracy. The basic function is also available without active route guidance. Not all information and traffic situations can be foreseen. The quality depends on the map data.

ECO Assist is only an aid. The driver is responsible for keeping a safe distance from the vehicle in front, for vehicle speed and for braking in good time.

The system may be impaired or may not function in the following situations:

- If there is poor visibility, e.g. due to insufficient illumination of the road, highly variable shade conditions, rain, snow, fog or heavy spray.
- If there is glare, e.g. from oncoming traffic, direct sunlight or reflections.
- If there is dirt on the windscreen in the vicinity of the multifunction camera or if the camera is misted up, damaged or obscured.
- If the radar sensors are dirty or damaged.

- If the traffic signs are hard to detect, e.g. due to dirt, snow or insufficient lighting, or because they are obscured.
- If the information on the navigation system's digital map is incorrect or out of date.
- If signs are ambiguous, e.g. road signs in road-works or in adjacent lanes.

Activating and deactivating ECO Assist

Multimedia system:

→  >> Settings >> Assistance
>> Driving

▶ Activate or deactivate the function.

Function of the route-based operating-mode strategy (plug-in hybrid)

 The following function is country-dependent and available only in conjunction with an integrated navigation system.

The route-based operating-mode strategy is active under the following conditions:

- Drive program  is selected.

- The "route based" option (→ page 200) is selected for drive program  in the **DYNAMIC SELECT** menu.
- Route guidance is active.
- The state of charge of the high-voltage battery is sufficient.

If the function is active, data on the further course of the route is evaluated. This includes e.g. road type, speed limitations and altitude data.

The hybrid system then adapts the operating strategy to the further course of the route:

- Use of electrical energy and the combustion engine are adapted.
- The state of charge of the high-voltage battery is controlled accordingly.
- Electrical energy is reserved especially for electric mode, e.g. urban route sections.
- The vehicle automatically selects the operating mode.

Function of the haptic accelerator pedal (plug-in hybrid)

The haptic accelerator pedal has an additional point of resistance followed by increased pedal resistance to help you drive in all-electric mode.

Characteristics of the additional point of resistance:

- Available only in drive program 
- Is used when the electric motor power availability display (POWER) is full
- Indicates the maximum available electric performance

The subsequent increased pedal resistance indicates that the journey is being continued with the combustion engine.

DYNAMIC SELECT button

Function of the DYNAMIC SELECT button

-  Depending on the engine and equipment, the vehicle has different drive programs.

Use the DYNAMIC SELECT button to change between the following drive programs:

The drive program selected appears on the driver's display.

Individual

- Individual settings (→ page 200)

Sport

- Still sporty, but with an emphasis on stability
- Enables the sporty driver to adopt a more active driving style
- Only suitable for good road conditions, a dry road surface and a clear stretch of road
- **Vehicles with AIRMATIC:** lowers the vehicle to low level -1

Hybrid (plug-in hybrid)

- Comfortable and economical driving
- Balance between traction and stability
- Recommended for all road conditions
- Full development of all intelligent hybrid functions
- Adjustable recuperation in overrun mode

- The selection of the appropriate drive type by the hybrid system depends on the driving conditions and the distance

• **Vehicles with AIRMATIC:**

- adjusting the vehicle to normal level
- from 120 km/h: lowers the vehicle to low level -1
- below 80 km/h: raises the vehicle to normal level

Comfort

- Comfortable and economical driving
- Balance between traction and stability
- Recommended for all road conditions
- **Vehicles with AIRMATIC:**
 - adjusting the vehicle to normal level
 - from 120 km/h: lowers the vehicle to low level -1
 - below 80 km/h: raises the vehicle to normal level

EL Electric (plug-in hybrid)

- Electric mode – driving without the combustion engine is possible up to approximately 140 km/h
- Adjustable recuperation in overrun mode
- Adaptation of Active Distance Assist DISTRONIC for electric mode
- Depending on the equipment, the maximum set speed for cruise control, the limiter and Active Distance Assist DISTRONIC can be limited to the maximum electrically drivable speed
- Activation of the combustion engine via the point of resistance of the accelerator pedal (kickdown)
- **Vehicles with AIRMATIC:**
 - adjusting the vehicle to normal level
 - from 120 km/h: lowers the vehicle to low level -1
 - below 80 km/h: raises the vehicle to normal level

B Hold battery (plug-in hybrid)

- Prioritises maintaining the state of charge of the high-voltage battery, e.g. for subsequent journeys in inner-city/low-emission zones
- The selection of the appropriate drive type by the hybrid system depends on the driving conditions and the distance
- Adjustable recuperation in overrun mode
- **Vehicles with AIRMATIC:**
 - adjusting the vehicle to normal level
 - from 120 km/h: lowers the vehicle to low level -1
 - below 80 km/h: raises the vehicle to normal level

E Eco

- Particularly economical driving
- Balance between traction and stability
- Recommended for all road conditions
- **Vehicles with AIRMATIC:**
 - Lowers the vehicle to low level -1

- from 120 km/h: lowers the vehicle to low level -2
- below 80 km/h: raises the vehicle to low level -1

**Offroad**

- For driving off-road, e.g. on dirt tracks, loose surfaces, gravel or sand, as well as on difficult, uneven terrain, where there are no firm road surfaces and over rocky terrain
- Intervenes later if there is oversteering or understeering, thus improving traction
- Not suitable for use on public roads
- Can be selected up to a maximum of 100 km/h
- from 110 km/h switch to **C** or **H** (plug-in hybrid)
- **Vehicles with AIRMATIC:**
 - Below 80 km/h: raises the vehicle to off-road level +1
 - When the system switches to **C** or **H** (plug-in hybrid): lowers the vehicle to normal level

- **Plug-in hybrid:**

- Driving in hybrid or electric mode, depending on a sufficient charge status of the high-voltage battery and the setting in the multimedia system (→ page 200)

❗ The ESP® settings in the drive programs **E** and **C** or **H**, **EL** and **B** (plug-in hybrid) are designed for stability. Therefore, choose one of these drive programs especially when transporting roof loads, in trailer operation and when the vehicle is fully loaded or fully occupied.

Depending on the drive program, the following systems will change their characteristics:

- Drive
 - Engine and transmission management
 - Active Distance Assist DISTRONIC
 - Availability of Glide mode
- ESP®
- **Vehicles with AIRMATIC:** suspension
 - Suspension and damping
 - Vehicle level (speed-dependent)

- Steering

Notes on the roof load display


Certain drive programs and ESP® settings are unsuitable for transporting a roof load.

If one of these drive programs is set or selected, the  symbol is shown as a warning. When this symbol is shown, the selected drive program is not suitable for transporting a load on the roof.

The following drive programs are affected:

- Drive program **S** **Sport**
- Drive program **I*** **Individual** with the ESP® setting Sport

Selecting the drive program

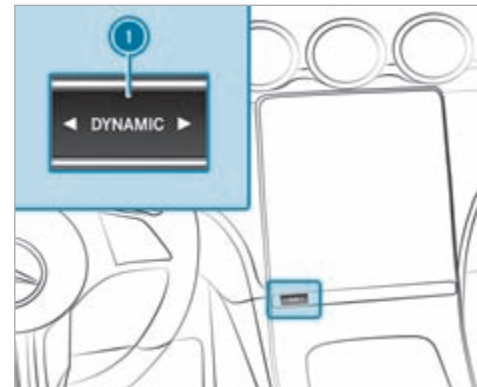

- Press the DYNAMIC SELECT button **1** on the left or right.
The drive program selected appears on the driver's display.

- ❗ In the  drive program, some driving systems are restricted in their function or not available. When selecting the  drive program, a confirmation prompt therefore appears on the central display before the drive program is activated.
- ❗ **Plug-in hybrid:** in the  drive program, you can switch between hybrid and electric mode via the multimedia system (→ page 200).

Configuring DYNAMIC SELECT (multimedia system)

Multimedia system:

 **Settings** **Vehicle**
DYNAMIC SELECT

Setting drive program I

- ▶ Select  **Individual**.
- ▶ Select and set a category.

Setting the H drive program

- ▶ Select **Hybrid**.

- ▶ Select **Route-based** or **Standard**.
 If route guidance is active and the **Route-based** option has been activated, the electrical energy is distributed intelligently over the entire route. In built-up areas, electric mode is preferred, while on the motorway the internal combustion engine is used.
 With the **Standard** option, the vehicle drives in its standard drive program ( **Electric** or  **Hybrid**). There is no distribution of electrical energy over the entire route. The high-voltage battery is exhausted and the vehicle is then driven by the combustion engine.

Switching the reset display on/off

- ▶ Activate or deactivate **Ask when starting**.
- ❗ This function must be activated for each user profile separately. Only when this function is activated will the drive program and ECO start/stop setting for the previous journey be saved for the respective user profile.
- ❗ This function must be activated for each user profile separately. The drive program for the respective user profile of the last driver is only stored if this function is activated.

Function on: the next time the vehicle is started a prompt appears asking whether the last active drive program should be restored.

Function on: the next time the vehicle is started a prompt appears asking whether the last active drive program should be restored. If the ECO start/stop function was deactivated, an additional prompt appears asking if the function should remain deactivated.

- ❗ The prompt only appears if the previously active settings deviate from the standard settings.

Function off: the next time the vehicle is started the  drive program is set automatically. The ECO start/stop function is activated automatically.

Function off: if the  drive program was the last one active, and all requirements for the drive program are fulfilled, this will be automatically selected the next time the vehicle is started. If another program was active, then the  drive program is set automatically.

Displaying vehicle data

Multimedia system:



- ▶ Select **Vehicle**.
The vehicle data is displayed.

Displaying engine data (plug-in hybrid)

Multimedia system:



- ▶ Select **Engine**.
The engine data is displayed.
- ① The actual (maximum) values that can be achieved for engine output and engine torque may deviate from the certified values within the country-specific guidelines for permissible tolerances (basis: UN-ECE No. 85 or country-specific guidelines).

Influencing variables that can influence this are, for example:

- Sea level
- Fuel quality

- Outside temperature
- Operating temperature of the engine

Adjust your driving style accordingly.

The  warning lamp in the instrument cluster is on until the engine has reached operating temperature.

- ① The values displayed serve only as orientation. The values for engine output and engine torque shown on the central display may deviate from the actual values.
- ① The  warning lamp to show the power output limitation after starting the vehicle is not available in all vehicle models.

Displaying engine data

Multimedia system:



- ▶ Select **Engine**.
The engine data is displayed.
- ① The actual (maximum) values that can be achieved for engine output and engine torque may deviate from the certified values within

the country-specific guidelines for permissible tolerances (basis: UN-ECE No. 85 or country-specific guidelines).

Influencing variables that can influence this are, for example:

- Sea level
- Fuel quality
- Outside temperature
- Operating temperature of the engine

Adjust your driving style accordingly.

The  warning lamp in the driver's display is on until the engine has reached operating temperature.

- ① The values displayed serve only as orientation. The values for engine output and engine torque shown on the central display may deviate from the actual values.
- ① The  warning lamp to show the power output limitation after starting the vehicle is not available in all vehicle models.

Calling up the fuel consumption indicator

Multimedia system:



▶ Select **Consumption**.

The current and average fuel consumption will be displayed.

Automatic transmission

DIRECT SELECT lever

Function of the DIRECT SELECT lever

⚠ WARNING Risk of accident due to incorrect gearshifting

If the engine speed is higher than the idle speed and you engage the transmission position **D** or **R**, the vehicle may accelerate sharply.

▶ If you engage the transmission position **D** or **R** when the vehicle is at a standstill, always depress the brake pedal firmly and do not accelerate at the same time.

⚠ WARNING Risk of accident and injury due to leaving children unattended in the vehicle

If children are left unattended in the vehicle, they could, in particular:


- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

In addition, the children could also set the vehicle in motion by, for example:

- releasing the parking brake.
- changing the transmission position.
- starting the vehicle.

- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.
- ▶ Keep the vehicle key out of the reach of children.

Use the DIRECT SELECT lever to switch the transmission position. The current transmission position will be shown on the driver's display.

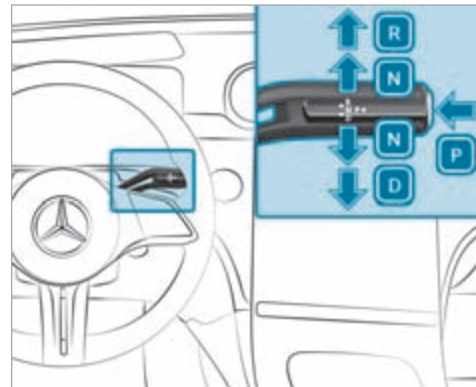

P Park position

R Reverse gear

N Neutral

D Drive position

■ Engaging reverse gear R

- ▶ Depress the brake pedal and push the DIRECT SELECT lever upwards past the first point of resistance.

■ Engaging neutral N

- ▶ Depress the brake pedal and push the DIRECT SELECT lever up or down to the first point of resistance.

- ① To shift into neutral **N** with the vehicle switched on, push the selector lever up or down for several seconds to the first point of resistance.

Subsequently releasing the brake pedal will allow you to move the vehicle freely, e.g. to push it or tow it away.

Proceed as follows if you want the automatic transmission to remain in neutral **N, even if the vehicle is switched off or the driver's door is opened:**

- ▶ Depress the brake pedal and engage neutral **N** when the vehicle is at a standstill.
- ▶ Release the brake pedal.
- ▶ Switch off the vehicle.

The **Risk of vehicle rolling away N activated manually No automatic switch to P** message appears in the driver's display.

- ① If you then exit the vehicle leaving the key in the vehicle, the automatic transmission remains in neutral **N**.

The park position **P** is automatically re-engaged as soon as one of the following conditions is met:

- You switch to transmission position **D** or **R**.
- You press the button **P**.

■ Engaging park position P

! NOTE Damage due to engaging park position **P** while the vehicle is rolling

If you shift the transmission into park position **P** while the vehicle is rolling, the transmission may be damaged.

- ▶ If the vehicle is rolling, do not open a door.
- ▶ Only engage the park position **P** when the vehicle is stationary.

- ▶ Observe the notes on parking the vehicle (→ page 231).

- ▶ Depress the brake pedal until the vehicle comes to a standstill.

- ▶ When the vehicle is at a standstill, press button **P**.

When the transmission position display shows **P**, the park position is engaged. If the transmission position display **P** does not appear, apply the parking brake and secure the vehicle to prevent it from rolling away.

- ① Depending on the situation, it may take a short time until **P** is engaged. Therefore, always pay attention to the transmission position display.

Park position **P** is engaged automatically if one of the following conditions is met:

- You switch the stationary vehicle off in transmission position **D** or **R**.
- You open the driver's door when the vehicle is at a standstill in transmission position **D** or **R**.

- When the vehicle is rolling, you switch it off in transmission position **[D]** or **[R]** and bring it to a standstill.
- You switch off the engine, bring the vehicle to a standstill and open the driver's door when the vehicle is stationary or when the vehicle is rolling and the transmission position is **[N]**.
- Engaging park position **[P]** automatically is required by the vehicle.

- i** Park position **[P]** can be engaged automatically when the vehicle is rolling very slowly.
- i** To manoeuvre with an open driver's door, open the driver's door while at a standstill and engage transmission position **[D]** or **[R]** again.

Engaging drive position D

- ▶ Depress the brake pedal and push the DIRECT SELECT lever down past the first point of resistance.


When the automatic transmission is in transmission position **[D]**, it will shift gears automatically. This depends, among other things, on the following factors:

- The selected drive program

- The position of the accelerator pedal
- The driving speed

Manual gearshifting

- i** For plug-in hybrids, observe the information regarding the regenerative brake system (→ page 193).

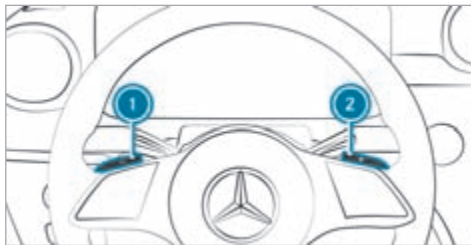

When the automatic transmission is shifted to position **[D]**, you can manually shift it with the steering wheel gearshift paddle. If permitted, the automatic transmission will shift to a higher or lower gear depending on the steering wheel gearshift paddle being pulled.

You have two options for manually shifting the automatic transmission:

- Temporary setting
- Permanent setting

The gears will shift automatically when manual shifting is deactivated.

Temporary setting:

- ▶ **To activate:** pull steering wheel gearshift paddle **①** or **②**.

Manual shifting will be activated for a short time. The transmission position display will show **[M]** and the current gear.

- i** How long manual shifting stays activated depends on various factors.

Manual shifting can be deactivated automatically in the following cases:

- When the drive program is changed
- When the vehicle is restarted
- When transmission position **[D]** is engaged again
- When the driving style prompts it

- ▶ **To shift up:** pull steering wheel gearshift paddle ②.
- ▶ **To shift down:** pull steering wheel gearshift paddle ①.
- ▶ **To deactivate:** pull and hold steering wheel gearshift paddle ②.
The transmission position display will show **D**.

① You can also activate or deactivate manual shifting permanently in the multimedia system.

Permanently activating or deactivating manual gearshifting

Multimedia system:

- ▶  ▶ Settings ▶ Vehicle ▶ Driving
- ▶ Permanently switch the function on or off.

Gearshift recommendation

The gearshift recommendation assists you in adopting an economical driving style.



- ▶ When gearshift recommendation ① appears on the driver's display, shift to the recommended gear.

Using kickdown

- ▶ **Maximum acceleration:** depress the accelerator pedal beyond the point of resistance.

To protect against engine overrev, the automatic transmission will shift up to the next gear when maximum engine speed has been reached.

Glide mode function

With an anticipatory driving style, Glide mode helps you to reduce fuel consumption.

Glide mode is characterised by the following:

- The combustion engine is disconnected from the drivetrain and continues to run in neutral.
- The transmission position display **D** is shown in green.
- The combustion engine can be switched off. All of the vehicle functions remain active.

Glide mode is activated if the following conditions are met:

- Drive program **E** is selected.
- The speed is within a suitable range.
- The road's course is suitable, e.g. no steep uphill or downhill inclines or tight bends.
- There is no trailer hitched up to the trailer hitch, and no bicycle rack fitted.
- You do not depress the accelerator or brake pedal (except for light brake applications).

① Glide mode can also be activated if you have selected the "Eco" setting for the drive in the drive program **I**.

Glide mode will be deactivated again if one of the conditions is no longer met.

Glide mode can also be prevented by the following parameters:

- Incline
- Downhill gradient
- Temperature
- Height
- Speed
- Operating status of the engine
- Traffic situation

Function of 4MATIC

4MATIC ensures that all four wheels are driven. Together with ESP® and 4ETS, 4MATIC improves the traction of your vehicle whenever a driven wheel spins due to insufficient traction.

If you fail to adapt your driving style, 4MATIC can neither reduce the risk of an accident nor override the laws of physics. 4MATIC cannot take account of road, weather and traffic conditions. 4MATIC is only an aid. You are responsible especially for

maintaining a safe distance from the vehicle in front, for vehicle speed, for braking in good time and for staying in lane.

-  In wintry road conditions, the maximum effect of 4MATIC can be achieved only if you use winter tyres (M+S tyres), with snow chains if necessary.

Refuelling

Refuelling the vehicle

 **WARNING** Risk of fire or explosion from fuel

Fuels are highly flammable.

- ▶ Fire, naked flames, smoking and creating sparks must be avoided.
- ▶ Before refuelling, switch off the vehicle and, if fitted, the stationary heater and keep switched off during filling.

 **WARNING** Risk of injury from fuels

Fuels are poisonous and hazardous to your health.

- ▶ Do not swallow fuel or let it come into contact with skin, eyes or clothing.
- ▶ Do not inhale fuel vapour.
- ▶ Keep children away from fuel.
- ▶ Keep doors and windows closed during the refuelling process.

If you or other people come into contact with fuel, observe the following:

- ▶ Immediately rinse fuel off your skin with soap and water.
- ▶ If fuel comes into contact with your eyes, immediately rinse them thoroughly with clean water. Seek medical attention immediately.
- ▶ If you swallow fuel, seek medical attention immediately. Do not induce vomiting.

- ▶ Change immediately out of clothing that has come into contact with fuel.

⚠ WARNING Risk of fire and explosion due to electrostatic charge

Electrostatic charge can ignite fuel vapour.

- ▶ Before you open the fuel filler cap or take hold of the pump nozzle, touch the metallic vehicle body.
- ▶ To avoid creating another electrostatic charge, do not get into the vehicle again during the refuelling process.

⚠ WARNING Risk of fire from fuel mixture

Vehicles with a diesel engine:

If you mix diesel fuel with petrol, the flash point of the fuel mixture is lower than that of pure diesel fuel.

While the vehicle is running, component parts in the exhaust system may overheat without warning.

- ▶ Never refuel using petrol.
- ▶ Never mix petrol with diesel fuel.

! NOTE Damage caused by the wrong fuel

Vehicles with a petrol engine:

Even small amounts of the wrong fuel could result in damage to the fuel system, the engine and the emission control system.

- ▶ Only refuel using unleaded, sulphur-free spark-ignition engine fuel that conforms to European EN 228, or an equivalent specification.

Fuel of this specification may contain up to 10% ethanol. Your vehicle is suitable for use with E10 fuel.

Never refuel with one of the following fuels:

- Diesel
- Regular petrol with an octane number lower than 91 RON

- Petrol with more than 10% ethanol by volume, e.g. E15, E20, E85, E100
- Petrol with more than 3% methanol by volume, e.g. M15, M30
- Petrol with additives containing metal

If you have accidentally refuelled with the wrong fuel:

- ▶ Do not switch on the vehicle.
- ▶ Consult a qualified specialist workshop.

! NOTE Damage caused by the wrong fuel

Vehicles with a diesel engine:

Even small amounts of the wrong fuel could result in damage to the fuel system, the engine and the emission control system.

- ▶ Only refuel using sulphur-free diesel fuel that conforms to European standard EN 590, or an equivalent specification. In countries without sulphur-free diesel fuel, refuel using only low-sulphur diesel

fuel with a sulphur content less than 50 ppm.

Never refuel with one of the following fuels:

- Petrol
- Marine diesel
- Heating oil
- Pure bio-diesel or vegetable oil
- Paraffin or kerosene

If you have accidentally refuelled with the wrong fuel:

- ▶ Do not switch on the vehicle.
- ▶ Consult a qualified specialist workshop.

! **NOTE** Do not use diesel to refuel vehicles with a petrol engine

If you have accidentally refuelled with the wrong fuel:

- Do not switch on the vehicle. Otherwise fuel can enter the engine.

Even small amounts of the wrong fuel could result in damage to the fuel system and the engine. The repair costs are high.

- ▶ Consult a qualified specialist workshop.
- ▶ Have the fuel tank and fuel lines drained completely.

! **NOTE** Do not use petrol to refuel vehicles with a diesel engine

If you have accidentally refuelled with the wrong fuel:

- Do not switch on the vehicle. Otherwise, fuel can enter the fuel system.

Even small amounts of the wrong fuel could result in damage to the fuel system and the engine. The repair costs are high.

- ▶ Consult a qualified specialist workshop.
- ▶ Have the fuel tank and fuel lines drained completely.

! **NOTE** Damage to the fuel system due to overfilling the fuel tank

- ▶ Only fill the fuel tank until the pump nozzle switches off.

If too much fuel has been added due, for example, to a faulty filling pump:

- ▶ Do not switch on the vehicle.
- ▶ Consult a qualified specialist workshop.

! **NOTE** Fuel may spray out when you remove the fuel pump nozzle


- ▶ Only fill the fuel tank until the pump nozzle switches off.

Requirements:

- The vehicle is unlocked.
- **Plug-in hybrid with petrol engine:** The fuel tank was vented before refuelling (→ page 210). This function is country-dependent.

Observe the notes on service fluids and fuel.

The recommended octane number for your vehicle can be found on the information label in the fuel filler flap.

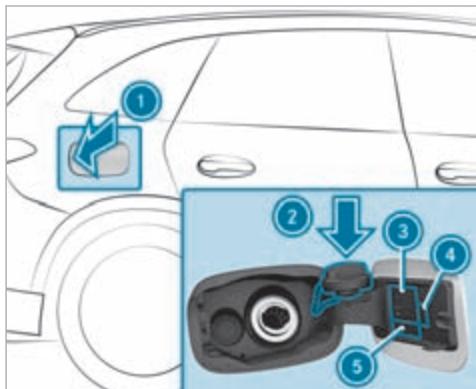

- ① Fuel filler flap
- ② Bracket for fuel filler cap
- ③ Tyre pressure table
- ④ QR code for rescue card
- ⑤ Fuel type

i Plug-in hybrid with petrol engine: The fuel filler flap opens automatically after the fuel tank has been vented (→ page 210).

- ▶ Press on the rear part of fuel filler flap ①.
- ▶ Turn the fuel filler cap anti-clockwise and remove it.
- ▶ Insert fuel filler cap from above into bracket ②.
- ▶ Completely insert the pump nozzle into the tank filler neck, hook in place and refuel.
- ▶ Only fill the fuel tank until the pump nozzle switches off.

i Vehicles with diesel engine: The tank filler neck is designed for refuelling at diesel filling pumps. Your vehicle is equipped with an incorrect fuelling protection system to prevent filling up with the wrong fuel. This function may be deactivated in some countries due to local circumstances. For more information, consult a Mercedes-Benz service centre.


i Vehicles with diesel engine: Refuel with at least 5 litres of diesel if the fuel tank has been run dry completely.

i Vehicles with diesel engine: Use a filler neck with a large diameter for vehicles with diesel engine when topping up fuel from a fuel can. Otherwise, the filler neck cannot be pushed into the tank shaft.

Your vehicle is equipped with an incorrect fuelling protection system to prevent filling up with the wrong fuel. This function may be deactivated in some countries due to local circumstances. For more information, consult a Mercedes-Benz service centre.

- ▶ Replace the cap on the filler neck and turn clockwise until it engages audibly.
- ▶ Close fuel filler flap ①.

Depressurising the fuel tank (plug-in hybrid with petrol engine)

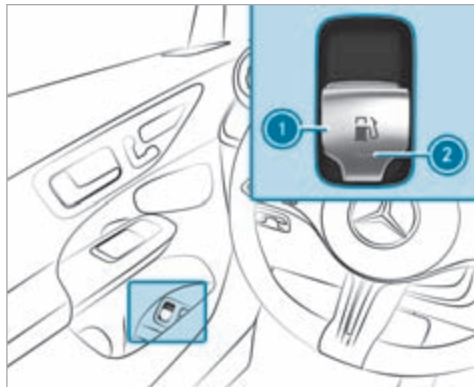

- ▶ Pull switch ① once briefly. Indicator lamp ② will flash and the **Please wait Depressurising fuel tank** message will appear on the driver's display. When the fuel tank is depressurised, indicator lamp ② will light up continuously.

The **Fuel tank is depressurised Ready for refuelling** message will appear on the driver's display and the fuel filler flap will open automatically.

- ① Depressurising the fuel tank may take several minutes.

The fuel tank can be depressurised only if the conditions described above are fulfilled. Otherwise, drive the vehicle at least 0.5 km and repeat the process.

- ① In the following situations, there is a malfunction:
 - Indicator lamp ② flashes initially and then goes out.
 - The yellow engine diagnostics warning lamp  lights up.

! **NOTE** Damage to the fuel filler flap when opening it

If an attempt is made to open a fuel filler flap that is not unlocked, the fuel filler flap or the opening mechanism may be damaged.

- ▶ Only refuel when the fuel filler flap has opened automatically.

AdBlue® (vehicles with a diesel engine only)

■ Notes on topping up AdBlue®

AdBlue® is a water-soluble fluid for the NOx exhaust gas aftertreatment of diesel engines. In order for the exhaust gas aftertreatment to function properly, only use AdBlue® in accordance with ISO 22241.

AdBlue® is characterised by the following:

- non-toxic
- colourless and odourless
- non-flammable

If you open the AdBlue® tank, small amounts of ammonia vapour may be released. Only fill the AdBlue® tank in well-ventilated areas.

Do not let AdBlue® come into contact with skin, eyes or clothes. Keep AdBlue® away from children.

Do not ingest AdBlue®. If AdBlue® is swallowed, immediately rinse your mouth out thoroughly. Drink plenty of water. Seek medical attention at once.

Observe the notes on operating fluids (→ page 441).

AdBlue® is available here:

- AdBlue® can be topped up by fast service at a qualified specialist workshop, e.g. a Mercedes-Benz Service Centre.
 - AdBlue® is available at many filling stations from AdBlue® filling pumps.
 - Alternatively, AdBlue® is available at qualified specialist workshops, e.g. Mercedes-Benz Service Centres, and at many filling stations in AdBlue® refill canisters or AdBlue® refill bottles.
- i** Ensure the connection between the refill container and vehicle filler neck does not drip.

Refilling AdBlue®

! **NOTE** Engine damage due to AdBlue® being in the fuel

- ▶ AdBlue® must not be used to fill the fuel tank.
- ▶ Only use AdBlue® to fill the AdBlue® tank.
- ▶ Do not overfill the AdBlue® tank.

! **NOTE** Contamination of the vehicle interior due to AdBlue® leakage

- ▶ After topping up, carefully close the AdBlue® refill container.
- ▶ Avoid carrying AdBlue® refill containers permanently in the vehicle.

Requirements:

- The vehicle is unlocked.

The following messages appear in order in the driver's display when the AdBlue® tank requires refilling:

- **Refill AdBlue See Owner's Manual**The AdBlue® has fallen below the reserve level. Refill AdBlue® immediately.
- **Top up AdBlue Emergency op. in XXX km See Owner's Manual**The low AdBlue® level will lead to limited performance after the remaining distance displayed has been driven. Refill AdBlue® immediately.
- **Top up AdBlue XX,X l Emerg. op.: max. XXX km/h Start not poss. in XXX km**The low AdBlue® level will lead to limited performance from the speed displayed. After the remaining distance displayed has been covered, it will no longer be possible to start the vehicle. Refill at least the indicated amount of AdBlue®.
- **Top up AdBlue XX,X l Switch vehicle on, wait 60 sec. or engine start not poss.**The AdBlue® tank is empty. You can no longer start the vehicle. Refill at least the indicated amount of AdBlue®. Switch on the vehicle and wait for approximately 60 seconds. Start the vehicle.


Plug-in hybrid:

The following messages appear in order in the driver's display when the AdBlue® tank requires refilling:

- **Refill AdBlue See Owner's Manual**The AdBlue® has fallen below the reserve level. Refill AdBlue® immediately.
- **Top up AdBlue In XXX km Electric only. See Owner's Manual**The low AdBlue® level will result in the combustion engine being switched off after the displayed remaining distance has been driven. From this point on, the vehicle can only be driven in all-electric mode, depending on the state of charge of the high-voltage battery. Refill AdBlue® immediately.
- **XX,X l Top up AdBlue Only "Electric" available See Owner's Manual**The AdBlue® tank is empty. The vehicle can only be driven in all-electric mode, depending on the state of charge of the high-voltage battery. Refill at least the indicated amount of AdBlue®. Switch on the vehicle and wait for approximately 60 seconds. Start the vehicle.

You can see the AdBlue® range and level in the **Service** menu in the driver's display.


- ❗ The AdBlue® range shown depends strongly on the driving style and operating conditions. The actual range can therefore deviate from the calculated range.

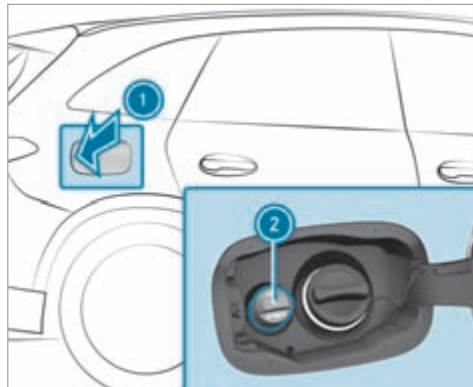Opening the AdBlue® filler cap

- ▶ Press on the rear area of the fuel filler flap ❶.
- ▶ Turn AdBlue® filler cap ❷ anti-clockwise and remove it.
- ❗ You can also store the AdBlue® filler cap in the fuel filler cap holder in the fuel filler flap hinge arm.

Refilling AdBlue®

Mercedes-Benz recommends refilling AdBlue® at a filling pump. If no AdBlue® filling pump is available, you can also top up AdBlue® using a canister.

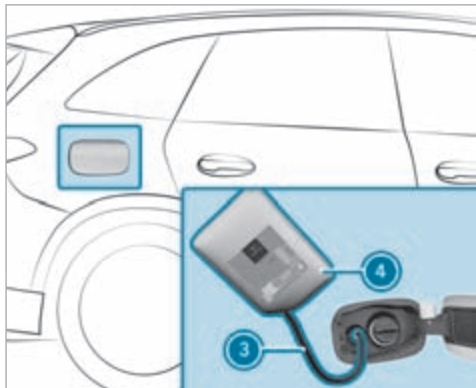

- ▶ Screw on the fastener of AdBlue® refill canister ④.
- ▶ Screw the disposable hose ③ onto the opening of AdBlue® refill canister ④ until hand-tight.
- ▶ Screw the disposable hose ③ onto the filler neck of the vehicle until hand-tight.

- ▶ Lift up and tip AdBlue® refill canister ④. The filling process stops when the AdBlue® tank is completely full.

AdBlue® refill canister ④ can be removed when it has been only partially emptied.

- ▶ Unscrew and close the disposable hose ③ and AdBlue® refill canister ④ in reverse order.
- ▶ Replace AdBlue® filler cap ② and turn it clockwise until it audibly engages.
- ▶ Close fuel filler flap ①.
- ▶ Switch on the vehicle for at least 60 seconds.

ⓘ If the vehicle could not be started as the AdBlue® tank was empty, it can take up to 60 seconds for the refill to be detected.

- ▶ Start the vehicle.

ⓘ Avoid storing AdBlue® refill containers permanently in the vehicle.

Charging the high-voltage battery (plug-in hybrid)

Notes on charging the high-voltage battery

! **NOTE** High-voltage battery damage due to leaving the vehicle idle for lengthy periods of time

Lithium-ion batteries experience a natural self-discharge.

Exhaustive discharging can therefore occur if the vehicle is idle for several months. This can damage the high-voltage battery.

▶ To avoid damage, please observe the following recommendations when handling the high-voltage battery.

! **NOTE** Accelerated ageing of the high-voltage battery due to not observing the following recommendations

As a result of its basic characteristics, the storage capacity of and the amount of energy available from the high-voltage battery decrea-

ses over the course of its life. Due to this, both the maximum electrical range that can be achieved by the vehicle and its maximum electrical output can be impaired.

The following factors could accelerate the ageing of the high-voltage battery:

- a high level of charge, especially if the vehicle is idle for a lengthy period of time
- frequent rapid charging with direct current (mode 4)
- leaving the vehicle idle for lengthy periods at high ambient temperatures

► To avoid accelerated ageing, please observe the following recommendations when handling the high-voltage battery.

Recommendations when handling the high-voltage battery:

- Only charge the high-voltage battery with direct current (mode 4) if necessary.
- If leaving the vehicle idle for lengthy periods, park up the vehicle with a high-voltage battery charge level between 25% and 30%. Do not


keep the high-voltage battery continuously connected to power supply equipment.

- If leaving the vehicle idle for lengthy periods of time avoid, if possible, high ambient temperatures.
- Check the high-voltage battery's charge level every six weeks (→ page 231).
- Charge the high-voltage battery if the charge level is below 15%.
- Do not disconnect the 12 V battery even if the vehicle is left idle for a lengthy period. Otherwise, the condition of the vehicle's high-voltage battery cannot be monitored.


Depending on the equipment and national version, your vehicle is equipped with one of the following vehicle sockets:

- Type 1 for charging with alternating current (mode 2/3)
- Type Combo 1 for charging with alternating current (mode 2/3) and charging with direct current (mode 4)
- Type 2 for charging with alternating current (mode 2/3)

- Type Combo 2 for charging with alternating current (mode 2/3) and charging with direct current (mode 4)

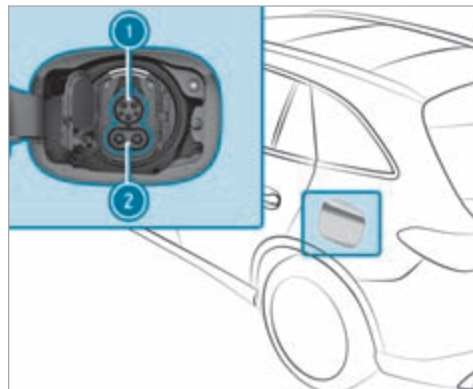

Combo 1 vehicle socket

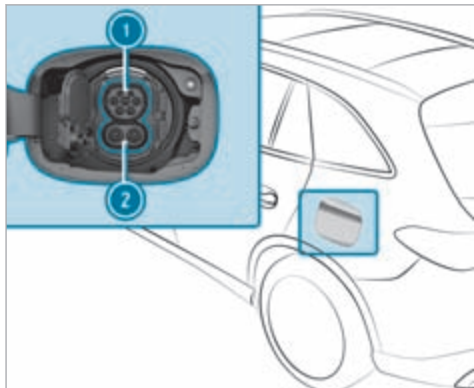

Combo 2 vehicle socket

- ① Type 1 or type 2 connection for charging with alternating current
- ② Socket extension for charging with direct current
- i When using a CCS (Combined Charging System) charging cable to charge with direct current at a combo vehicle socket, both vehicle

socket connections ① and ② are used for charging.

Charging options for the high-voltage battery (mode 2, 3 or 4):

- Charging through recuperation while the vehicle is in motion
- Charging with alternating current when stationary:
 - at a mains socket (mode 2)
 - at a wallbox or charging station (mode 3)
- Charging with direct current when stationary (vehicles with combo vehicle sockets):
 - at a rapid charging station (mode 4)

Depending on the country-specific vehicle equipment and your vehicle's charging cable, single phase AC charging is also possible.

Observe the different grid requirements of your current location when charging. Only use charging cables which conform to the grid requirements. Consult a qualified electrician or your local grid operator if you have any questions.

It is recommended that you charge the high-voltage battery at a wallbox or charging station due to the improved charging performance and better charging efficiency offered.

System limits

The power output of the high-voltage battery may be impaired by the following:

- High or low outside temperatures
- Electrical auxiliary consumers in the vehicle being switched on, e.g. operating the air conditioning system
- Extended periods without charging

The charging time of the high-voltage battery may be increased by the following:

- High or low outside temperatures
- Extended periods without charging
- The maximum available charge current of the charging facility


Stowing the charging cable

Always stow the vehicle's charging cable in the charging cable bag provided, and secure the charging cable bag in the boot or load compartment with the included retaining strap. Otherwise, the charging cable bag with the charging cable is not sufficiently secured.



Example: charging cable bag in the boot/load compartment

As delivered, charging cable bag ① with retaining strap ② is located in the boot or load compartment. To secure the charging cable bag, the retaining strap must be attached to tie-down eye ③. Do not use bag hooks to attach the retaining strap.

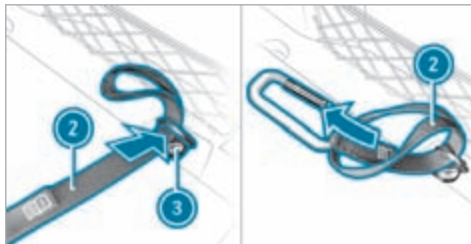

- ▶ Feed the loop end of retaining strap ② through tie-down eye ③ into the boot or load compartment.
- ▶ Feed the end with the snap hook through the loop of retaining strap ②.



- ▶ Tighten retaining strap ② so that the knot around tie-down eye ③ is tight and secure.
- ▶ Hook the snap hook of retaining strap ② in a tie-down eye of charging cable bag ①.

Notes on charging the high-voltage battery at the mains socket (mode 2)

⚠ DANGER Risk of fatal injury from incorrectly installed component parts

Connecting the charging cable to a mains socket using incorrectly installed component parts could cause a fire or an electric shock, for example.

- ▶ Only connect the charging cable to a mains socket that:
 - Has been properly installed and
 - Has been inspected by a qualified electrician
- ▶ For safety reasons, only use the charging cable supplied with the vehicle or an original Mercedes-Benz charging cable.
- ▶ Purchase these parts at a Mercedes-Benz Service Centre and obtain advice there.

Mercedes-Benz thoroughly tests these original charging cables for their suitability for high-voltage charging of your vehicle.

- ▶ Never use a damaged charging cable.
- ▶ Do not use:
 - Extension cables
 - Extension reels
 - Multiple sockets
- ▶ Never use socket adapters to connect the charging cable to the mains socket. The only exception being if the adapter has been tested and approved by the manufacturer for charging the high-voltage battery of an electric vehicle.
- ▶ Observe the safety notes in the operating instructions for the socket adapter.

Only the following charging cables may be used:

- The charging cable supplied with the vehicle.
- A charging cable that has been approved for the vehicle.

The charging process can vary depending on the power supply equipment. The charging times when charging the high-voltage battery at the mains socket are considerably longer than when charging at a wallbox or charging station.

When doing so, always observe the local information.

Do not leave the charging cable controls hanging loose from a mains socket.

Do not lift the controls by the following component parts:

- the charging cable connector
- the mains plug

When charging, protect the charging cable control element from excessive heat such as direct sunlight. Otherwise, the charging process may be cancelled.

Notes on charging the high-voltage battery at a wallbox or charging station (mode 3)

DANGER Risk of fatal injury from incorrectly installed component parts

Connecting the charging cable to a wallbox using incorrectly installed component parts could cause a fire or an electric shock, for example.

- ▶ Only connect the charging cable to a wallbox that:
 - Has been properly installed and
 - Has been inspected by a qualified electrician
- ▶ For safety reasons, only use charging cables that have been tested and approved by the manufacturer for charging the high-voltage battery in an electric vehicle.
- ▶ Never use damaged charging cables.
- ▶ Do not extend the charging cable.
- ▶ Do not use adapters.

- ▶ Observe the safety notes in the operating instructions for the wallbox.

If charging at a wallbox without pre-installed cable, use the optionally available charging cable for wallbox and charging station (mode 3). The charging cable is stowed in a bag in the boot/luggage compartment.

Only use charging cables that have been tested and approved by the manufacturer for charging the high-voltage battery in an electric vehicle.

DANGER Risk of fatal injuries due to damaged components

Connecting the charging cable to a charging station using a damaged component part could cause a fire or an electric shock, for example.

- ▶ For charging stations with a preinstalled charging cable:
 - Perform a visual check of the charging station for obvious faults, such as massive damage to the housing or charging cable.

- ▶ For charging stations without a preinstalled charging cable:

- For safety reasons, only use charging cables that have been tested and approved by the manufacturer for charging the high-voltage battery in an electric vehicle.
- Never use damaged charging cables.
- Do not extend the charging cable.
- Do not use adapters.

- ▶ Make sure to observe the safety information on the charging station.

Most charging stations must be activated before the charging process, e.g. using an RFID card. Observe the on-site operator's instructions for the charging station.

The amount of energy dispensed for the charging process, shown by the charging station, may be higher than the amount of energy actually absorbed by the high-voltage battery. This is the result of different levels of charging losses and is described as recharge efficiency. Charging losses occur, for example, due to heat that builds up when the

vehicle is charging or from auxiliary consumers that are switched on. Further information on recharge efficiency can be obtained at a qualified specialist workshop.

Notes on charging the high-voltage battery at a rapid charging station (mode 4)

⚠ DANGER Risk of fatal injuries due to damaged components

Connecting the charging cable to a charging station using a damaged component part could cause a fire or an electric shock, for example.

- ▶ For charging stations with a preinstalled charging cable:
 - Perform a visual check of the charging station for obvious faults, such as massive damage to the housing or charging cable.
- ▶ For charging stations without a preinstalled charging cable:
 - For safety reasons, only use charging cables that have been tested and

approved by the manufacturer for charging the high-voltage battery in an electric vehicle.

- Never use damaged charging cables.
 - Do not extend the charging cable.
 - Do not use adapters.
- ▶ Make sure to observe the safety information on the charging station.

⚠ DANGER Risk of fatal injuries when carrying out maintenance work during the charging process

During the charging process, the high-voltage on-board electrical system is under high voltage.

- ▶ Do not perform any maintenance work during the charging process.

Most charging stations must be activated before the charging process, e.g. using an RFID card. Observe the on-site operator's instructions for the charging station.

The charging cable for the vehicle must not be longer than 30 m due to the legal requirements in some countries. This is to prevent the interference of signals being received by radio communication devices in the vehicle or in close proximity to the charging station. Be aware that parts of the charging cable may be routed underground. If in doubt, ask the charging station operator if this is the case before charging the high-voltage battery.

The amount of energy dispensed for the charging process, shown by the charging station, may be higher than the amount of energy actually absorbed by the high-voltage battery. This is the result of different levels of charging losses and is described as recharge efficiency. Charging losses occur, for example, due to heat that builds up when the vehicle is charging or from auxiliary consumers that are switched on. Further information on recharge efficiency can be obtained at a qualified specialist workshop.

Setting the maximum permissible charging current for charging at a mains socket

! **NOTE** Overloading the mains socket due to excessive charging current

If the charging current is too high, the fuse could be tripped or the external mains supply could overheat.

- ▶ Ensure that the external mains supply has been designed to handle the charging current provided.
- ▶ For safety reasons, only use the charging cable supplied with the vehicle or an original Mercedes-Benz charging cable. Mercedes-Benz thoroughly tests these original charging cables for their suitability for high-voltage charging of your vehicle.
- ▶ Purchase these parts at a Mercedes-Benz Service Centre and obtain advice there.

▶ Check the maximum charging current using the charging capacity shown in the driver's display.

The charging cable supplied is set to a country-specific maximum charging current value. When charging abroad, the maximum value may exceed the permitted value for that country.

- ▶ Before charging at a mains socket, have the maximum permissible charging current for the relevant mains socket or the building inspected by a qualified electrician.
- ▶ When abroad, observe the country-specific laws when charging.

If you have questions concerning the charging current or if there is a malfunction, please contact a qualified specialist workshop.

Overview of the charging cable control panel

The charging cable control panel shows the current status of the charging process.



- ① Supply voltage indicator
- ② Charging process indicator
- ③ Temperature monitor indicator
- ④ Safety system indicator

Supply voltage indicator ①

Display	Meaning
Lights up white	The supply voltage is connected.

Charging process indicator ②

Display	Meaning
Flashes green	The high-voltage battery is charging.

Temperature control indicator ③

Display	Meaning
Lights up red	The green LED flashes simultaneously: over-temperature – the charging performance is reduced. The green LED does not flash: overtemperature – the charging process is stopped.
Flashes red	Overtemperature at the mains plug – the charging process is stopped.

Safety system indicator ④

Display	Meaning
Flashes red	Charging cable malfunction – cannot carry out the charging process, reset the charging cable operating unit.
Lights up red	White LED is off: power supply malfunction – cannot carry out the charging process, replace the mains socket. White LED is on: vehicle malfunction – cannot carry out the charging process, reset the charging cable operating unit.

When all four displays light up, the charging cable operating unit performs a self-test.


If temperature monitor ③ indicates a malfunction, it may help to protect the charging cable from direct sunlight.

To reset the charging cable operating unit: if safety system ④ indicates a charging cable malfunction or a vehicle malfunction, first reset the charging cable operating unit. To do this, disconnect the charging cable from the vehicle and from the mains socket and wait for approximately five seconds. If the malfunction persists after the charging cable is reconnected, charging at the mains socket is not possible. The charging cable must be replaced or the vehicle plug must be checked at a qualified specialist workshop, depending on the indicator.

Functions of the indicator lamps on the vehicle socket


① Depending on the national version, your vehicle is equipped with one of the following vehicle sockets.

The socket flap is centrally locked and unlocked together with the vehicle.

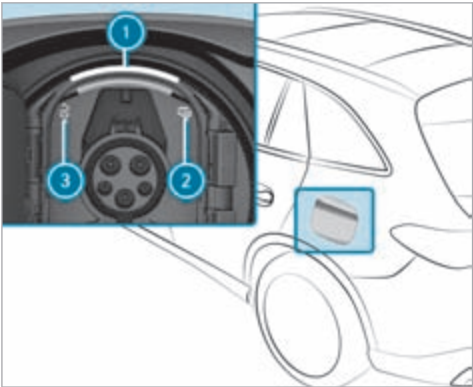

Combo 1 vehicle socket

- 1 Socket lamp
- 2 Charging process indicator lamp
- 3 Locking status indicator lamp

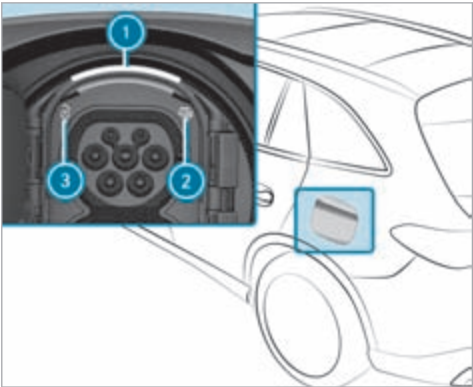

Combo 2 vehicle socket

- 1 Socket lamp
- 2 Charging process indicator lamp
- 3 Locking status indicator lamp

The upper arch of socket lamp 1 is used for the lighting and flashes or lights up as with indicator lamp 3. The lower arch is used for the status

display and flashes or lights up as with indicator lamp 2.

Overview of the locking status

Locking status 3	Display	Meaning
	Lights up white	Vehicle socket unlocked, insert or remove charging cable
	Flashes white	Malfunction during locking or unlocking

Overview of the charging process status

Status of the charging process ②	Display	Meaning
	Flashes orange	Connection is being established
	Flashes green	Active energy flow
	Lights up orange	Interruption in charging
	Lights up green	Charging process completed
	Flashes red (for approx. 90 s)	Vehicle malfunction; charging is not possible

Starting the alternating current charging process (mode 2/3)

⚠ DANGER Risk of death when charging at a damaged socket

The charging process uses high voltage.

If the charging cable, the vehicle socket or the mains socket are damaged, you could receive an electric shock.

- ▶ Only use an undamaged charging cable.
- ▶ Avoid mechanical damage such as crushing, abrading or driving over the cable.
- ▶ Have a damaged vehicle socket replaced at a qualified specialist workshop as soon as possible.
- ▶ Never connect the charging cable to a damaged vehicle socket.

! NOTE Damage due to overheating of charging cable and charge port

During the charging process, the charging cable and charge port can heat up within the permissible limits.

The permissible limit values are influenced by the following factors:

- the power supply system and the charging cable are not damaged
- the instructions for handling the charging cable and the control element on the charging cable have been observed
- ▶ If the charging cable or charge port becomes too hot, have the power supply system checked.

! NOTE Damaged or dirty vehicle socket when the socket flap is open

- ▶ Always keep the socket cover and the socket flap closed when there is no charging cable connected. This protects the vehicle socket from dirt and damage.

- ▶ Make sure that the socket cover is closed properly before closing the socket flap. This can otherwise result in damage which may prevent the socket flap from being opened again.

! **NOTE** Damage to the vehicle socket or the charge port due to incorrect handling

Do not use excessive force (maximum 300 N) to insert the charge port into the vehicle socket to the stop. You may otherwise damage the vehicle socket, the charge port or their contacts.

- ▶ If you feel there is increased resistance, pull the charge port out of the socket and reinsert it.


Requirements:

- The transmission is in position **P**.
- The vehicle is unlocked or the distance between the key and the vehicle does not exceed 1 m.


- The vehicle is switched off. The **READY** display in the driver's display is off.
- The charging cable is not taut.

Depending on the vehicle's equipment and on the national version, your vehicle is equipped with one of the following vehicle sockets:

- Type 1 for charging with alternating current (mode 2 or 3)
- Combo 1 for charging with alternating current (mode 2 or 3) and charging with direct current (mode 4)
- Type 2 for charging with alternating current (mode 2 or 3)
- Combo 2 for charging with alternating current (mode 2 or 3) and charging with direct current (mode 4)

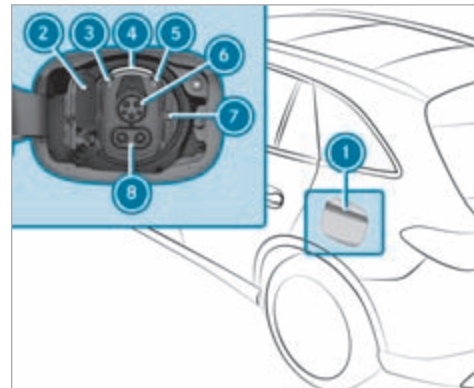

Combo 1 vehicle socket

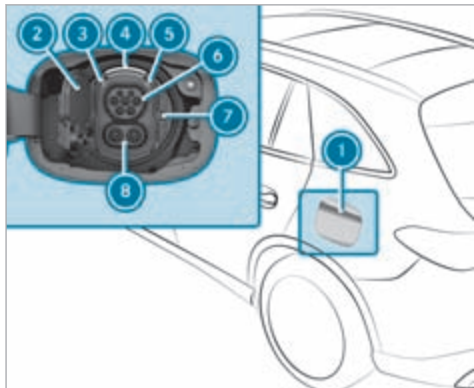

Combo 2 vehicle socket

- ▶ Press the centre rear section of socket flap ① and swing the socket flap forwards and open. The  indicator lamp ③ and upper status display ④ light up white.
- ① Socket flap ① can also be opened via the multimedia system .

When the vehicle is switched on (the READY display is lit in the driver's display), socket flap ① cannot be opened.

- ▶ Press catch ⑦ to the right and fold up socket cover ②.
 - ① Vehicles with a vehicle socket combo require only connection ⑥ for the charging cable connector. Open only the upper part of socket cover ②.
 - ▶ To charge at a mains socket, insert the mains plug into the mains socket of the external power source as far as it will go.
 - ▶ Insert the charging cable connector into vehicle socket connection ⑥ to the stop. If the wallbox/charging station is not equipped with a charging cable, insert the plug of the vehicle's charging cable into the wallbox/charging station socket to the stop. Make sure that the charging cable is not taut when inserted.
- The  indicator lamp ⑤ and lower status display ④ flash orange and, as soon as the high-voltage battery is charged, green.

- ① When the charging sequence for the ambient lighting is activated, the ambient lighting lights up for approximately 30 seconds as with the  indicator lamp ⑤ (→ page 152).

When the charging cable is connected to the vehicle, the vehicle cannot be started or moved.

At the start of the charging process, the charge level display is shown in the driver's display with a charging prediction. The charging prediction refers to the time at which the high-voltage battery will be fully charged.

- ① Depending on the temperature, the fan and battery cooling system may audibly switch on during the charging process.
- ① If the vehicle is idle for lengthy periods and connected to the mains supply, the high-voltage battery will be recharged automatically as needed or when electrical consumers are activated (e.g. the pre-entry climate control).


- i** The vehicle is equipped with an electrical fuse which protects it against overvoltage in the mains supply. This electrical fuse may trip during severe thunderstorms, for example, and may cause the fuse in the building to trip or may interrupt the charging process. These functions protect the vehicle. After the fuse in the building is switched on again, the charging process resumes automatically. Following an interruption in the power supply without the fuse in the building being tripped, it may take up to ten minutes for charging to resume automatically.

Ending the alternating current charging process (mode 2/3)

Requirements:

- The distance between the key and the vehicle does not exceed 1 m.


Combo 1 vehicle socket

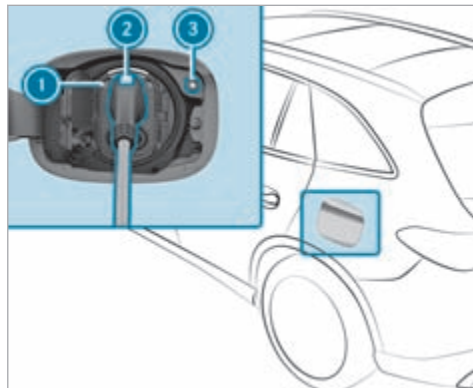

- i** Vehicles equipped with a type 1 vehicle socket for AC charging have no charging interruption button **3**.

- Combo 1 vehicle socket:** press charging interruption button **3**. The charging process is ended. The  indicator lamp **1** lights up white. The vehicle socket is unlocked.
- Type 1 vehicle socket:** unlock the vehicle. The charging process is ended. The  indicator lamp **1** lights up white. The vehicle socket is unlocked.
- Press and hold button **2** on the charging cable connector and remove the charging cable connector from the vehicle socket.
- i** If you cannot remove the charging cable connector, repeat the unlocking procedure. If the charging cable connector is still locked, contact a qualified specialist workshop.
- Close the socket cover and the socket flap.
- Remove the charging cable connector from the mains socket, or from the socket on the wallbox/charging station, and stow the vehicle's charging cable safely in the vehicle (→ page 216).

Combo 2 vehicle socket

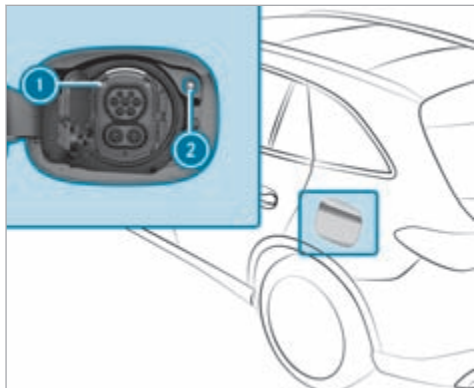

- ① Vehicles only equipped with a type 2 vehicle socket for AC charging have no charging interruption button ②.

- ▶ **Combo 2 vehicle socket:** press charging interruption button ②.
The charging process is ended. The  indicator lamp ① lights up white. The vehicle socket is unlocked.
- ▶ **Type 2 vehicle socket:** unlock the vehicle.
The charging process is ended. The  indicator lamp ① lights up white. The vehicle socket is unlocked.
- ▶ Remove the charging cable connector from the vehicle socket within 30 seconds.
After the 30 seconds have elapsed, the vehicle socket will be locked again.
- ① If you cannot remove the charging cable connector, repeat the unlocking procedure. If the charging cable connector is still locked, contact a qualified specialist workshop.
- ▶ Close the socket cover and the socket flap.
- ▶ Remove the charging cable connector from the mains socket, or from the socket on the wallbox/charging station, and stow the vehicle's charging cable safely in the vehicle (→ page 216).

- ① After the charging cable connector has been disconnected, the  indicator lamp ① on the vehicle socket remains lit for some time before switching off.

Starting the direct current charging process (mode 4)

⚠ DANGER Risk of death when charging at a damaged socket

The charging process uses high voltage.

If the charging cable, the vehicle socket or the mains socket are damaged, you could receive an electric shock.

- ▶ Only use an undamaged charging cable.
- ▶ Avoid mechanical damage such as crushing, abrading or driving over the cable.
- ▶ Have a damaged vehicle socket replaced at a qualified specialist workshop as soon as possible.
- ▶ Never connect the charging cable to a damaged vehicle socket.

! **NOTE** Damage due to overheating of charging cable and charge port

During the charging process, the charging cable and charge port can heat up within the permissible limits.

The permissible limit values are influenced by the following factors:

- the power supply system and the charging cable are not damaged
 - the instructions for handling the charging cable and the control element on the charging cable have been observed
- If the charging cable or charge port becomes too hot, have the power supply system checked.

! **NOTE** Damaged or dirty vehicle socket when the socket flap is open

- Always keep the socket cover and the socket flap closed when there is no charging cable connected. This protects the vehicle socket from dirt and damage.

- Make sure that the socket cover is closed properly before closing the socket flap. This can otherwise result in damage which may prevent the socket flap from being opened again.

! **NOTE** Damage to the vehicle socket or the charge port due to incorrect handling

Do not use excessive force (maximum 300 N) to insert the charge port into the vehicle socket to the stop. You may otherwise damage the vehicle socket, the charge port or their contacts.


- If you feel there is increased resistance, pull the charge port out of the socket and reinsert it.

Requirements:


- The transmission is in position **P**.
- The vehicle is unlocked or the distance between the key and the vehicle does not exceed 1 m.

- The vehicle is not switched on. The **READY** display in the driver's display is off.
- The charging cable is not taut.

i Depending on the national version, the vehicle is equipped with one of the following vehicle sockets.

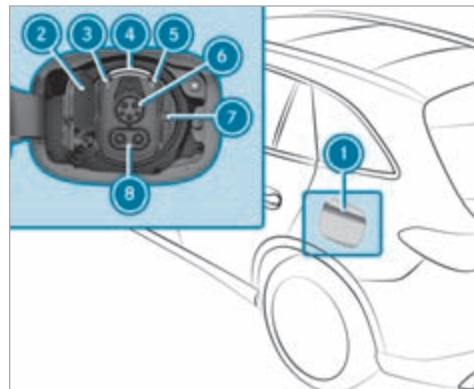

Combo 1 vehicle socket

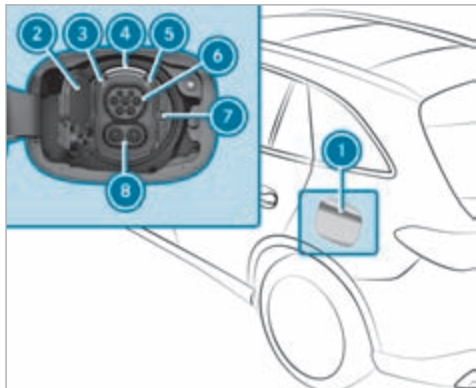

Combo 2 vehicle socket

- ▶ Press the centre rear section of socket flap ① and swing the socket flap forwards and open.
The  indicator lamp ③ and upper status display ④ light up white.
- ① Socket flap ① can also be opened via the multimedia system .

When the vehicle is switched on (the READY display is lit in the driver's display), socket flap ① cannot be opened.

- ▶ Press catch ⑦ to the right and fold up socket cover ②.
- ① The CCS charging cable connector requires connections ⑥ and ⑧. Therefore, it is necessary to open both parts of socket cover ②.

- ▶ Insert the CCS charging cable connector into the vehicle socket to the stop.
Make sure that the charging cable is not taut when inserted.

The  indicator lamp ⑤ and lower status display ④ flash orange and, as soon as the high-voltage battery is charged, green.

- ① When the charging sequence for the ambient lighting is activated, the ambient lighting lights up for approximately 30 seconds as with the  indicator lamp ⑤ (→ page 152).

When the charging cable is connected to the vehicle, the vehicle cannot be started or moved.

At the start of the charging process, the charge level display is shown in the driver's display with a


charging prediction. The charging prediction refers to the time at which the high-voltage battery will be fully charged.

- ① Depending on the temperature, the fan and battery cooling system may audibly switch on during the charging process.
- ① If the vehicle is idle for lengthy periods and connected to the mains supply, the high-voltage battery will be recharged automatically as needed or when electrical consumers are activated (e.g. the pre-entry climate control).

Ending the direct current charging process (mode 4)

Requirements:


- The distance between the key and the vehicle does not exceed 1 m.

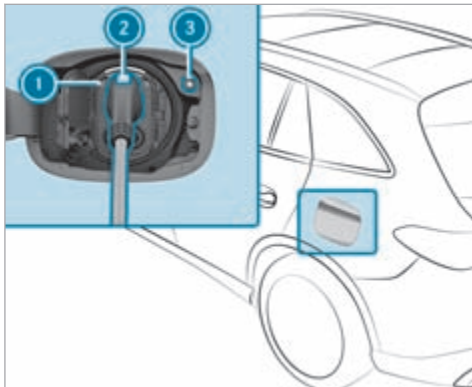Combo 1 vehicle socket

- ▶ Press charging interruption button ③. The charging process is ended. The  indicator lamp ① lights up white. The vehicle socket is unlocked.
- ▶ Press and hold button ② on the charging cable connector and remove the charging cable connector from the vehicle socket.

- ❗ If you cannot remove the charging cable connector, unlock the vehicle and repeat the procedure. If the charging cable connector is still locked, contact a qualified specialist workshop.

- ▶ Close the socket cover and the socket flap.

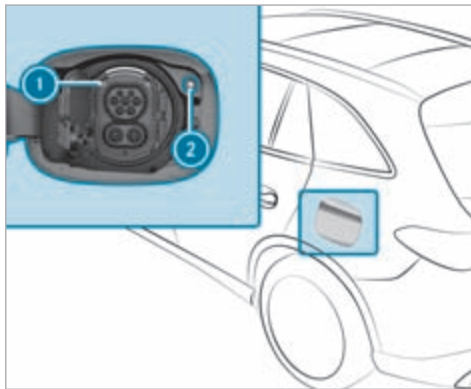Combo 2 vehicle socket

- ▶ Press charging interruption button ②. The charging process is ended. The  indicator lamp ① lights up white. The vehicle socket is unlocked.
- ▶ Remove the charging cable connector from the vehicle socket.
- ❗ If you cannot remove the charging cable connector, unlock the vehicle and repeat the procedure. If the charging cable connector is still locked, contact a qualified specialist workshop.
- ▶ Close the socket cover and the socket flap.
- ❗ After the charging cable connector has been disconnected, the left  indicator lamp ① on the vehicle socket remains lit for some time before switching off.

Function of the charge level display in the driver's display



- ① Range at current charge level
- ② Current state of charge of the high-voltage battery
- ③ Maximum state of charge (depending on the setting)
- ④ Time remaining until completely charged (until the selected maximum charge level is reached)
- ⑤ Dynamic charge level display
- ⑥ Current charging capacity

- ① Specified remaining range ① may vary due to different factors, e.g. driving style or topography.

When the vehicle is connected to the mains supply and is switched off, the driver's display shows the charge level display for approximately two minutes.

- ① The value of current charging capacity ⑥ can differ from the display on the charging station.

Parking

Parking the vehicle

- ⚠ WARNING** Risk of accident and injury caused by an insufficiently secured vehicle rolling away

If the vehicle is not securely parked sufficiently, it can roll away in an uncontrolled way even at a slight downhill gradient.

- ▶ On uphill or downhill gradients, turn the front wheels so that the vehicle rolls towards the kerb if it starts moving.

- ▶ apply the parking brake.
- ▶ Switch the transmission to position **P**.

- ⚠ WARNING** Risk of fire caused by hot exhaust system parts

Flammable materials such as leaves, grass or twigs may ignite.

- ▶ Park the vehicle so that no flammable material can come into contact with hot vehicle components.
- ▶ In particular, do not park on dry grass-land or harvested grain fields.

- ⚠ WARNING** Risk of accident and injury due to leaving children unattended in the vehicle

If children are left unattended in the vehicle, they could, in particular:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.

- operate vehicle equipment and become trapped, for example.

In addition, the children could also set the vehicle in motion by, for example:

- releasing the parking brake.
- changing the transmission position.
- starting the vehicle.

- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.
- ▶ Keep the vehicle key out of the reach of children.


! **NOTE** Damage to the vehicle due to it rolling away

- ▶ Always secure the vehicle against rolling away.

! **NOTE** Damage caused by vehicle being lowered

Vehicles AIRMATIC: The vehicle can be lowered due to differences in temperature or extended non-operational times. This can cause damage to parts of the body.

- ▶ When stopping the vehicle and when driving off, make sure that there are no obstacles such as kerbs under or in the immediate vicinity of the body.

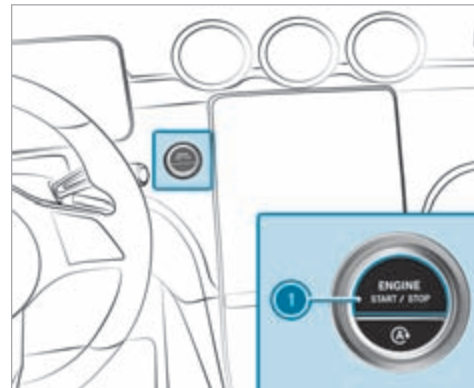

- ▶ Bring the vehicle to a standstill by depressing the brake pedal.
- ▶ On gradients, turn the front wheels so that the vehicle will roll towards the kerb if it starts moving.
- ▶ Apply the electric parking brake.

- ▶ Engage transmission position **P** in a stationary vehicle with the brake pedal depressed (→ page 203).
- ▶ Switch off the vehicle by pressing button **1**.
- ▶ Release the service brake slowly.
- ▶ Get out of the vehicle and lock it.

i When you park the vehicle, you can still operate the side windows and the panoramic sliding sunroof for approximately four minutes if the driver's door is closed.

Automatic shut-off function of the vehicle

If you leave the engine running and leave the vehicle, the driver's display will show the **Vehicle is ready to drive Shutdown occurs when locked or automatically in XX mins** display message.

The vehicle will then switch off automatically after 20 minutes.

If you leave the engine running and remain in the vehicle while it is in park position **P**, the **Vehicle is ready to drive Shutdown occurs when locked or automatically in XX mins** display message will appear on the driver's display after ten minutes.

The vehicle will be switched off automatically after a further ten minutes.

i To avoid automatic switch-off, acknowledge the message on the central display of the multimedia system.

Electric parking brake

Function of the electric parking brake (applying automatically)

⚠ WARNING Risk of accident and injury due to leaving children unattended in the vehicle

If children are left unattended in the vehicle, they could, in particular:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

In addition, the children could also set the vehicle in motion by, for example:

- releasing the parking brake.
- changing the transmission position.
- starting the vehicle.

- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.
- ▶ Keep the vehicle key out of the reach of children.

The electric parking brake is applied if the transmission is in position **P and one of the following conditions is fulfilled:**

- The vehicle is switched off.
 - The seat belt tongue is not inserted in the seat belt buckle of the driver's seat and the driver's door is opened.
- i** To prevent application: pull the handle of the electric parking brake (→ page 234).

In the following situations, the electric parking brake is also applied:

- The HOLD function is keeping the vehicle stationary.
- Active Parking Assist is keeping the vehicle stationary.
- Active Distance Assist DISTRONIC is bringing the vehicle to a standstill.
- **In addition, one of the following conditions must be fulfilled:**
 - The vehicle is switched off.
 - The seat belt tongue is not inserted in the seat belt buckle of the driver's seat and the driver's door is opened.
 - There is a system malfunction.
 - The power supply is insufficient.
 - The vehicle is stationary for a lengthy period.

When the electric parking brake is applied, the red  indicator lamp lights up in the driver's display.

-  The electric parking brake is not automatically applied if the vehicle is switched off by the ECO start/stop function.

Function of the electric parking brake (releasing automatically)

The electric parking brake is released when the following conditions are fulfilled:

- The driver's door is closed.
- The vehicle has been started.
- The transmission is in position  or  and you depress the accelerator pedal or you shift from transmission position  to  or  when on level ground.
- If the transmission is in position , the tail-gate must be closed.
- The seat belt tongue is inserted into the seat belt buckle of the driver's seat.

If the seat belt tongue is not inserted into the seat belt buckle of the driver's seat, one of the following conditions must be fulfilled:


- You shift from transmission position .
- or

- You have previously driven at speeds greater than 3 km/h.

When the electric parking brake is released, the red  indicator lamp in the driver's display goes out.

Applying/releasing the electric parking brake manually

Applying

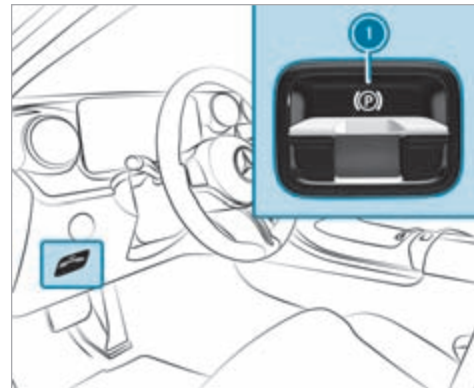

- ▶ Push handle ①.
The red  indicator lamp lights up in the driver's display.
- ① The electric parking brake is only securely applied if the red  indicator lamp is lit continuously.

Releasing

- ▶ Switch on the vehicle.
- ▶ Pull handle ①.
The red  indicator lamp in the driver's display goes out.

Emergency braking

- ▶ Press and hold handle ①.
As long as the vehicle is in motion, the **Release parking brake** message is displayed and the red  indicator lamp flashes.
When the vehicle has been braked to a standstill, the electric parking brake is applied. The red  indicator lamp lights up in the driver's display.

Information on collision detection on a parked vehicle

If a collision is detected when the tow-away protection is primed on a locked vehicle, you will receive a notification in the multimedia system when you switch the vehicle on.

You will receive information about the following points:

- The area of the vehicle that may have been damaged.
- The force of the impact.

The following situation can lead to inadvertent activation:

- The parked vehicle is moved, foreexample, in a two-storey garage.
- ① Deactivate tow-away protection in order to prevent inadvertent activation. If you deactivate tow-away protection, collision detection will also be deactivated.
You can permanently deactivate collision detection via the multimedia system (→ page 235).

System limits

Detection may be restricted in the following situations:

- the vehicle is damaged without impact, foreexample, if an outside mirror is torn off or the paint is damaged by a key
- an impact occurs at low speed
- the electric parking brake is not applied
- ① You are responsible for your vehicle. Therefore, always make sure that your vehicle is free of damage and is roadworthy.

Setting collision detection on a parked vehicle

Multimedia system:

→  » Settings » Vehicle
» Open/close » Vehicle protection

- ▶ Activate or deactivate the function via **Collision notification**.

- ❗ A maximum of three incidents can be registered. Up to 15 photos are taken for every incident. In the event of another incident, the photos of the first incident will be overwritten if they have not been deleted already.

Activating or deactivating the collision photos function

Note possible legal restrictions in some countries regarding automatic recording of the vehicle surroundings.

- ▶ Activate or deactivate **Take photos**.

Transferring the collision photos with the Mercedes me App

- ▶ Select **Upload to Mercedes me**.
- ▶ Select **Upload automatically**.
- ▶ Scan the generated QR code on the central display with the Mercedes me App. The encrypted collision photos will then be uploaded to Mercedes me.
- ❗ Any device that can scan QR codes can be used to view the collision photos in the Mercedes me App.

Copying the collision photos to a USB flash drive

- ▶ Connect a USB flash drive .
- ▶ Select **Manage collision photos**.
- ▶ Select **Copy (USB)**.
All collision photos are copied to the USB flash drive.
- ❗ To ensure secure operation, only use with FAT32 or exFAT formatted USB storage devices.

Deleting collision photos

- ▶ Select **Manage collision photos**.
- ▶ Select **Delete**.
All collision photos will be deleted.

Notes on parking up the vehicle

If you leave the vehicle parked up for longer than six weeks, it may suffer damage through disuse. The 12 V battery may also be impaired or damaged by heavy discharging.

- ❗ Further information can be obtained at a qualified specialist workshop.

Standby mode (extension of the starter battery's period out of use)

■ Standby mode function

- ❗ This function is not available for all models. If standby mode is activated, energy loss will be minimised during extended periods of non-operation.

Standby mode is characterised by the following:

- The starter battery is preserved.
- The maximum non-operational time appears in the driver's display.
- The connection to online services is interrupted.

If the following conditions are fulfilled, standby mode can be activated or deactivated using the multimedia system:

- The vehicle is switched on.
- The vehicle has not been started.

Exceeding the vehicle's displayed non-operational time may cause inconvenience; i.e. it cannot be

guaranteed that the starter battery will reliably start the vehicle.

Charge the starter battery in the following situations:

- The vehicle's non-operational time must be extended.
 - The starter battery charge level is insufficient for standby mode.
- ❗ Standby mode is automatically deactivated when the vehicle is switched on.

■ Activating/deactivating standby mode (parking up the vehicle)

Requirements:

- The vehicle has been switched on but not started.

Multimedia system:

➡  ➡ Settings ➡ Vehicle
➡ Other functions

▶ Activate or deactivate **Standby mode**.

Driving and driving safety systems


Driving systems and your responsibility


Your vehicle is equipped with driving systems which assist you in driving, parking and manoeuvring the vehicle. The driving systems are only aids. They are not a substitute for you paying attention to your surroundings and do not relieve you of your responsibility pertaining to road traffic law. The driver is always responsible for maintaining a safe distance to the vehicle in front, for vehicle speed, for braking in good time and for staying in lane. Pay attention to the traffic conditions at all times and intervene when necessary. Be aware of the limitations regarding the safe use of these systems.

Driving systems can neither reduce the risk of accident if you fail to adapt your driving style nor override the laws of physics. They cannot always take into account road, weather or traffic conditions.

Information on vehicle sensors and cameras

Some driving and driving safety systems use cameras as well as radar or ultrasonic sensors to monitor the area in front of, behind or next to the vehicle.

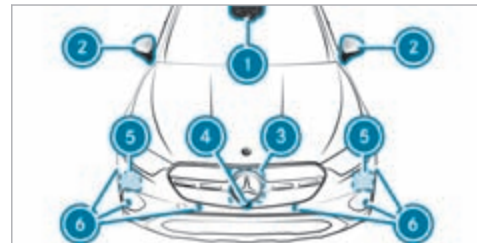

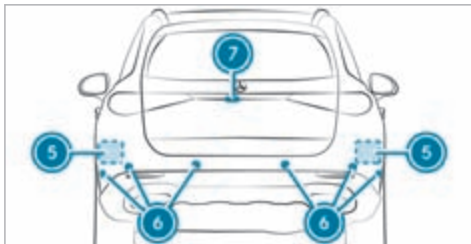

- ① Multifunction camera
- ② Cameras in the outside mirrors
- ③ Front radar
- ④ Front camera
- ⑤ Corner radars
- ⑥ Ultrasonic sensors
- ⑦ Reversing camera

⚠ WARNING Risk of accident due to restricted detection performance of vehicle sensors and cameras

If the area around vehicle sensors or cameras is covered, damaged or dirty, certain driving and safety systems cannot function correctly. There is a risk of an accident.

- ▶ Keep the area around vehicle sensors or cameras clear of any obstructions and clean.
- ▶ Have damage to the bumper, radiator grille or stone chipping in the area of the front and rear windows repaired at a qualified specialist workshop.

Particularly, keep the areas around the sensors and cameras free of dirt, ice or slush (→ page 394). The sensors and cameras must not be covered and the detection ranges around them must be kept free. Do not attach additional licence plate brackets, advertisements, stickers, foils or foils to protect against stone chippings in the detection range of the sensors and cameras.

Make sure that there are no overhanging loads protruding into the detection range.

If there is damage to a bumper or the radiator grille, or after an impact, have the function of the sensors checked at a qualified specialist workshop. Have damage or stone chipping in the area of the cameras on the front and rear windows repaired at a qualified specialist workshop.

- ⓘ The reversing camera can extend and retract automatically for the purpose of calibration, even though there is no camera image in the display.

Overview of driving systems and driving safety systems

- ABS (→ page 239)
- BAS (→ page 240)
- ESP® (→ page 240)
- ESP® Crosswind Assist (→ page 241)
- ESP® trailer stabilisation (→ page 242)
- EBD (→ page 242)
- STEER CONTROL (→ page 242)

- HOLD function (→ page 243)
- Hill Start Assist (→ page 244)
- Adaptive Brake Lights (→ page 244)
- ATTENTION ASSIST (→ page 244)
- Cruise control (→ page 246)
- Limiter (→ page 246)
- DSR (Downhill Speed Regulation) (→ page 257)
- Speed Limit Assist (country-dependent) (→ page 269)
- Traffic Sign Assist (→ page 272)
- Traffic light view (→ page 276)
- AIRMATIC (→ page 283)

Driving Assistance Package

- i** The availability of some functions or sub-functions of the Driving Assistance Package is equipment- or country-specific. The functions of your Driving Assistance Package may differ from the functions listed here.
- Active Distance Assist DISTRONIC, Active Blind Spot Assist, Active Brake Assist, Active

Lane Keeping Assist and Active Emergency Stop Assist are also available without the Driving Assistance Package, albeit with restricted functionality.

- Active Distance Assist DISTRONIC (→ page 249)
- Active Speed Limit Assist (→ page 254)
- Route-based speed adaptation (→ page 255)
- Active Brake Assist (→ page 265)
- Active Steering Assist (→ page 258)
- Active Emergency Stop Assist (→ page 261)
- Active Lane Change Assist (→ page 262)
- Active Stop-and-Go Assist (→ page 256)
- Active Blind Spot Assist with exit warning (→ page 276)
- Active Lane Keeping Assist (→ page 279)
- PRE-SAFE® Impulse Side (→ page 58)

Parking Package

- i** The availability of individual functions is country- and equipment-dependent.
- Reversing camera (→ page 287)

- 360° Camera (→ page 289)
- Parking Assist PARKTRONIC (→ page 296)
- Active Parking Assist (→ page 299)

Functions of ABS

The Anti-lock Brake System (ABS) regulates the brake pressure in critical driving situations:

- During braking, for instance, at maximum full-stop braking or if there is insufficient tyre traction, the wheels are prevented from locking.
- Vehicle steerability while braking is ensured.

If ABS intervenes when braking, you will feel a pulsing in the brake pedal. The pulsating brake pedal can be an indication of hazardous road conditions and can serve as a reminder to take extra care while driving.

System limits

- ABS is active from speeds of approx. 5 km/h.
- ABS may be impaired or may not function if a malfunction has occurred and the yellow  ABS warning lamp lights up continuously after the vehicle is started.

Functions of Off-road ABS

-  Off-road ABS is activated automatically when you select the  drive program.

Off-road ABS is specially adapted for driving off-road:

- The front wheels lock cyclically during braking.
- The braking distance is shortened due to the digging-in effect.

System limits

- Off-road ABS functions at speeds below 40 km/h.
- If Off-road ABS intervenes, the ability to steer may be restricted.

Function of BAS

 **WARNING** Risk of an accident caused by a malfunction in BAS (Brake Assist System)

If BAS is malfunctioning, the braking distance in an emergency braking situation is increased.

 Depress the brake pedal with full force in emergency braking situations. ABS prevents the wheels from locking.

The Brake Assist System (BAS) supports your emergency braking situation with additional brake force.

If you depress the brake pedal quickly, BAS is activated:

- BAS automatically boosts the brake pressure.
- BAS can shorten the braking distance.
- ABS prevents the wheels from locking.

The brakes will function as usual once you release the brake pedal. BAS is deactivated.

Functions of ESP®

 **WARNING** Risk of skidding if ESP® is deactivated

If you deactivate ESP®, ESP® cannot carry out vehicle stabilisation.

 ESP® should only be deactivated in the following situations.

The Electronic Stability Program (ESP®) can monitor and improve driving stability and traction in the following situations within physical limits:

- When pulling away on wet or slippery carriageways.
- When braking.
- **Vehicles with trailer hitch:** in trailer operation from speeds of 65 km/h, if the vehicle/trailer combination begins to sway from side to side.
- In strong side winds when you are driving faster than 80 km/h.

If the vehicle deviates from the direction desired by the driver, ESP® can stabilise the vehicle by intervening in the following ways:

- One or more wheels are braked.
- The engine output is adapted according to the situation.

ESP® is deactivated if the  ESP® OFF warning lamp lights up continuously in the driver's display:

- Driving stability will no longer be improved.
- **Vehicles with trailer hitch:** stabilisation of the vehicle/trailer combination is no longer active.
- Crosswind Assist is no longer active.
- The drive wheels could spin.
- ETS/4ETS traction control is still active.

 When ESP® is deactivated, you are still assisted by ESP® when braking.

If the  ESP® warning lamp flashes in the driver's display, one or several wheels has reached its grip limit:

- Adapt your driving style to suit the current road and weather conditions.
- Do not deactivate ESP®.
- Only depress the accelerator pedal as far as is necessary when pulling away.

Deactivate ESP® in the following situations to improve traction:

- When using snow chains.
 - In deep snow.
 - On sand or gravel.
-  Spinning the wheels results in a cutting action, which enhances traction.

If the  ESP® warning lamp lights up continuously, ESP® is not available due to a malfunction.

ETS/4ETS (Electronic Traction System)

ETS/4ETS traction control is part of ESP® and makes it possible to pull away and accelerate on a slippery carriageway.

If you select the  drive program, a special ETS system specifically suited to off-road terrain is automatically activated.

ETS/4ETS can improve the vehicle's traction by intervening in the following ways:

- The drive wheels are braked individually if they spin.
- More drive torque is transferred to the wheel or wheels with traction.

Influence of drive programs on ESP®

The drive programs enable ESP® to adapt to different weather and road conditions as well as the driver's preferred driving style. Depending on the selected drive program, the appropriate ESP® mode will be activated. You can select the drive programs using the DYNAMIC SELECT switch (→ page 199).

Function of ESP® Crosswind Assist

ESP® Crosswind Assist detects sudden gusts of side wind and helps the driver to keep the vehicle in the lane:

- ESP® Crosswind Assist is active at vehicle speeds between approx. 80 km/h and 200 km/h when driving straight ahead or cornering slightly.
- The vehicle is stabilised by means of individual brake application on one side.

Function of ESP® trailer stabilisation

WARNING Risk of accident in poor road and weather conditions

In poor road and weather conditions, the trailer stabilisation cannot prevent lurching of the vehicle/trailer combination. Trailers with a high centre of gravity may tip over before ESP® detects this.

- ▶ Always adapt your driving style to suit the current road and weather conditions.

When driving with a trailer, ESP® can stabilise your vehicle if the trailer begins to swerve from side to side:

- ESP® trailer stabilisation is active above speeds of 65 km/h.
- Slight swerving is reduced by means of a targeted, individual brake application on one side.
- In the event of severe swerving, the operating energy output is also reduced and all wheels are braked.

ESP® trailer stabilisation may be impaired or may not function if:

- The trailer is not connected correctly or is not detected properly by the vehicle.

Activating/deactivating ESP® (Electronic Stability Program)

Multimedia system:



- ▶ Select **ESP**.
- ▶ Select **On** or  **Off**.

ESP® is deactivated if the  ESP® OFF warning lamp lights up continuously in the driver's display.

Observe any information on warning lamps and display messages which may be shown in the driver's display.

Function of EBD

Electronic Brakeforce Distribution (EBD) is characterised by the following:

- Monitoring and regulating the brake pressure on the rear wheels.
- Improved driving stability when braking, especially on bends.

Function of STEER CONTROL

STEER CONTROL assists you by transmitting a noticeable steering force to the steering wheel in the direction required for vehicle stabilisation.

This steering recommendation is given in the following situations:

- both right wheels or both left wheels are on a wet or slippery road surface when you brake
- the vehicle starts to skid

System limits

STEER CONTROL may be impaired or may not function in the following situations:

- ESP® is deactivated.

- ESP® is malfunctioning.
- The steering is malfunctioning.

If ESP® is malfunctioning, you will be assisted further by the electric power steering.

HOLD function

HOLD function

The HOLD function holds the vehicle at a standstill without requiring you to depress the brake pedal, e.g. while waiting in traffic.

The HOLD function is only an aid. The responsibility for the vehicle safely standing still remains with the driver.

System limits

The HOLD function is only intended to provide assistance when driving and is not a sufficient means of safeguarding the vehicle against rolling away when stationary.

- The incline must not be greater than 30%.

Activating/deactivating the HOLD function

⚠ WARNING Risk of an accident due to the HOLD function being active when you leave the vehicle

If the vehicle is only braked with the HOLD function it could, in the following situations, roll away:

- If there is a malfunction in the system or in the power supply.
- If the HOLD function is deactivated by depressing the accelerator pedal or brake pedal, e.g. by a vehicle occupant.

► Always secure the vehicle against rolling away before you leave it.

Requirements:

- The vehicle is stationary.
- The driver's door is closed or the seat belt on the driver's side is fastened.
- The vehicle has been started or has been automatically switched off by the ECO start/stop function.

- The electric parking brake is released.
- Active Distance Assist DISTRONIC is deactivated.
- The transmission is in position **D**, **R** or **N**.

Activating the HOLD function

- Depress the brake pedal, and after a short time quickly depress further until the **HOLD** display appears in the driver's display.
- Release the brake pedal.

Deactivating the HOLD function

- Depress the accelerator pedal to pull away.
or
- Depress the brake pedal until the **HOLD** display disappears from the driver's display.

The HOLD function is deactivated in the following situations:

- Active Distance Assist DISTRONIC is activated.
- The transmission is shifted to position **P**.
- The vehicle is secured with the electric parking brake.

In the following situations, the vehicle is held by transmission position **P** and/or by the electric parking brake:

- The seat belt is unfastened and the driver's door is opened.
- The vehicle is switched off.
- There is a system malfunction.
- The power supply is insufficient.

In addition, the **Brake immediately** message may appear in the driver's display and a horn tone may sound at regular intervals.

- ▶ Immediately depress the brake pedal firmly until the warning message disappears. The HOLD function is deactivated.
- ▶ Additionally secure the vehicle against rolling away.

Function of Hill Start Assist

Hill Start Assist holds the vehicle for a short time when pulling away on a hill under the following conditions:

- The transmission is in position **D** or **R**.

- The electric parking brake is released.

This gives you enough time to move your foot from the brake pedal to the accelerator pedal and depress it before the vehicle begins to roll away.

⚠ WARNING Risk of accident and injury due to the vehicle rolling away

After a short time, Hill Start Assist no longer holds the vehicle.

- ▶ Swiftly move your foot from the brake pedal to the accelerator pedal. Do not leave the vehicle when it is being held by Hill Start Assist.

Function of Adaptive Brake Lights

Adaptive Brake Lights warn following traffic in an emergency braking situation with the following actions:

- flashing the brake lamps
- activating the hazard warning lights (→ page 143)

If the vehicle is braked sharply from speeds above 50 km/h, the brake lamps flash rapidly. This provides traffic travelling behind you with an even more noticeable warning.

ATTENTION ASSIST

Function of ATTENTION ASSIST

ATTENTION ASSIST assists you on long, monotonous journeys, e.g. on motorways and trunk roads. If indicators of fatigue or increasing lapses in concentration on the part of the driver are detected, the system suggests taking a break.

ATTENTION ASSIST is only an aid. It cannot always detect fatigue or lapses in concentration in time. The system is not a substitute for a well-rested and attentive driver. On long journeys, take regular breaks in good time that allow for adequate recuperation.

You can choose between two settings:

- **Standard:** normal system sensitivity.
- **Sensitive:** higher system sensitivity. The driver is warned earlier and the attention level detected

ted by ATTENTION ASSIST is adapted accordingly.

If drowsiness or increasing lapses in concentration are detected, the **ATTENTION ASSIST: Take a break!** warning appears in the driver's display. You can acknowledge the message and take a break where necessary. If you do not take a break and ATTENTION ASSIST continues to detect increasing lapses in concentration, you will be warned again after a minimum of 15 minutes.



The following information is displayed in the driver's display:

- The length of the journey since the last break

- The attention level determined by ATTENTION ASSIST.

The more segments ① of the circle displayed, the higher the detected attention level. Fewer segments ① are displayed in the circle as the attention level decreases.

If ATTENTION ASSIST is unable to calculate the attention level and cannot issue a warning, the **System suspended** message appears.

If a warning is given in the driver's display, the multimedia system offers to search for a rest area. You can select a rest area and start navigation to this rest area.

When you restart the vehicle, ATTENTION ASSIST is automatically switched on. The last selected sensitivity level remains stored.

System limits

ATTENTION ASSIST is active in the 60 km/h to 200 km/h speed range.

If the system is not available due to an error, the warning light is permanently lit  in the driver display

Particularly in the following situations, ATTENTION ASSIST only functions in a restricted manner and warnings may be delayed or not occur:

- If you have been driving for less than approximately 30 minutes.
- If the road condition is poor (uneven road surface or potholes).
- If there is a strong side wind.
- If you adopt a sporty driving style (high cornering speeds or high rates of acceleration).
- If the Steering Assist function of Active Distance Assist DISTRONIC is active.
- If the clock is set to the incorrect time.
- If you change lanes and vary your speed frequently in active driving situations.

Also observe any information regarding display messages that can be displayed in the driver's display.

The ATTENTION ASSIST drowsiness or alertness assessment is reset and restarted when continuing the journey in the following situations:

- If you switch off the vehicle.

- If you unfasten your seat belt and open the driver's door (e.g. to change drivers or take a break).

■ Setting ATTENTION ASSIST

Multimedia system:

➔  ➔ Settings ➔ Assistance
➔ Assistance ➔ ATTENTION ASSIST

Setting the sensitivity

- ▶ Select  next to ATTENTION ASSIST.
- ▶ Select **Standard** or **Sensitive**.

Cruise control and limiter

■ Function of cruise control

Cruise control regulates the speed to the value selected by the driver.

If you accelerate to overtake, forexample, the stored speed is not deleted. If you remove your foot from the accelerator pedal after overtaking, cruise control will resume speed regulation back to the stored speed.

You can store any speed above 20 km/h up to the maximum design speed or up to the set winter tyre limit.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognise dangers (→ page 237).

Displays in the driver's display

-  (grey): cruise control is selected but not yet active, or temporarily passive.
-  (green): cruise control is active.

A stored speed appears under the  display and is indicated in the speedometer.

System limits

Cruise control may be unable to maintain the stored speed on uphill gradients. The stored speed is resumed when the gradient evens out.

Change into a lower gear in good time on long and steep downhill gradients. Take particular note of this when driving a laden vehicle. By doing so, you will make use of the engine's braking effect. This relieves the load on the brake system and prevents the brakes from overheating and wearing too quickly.

Do not use cruise control in the following situations:

- in traffic situations which require frequent changes of speed, e.g. in heavy traffic, on winding roads
- on slippery roads. Accelerating can cause the drive wheels to lose traction and the vehicle could then skid.
- when visibility is poor

■ Function of the limiter

The limiter restricts the speed of the vehicle. To reduce the speed to the set speed, the limiter applies the brakes automatically.

You can limit the speed as follows:

- **Variable:** for a short-term speed restriction, e.g. in built-up areas
- **Permanent:** for a longer-term speed restriction, e.g. in winter tyre mode

You can store any speed above 20 km/h up to the maximum design speed or up to the set winter tyre limit. You can also perform settings while the vehicle is stationary if the vehicle has been started.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognise dangers (→ page 237).

Displays in the driver's display

- **LIM** (grey): variable limiter is selected but not yet activated.
- **LIM** (flashes grey): variable limiter is temporarily passive.
- **LIM** (green): variable limiter is activated.

A stored speed appears under the **LIM** display and is indicated in the speedometer.

If you depress the accelerator pedal beyond the pressure point (kickdown), the variable limiter switches to passive mode. The **LIM** **passive** message appears in the driver's display and the **LIM** display flashes.

The variable limiter is reactivated in the following situations:

- If the vehicle speed drops below the stored speed.
- If the stored speed is called up.
- If you store a new speed.

Operating cruise control or the variable limiter

⚠ WARNING Risk of accident due to stored speed

If you call up the stored speed and this is lower than your current speed, the vehicle decelerates.

► Take into account the traffic situation before calling up the stored speed.


Requirements:

Cruise control

- Cruise control is selected.
- ESP® must be activated, but not intervening.
- The vehicle speed is at least 20 km/h.
- The transmission is in position **D**.

Variable limiter

- The variable limiter is selected.

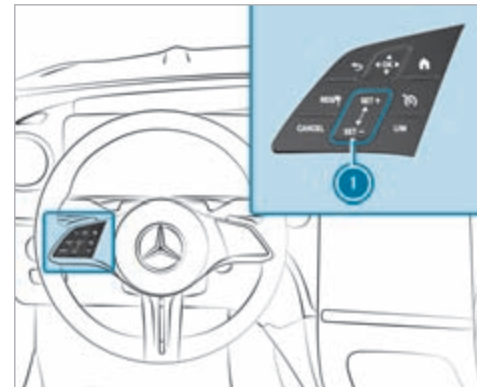

Steering wheel control panel for cruise control and variable limiter

- RES/+** Adopts the stored/detected speed
- CANCEL** Deactivates cruise control/the variable limiter
- Selects cruise control
- LIM** Selects the variable limiter
- 1** Control panel to increase/decrease speed

Operating cruise control and the variable limiter

- ▶ Press the corresponding button with only one finger or swipe on the control panel.

Switching between cruise control and the variable limiter

- ▶ To select cruise control: press .
- ▶ To select the variable limiter: press .

 Vehicles with Active Distance Assist DISTRONIC: the variable limiter is selected by a different button (→ page 252).

Activating cruise control or the variable limiter

- ▶ Press  or  on control panel . The current vehicle speed is stored and the vehicle maintains this speed (cruise control) or does not exceed it (variable limiter).

or

- ▶ Press . The last stored speed is called up and the vehicle maintains this speed (cruise control) or does not exceed it (variable limiter).

If the last stored speed has previously been deleted, the current vehicle speed is stored.

 When you switch off the vehicle, the last speed stored is deleted. When you activate cruise control or Active Distance Assist DISTRONIC, the last speed stored for the variable limiter is deleted.

Increasing/decreasing the stored speed

- ▶ To increase the stored speed: swipe upwards from the bottom of control panel .
 - The stored speed is increased by 1 km/h.
- ▶ To decrease the stored speed: swipe downwards from the top of control panel .
 - The stored speed is decreased by 1 km/h.

or

- ▶ Briefly press  or  on control panel . The stored speed is increased or decreased to the next increment of ten (e.g. to 50 km/h or 60 km/h).

or

- ▶ Press and hold  or  on control panel . The stored speed is increased or decreased to the next increment of ten and afterwards by increments of 10 km/h.

or

- ▶ Accelerate the vehicle to the desired speed.
- ▶ Press  on control panel .

 When the variable limiter is switched to passive mode, you cannot increase or decrease its stored speed in increments of 1 km/h.

Adopting a detected speed

If cruise control/variable limiter is activated and Traffic Sign Assist has detected a speed restriction sign with a maximum permissible speed and this is displayed in the driver's display:

- ▶ Press . The maximum permissible speed shown by the traffic sign is stored and the vehicle maintains or does not exceed this speed.

Deactivating cruise control or the variable limiter

- ▶ Press .

- ❗ If you brake, deactivate ESP® or if ESP® intervenes, cruise control is deactivated. The variable limiter is not deactivated.

■ Information on the permanent limiter

If the vehicle should never exceed a specific speed (e.g. for driving in winter tyre mode), you can set this speed with the permanent limiter.

You do this by limiting the speed between 160 km/h and 240 km/h in the multimedia system (→ page 249).

Shortly before the set speed is reached, it appears in the driver's display. When you confirm the message, display messages no longer appear until you switch off the vehicle. The speed will only be displayed again once the vehicle has been restarted or if the set speed is changed.

The permanent limiter does not switch to passive mode even during kickdown and the driven speed remains below the set speed.

■ Setting the speed limit for winter tyres

Multimedia system:

→  » Settings » Vehicle
» Winter tyre limit

▶ Activate or deactivate **Winter tyre limit**.

Setting a speed

▶ Select **Winter tyre limit**.
▶ Select a speed.

Active Distance Assist DISTRONIC

■ Function of Active Distance Assist DISTRONIC

- ❗ The Active Distance Assist DISTRONIC described for vehicles without the Driving Assistance package is an on-demand feature (→ page 22).

DISTRONIC Active Distance Assist maintains the set speed when driving freely. If vehicles are detected ahead, the set distance is maintained, if necessary until the vehicle comes to a standstill. The vehicle accelerates or brakes depending on the distance to the vehicle in front and the set

speed. The speed and distance to the vehicle in front are set and saved using the steering wheel.

Available speed range:

- **Vehicles without Driving Assistance Package:**
20 km/h - 160 km/h
- **Vehicles with Driving Assistance Package:**
20 km/h - 210 km/h

- ❗ The adjustable set speed may differ if a limit speed (e.g. winter tyre limit) (→ page 249) is stored.

Other features of Active Distance Assist DISTRONIC:

- Adjusts the driving style depending on the selected drive program (fuel-saving, comfortable or dynamic) (→ page 197)
- Initiates acceleration to the stored speed if the turn signal indicator is switched on to change to the overtaking lane
- **Vehicles with Driving Assistance Package:**
 - Reacts to stationary vehicles detected in urban speed ranges (except bicycles and motorcycles)

- Takes one-sided overtaking restrictions into account on motorways or on multi-lane roads with separate carriageways (country-dependent)

i In the DYNAMIC SELECT menu, it is possible to set the driving mode of the Active Distance Assist DISTRONIC. Depending on which drive program is selected, the driving characteristics can be geared towards energy economy, comfort or dynamic performance. In the Active Distance Assist menu, the driving style can be permanently set to Comfort or Dynamic (→ page 256).

Vehicles with Active Parking Assist and Driving Assistance Package: if Active Distance Assist DISTRONIC has braked the vehicle to a standstill, it can automatically follow the vehicle in front when driving off again within 30 seconds. If a critical situation is detected in the surrounding area when driving off, such as a person in the vehicle path, a visual and acoustic warning is given indicating that the driver must now take control of the vehicle. The vehicle is not accelerated any further.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognise dangers (→ page 237).

Display in the driver's display in the Assistance menu



- ① Vehicle in front
- ② Distance indicator
- ③ Set specified distance

Vehicle detected in front ① is highlighted in green. It may also be in the lane to the left of your vehicle in situations where it is not permitted to overtake on the right, for example on motorways.

Permanent status display

- (grey): Active Distance Assist DISTRONIC selected but not yet active
- (green speedometer, white vehicle): Active Distance Assist DISTRONIC active, speed set
- (green): Active Distance Assist DISTRONIC active and vehicle detected

The stored speed is shown under the permanent status display and highlighted on the speedometer. When Active Distance Assist DISTRONIC is passive, the status display is greyed out.

If the speed of the vehicle in front or the speed adjustment is less than the stored speed due to the route event ahead, the segments in the speedometer light up.

When the set specified distance is increased or decreased, the display briefly appears under the vehicle in the permanent status display.

- i** On motorways or high-speed major roads, the green vehicle symbol is displayed cyclically when the vehicle is ready to pull away.

- ❗ If you depress the accelerator pedal beyond the setting of the Active Distance Assist DISTRONIC, the system is switched to passive mode. The following message appears briefly in the driver's display  **suspended**.

System limits

The system may be impaired or may not function in the following situations, for example:

- In snow, rain, fog, heavy spray, if there is glare, in direct sunlight or in greatly varying light conditions.
- The windscreen in the area of the camera is dirty, misted up, damaged or covered.
- If the radar sensors are dirty or covered.
- In multi-storey car parks or on roads with steep uphill or downhill gradients.
- If there are narrow vehicles in front, such as bicycles or motorcycles.

In addition, on slippery roads, braking or accelerating can cause one or several wheels to lose traction and the vehicle could then skid.

Do not use Active Distance Assist DISTRONIC in these situations.

⚠ WARNING Risk of accident from acceleration or braking by Active Distance Assist DISTRONIC

Active Distance Assist DISTRONIC may accelerate or brake in the following cases, for example:

- If the vehicle pulls away using Active Distance Assist DISTRONIC.
 - If the stored speed is called up and is considerably faster or slower than the currently driven speed.
 - If Active Distance Assist DISTRONIC no longer detects a vehicle in front or does not react to relevant objects.
- ▶ Always carefully observe the traffic conditions and be ready to brake at all times.
- ▶ Take into account the traffic situation before calling up the stored speed.

⚠ WARNING Risk of accident due to insufficient deceleration by Active Distance Assist DISTRONIC

Active Distance Assist DISTRONIC brakes your vehicle with up to 50% of the possible deceleration. If this deceleration is not sufficient, Active Distance Assist DISTRONIC alerts you with a visual and acoustic warning.

- ▶ Adjust your speed and maintain a suitable distance from the vehicle in front.
- ▶ Brake the vehicle yourself and/or take evasive action.

⚠ WARNING Risk of accident if detection function of Active Distance Assist DISTRONIC is impaired

Active Distance Assist DISTRONIC does not react or has a limited reaction:

- when driving on a different lane or when changing lanes

- to pedestrians, animals, bicycles or stationary vehicles, or unexpected obstacles
- to complex traffic conditions
- to oncoming vehicles and crossing traffic

As a result, Active Distance Assist DISTRONIC may neither give warnings nor intervene in such situations.

► Always observe the traffic conditions carefully and react accordingly.

■ Operating Active Distance Assist DISTRONIC and the variable limiter

Requirements:


Active Distance Assist DISTRONIC:

- The electric parking brake is released.
- ESP® is activated and is not intervening.
- The transmission is in position **[D]**.
- All the doors are closed.
- Check of the radar sensor system has been successfully completed.
- Snow chain mode is not active (→ page 422).

- DSR is deactivated.
- Drive program  is deactivated.

Variable limiter:

- The variable limiter is selected.

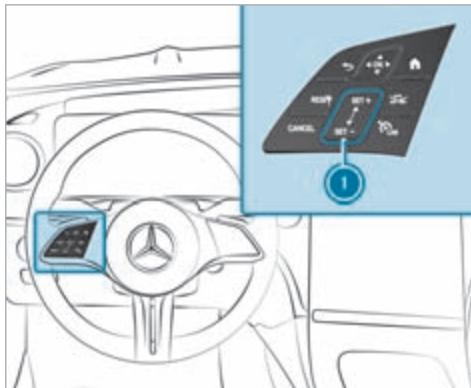

-  Adopts the stored/detected speed
-  Deactivates Active Distance Assist DISTRONIC/ the variable limiter

-  Increases/decreases the speed
-  Increases/decreases the specified distance
-  Switches between the variable limiter and Active Distance Assist DISTRONIC

► **To operate Active Distance Assist DISTRONIC or the variable limiter:** press the respective button with only one finger or swipe on the control panel.

Switches between the variable limiter and Active Distance Assist DISTRONIC

► Press .

Activating the variable limiter or Active Distance Assist DISTRONIC

► **To activate without a stored speed:** press ,  or . **Active Distance Assist DISTRONIC:** remove your foot from the accelerator pedal. The current vehicle speed is stored and maintained (Active Distance Assist DISTRONIC) or limited (variable limiter) by the vehicle.

or

- ▶ **To activate with a stored speed:** press **RES/⏏**.
Active Distance Assist DISTRONIC: remove your foot from the accelerator pedal. The last stored speed is called up and the vehicle maintains this speed (Active Distance Assist DISTRONIC) or does not exceed it (variable limiter).
 If the stored speed has been deleted, the current vehicle speed is stored.

- ❗ When you switch off the vehicle, the stored speed is deleted. When you activate Active Distance Assist DISTRONIC, the last speed stored for the variable limiter is deleted.

Increasing or reducing the speed

- ▶ To increase the stored speed: swipe upwards from the bottom of control panel ①.
- The stored speed is increased by 1 km/h.
- ▶ To decrease the stored speed: swipe downwards from the top of control panel ①.
- The stored speed is decreased by 1 km/h.

or

- ▶ Briefly press **SET/+** on the upper section or **SET/-** on the lower section of control panel ①.
 The stored speed is increased or reduced by 10 km/h.

or

- ▶ Press and hold **SET/+** on the upper section or **SET/-** on the lower section of control panel ①.
 The stored speed is increased or reduced in increments of 10 km/h.

or

- ▶ Accelerate the vehicle to the desired speed.
 ▶ Press **SET/+** on the upper section of control panel ①.

Adopting the limit speed shown in the driver's display

- ▶ Activate Active Distance Assist DISTRONIC or the variable limiter: press **SET/+**, **SET/-** or **RES/⏏**.

- ▶ Accept the displayed speed limit: press **RES/⏏**. The limit speed displayed in the driver's display is adopted as the stored speed. The vehicle adapts its speed to that of the vehicle in front, but only up to the stored speed, or limits its speed accordingly.

- ❗ A speed limit shown in the driver display is only adopted while driving, not when stationary.

Pulling away with Active Distance Assist DISTRONIC

- ▶ Activate Active Distance Assist DISTRONIC and remove your foot from the brake pedal.
 ▶ Press **RES/⏏**.

or

- ▶ Depress the accelerator pedal briefly and firmly.
 The functions of Active Distance Assist DISTRONIC continue to be carried out.

Reducing or increasing the specified distance from the vehicle in front

- ▶ Press . The  display appears. The specified distance is reduced by one level.
- If the lowest level is already selected, the selection jumps to the highest level.

Deactivating Active Distance Assist DISTRONIC or the variable limiter

⚠ WARNING Risk of an accident due to Active Distance Assist DISTRONIC being active when you leave the driver's seat

If you leave the driver's seat while the vehicle is being braked by Active Distance Assist DISTRONIC only, the vehicle can roll away.

- ▶ Always deactivate Active Distance Assist DISTRONIC and secure the vehicle to prevent it from rolling away before you leave the driver's seat.

- ▶ Press .

- ❗ If you brake, deactivate ESP® or if ESP® intervenes, Active Distance Assist DISTRONIC is deactivated. The variable limiter is not deactivated.

Function of Active Speed Limit Assist

If a changed speed limit is detected and the automatic adoption of speed limits is switched on, this is automatically adopted as the stored speed (→ page 256). Speed limits below 20 km/h are not accepted.

The driven speed is adjusted when the vehicle is level with the traffic sign at the latest. In the case of signs indicating entry into an urban area, the speed is adapted according to the speed permitted within the urban area. The speed limit display in the driver's display is always updated when the vehicle is level with the traffic sign.

If you are driving on German motorways and there is no speed limit, the system uses the speed stored for a stretch of road with no speed limit as the set speed. If you do not alter the stored speed on a stretch of road with no speed limit, the recommended speed of 130 km/h is adopted.

If Active Distance Assist DISTRONIC has been put into passive mode by pressing the accelerator pedal, only speed limits which are higher than the set speed are adopted.

The maximum permissible speed does not take the road condition and current weather and traffic conditions into account. Adjust your speed accordingly, when necessary.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognise dangers (→ page 237).

System limits

The system limits of Traffic Sign Assist apply to the detection of traffic signs (→ page 272).

Speed limits below 20 km/h are not automatically adopted by the system as the stored speed. Temporary speed restrictions (e.g. for a certain time or due to weather conditions) cannot be properly detected by the system. The maximum permissible speed applying to a vehicle with a trailer is not detected by the system.

Adjust the speed in these situations.

⚠ WARNING Risk of accident due to Active Speed Limit Assist adapting the vehicle's speed

The speed adopted by Active Speed Limit Assist may be too high or incorrect in some individual cases, such as:

- at speed limits below 20 km/h
- in wet conditions or in fog
- when towing a trailer

- ▶ Ensure that the driven speed complies with traffic regulations.
- ▶ Adjust the driving speed to suit current traffic and weather conditions.

■ Function of route-based speed adaptation

When Active Distance Assist DISTRONIC is activated, the vehicle speed will be adapted accordingly to the route events ahead. Depending on the drive program selected, the vehicle negotiates a route event ahead in a fuel-saving, comfortable or dynamic manner. When the route event has been passed, the vehicle accelerates again to the stored speed. The set distance to the vehicle in

front, vehicles detected ahead and speed restrictions ahead are taken into account.

Route-based speed adaptation can be activated in the multimedia system (→ page 256).

The following route events are taken into account:

- Bends
- Roundabouts
- T-junctions
- Turns and exits
- Traffic jams ahead (only with Live Traffic)

Also, the speed is reduced if the turn signal indicator is switched on and one of the following situations is detected:

- Turning at junctions
- Driving on slowing-down lanes
- Driving on lanes adjacent to slowing-down lanes

The driver is responsible for choosing the right speed and observing other road users. This applies in particular to junctions, roundabouts and

traffic lights, as route-based speed adaptation does not brake the vehicle to a standstill.

If a corresponding route event is detected while route guidance is active, the first speed adjustment is carried out automatically. If the turn signal indicator is switched on, the selected route is confirmed and further speed adjustment is activated.

Speed adaptation is cancelled in the following cases:

- If the turn signal indicator is switched off before the route event and it is therefore assumed that the route event is not relevant to the driver.
- If the driver depresses the accelerator or brake pedal during the process.

System limits

Route-based speed adaptation does not take right of way regulations into account. The driver is responsible for complying with road traffic regulations and driving at a suitable speed.

In difficult conditions, the speed selection made by the system may not always be suitable. This applies to the following situations, forexample:

- the road's course not clearly visible
- Road narrowing
- varying maximum permissible speeds in individual lanes, forexample at toll stations
- wet road surfaces, snow or ice
- If transport equipment, forexample a trailer or bicycle rack, is attached to the trailer hitch and the electrical connection has been correctly established.

In these situations the driver must intervene accordingly.

⚠ WARNING Risk of accident in spite of route-based speed adaptation

Route-based speed adaptation can malfunction or be temporarily unavailable in the following situations:

- If the driver does not follow the calculated route
 - If map data is not up-to-date or available
 - In the event of roadworks
 - In bad weather or road conditions
 - If the accelerator pedal is depressed
 - In the event of electronically displayed speed limitations
- ▶ Adapt the speed to the traffic situation.

■ Setting Active Distance Assist DISTRONIC driving styles

Requirements:

- Active Distance Assist DISTRONIC is activated.

Multimedia system:

➔  ➔ Settings ➔ Assistance
➔ Driving ➔ Active Distance Assist

Selecting a driving style

- ▶ Select **Based on DYNAMIC SELECT**, **Dynamic** or **Comfortable**.

- ❗ Further information about Active Distance Assist DISTRONIC (→ page 252).

Setting speed adaptation

- ▶ Select **Route based** or **Speed limit**.
When these functions are active, the vehicle speed is adjusted depending on the route events ahead.

- ❗ When one of the following systems is active, the detected speed can be manually adopted as the speed limit:

- Active Distance Assist DISTRONIC
- Variable limiter

- ❗ Further information on speed adaptation (→ page 255).

■ Function of Active Stop-and-Go Assist

Active Stop-and-Go Assist helps you when in traffic jams on multi-lane roads with separate carriageways by automatically pulling away within up to 60 seconds and with moderate steering manoeuvres. It orients itself using the vehicle in front and lane markings. Active Stop-and-Go Assist automatically maintains a safe distance from the vehicle in front and vehicles cutting in.

Active Stop-and-Go Assist requires you, as the driver, to keep your hands on the steering wheel at all times so that you are able to intervene at any time to correct the course of the vehicle and keep it in lane.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognise dangers (→ page 237).

Active Stop-and-Go Assist activates automatically when all of the following conditions are met:

- You are in a traffic jam on a motorway or high-speed major road.
- Active Distance Assist DISTRONIC is activated and active (→ page 252).
- Active Steering Assist is activated and active (→ page 260).
- You are travelling no faster than 60 km/h.

When Active Stop-and-Go Assist is active the  status display appears in the driver's display.

System limits

The system limitations of Active Distance Assist DISTRONIC and Active Steering Assist apply to Active Stop-and-Go Assist (→ page 258).

DSR (Downhill Speed Regulation)

Function of DSR (Downhill Speed Regulation)

DSR is an aid to assist you when driving downhill. It keeps the speed of travel at the selected target speed. The steeper the downhill gradient, the greater the D S R braking effect on the vehicle. On flat stretches of road and uphill gradients, the DSR brakes the vehicle minimally or not at all.

When DSR is activated and the transmission is in position **D**, **R** or **N**, DSR controls the driving speed. The target speed can be set to a value between 2 km/h and 18 km/h. By braking or accelerating, you can drive at a higher or lower speed than the target speed at any time.

If you drive faster than 45 km/h or change the driving programme (except in ) , DSR switches off automatically. The  off message appears in the driver's display. The status indica-

tor in the driver's display goes out. You also hear a warning tone.

Information on DSR

⚠ WARNING Risk of skidding and accident when DSR is activated on slippery road surfaces

If the driven speed and the target speed differ, the wheels may lose traction.

▶ Take into account the road surface and the difference between the driving speed and target speed before activating DSR.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognise dangers (→ page 237).

You are always responsible for keeping control of the vehicle and for assessing whether the downhill gradient can be negotiated. Depending on road surface and tyres, DSR may not always be able to keep to the target speed. Select a target speed suitable for the environmental conditions and also apply the brakes yourself if required.

■ Activating or deactivating DSR (Downhill Speed Regulation)

Requirements:


- You are driving at 40 km/h or slower.
If the vehicle speed is too high, the **Max. speed 40 km/h** message appears in the driver's display.
- Active Distance Assist DISTRONIC, TEMPO-MAT and variable limiter are switched off.

Multimedia system:

➔  ➔ **Settings** ➔ **Assistance**

- Select .
A status display appears in the driver's display when the function is activated.

■ Changing the target speed

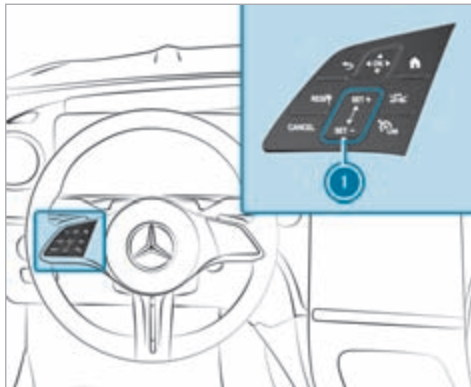

- **To increase the target speed:** swipe upwards from the bottom of control panel ①.

- The target speed is increased by 1 km/h.

or

- Press and hold ① at **SET/+** the top of the control panel.
The target speed is increased in 1-km/h increments.

- **To decrease the target speed:** swipe downwards from the top of control panel ①.
 - The target speed is decreased by 1 km/h.

or

- Press and hold ① at **SET/-** the bottom of the control panel.
The target speed is reduced in 1-km/h increments.

The set target speed is shown  next to the status display in the driver's display.

Active Steering Assist

■ Function of Active Steering Assist

Active Steering Assist is only available up to a speed of 210 km/h. The system helps you to stay in the centre of the lane by means of moderate steering interventions. Depending on the speed driven, Active Steering Assist uses the vehicles ahead and lane markings as a reference.

- ① Depending on the country, in the lower speed range Active Steering Assist can use the surrounding traffic as a reference. If necessary, Active Steering Assist can then also provide assistance when driving outside the centre of the lane.

If the detection of lane markings and vehicles ahead is impaired, Active Steering Assist switches to passive mode. The system provides no support in this case.

Permanent status display in the driver's display

-  **Grey:** activated and passive
-  **Green:** activated and active
-  **Red, flashing:** prompt to the driver to actively confirm or transition from active to passive status, system limit detected

- ① During the transition from active to passive status, the  symbol is shown as enlarged and flashing. Once the system is passive, the  symbol is shown as grey in the driver's display.

Contact detection

The driver is required to keep their hands on the steering wheel at all times and be able to intervene at any time to correct the course of the vehicle and keep it in lane. The driver must expect a change from active to passive mode or vice versa at any time.



If the system detects that the driver has not steered the vehicle for a considerable period of time or has removed their hands from the steering wheel, an optical warning is given first. Display ① appears in the driver's display. If the driver still does not steer the vehicle, or gives no confirmation to the system, a warning tone sounds in addition to the visual warning message.

If the driver does not react to this warning for a considerable period, an emergency stop is initiated (→ page 261).

The warning is not issued or is stopped as soon as the system detects that the driver has touched the steering wheel.

Touch detection may be limited or inoperative in the following situations:

- The driver is wearing gloves.
- There is a steering wheel cover on the steering wheel.

If Active Steering Assist detects that a system limit has been reached, a visual warning is issued and a warning tone sounds.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognise dangers (→ page 237).

System limits

Active Steering Assist has a limited steering torque for lateral guidance. In some cases, the steering intervention is not sufficient to keep the vehicle in the lane.

The system may be impaired or may not function in the following instances:

- There is poor visibility, e.g. due to snow, rain, fog, heavy spray, greatly varying light conditions or strong shadows on the carriageway.
- There is glare, e.g. from oncoming traffic, direct sunlight or reflections.
- Insufficient road illumination.
- The windscreen is dirty, misted up, damaged or covered in the vicinity of the camera, e.g. by a sticker.
- No, or several, unclear lane markings are present for one lane, or the markings change quickly, foreexample, in a construction area or junctions.
- The lane markings are worn away, dark or covered up, e.g. by dirt or snow.
- If the distance to the vehicle in front is too short and thus the lane markings cannot be detected.
- The road is narrow and winding.
- There are obstacles on the lane or projecting out into the lane, such as object markers.

- If transport equipment, foreexample a trailer or bicycle rack, is attached to the trailer hitch and the electrical connection has been correctly established.

The system does not provide assistance in the following conditions:

- On very tight bends and when turning.
- When crossing junctions.
- At roundabouts or toll stations.
- When actively changing lane without switching on the turn signal indicator.
- When the tyre pressure is too low.

⚠ WARNING Risk of accident if Active Steering Assist unexpectedly stops functioning

If the system limits of Active Steering Assist are reached there is no guarantee that the system will remain active or will keep the vehicle in lane.

- ▶ Always keep your hands on the steering wheel and observe the traffic carefully.

- ▶ Always steer the vehicle paying attention to traffic conditions.

⚠ WARNING Risk of accident if Active Steering Assist unexpectedly intervenes

The detection of lane markings and objects may malfunction and cause unexpected steering interventions.

- ▶ Steer according to traffic conditions.

■ Activating/deactivating Active Steering Assist

Requirements:

- ESP® is activated, but is not intervening.
- Active Distance Assist DISTRONIC is activated.

Multimedia system:

➡  ➡ Settings ➡ Assistance
➡ Driving

▶ Activate or deactivate **Active Steering Assist**.

Function of Active Emergency Stop Assist

Active Emergency Stop Assist monitors the steering wheel and the accelerator and brake pedals. If the system detects a lack of driver activity and the vehicle threatens to leave the lane, a warning can be issued and an emergency stop initiated.

Vehicles without Driving Assistance Package: The system is available from a speed of approx. 60 km/h.

Vehicles with Driving Assistance package: If Active Steering Assist is switched off, the system is available from a speed of approx. 60 km/h.

If the system detects that the vehicle is threatening to leave the lane, a warning can be issued and an emergency stop initiated.

- The driver does not touch the steering wheel for a longer period of time or no steering movement can be measured for a longer period of time (depending on the vehicle equipment).
- Neither the accelerator nor the brake pedal is depressed.

- i Vehicles with Driving Assistance package:** If Active Steering Assist is switched on and active, only the steering wheel is monitored by the system. If the driver does not touch the steering wheel for a longer period of time, a warning may be given despite pedal actuation. Also observe the instructions on the contact detection of Active Steering Assist (→ page 258).



Active Emergency Stop Assist issues the following warnings in order:

- Display message **i** appears in the driver's display.

- In addition to display **i** a warning tone sounds.
- The message **Beginning emergency stop** will appear in the driver's display, a continuous warning tone will sound, the vehicle will no longer accelerate and, if necessary, slight belt tensioning will be produced.
- The vehicle speed is reduced in increments until it is at a standstill. Sharp brake impulses are also produced.

- i Vehicles with Driving Assistance Package:** If Active Distance Assist DISTRONIC is active and the driver unfastens the seat belt and driver's door, an emergency stop can be initiated immediately.

Vehicles with Driving Assistance Package:

Depending on the country, a lane change to the adjacent right-hand lane is carried out, if possible. It is only possible to change across one lane and only into the right-hand lane, and not onto the hard shoulder.

When automatic braking is initiated, Active Distance Assist DISTRONIC is deactivated. Depend-

ing on the country, the hazard warning light system is switched on.

When the vehicle is stationary, the following actions are carried out:

- The vehicle is secured with the electric parking brake.
- The vehicle is unlocked.
- If possible, an emergency call is placed to the Mercedes-Benz emergency call centre.

Before automatic braking is initiated, you can cancel Active Emergency Stop Assist by steering.

You can cancel the intervention by Active Emergency Stop Assist after automatic braking is initiated by one of the following actions:

- Accelerating or braking: the emergency stop is cancelled, but the warning message, warning tone and power steering remain active
- Steering: power-assisted steering is cancelled, the warning message and warning tone remain active and the vehicle continues to be braked

 Active Emergency Stop Assist can initiate an emergency stop a maximum of three times

within a driving cycle. After that, Active Steering Assist and Active Emergency Stop Assist are disabled until the vehicle has been restarted.

System limits

For the detection of vehicles and other obstacles, observe the system limits of the following functions:

- Active Distance Assist DISTRONIC (→ page 249)
- Active Steering Assist (→ page 258)
- Active Lane Change Assist (→ page 262)
- Active Brake Assist (→ page 265)

Vehicles without Driving Assistance Package:

Active Emergency Stop Assist is inactive in the following cases:

- Active Lane Keeping Assist has reached a system limit.
- Active Lane Keeping Assist is not operational (grey status display) or deactivated (white status display) (→ page 279).

Active Lane Change Assist

■ Function of Active Lane Change Assist

Active Lane Change Assist supports the driver when changing lanes and is activated by indicating briefly.

For this, the following conditions must be fulfilled:

- You are on a motorway or high-speed major road.
- The vehicle speed is between approximately 80 km/h and 180 km/h.
- The neighbouring lane is separated by a broken lane marking.
- No vehicle or obstacle is detected in the adjacent lane.
- Since the last time the vehicle was started, the sensors have detected a vehicle at a suitable distance behind your vehicle.
- Active Lane Change Assist is selected in the multimedia system.
- Active Distance Assist DISTRONIC and Active Steering Assist are activated on motorways.

The system is not available and must be reactivated in the following situations:

- Active Distance Assist DISTRONIC and Active Steering Assist were already activated before entering the motorway.
- The system briefly does not detect the road you are on as a motorway or a motorway-like road, e.g. on a motorway junction.

As soon as Active Lane Change Assist detects a suitable road, you can reactivate it with **RES/ⓘ**, **SET/+** or **SET/-**.

Display in the driver's display in the Assistance menu



① Green arrow: lane change initiated

② Red arrow: lane change cancelled

When Active Lane Change Assist is available, the  display appears along with green arrows in the driver's display. If the system has been activated but is not currently available, the  display

appears along with grey arrows in the driver's display.

If no vehicle or obstacle is detected in the adjacent lane and a lane change is permitted, the lane change begins after the driver has indicated briefly. The lane change is shown to the driver with a flashing green arrow next to the  steering wheel symbol. Green arrow Assistance is displayed in the appropriate adjacent lane in the ① menu in the driver's display. The message, for Lane change to the left example, also appears.

Active Lane Change Assist can be cancelled in various situations, including the following:

- Change in the surrounding conditions (e.g. detected obstacle).
- The driver removes their hands from the steering wheel.
- The driver steers with too much force or in the opposite direction.
- The driver moves the turn signal indicator in the opposite direction.
- Active Distance Assist DISTRONIC or Active Steering Assist is deactivated.

- The vehicle cannot make the lane change as planned.

Cancellation of Active Lane Change Assist is displayed as follows:

- The arrow in the selected direction of travel turns red.
- A corresponding message will also appear in the driver's display.
- In certain circumstances a warning tone sounds.

⚠ WARNING Risk of accident when changing lane to an occupied adjacent lane

Lane Change Assist cannot always clearly detect if the adjacent lane is free.

The lane change might be initiated although the adjacent lane is not free.

- ▶ Before changing lanes, make sure that the neighbouring lane is free and there is no danger to other road users.
- ▶ Monitor the lane change.

⚠ WARNING Risk of accident if Lane Change Assist unexpectedly stops functioning

If the system limitations for Lane Change Assist have been reached, there is no guarantee that the system will remain active.

Lane Change Assist cannot then assist you by applying steering torque.

- ▶ Always monitor the lane change and keep your hands on the steering wheel. Observe the traffic conditions and steer and/or brake if necessary.

System limits

The system limitations of Active Steering Assist apply to Active Lane Change Assist (→ page 258).

The system may also be impaired or may not function in the following situations:

- The sensors are damaged, covered or dirty (→ page 237).
- The exterior lighting shows a defect.

- The system does not detect a suitable road, for example, in tight bends or shortly after a slip road.
- The vehicle is on a construction site.

- ⓘ The Active Lane Change Assist sensors adjust automatically while a certain distance is being driven after the vehicle has been delivered. Active Lane Change Assist is unavailable or only partially available during this teach-in process, and no arrows are displayed next to the  Active Steering Assist symbol.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognise dangers (→ page 237).

Selecting Active Lane Change Assist

Multimedia system:

➔  ➔ Settings ➔ Assistance ➔ Driving

▶ Select **Active Lane Change Assist**.

Active Brake Assist


■ Function of Active Brake Assist

Active Brake Assist consists of the following functions:

- Distance warning function
- Collision warning
- Autonomous braking function
- Situation-dependent braking assistance
- **Vehicles with Driving Assistance Package and Active Steering Assist:** Evasive Steering Assist

Active Brake Assist can help you to minimise the risk of a collision with vehicles, cyclists or pedestrians or to reduce the effects of such a collision.

If Active Brake Assist has detected a risk of collision, a warning tone sounds and the  distance warning lamp lights up.

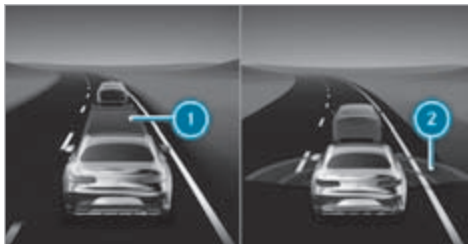

In the **Assistance** menu, an insufficient distance ① to the vehicle in front is displayed in red. If you further reduce the distance, the vehicle in front is also highlighted in red. When the system detects a risk of collision, red radar waves ② appear in front of the vehicle.

i Vehicles with PRE-SAFE®: depending on the country, an additional haptic warning occurs in the form of slight, repeated tensioning of the seat belt.

If you do not react to the warning, autonomous braking can be initiated in critical situations.

In particularly critical situations, Active Brake Assist can also initiate autonomous braking

directly. In this case, the warning lamp and warning tone occur simultaneously with the braking application.

If you apply the brake yourself in a critical situation or apply the brake during autonomous braking, situation-dependent braking assistance occurs. The brake pressure increases up to maximum full-stop braking if necessary.



If autonomous braking or situation-dependent braking assistance has occurred, pop up ① appears in the driver's display and then automatically goes out after a short time.

If the autonomous braking function or the situation-dependent braking assistance is triggered,

additional preventive measures for occupant protection (PRE-SAFE®) may also be initiated.

⚠ WARNING Risk of an accident caused by limited detection performance of Active Brake Assist

Active Brake Assist cannot always clearly identify objects and complex traffic situations.

In such cases, Active Brake Assist might:

- Give a warning or brake without reason
- Not give a warning or not brake

Active Brake Assist is only an aid. The driver is responsible for maintaining a sufficiently safe distance to the vehicle in front, vehicle speed and for braking in good time.

- ▶ Always pay careful attention to the traffic situation; do not rely on Active Brake Assist alone.
- ▶ Be prepared to brake or swerve if necessary.

If Active Brake Assist is deactivated or the functions are restricted, e.g. due to activation of

another driving system, the  display message appears in the driver's display.

If the system is unavailable due to dirty or damaged sensors or due to a fault, or if the functions are restricted, the  warning lamp appears in the driver's display.

Also observe the system limits of Active Brake Assist.

The individual subfunctions are available in the following speed ranges:

Distance warning function

You are warned by the distance warning function from approximately 30 km/h if, over several seconds, the distance maintained to the vehicle travelling in front is insufficient for the driven speed. In this case, the  warning lamp in the driver's display lights up. If the distance to the vehicle in front continues to decrease at higher speeds, the  warning lamp begins to flash.

Collision warning

Collision warning can assist you in the following situations from approximately 7 km/h with an

intermittent warning tone and the  warning lamp.

Vehicles without Driving Assistance Package:

- at speeds up to approximately 250 km/h when approaching vehicles ahead
- at speeds up to approximately 80 km/h when approaching stationary vehicles, pedestrians walking in the direction of travel and cyclists ahead
- at speeds up to approximately 70 km/h when approaching crossing pedestrians and cyclists
- at speeds up to approximately 60 km/h when approaching stationary pedestrians and cyclists

Vehicles with Driving Assistance Package:

- at speeds up to approximately 250 km/h when approaching vehicles ahead
- at speeds up to approximately 120 km/h when approaching crossing vehicles, pedestrians and cyclists
- at speeds up to approximately 100 km/h when approaching stationary vehicles

- at speeds up to approximately 80 km/h when approaching cyclists ahead
- at speeds up to approximately 70 km/h when approaching stationary pedestrians and cyclists

Autonomous braking function

If the vehicle is travelling at speeds above approximately 7 km/h, the autonomous braking function may intervene in the following situations:

Vehicles without Driving Assistance Package:

- at speeds up to approximately 250 km/h when approaching vehicles ahead
- at speeds up to approximately 80 km/h when approaching cyclists ahead, pedestrians walking in the direction of travel and stationary vehicles
- at speeds up to approximately 70 km/h when approaching crossing pedestrians and cyclists

Vehicles with Driving Assistance Package:

- at speeds up to approximately 250 km/h when approaching vehicles ahead

- at speeds up to approximately 120 km/h when approaching crossing vehicles, pedestrians and cyclists
- at speeds up to approximately 100 km/h when approaching stationary vehicles
- at speeds up to approximately 80 km/h when approaching cyclists ahead
- at speeds up to approximately 70 km/h when approaching standing pedestrians and cyclists

Situation-dependent braking assistance

If the vehicle is travelling at speeds above approximately 7 km/h, situation-dependent braking assistance may intervene in the following situations.

Vehicles without Driving Assistance Package:

- at speeds up to approximately 250 km/h when approaching vehicles ahead
- at speeds up to approximately 80 km/h when approaching cyclists ahead, pedestrians walking in the direction of travel and stationary vehicles
- at speeds up to approximately 70 km/h when approaching crossing pedestrians and cyclists

- at speeds up to approximately 60 km/h when approaching stationary pedestrians and cyclists

Vehicles with Driving Assistance Package:

- at speeds up to approximately 250 km/h when approaching vehicles ahead
- at speeds up to approximately 120 km/h when approaching crossing vehicles, pedestrians and cyclists
- at speeds up to approximately 100 km/h when approaching stationary vehicles
- at speeds up to approximately 80 km/h when approaching cyclists ahead
- at speeds up to approximately 70 km/h when approaching stationary pedestrians and cyclists

Cancelling a brake application of Active Brake Assist

You can cancel a brake application of Active Brake Assist at any time by:

- Fully depressing the accelerator pedal or with kickdown.

- Releasing the brake pedal.

Active Brake Assist may cancel the brake application when one of the following conditions is fulfilled:

- You manoeuvre to avoid the obstacle.
- There is no longer a risk of collision.
- An obstacle is no longer detected in front of your vehicle.

Reaction to oncoming road users (only vehicles with Driving Assistance Package)

Active Brake Assist can also react to detected oncoming road users:

- Reaction up to speeds of approximately 100 km/h
- Warning for oncoming road users through acoustic warning and warning lamp
- Autonomous braking application in order to reduce the severity of an accident

Evasive Steering Assist

WARNING Risk of accident despite Evasive Steering Assist

Evasive Steering Assist cannot always recognise objects or complex traffic situations clearly.

Moreover, the steering support provided by Evasive Steering Assist is not sufficient to avoid a collision.

- ▶ Always pay careful attention to the traffic situation; do not rely on Evasive Steering Assist alone.
- ▶ Be prepared to brake or swerve if necessary.
- ▶ End the support by actively steering in non-critical situations.
- ▶ Drive at an appropriate speed if there are pedestrians close to the path of your vehicle.

Evasive Steering Assist has the following characteristics:

- Detection of pedestrians, cyclists and vehicles.
- Assistance through power-assisted steering if it detects a swerving manoeuvre.
- Activation by an abrupt steering movement during a swerving manoeuvre.
- Assistance during swerving and straightening of the vehicle.
- Reaction from a speed of approximately 20 km/h up to a speed of approximately 110 km/h.

The steering support of Evasive Steering Assist can be cancelled at any time by counter steering.

System limits

Full system performance is not yet available for a short time after switching on the vehicle or after driving off. As long as the functions are restricted, the  warning lamp can also be shown in the driver's display. Depending on the environmental conditions, it may take a few minutes before full system performance is available.

The system may be impaired or may not function, particularly in the following situations:

- In snow, rain, fog, heavy spray, if there is glare, in direct sunlight or in greatly varying light conditions.
- If the sensors are dirty, misted up, damaged or covered. (→ page 237)
- If the sensors are impaired due to interference from other radar sources, e.g. strong radar reflections in multi-storey car parks.
- If a loss of tyre pressure or a defective tyre has been detected and displayed.
- In complex traffic situations where objects cannot always be clearly identified.
- If pedestrians, cyclists or vehicles move quickly into the sensor detection range.
- If road users are hidden by other objects or are located close to other objects.
- If the typical outline of a pedestrian or cyclist cannot be distinguished from the background.
- If a pedestrian or cyclist is not detected as such, e.g. due to special clothing or other objects.

- If the driver's seat belt is not fastened.
- On bends with a tight radius.

■ Setting Active Brake Assist

Requirements:

- The vehicle is switched on.

Multimedia system:

→  » Settings » Assistance
» Collision avoidance

▶ Activate or deactivate the function.

- ⓘ It is recommended that you always leave Active Brake Assist activated.

When Active Brake Assist is deactivated, the distance warning function, the collision warning, the autonomous braking function and Evasive Steering Assist are deactivated.

- ⓘ If Active Brake Assist is deactivated, the  symbol appears in the status bar of the driver's display, and the system is reactivated the next time the vehicle is started.

Setting the time of the brake application warnings

▶ Select  next to Active Brake Assist.

▶ Select **Early**, **Medium** or **Late**.

- ⓘ If ATTENTION ASSIST has detected indications of fatigue or a microsleep, the system can issue a warning earlier than the set time (country-dependent). Further information about ATTENTION ASSIST (→ page 244).

Speed Limit Assist

■ Function of Speed Limit Assist

- ⓘ Speed Limit Assist uses OpenStreetMap data, which is made available under the conditions of the Open Database License (ODbL). For more information, see: <https://www.osmfoundation.org/wiki/licence>.

Speed Limit Assist detects speed limits with multi-function camera and displays them in the driver's display and optionally in the head-up display. The camera also detects speed limits with a restriction indicated by an additional sign (e.g. when wet).

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognise dangers (→ page 237).

Warning when the maximum permissible speed is exceeded

The system can warn you if you unintentionally exceed the maximum permissible speed. Depending on the country, you can set in the multimedia system by how much the maximum permitted speed may be exceeded before a warning is given. You can set whether the warning should be visual (by flashing the traffic sign in the driver display) or visual and audible. The selection of the type of warning is confirmed country-specifically by an indication in the driver display.



- ① Warning only visual
- ② WARNING off

- ① The type, duration and activation threshold of the speed warning, as well as the possibility of setting the activation threshold above which the warning is to be triggered, are subject to the country-specific legislation of the country of delivery of the vehicle.

Display in the driver's display



- ① Permissible speed
- ② Permissible speed when there is a restriction
- ③ Additional sign with restriction
- ① Traffic signs which have an impact on the maximum permissible speed, e.g. signs indi-

cating the beginning or end of dual carriageways, can also be detected.

The system can show up to two traffic signs in the driver's display simultaneously. The system always prioritises displaying speed limits. Up to one traffic sign with a maximum permissible speed can be shown in the head-up display. If two speed signs are shown in the driver's display, for example when speed limits are detected, the value of left-hand speed limit ① is transmitted to the limiter, cruise control or Active Distance Assist DISTRONIC for adoption and is shown in the head-up display.

If Speed Limit Assist cannot determine the current maximum permissible speed (e.g. due to missing signs), the following display appears in the driver's display:



This is displayed continuously if the vehicle is in a country where Speed Limit Assist is not supported. Speed Limit Assist is not available in all countries.

If the system is temporarily or permanently unavailable due to a technical fault or soiling of the windscreen, the warning light  appears in the driver display.

- ❗ Please also note the information on the display messages (→ page 458).

System limits

The system may be impaired or may not function particularly in the following situations:

- If visibility is poor, e.g. due to insufficient illumination of the road, highly variable shade conditions, rain, snow, fog, swirling dust or heavy spray.
- If there is glare, e.g. from oncoming traffic, direct sunlight or reflections.
- If there is dirt on the windscreen in the vicinity of the multifunction camera or if the camera is misted up, damaged or obscured.
- if the traffic signs are difficult to see because, for example, they are dirty, obscured, faded, iced over, damaged, inconveniently positioned, insufficiently illuminated or distorted.
- Digital LED traffic signs may not be detected correctly or at all due to technical factors, such as transmission frequency.
- if the signs, road markings or road layout are ambiguous, e.g. in the case of traffic signs in construction sites, at exits and driveways, in the case of adjacent lanes or parallel roads, in the case of pedestrian crossing markings at traffic lights
- if the signage or road markings do not comply with the standard
- if the signage, road markings or road guidance is country-specific and deviates from the route guidance of the navigation system, e.g. in or after road works
- After sharp turns and tight bends, when traffic signs are outside the camera's field of vision.
- If you overtake vehicles with traffic signs which are affixed or attached to them.
- If you are using transport equipment secured with a trailer coupling, such as a bicycle rack, the system may react to restrictions for car/trailer combinations.

Setting Speed Limit Assist

Multimedia system:

➔  ➔ Settings ➔ Assistance
➔ Assistance ➔ Speed Limit Assist

Activating or deactivating the speed warning

- ❗ The speed warning is switched on by default (depending on the country).
- ▶ Switch off **Speed limit warning**.
The speed warning remains off according to country-specific legislation until the next time the vehicle is switched on or off and the driver's door is opened.
- ❗ The audible speed warning can also be switched off and on by quick access, by pressing and holding the mute button on the steering wheel, by pressing the speed icon in the status line of the central display or via a voice control command (functions are available depending on the country).

Change the type of speed warning

- ▶ Change the warning to **Visual only** or **Visual and acoustic**.

Switching the advisory tone for a new speed limit on or off

- ❶ The advisory tone for a new speed limit is switched off at the factory.

The function determines whether each change of the displayed speed in the driver's display is supported with a subtle, non-intrusive sound.

▶ Activate or deactivate the function.

- ❷ The availability of the function is dependent on the country.

Setting the warning threshold

This value determines the speed at which a warning is issued when exceeded.

▶ Select **Warning threshold**.

▶ Set the desired speed.

- ❸ The availability of the function is subject to country-specific legislation.
- ❹ When one of the following systems is active, the detected speed can be manually adopted as the speed limit:
 - Active Distance Assist DISTRONIC
 - Cruise control

- Variable limiter

Further information about Active Distance Assist DISTRONIC (→ page 252).

Traffic Sign Assist

Function of Traffic Sign Assist

- ❶ This function is an on-demand feature (→ page 22).

The traffic sign assistant detects the traffic signs with the multifunction camera and compares them with the information on the digital road map of the navigation system. It assists you by displaying detected speed limits and overtaking restrictions in the driver's display and in the head-up display. The system can issue a warning when you exceed the maximum permissible speed.

In some countries, the system can provide you with further functions and can warn you when you are approaching pedestrian crossings or when you are about to drive past stop signs or red lights unintentionally.

The camera also detects and analyses traffic signs with a restriction indicated by an additional sign (e.g. when wet).

Traffic Sign Assist portrays only selected signs in the driver's display. Actual traffic signs and speed limits have priority over traffic signs and speed limits shown in the driver's display.

Also observe the following information:

- select a speed adapted to the traffic, surroundings and weather conditions
- observe actual traffic signs
- observe applicable traffic rules and regulations

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognise dangers (→ page 237).

Displays in the driver's display



- ❶ Permissible speed
- ❷ Permissible speed when there is a restriction
- ❸ Additional sign with restriction

The system can show up to two traffic signs in the driver's display simultaneously. The system always prioritises displaying speed limits. Up to one traffic sign with a maximum permissible speed can be shown in the head-up display. If two speed signs are shown in the driver's display, for example when speed limits are detected, the value of left-hand speed limit ❶ is transmitted to the limiter, cruise control or Active Distance Assist DISTRONIC for adoption and is shown in the head-up display.



Examples of traffic signs which can be displayed

Traffic Sign Assist can detect and display following traffic signs ❶:

- speed limits
- end of the speed limit
- overtaking restrictions
- play streets
- depending on the country: signs showing the start or end of motorways and dual carriageways

Traffic Sign Assist can detect following additional signs ❸ and, if necessary, analyse the relevance of the restrictions using other vehicle sensors:

- when wet
- slippery road surfaces
- in fog
- temporary restrictions
- exits
- restrictions for car/trailer combinations

Traffic Sign Assist also uses data from the digital street map in the navigation system. When you leave or enter a municipality or change roads, on a motorway exit or slip road for example, or after you turn at a junction, the display in the driver's display can thus be updated without a traffic sign having been detected.

- ❶ Update the digital road map of the navigation system regularly so that the traffic sign assistant can work optimally.

If Traffic Sign Assist cannot determine the currently applicable maximum permissible speed (e.g. due to missing signs), the following display appears in the driver's display:



Traffic Sign Assist is not available in all countries. If the vehicle is in a country where Traffic Sign Assist is not supported, this is displayed continuously.


If Traffic Sign Assist is temporarily or permanently unavailable due to a technical fault or soiling of the windscreen, the warning light  appears in the driver display.

- ❗ Please also note the information on the display messages of the traffic sign assistant (→ page 458).

Warning when the maximum permissible speed is exceeded

The system can warn you if you unintentionally exceed the maximum permissible speed. Depending on the country, you can set in the multimedia system by how much the maximum permitted speed may be exceeded before a warning is given. You can switch off the warning or set whether the warning should be visual (by flashing the traffic

sign in the driver display) or visual and audible. The selected setting is confirmed by an indication in the driver's display.

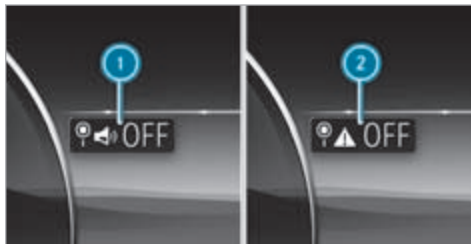

- ❶ Warning only visual
- ❷ WARNING off

- ❗ The type, duration and activation threshold of the speed warning, as well as the possibility of setting the activation threshold above which the warning is to be triggered, are subject to the country-specific legislation of the country of delivery of the vehicle.

Additional functions of Traffic Sign Assist (country-specific)

Warning for no-entry signs: Traffic Sign Assist can warn you if you drive the wrong way down a section of road, for example on motorway slip roads or one-way streets.

Warning at pedestrian crossings: if you approach pedestrian crossings, provided that pedestrians are in the danger zone or are moving towards it, Traffic Sign Assist can warn you up to a speed of approximately 70 km/h.

Warning at stop signs: Traffic Sign Assist can warn you up to a speed of approximately 70 km/h if you are about to drive past a stop sign unintentionally. For this to be possible, the signs must be clear, for example if the system detects more than one stop sign, or a stop sign can be confirmed using the digital navigation map. No warning can be issued if several different signs are detected.

Warning at red lights: Traffic Sign Assist can warn you up to a speed of approximately 70 km/h if you are about to drive through a red light unintentionally.

The following conditions must be fulfilled:

- Several traffic lights have been detected.
 - All traffic lights detected are red.
 - At least one of the red traffic lights detected is on the front passenger side beside the vehicle's own lane.
 - The traffic lights are in the following sequence (from top to bottom): red, yellow, green.
-  If the function is available, you can activate or deactivate the warnings at pedestrian crossings, stop signs and red lights in the Traffic Sign Assist menu under **Further warnings** (→ page 275).

System limits

The system may be impaired or may not function particularly in the following situations:

- If visibility is poor, e.g. due to insufficient illumination of the road, highly variable shade conditions, rain, snow, fog, swirling dust or heavy spray.
- If there is glare, e.g. from oncoming traffic, direct sunlight or reflections.
- If there is dirt on the windscreen in the vicinity of the multifunction camera or if the camera is misted up, damaged or obscured.
- If the traffic signs are difficult to see because, for example, they are dirty, obscured, faded, iced over, damaged, inconveniently positioned, insufficiently illuminated or distorted.
- Active traffic signs with LED displays may not be detected correctly or at all due to technical factors, such as transmission frequency.
- If the information on the navigation system's digital map is incorrect, incomplete or out of date.
- If the signs, road markings or road layout are ambiguous, e.g. in the case of traffic signs in construction sites, at exits and driveways, in the case of adjacent lanes or parallel roads, in the case of pedestrian crossing markings at traffic lights
- If the signage or road markings do not comply with the standard
- If the signage, road markings or road guidance is country-specific and deviates from the route

guidance of the navigation system, e.g. in or after road works

- After sharp turns and tight bends, when traffic signs are outside the camera's field of vision.
- If you overtake vehicles with traffic signs which are affixed or attached to them.
- If you are using transport equipment secured to the vehicle with a trailer coupling, such as a bicycle rack, restrictions for car/trailer combinations may be considered valid if applicable.

Setting Traffic Sign Assist

Multimedia system:

  **» Settings » Assistance**
» Assistance » Traffic Sign Assist

Activating or deactivating the speed warning

-  Activate or deactivate **Speed limit warning**.

Activating or deactivating further functions of Traffic Sign Assist

-  Switch **Further warnings** or **Additional warning tone** on or off.

Setting the warning threshold

This value determines the speed at which a warning is issued when exceeded.

- ▶ Set the desired speed under [Warning threshold](#).
- ❶ This function is an on-demand feature (→ page 22).

Traffic light view

Information about the traffic light view

The traffic light view supports the driver when waiting in front of a red light by displaying the camera image on the central display. The camera image is displayed when the driver is the first vehicle in front of the red light and faded out when the vehicle drives off.

Displaying traffic light view

Requirements:

- The [Traffic light view](#) option is switched on .
- A traffic light view is available.

Multimedia system:

→  » [Settings](#) » [Assistance](#)
» [Assistance](#) » [Traffic light view](#)

❶ This function is not available in all countries.

If the vehicle is in first position at a traffic light, the camera image with traffic light view is shown on the central display.

When the vehicle pulls away, the camera image is faded out.

▶ Activate  or deactivate  [Traffic light view](#).

Using other available functions

- ▶ Select .
- ▶ Select [On request](#) or [Automatic](#).
If [On request](#) is set and a traffic light view is available, the [Please tap here for traffic light view](#) message is displayed. The camera image is shown after confirmation of the message.
When [Automatic](#) is set, the camera image is automatically displayed when the traffic light view is available.

Blind Spot Assist and Active Blind Spot Assist

Function of Blind Spot Assist and Active Blind Spot Assist with exit warning

Blind Spot Assist and Active Blind Spot Assist use radar sensors to monitor the area up to 40 m behind and 3 m next to your vehicle.

The system can detect vehicles travelling from speeds of approximately 12 km/h and issue a warning if they move into the monitoring range.

Status display in the driver's display

 **Grey:** the system is activated but inoperative.

 **Green:** the system is activated and operational.



Display in the driver's display in the **Assistance** menu

If a vehicle is detected at speeds above approximately 12 km/h and this vehicle enters the warning range immediately afterwards, the warning lamp in the corresponding outside mirror lights up red. In the **Assistance** menu, the lamp in outside mirror ① also lights up red, and the lane in which the vehicle is detected is hatched out.

If a vehicle is detected in the warning range and you switch on the turn signal indicator in the corresponding direction, a double warning tone sounds once, and the warning lamp flashes red in the corresponding outside mirror. Red radar

waves ② are displayed next to your vehicle in the assistance graphic.

If the turn signal indicator remains on, the display in the outside mirror flashes for all other detected vehicles, but no further warning tone sounds. If you overtake a vehicle quickly, no warning is given.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognise dangers (→ page 237).

⚠ WARNING Risk of accident despite Blind Spot Assist

Blind Spot Assist does not react to vehicles approaching and overtaking you at a greatly different speed.

Blind Spot Assist cannot warn drivers in this situation.

▶ Always pay careful attention to the traffic situation and maintain a safe distance at the side of the vehicle.

Exit warning

The exit warning is an additional function of Blind Spot Assist and Active Blind Spot Assist and can warn vehicle occupants attempting to leave a stationary vehicle about approaching vehicles.

⚠ WARNING Risk of accident despite exit warning

The exit warning neither reacts to stationary objects nor to persons or road users approaching you at a greatly differing speed.

The exit warning cannot warn drivers in these situations.

▶ Always pay particular attention to the traffic situation when opening the doors and make sure there is sufficient clearance.

If a vehicle is detected in the monitoring range, the red warning lamp lights up in the corresponding outside mirror.

If a vehicle occupant pulls the door handle on the side of the warning, a warning tone sounds twice and the ambient lighting in the respective door

and the warning lamps in the corresponding outside mirror flash red.

- ❶ **Vehicles with ambient lighting:** the **Warning assistance** of the ambient lighting can be activated and deactivated (→ page 152).
- ❷ The warning assistance can differ depending on the equipment and may vary according to the setting.

This exit warning is only available when Blind Spot Assist is active.

After the vehicle is switched off, the exit warning continues to function for a few minutes. When the outside mirror warning lamp flashes three times, the exit warning is no longer available.

The exit warning is only an aid and not a substitute for the attention of vehicle occupants. The responsibility for opening and closing the doors and for leaving the vehicle remains with the vehicle occupants.

System limits

Blind Spot Assist and Active Blind Spot Assist may be limited in the following situations, in particular:

- if there is dirt on the sensors or the sensors are obscured
- in poor visibility, e.g. due to fog, heavy rain or snow
- if there are narrow vehicles, e.g. bicycles or motorbikes
- if the road has very wide or narrow lanes
- if vehicles are not driving in the middle of their lane

Warnings may be issued in error when driving close to crash barriers or similar continuous lane borders. Always make sure that there is sufficient distance to the side for other traffic or obstacles.

Warnings may be interrupted when driving alongside long vehicles, for example lorries, for a prolonged time.

Blind Spot Assist and Active Blind Spot Assist are not operational when reverse gear is engaged.

Blind Spot Assist and Active Blind Spot Assist are not operational if transport equipment, for example a trailer or bicycle rack, is attached to the trailer hitch and the electrical connection has been correctly established.

Additionally, the exit warning may be limited in the following situations:

- when the sensors are covered by adjacent vehicles in narrow parking spaces
- when people approach the vehicle
- in the event of stationary or slowly moving objects

■ Function of the brake application of Active Blind Spot Assist

- ❶ The brake application function is only available for vehicles with a Driving Assistance Package.

If Active Blind Spot Assist detects a risk of a side impact in the monitoring range, a course-correcting brake application is carried out. This is designed to help you avoid a collision.

The course-correcting brake application is available in the speed range between approximately 30 km/h and approximately 200 km/h.

⚠ WARNING Risk of accident despite brake application of Active Blind Spot Assist

A course-correcting brake application cannot always prevent a collision.

- ▶ Always steer, brake or accelerate yourself, especially if Active Blind Spot Assist warns you or makes a course-correcting brake application.
- ▶ Always maintain a safe distance at the sides.



If a course-correcting brake application occurs, the red warning lamp flashes in the outside mirror and a warning tone sounds. In addition, a display ❶ indicating the danger of a side collision appears in the driver's display.

In rare cases, the system may make an inappropriate brake application. This brake application may be interrupted at any time if you steer slightly in the opposite direction or accelerate.

System limits

Either a course-correcting brake application appropriate to the driving situation, or none at all, may occur especially in the following situations:

- Vehicles or obstacles, e.g. crash barriers, are located on both sides of your vehicle.
- A vehicle approaches too closely on the side.
- You have adopted a sporty driving style with high cornering speeds.
- You brake or accelerate significantly.
- A driving safety system intervenes, e.g. ESP® or Active Brake Assist.
- ESP® is deactivated.

- A loss of tyre pressure or a defective tyre is detected.
- Transport equipment, for example a trailer or bicycle rack, is attached to the trailer hitch and the electrical connection has been correctly established.

■ Activating/deactivating Blind Spot Assist or Active Blind Spot Assist

Multimedia system:

➡ 🏠 ➡ Settings ➡ Assistance
➡ Collision avoidance

- ▶ Activate or deactivate **Active Blind Spot Assist**.

Active Lane Keeping Assist

■ Function of Active Lane Keeping Assist

Active Lane Keeping Assist monitors the area in front of your vehicle by means of the multifunction camera (→ page 237) and can warn you before you leave your lane unintentionally. The system can guide you back into your lane through a course-correcting steering intervention and additionally warns you with vibration pulses in the

steering wheel. Active Lane Keeping Assist is available in the speed range between 60 km/h and 200 km/h.

The system can intervene in the following situations:

- Active Lane Keeping Assist detects a lane marking.
- One of your front wheels goes over a lane marking.

If you activate the turn signal indicator, a steering intervention does not occur on the corresponding side.

If you leave the lane without activating the turn signal indicator, but danger of a collision with a moving obstacle is detected in your lane, a steering intervention does not occur.

Vehicles with Blind Spot Assist or Driving Assistance Package: if the system detects an obstacle, such as another vehicle in the adjacent lane, a steering intervention will occur regardless of the turn signal indicator.

In the following situations (country-dependent), Active Lane Keeping Assist may already react from a speed of approximately 45 km/h:

- If your own vehicle is overtaken by another road user and the danger of a collision is detected, a lane-correcting steering intervention occurs
- If you drive over a detected lane marking, the system warns you with vibration pulses in the steering wheel.



Display ① will appear in the driver's display and a warning tone will sound in the following situations:

- A steering intervention by Active Lane Keeping Assist lasts longer than approximately ten seconds.
- The system carries out two or more steering interventions within approximately three minutes without any steering intervention from the driver.

In the Active Lane Keeping Assist settings, you can set the sensitivity of the system and set the level of support. Additionally, you can set whether the system should react to discontinuous lane markings or only continuous lane markings (→ page 282).

If ATTENTION ASSIST has detected indications of fatigue or a microsleep, the most sensitive setting is automatically selected (→ page 244).

Status displays for Active Lane Keeping Assist



White: Active Lane Keeping Assist is deactivated.

If ESP® is deactivated or a tire pressure loss warning is displayed, Active Lane

Keeping Assist is automatically deactivated.



Yellow: there is a malfunction. Please also observe the display messages.



Grey: Active Lane Keeping Assist is activated, but not operating.



Green: Active Lane Keeping Assist is activated and operating. If the system is operational on only one side, the lane marking is shown in green on the corresponding side.



Red: Active Lane Keeping Assist has guided you back into your lane with a course-correcting steering intervention. The status display will flash if there is also a haptic warning in the steering wheel. The lane marking is shown in red only on the side for which there is a warning.

Vehicles without Driving Assistance Package: if both lane markings are simultaneously shown in red in the status display, Active Lane Keeping Assist has initiated an emergency stop (→ page 261).

Active Lane Change Assist display in the "Assistance" menu



If the front wheel of the vehicle drives over a detected lane marking, this will be highlighted red in the **Assistance** menu in the driver's display.

System limits

In the following situations, a lane-correcting steering intervention may not occur but rather a warning may be given on the steering wheel, depending on the situation:

- You clearly and actively steer, brake or accelerate.

- If a driving safety system intervenes, such as ESP®, Active Brake Assist or Active Blind Spot Assist.
- You have adopted a sporty driving style with high cornering speeds or high rates of acceleration.
- If transport equipment, for example a trailer or bicycle rack, is attached to the trailer hitch and the electrical connection has been correctly established.

The system may be impaired or may not function particularly in the following situations:

- If there is poor visibility, e.g. due to insufficient illumination of the road, highly variable shade conditions, rain, snow, fog or heavy spray.
- If there is glare, e.g. from oncoming traffic, the sun or reflections.
- If there is dirt on the windscreen in the vicinity of the multifunction camera or if the camera is misted up, damaged or obscured.
- If there is dirt on the bumper in the area of the radar sensors, or if they are damaged or covered.

- If there are no lane markings, or several unclear lane markings are present for one lane, e.g. around roadworks.
- If the lane markings are worn, dark or covered.
- If the distance to the vehicle in front is too short and thus the lane markings cannot be detected.
- If the lane markings change quickly, e.g. lanes branch off, cross one another or merge.
- If the carriageway is very narrow and winding.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognise dangers (→ page 237).

■ Activating/deactivating Active Lane Keeping Assist

Multimedia system:

- ➔  ➔ Settings ➔ Assistance
- ➔ Collision avoidance
- ➔ Active Lane Keeping Assist
- ▶ Activate or deactivate the function.

Alternatively, Active Lane Keeping Assist can be activated and deactivated via quick-access.

- ⓘ After starting the vehicle, the settings are country-specific.

■ Setting Active Lane Keeping Assist

Multimedia system:

- ➔  ➔ Settings ➔ Assistance
- ➔ Collision avoidance
- ➔ Active Lane Keeping Assist

Setting the sensitivity

- ▶ Select .
- ▶ Select **Early**, **Med.** or **Late**.

The last selected setting will be adopted the next time the vehicle is started.

- ⓘ The standard setting for this function is dependent on the country.

Activating or deactivating assistance on discontinuous lane markings

- ▶ Select **Advanced support**.

The last selected setting will be adopted the next time the vehicle is started.

- ⓘ The standard setting for this function is country-specific.
- ⓘ This function must be activated in vehicles without Driving Assistance Package, so that Emergency Stop Assist is fully available. Further information on Emergency Stop Assist (→ page 261)

Function of the rear axle level control system

- ⓘ The rear axle level control system is only available for plug-in hybrids.

The rear axle level control system ensures a constant vehicle level on the rear axle, even with a laden vehicle.

The rear axle level control system consists of:

- air suspension on the rear axle
- automatic level control system for load compensation

AIRMATIC

■ Function of AIRMATIC

AIRMATIC is an air suspension system with variable damping for improved driving comfort. The all-round level control system ensures the best possible suspension and constant ground clearance, even with a laden vehicle. When driving at speed, the vehicle is lowered automatically to improve driving safety and to reduce energy consumption. You also have the option of manually adjusting the vehicle level.

AIRMATIC includes the following components and functions:

- air suspension with automatic all-round level control
- ADS PLUS (Adaptive Damping System with constant damping force adjustment)
- speed-dependent lowering of the vehicle level
- increased vehicle level for greater ground clearance, selected via the multimedia system

Suspension setting and vehicle level per drive program

Drive program :

- comfortable suspension setting
- adjusting the vehicle to normal level
- lowering the vehicle at speeds above approx. 120 km/h to low level -1
- raising the vehicle at speeds below approx. 80 km/h

Drive program :

- comfortable suspension setting
- adjusting the vehicle to low level -1
- lowering the vehicle at speeds above approx. 120 km/h to low level -2
- raising the vehicle at speeds below approx. 80 km/h to low level -1

Drive program :

- firmer suspension setting
- adjusting the vehicle to low level -1
- no speed-dependent lowering of the vehicle

Drive program :

- suspension setting for off-road
- raising the vehicle at speeds below approx. 80 km/h to off-road level +1
- lowering the vehicle at speeds above approx. 110 km/h to normal level and switching to 
- at speeds below approx. 80 km/h, it is possible to select  again
- **vehicles with Off-road package:** raising the vehicle at speeds below approx. 20 km/h to off-road level +2 via the multimedia system possible (→ page 284)

Individual suspension settings can be called up in drive program  (→ page 200).

Differences between different vehicle levels compared to the normal level

- **Off-road level +2** (only vehicles with Off-road package)
 - approx. +50 mm
- **Off-road level +1**
 - approx. +15 mm (Brazil: approx. +30 mm)

- **Low level -1**

- in drive program : approx. -10 mm
- in drive program , , : approx. -15 mm

- **Low level -2** (only in drive program)

- approx. -20 mm

 **Operation with a trailer or bicycle rack:** if transport equipment, such as a trailer or a bicycle rack, is attached to the trailer hitch and the electrical connection has been correctly established, the vehicle always remains at normal level in all drive programs with the exception of . In drive program , the vehicle lowers above speeds of approx. 30 km/h to normal level.

Setting the vehicle level

 **WARNING** Risk of accident because vehicle level is too high

Driving characteristics may be impaired.

The vehicle can drift outwards, for example, when steering or cornering.

 Choose a vehicle level which is suited to the driving style and the road surface conditions.

 **WARNING** Risk of entrapment from vehicle lowering

When lowering the vehicle, other people could become trapped if their limbs are between the vehicle body and the tyres or underneath the vehicle.

 Make sure no one is underneath the vehicle or in the immediate vicinity of the wheel arches when the vehicle is being lowered.

 **WARNING** Risk of becoming trapped due to the vehicle lowering

Vehicles with AIRMATIC or level control: when you unload luggage or leave the vehicle, the vehicle first rises slightly and then returns to the set level shortly afterwards.

You or anyone else in the vicinity of the wheel arches or the underbody could thus become trapped.

The vehicle can also be lowered after being locked.

 When leaving the vehicle, make sure that nobody is in the vicinity of the wheel arches or the underbody.

 **NOTE** Damage due to vehicle lowering

Parts of the body could be damaged when the vehicle is lowered.

 Make sure that there are no obstacles such as kerbs underneath or in the immediate vicinity of the body when the vehicle is being lowered.

Requirements:

- The vehicle has been started.
- **Vehicles without Off-road package:** the vehicle is not moving faster than 80 km/h.
- **Vehicles with Off-road package:**

- Off-road level +1: the vehicle is not moving faster than 80 km/h.
- Off-road level +2: the vehicle is not moving faster than 20 km/h in drive program



- When the trailer socket is contacted (trailer/bicycle rack): the vehicle is not moving faster than 30 km/h.

Multimedia system:



Raising the vehicle

- ▶ Select .
- The indicator lamp lights up continuously.
- The vehicle is raised to off-road level +1.

Your selection is saved. Off-road level+1 set remains stored even after the vehicle has been switched off.

The vehicle is lowered again in the following situations:

- When driving faster than 120 km/h.

- When the trailer socket is contacted (trailer/bicycle rack): the vehicle is moving faster than 30 km/h.

Raising the vehicle (vehicles with Off-road package)

- ▶ Select .
- The indicator lamp lights up continuously.
- The vehicle is raised to off-road level +1.

Your selection is saved. High level +1 set remains stored even after the vehicle has been switched off.

The vehicle is lowered again in the following situations:

- Off-road level +1: when driving faster than 120 km/h.
- Off-road level +2: when driving faster than 20 km/h. The vehicle is lowered to off-road level +1.
- When the trailer socket is contacted (trailer/bicycle rack): the vehicle is moving faster than 30 km/h.

Lowering the vehicle

- ▶ Select .
- The indicator lamp goes out.
- The vehicle is adjusted to the normal level.

Lowering the vehicle (vehicles with Off-road package)

- ▶ Select in off-road level +2.
- The vehicle is lowered to off-road level +1.
- ▶ Select in off-road level +1.
- The indicator lamp goes out.
- The vehicle is adjusted to the normal level.
- ⓘ Use the normal level in trailer operation. Off-road-level driving is not permitted in trailer operation on public roads.

Lowering and raising the rear of the vehicle

⚠ WARNING Risk of entrapment from vehicle lowering


When lowering the vehicle, other people could become trapped if their limbs are between the vehicle body and the tyres or underneath the vehicle.

- Make sure no one is underneath the vehicle or in the immediate vicinity of the wheel arches when the vehicle is being lowered.

Requirements:

- all vehicle doors are closed
- there is no trailer coupled
- there is no bicycle rack fitted
- the battery is sufficiently charged (if necessary, start the engine)

Lowering the rear of the vehicle

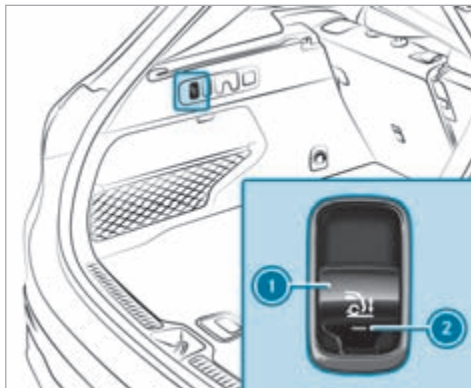

- Apply the electric parking brake.
- Shift the transmission to position **P** (→ page 203).
- Pull switch ① in the load compartment trim briefly. Indicator lamp ② flashes until the vehicle has been lowered.

The vehicle is lowered at the rear axle by approx. 40 mm. When the vehicle has been lowered, indicator lamp ② remains lit.

Lowering is interrupted in the following situations:

- a vehicle door is opened.
 - switch ① is pulled again.
 - the vehicle is being driven faster than 2 km/h.
- ❗ The vehicle is automatically set to the level of the drive program selected if you drive at speeds greater than 2 km/h.

If indicator lamp ② flashes twice and the rear of the vehicle does not lower:

- Make sure that the requirements are met.
- ❗ Lowering the rear of the vehicle allows the vehicle to be loaded more easily. Observe the notes on loading the vehicle when doing this (→ page 120).

Raising the rear of the vehicle

- Check if the battery is sufficiently charged. If necessary, start the engine.

- ▶ Pull switch ① briefly.
Indicator lamp ② goes out.
- The vehicle will be raised to the currently selected level.

If the vehicle cannot be raised:

- ▶ Ensure that the battery is sufficiently charged;
if necessary, start the engine.
- The raising process continues.


Reversing camera

Function of the reversing camera

The reversing camera monitors the area behind your vehicle. If you have activated the function (→ page 295), the image from the reversing camera is automatically displayed in the central display when reverse gear is engaged.

The reversing camera is only an aid. It is not a substitute for your attention to the surroundings. The responsibility for safe manoeuvring and parking remains with you. Make sure that there are no persons, animals or objects etc., in the manoeuvring area while manoeuvring and parking.

- ① The area behind the vehicle is displayed as a mirror image, as in the inside rear view mirror.

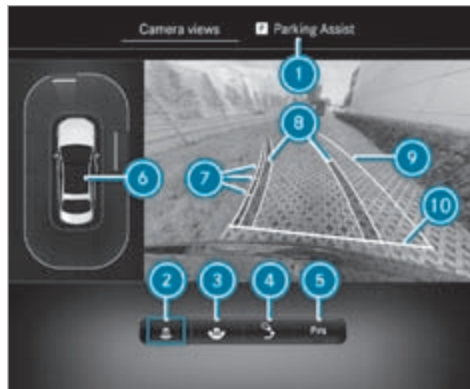

Camera views menu (top view)

- ① Parking Assistance menu
- ② Reversing camera with top view
- ③ Wide-angle view
- ④ Trailer view

- ⑤ Activates/deactivates Parking Assist PARKTRONIC (→ page 299)
- ⑥ Warning display of Parking Assist PARKTRONIC (→ page 308, 296)
- ⑦ Guide lines at a distance of approximately 0.5 m, 1.0 m, 1.5 m and 3.0 m from the rear area
- ⑧ Path marking the course the tyres will take with the current steering wheel angle (dynamic)
- ⑨ Driven surface depending on the current steering wheel angle (dynamic)
- ⑩ Guide line at a distance of approximately 0.3 m from the rear area
- ① When Active Parking Assist is active, lanes are displayed in green (→ page 299).



Wide-angle view



Trailer view

- ① Yellow guide line, locating aid
- ② Red guide line at a distance of approximately 0.3 m from the ball head of the trailer hitch
- ③ Ball head of the trailer hitch

System limits

If the system is not ready for operation, the **System inoperative** message appears in the central display.

The reversing camera will not function or will only partially function in the following situations:

- You are driving forwards at a speed greater than approximately 16 km/h.
- The tailgate is open.
- The weather conditions are poor, e.g. heavy rain, snow, fog, storm or spray.
- The light conditions are poor, e.g. at night or if light is shining into the camera.
- The camera lens is obstructed, dirty or misted up. Observe the notes on cleaning the reversing camera (→ page 394).
- The camera or rear of your vehicle is damaged. In this case, have the camera and its position and setting checked at a qualified specialist workshop.
- The detection range is limited by additional vehicle attachments at the rear, such as a licence plate bracket or bicycle rack.

Also observe the information on vehicle sensors and cameras (→ page 237).

- ❗ Do not use the reversing camera in these types of situations. You could otherwise injure others or collide with objects when parking the vehicle.
- ❗ The contrast of the display may be impaired by direct sunlight or by other light sources, e.g. when driving out of a garage. In this case, pay particular attention.
- ❗ Have the display repaired or replaced if, for example, pixel errors considerably restrict its use.

360° Camera

Function of the 360° Camera

The 360° Camera is a system that consists of four cameras which cover the immediate surroundings of the vehicle. The cameras assist you when you are parking, for example, or at exits with reduced visibility.

If you have activated the function, the image from the reversing camera is automatically displayed in


the central display when reverse gear is selected (→ page 295).

The 360° Camera includes the following cameras and evaluates their images:

- Reversing camera
- Front camera
- Two side cameras in the outside mirrors

The cameras are only an aid and may show a distorted view of obstacles, show them incorrectly or not show them at all. They are not a substitute for your attention to the surroundings. The responsibility for safe manoeuvring and parking remains with you. Make sure that there are no persons, animals or objects etc., in the manoeuvring area while manoeuvring and parking.


Menu overview **Camera views**

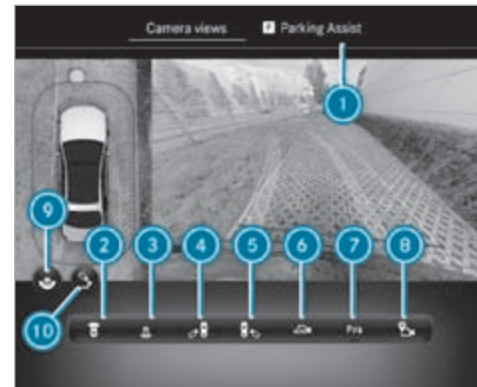

- ❶ Menu **Parking Assistance**
- ❷ Top view with image from the front camera
- ❸ Top view with image from the reversing camera
- ❹ 3D view, left-hand side of the vehicle
- ❺ 3D view, right-hand side of the vehicle
- ❻ 3D auto view

- ⑦ To activate/deactivate Parking Assist PARKTRONIC (→ page 299)
- ⑧ To set the GPS activation point (→ page 295)
- ⑨ To switch between standard and wide-angle view
- ⑩ To switch between standard and trailer view
- ① In all views, the Parking Assist PARKTRONIC warning display is shown (→ page 296).

Function of the guide lines

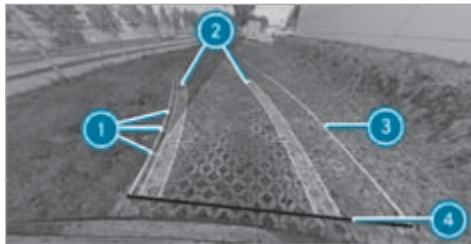

- ① Guide lines at a distance of approximately 0.5 m, 1.0 m, 1.5 m and 3.0 m from the rear area
- ② Path marking the course the tyres will take with the current steering wheel angle (dynamic)
- ③ Driven surface depending on the current steering wheel angle (dynamic)
- ④ Guide line at a distance of approximately 0.3 m from the rear area

- ① When Active Parking Assist is active, lanes and guide lines are displayed in green instead of yellow (→ page 299).

Top view with image from the front or reversing camera



- ① Warning display of Parking Assist PARKTRONIC (→ page 308, 296)
- ② Your vehicle from above
- ③ Lane indicating the route the vehicle will take at the current steering angle

3D view, left/right-hand side of the vehicle

! **NOTE** Risk of accident due to objects being severely distorted in the display or not displayed at all

Due to the projection of the cameras, objects in the 3D views may be severely distorted when displayed or not displayed at all.

► Make sure that there are no persons, animals or objects etc. in the manoeuvring area while manoeuvring and parking.




① Display of Parking Assist PARKTRONIC (→ page 296)

In the 3D view, left-/right-hand side of the vehicle, the virtual camera moves to the respective side of the vehicle. When you change the transmission position, the view is automatically adapted.

3D auto view

① The area behind the vehicle is **not** displayed as a mirror image as is usual in the 3D views.

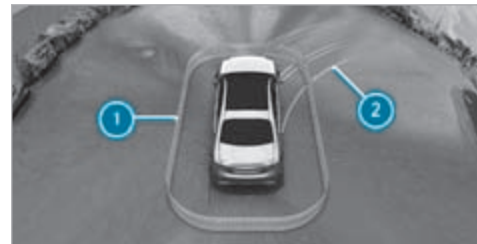

① Display of Parking Assist PARKTRONIC (→ page 296)

② Guide lines

In the 3D auto view, the virtual camera moves to the standard perspective, facing forward from the rear above the roof. The view changes automatically when approaching obstacles.

If you touch the touchscreen, the view changes to 3D view with free rotation. You can turn, tilt and zoom the views by touch.

Wide-angle view




- ① Display of Parking Assist PARKTRONIC (→ page 296)
- ② To switch between standard and wide-angle view

Trailer view

- ① In trailer mode, the guide lines are shown at the level of the trailer hitch.


If you select trailer view and no trailer is coupled to the vehicle, the following display appears:

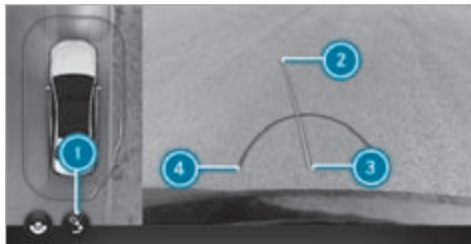

Trailer view: locating aid

- ① To switch between standard and trailer view
- ② Yellow locating aid
- ③ Ball head of the trailer hitch
- ④ Red guide line at a distance of approximately 0.3 m from the ball head of the trailer hitch

When the electrical connection is established between the vehicle and the trailer, the display changes to the side camera view.

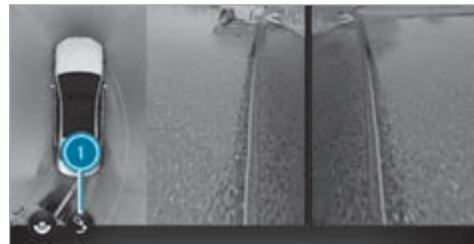

Trailer view: side view of the mirror cameras

- ① To switch between standard and trailer view

System limits

If the system is not ready for operation, the **System inoperative** message appears in the central display.

The 360° Camera will not function or will only partially function in the following situations:

- You are driving forwards at a speed greater than approximately 16 km/h.
- The doors are open.
- An outside mirror is not completely folded out.
- The tailgate is open.

- The weather conditions are poor, e.g. heavy rain, snow, fog, storm or spray.
 - The light conditions are poor, e.g. at night or if light is shining into the camera.
 - The camera lens is obstructed, dirty or misted up.
 - If cameras or vehicle components in which the cameras are fitted are damaged. In this event, have the cameras, their positions and their setting checked at a qualified specialist workshop.
- i** Do not use the 360° Camera under such circumstances. You could otherwise injure others or collide with objects when parking the vehicle.

For technical reasons, the standard height of the vehicle may be altered if the vehicle is carrying a heavy load and can result in inaccuracies in the guide lines and in the display of the generated images.

The field of vision and other functions of the camera system may be restricted due to additional attachments on the vehicle (e.g. licence plate bracket, bicycle rack).

- i** The contrast of the display may be impaired by abrupt, direct sunlight or by other light sources, e.g. when driving out of a garage. In this case, pay particular attention.
- i** Have the display repaired or replaced if, for example, pixel errors considerably restrict its use.

See the notes on cleaning the 360° Camera (→ page 394).

■ Off-road function of the 360° camera

The 360° camera can support you with different views when driving off-road.

The following views are available:


- Transparent bonnet
- Front view
- Rear view

To call up the function, call up the off-road menu in the multimedia system (→ page 347).

- i** Active Parking Assist and the manoeuvring assistance functions are  not available in the driving programme. PARKTRONIC Parking Assist is available in all driving programmes

when it is switched on. Please also note the system limits of the respective functions.

Transparent bonnet

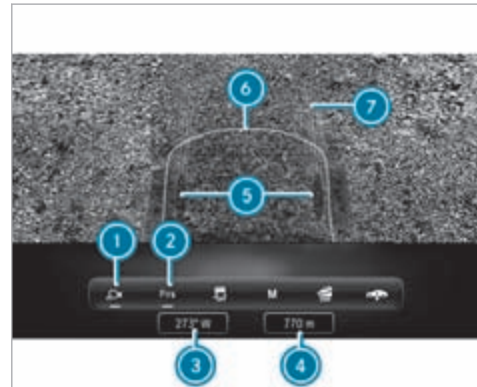

- ① Switch camera view on/off
- ② Activating/deactivating PARKTRONIC (→ page 296)
- ③ Point of the compass
- ④ Altitude above sea level


- ⑤ Position of the wheels
- ⑥ Area under the bonnet
- ⑦ Lane indicating the route the vehicle will take at the current steering angle

If the off-road menu is open in the central display and the button ① is switched on, the Transparent bonnet view is automatically displayed in gearbox position **D**.

The Transparent Bonnet view shows a virtual image of the area directly in front of the bumper, in front of the tyres and under the bonnet. In addition, the current lane is displayed. The Transparent Bonnet can assist you when driving in difficult terrain, e.g. on rocky or uneven ground.

The hatched area under the bonnet ⑥ was captured and recorded by the front camera. As soon as the area has been crossed by the vehicle, it is faded in. If the vehicle has not been moved for some time, the recorded area is displayed in grey-scale and faded out.

Front and rear view

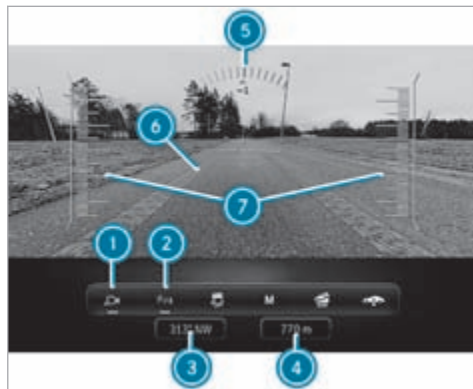

- ① Switch camera view on/off
- ② Activating/deactivating PARKTRONIC (→ page 296)
- ③ Point of the compass
- ④ Altitude above sea level
- ⑤ Roll display

- ⑥ Lane indicating the route the vehicle will take at the current steering angle

- ⑦ Pitch display

- ⓘ Note that the area between the vehicle and up to approx. 1 m in front of the vehicle is not displayed.

The slope and inclination indicators are only shown in the front view.

If the vehicle is travelling faster than approx. 8 km/h the view automatically changes from Transparent Bonnet to Front View. If the vehicle is travelling faster than approx. 20 km/h, the camera image is closed.

When you engage reverse gear, the image from the reversing camera is automatically displayed.


System limits

The area under the bonnet may not be displayed correctly in the following situations:

- in the rain
- Driving in the dark
- When shadows fall on the area recorded by the camera

Observe the instructions on the function of the 360° camera as well as its system limits, otherwise you will not be able to recognise dangers (→ page 289).

■ Calling up the 360° Camera views using the button

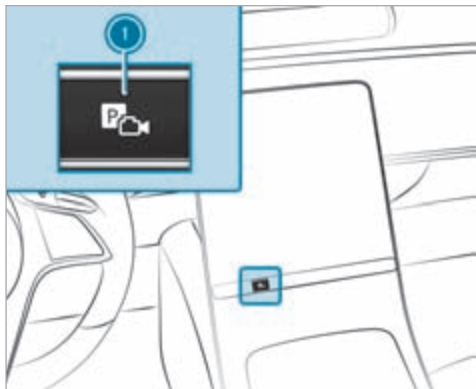

- ▶ Press button ①.
- ▶ Select the **Camera views** menu.

- ▶ In the multimedia system, select the desired view (→ page 289).

■ Selecting a view for the 360° Camera (reverse gear)

Requirements:

- The **Activation in R** setting is activated in the multimedia system (→ page 295).

- ▶ Engage reverse gear.
- ▶ Select the desired view in the multimedia system (→ page 289).

■ Setting the reversing camera or 360° Camera

The reversing camera is only an aid. It is not a substitute for your attention to the surroundings. The responsibility for safe manoeuvring and parking remains with you. Make sure that no persons, animals or objects etc. are in the manoeuvring range. Pay attention to your surroundings and be ready to brake at all times.

Multimedia system:

- ▶ ▶ **Settings** ▶ **Assistance** ▶ **Camera**
- ▶ Activate or deactivate **Activation in R**.

- ① The settings for deactivating the reversing camera are not available in every country.

■ 360° Camera with GPS - managing activation positions

Multimedia system:

- ▶ ▶ **Settings** ▶ **Assistance** ▶ **Camera**

Renaming an activation position

- ① You can determine activation positions in the **Camera views** menu. (→ page 289)

- ▶ Select for the desired activation position.
- ▶ Select **Edit**.
- ▶ Enter a name and confirm.
The activation position is saved under the new name.

Deleting an activation position

- ▶ Select for the desired activation position.
- ▶ Select **Delete entry**.

- ▶ Confirm the prompt.
The activation position is deleted.

■ Opening the camera cover

Multimedia system:

→  ▶ Settings ▶ Assistance

▶▶ Camera

- ▶ Select **Open camera cover**.

- ⓘ The camera cover closes automatically after some time or after the vehicle is switched on or off.

Parking Assist PARKTRONIC

■ Function of Parking Assist PARKTRONIC

Parking Assist PARKTRONIC is an electronic parking assistance system which monitors the area surrounding your vehicle and shows you the distance between the vehicle and a detected obstacle visually and audibly.


The passive side impact protection also warns you of obstacles to the side. These must be detected beforehand by the sensors in the front or rear bumper while driving by them. If you steer in the direction of a detected obstacle and there is a risk

of a lateral collision, a warning is issued. The passive side impact protection can be activated and deactivated via the multimedia system.

In order for front or rear obstacles to the side to be displayed, the vehicle must first travel a distance of at least half a vehicle length. Once the vehicle has travelled one vehicle length, obstacles on all sides can be shown.

Parking Assist PARKTRONIC is only an aid. It is not a substitute for your attention to the surroundings. The responsibility for safe manoeuvring and parking remains with you. Make sure that there are no persons, animals or objects in the manoeuvring area while manoeuvring and parking in/exiting parking spaces.

Displays in the central display

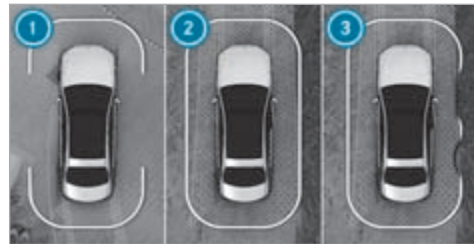

Vehicles with 360° Camera



Vehicles with reversing camera

As soon as Parking Assist PARKTRONIC is operational, the respective areas of the display are shown in blue.

- ① Operational, front and rear
- ② Operational, all around
- ③ Operational, all around and obstacle detected

The colour of the display changes depending on the distance to the detected obstacle:

- **Blue:** > 1 m (no obstacles detected)
- **Yellow:** approx. 1 m - 0.7 m
- **Orange:** approx. 0.7 m - 0.4 m
- **Red:** < 0.4 m

Vehicles with 360° Camera: the boundary line shifts dynamically depending on the position and distance of the obstacles detected.

Depending on the distance to the obstacle detected, an intermittent warning tone also sounds. You can set the timing of the warnings in the multimedia system. In the **Warn early** setting, the system warns you from a distance of 1 m, in the standard setting only from 0.4 m.



Vehicles with 360° Camera



Vehicles with reversing camera

If you are not in the **Camera & parking** menu and an obstacle in the vehicle path is detected, pop-up window ① appears in the central display if the following requirements are met:

- **Vehicles without Active Parking Assist:** when driving no faster than 12 km/h.

- **Vehicles with Active Parking Assist:** when driving no faster than 18 km/h.



Optionally, obstacles detected by Parking Assist PARKTRONIC from a distance of approximately 1.0 m in front ② and 0.7 m on sides ③ can also be displayed in the head-up display.

System limits

Parking Assist PARKTRONIC does not necessarily take into account the following obstacles:

- Obstacles below the detection range, e.g. persons, animals or objects.

- Obstacles above the detection range, e.g. overhanging loads, overhangs or loading ramps of lorries.
- Pedestrians or animals approaching the vehicle from the side.
- Objects placed next to the vehicle

Obstacles on the sides are not shown in the following situations, for example:

- You park the vehicle and switch it off.
- You open the doors.

After the engine is restarted, obstacles must be detected again by driving past them before a new warning can be issued.

Also observe the system limits of the following systems:

- Reversing camera (→ page 287)
- 360° camera (→ page 289)

Observe the information on vehicle sensors and cameras; the system otherwise cannot function properly (→ page 237).

Vehicles with towbar: If a transport device, e.g. trailer or bicycle carrier, is attached to the towbar and the electrical connection is correctly established, PARKTRONIC Parking Assist is deactivated for the rear zone.

Problems with Parking Assist PARKTRONIC

If the Parking Assist PARKTRONIC display lights up red for approximately three seconds then goes out, and the  symbol appears in the driver's display, the system may have been deactivated due to signal interference. Start the vehicle again and check if Parking Assist PARKTRONIC is working at a different location.

If a warning tone also sounds, it may be due to one of the following causes:

- **The sensors are dirty:** clean the sensors and observe the notes on care of vehicle parts (→ page 394).
- **Parking Assist PARKTRONIC has been deactivated due to a malfunction:** restart the vehicle. If the problem persists, consult a qualified specialist workshop.

■ Activating/deactivating Parking Assist PARKTRONIC

! **NOTE** Risk of an accident from objects at close range

Parking Assist PARKTRONIC may not detect certain objects at close range.

- ▶ When parking or manoeuvring the vehicle, pay particular attention to any objects which are above or below the sensors, e.g. flowerpots or drawbars. The vehicle or other objects could otherwise be damaged.

Requirements:

- The camera menu is open.
 - Or: Active Parking Assist is active.
 - Or: the PARKTRONIC pop-up window appears.
- ▶ Press  in the central display.

If the indicator lamp is lit, Parking Assist PARKTRONIC is active. If the indicator lamp does not light up or the symbol  is displayed, PARKTRONIC Parking Assist is not active.

i Parking Assist PARKTRONIC is automatically activated when the vehicle is started.

Alternatively, Parking Assist PARKTRONIC can be activated or deactivated in the quick access menu.

■ Setting the warning tones of Parking Assist PARKTRONIC

Multimedia system:

→  ▶ Settings ▶ Assistance
▶▶ Parking

Adjusting warning tones

- ▶ Select **Set warning tones**.
- ▶ Set the desired level under **Volume** or **Tone pitch**.

Activating/deactivating audio fadeout

- ▶ **Audio fadeout** select and **Audio fade for warnings** switch on or off.
- The volume of the currently playing media source is reduced during a Parking Assist PARKTRONIC warning tone.

or

- ▶ **Audio fadeout** select and **Audio fadeout in trans. position R** switch on or off.
- The volume of the currently playing media source is reduced when reverse gear is engaged.

Setting the time of the warnings

- ▶ **Time of warning** select
- ▶ Activate or deactivate **Side warning**.
- ▶ Set the desired warning time for **Front** or **Rear**.

Active Parking Assist

■ Function of Active Parking Assist

Active Parking Assist is an electronic parking assistance system, which uses ultrasound with the assistance of the reversing camera and 360° Camera. When you are driving forwards up to approximately 35 km/h, the system automatically measures parking spaces on both sides of the vehicle.

Active Parking Assist offers the following functions:

Vehicles with reversing camera

- Parking in parking spaces parallel to the road
- Reversing into parking spaces perpendicular to the road

Vehicles with 360° Camera

- Parking in parking spaces parallel to the road
- Parking in parking spaces perpendicular to the road (optionally either forwards or reverse)
- Parking in parking spaces that can only be detected as such due to markings (forexample at the roadside)
- Exiting a parking space parallel to the road
- Exiting a parking space perpendicular to the road (optionally either left or right)

Active Parking Assist is only an aid. It is not a substitute for your attention to the surroundings. The responsibility for safe manoeuvring and parking remains with you. Make sure that no persons, animals or objects etc. are in the manoeuvring range.

If Active Parking Assist is available, the  message appears in the driver's display. When the

system detects parking spaces,  appears. The arrows show on which side of the road free parking spaces are located. These are then shown in the central display.

When Active Parking Assist is activated, the turn signal indicators are activated based on the calculated path of your vehicle. When you are entering or exiting a parking space, the procedure is assisted by acceleration, braking, steering and gear changes.

To start the parking procedure, press the  button (→ page 301).

Active Parking Assist will be cancelled in the following situations:

- You deactivate Parking Assist PARKTRONIC.
- You press the  button again.
- You begin steering.
- You engage transmission position .
- ESP® intervenes.
- You open the driver's door.

System limits

In drive mode  or when the exterior lighting is disturbed, Active Parking Assist is not available.

Also observe the system limits of the following systems:

- Reversing camera (→ page 287)
- 360° Camera (→ page 289)

Objects that are above or below the detection range of Active Parking Assist, e.g. protruding loads, overhangs or loading ramps of trucks or boundaries of parking spaces, are not detected when measuring the parking space. These are also then not taken into account when calculating the parking procedure. In some circumstances, Active Parking Assist may therefore guide you into the parking space prematurely or brake too late.

Certain environmental conditions, such as snowfall or heavy rain, may lead to a parking space being measured inaccurately. Parking spaces that are partially occupied by trailer drawbars might not be identified as such or be measured incorrectly. Only use Active Parking Assist on level, high-grip ground.

⚠ WARNING Risk of accident due to objects located above or below the detection range of Active Parking Assist

If there are objects above or below the detection range, the following situations may arise:

- Active Parking Assist may steer too early.
- The vehicle may not stop in front of these objects.

There is a danger of collision!

- ▶ In these situations, do not use Active Parking Assist.


Active Parking Assist can also display unsuitable parking spaces, e.g. parking spaces in which parking is not permitted or parking spaces on unsuitable surfaces.

Do not use Active Parking Assist in the following situations:

- In extreme weather conditions such as ice, packed snow or in heavy rain.
- When transporting a load that protrudes beyond the vehicle.

- If the parking space is on a steep downhill or uphill gradient.
- When snow chains are fitted.
- When a trailer or bicycle rack is attached.
- Directly after a tyre change or when spare tyres are fitted.
- If the tyre pressure is too low or too high.
- If the suspension is out of alignment, e.g. after bottoming out on a kerb.
- On steep inclines of more than approximately 15 %.

■ Parking with Active Parking Assist

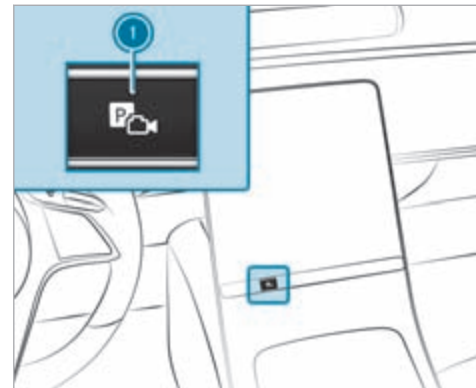


▶ Press button ① .



- ▶ Select ② menu **Parking Assistance**.

Parking spaces ③ detected by the system are shown in the central display.

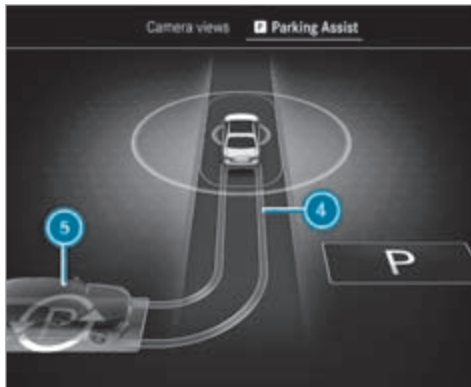

When the vehicle is stationary, indicated vehicle path ④ into currently selected parking space ⑤ also appears.

- ▶ If a parking space is displayed: stop the vehicle.
- ▶ If necessary, select another parking space.

- ▶ **Vehicles with 360° Camera:** to change the parking direction, tap the selected parking space again.
- ▶ **To start the parking procedure:** press button ① again.
The vehicle drives into the selected parking space.

The turn signal indicator is switched on automatically when the parking procedure begins. You are responsible for selecting the turn signal indicator in accordance with the traffic conditions. If necessary, select the turn signal indicator accordingly.

⚠ WARNING Risk of accident due to vehicle swinging out while parking or pulling out of a parking space

While parking or exiting a parking space, the vehicle swings out and can drive onto areas of the oncoming lane.

This could cause you to collide with objects or other road users.

- ▶ Pay attention to objects and other road users.

- ▶ Where necessary, stop the vehicle or cancel the parking procedure with Active Parking Assist.

On completion of the parking procedure, the **Active Parking Assist finished** display message appears.

- ▶ Secure the vehicle against rolling away. When required by legal requirements or local conditions: turn the wheels towards the kerb.
- ① You can stop the vehicle and change the transmission position during the parking procedure. The system then calculates a new vehicle path. If no new vehicle path is available, the transmission position can be changed again, or the process can be cancelled.

Immediate parking via the **Camera views** menu



- ▶ Select the **Camera views** menu.
- ▶ When the vehicle is stationary and in transmission position **[R]**, and symbol ⑥ appears in the camera image: press button ① again. The parking procedure is initiated for the detected parking space.
- ① The parking space and parking direction cannot be changed in immediate parking.

■ Exiting a parking space with Active Parking Assist

Requirements:

- The vehicle is equipped with a 360° Camera.

- The vehicle has been parked with Active Parking Assist.

- ▶ Start the vehicle.
- ▶ Press button ①.



- ▶ Select **Parking Assistance** menu ②.
- ▶ If necessary, change direction of exit ③.

- ▶ **To start exiting the parking space:** press button ① again.
- ▶ If necessary, change the gearbox setting. Observe any messages displayed in the driver's display and central display. The vehicle moves out of the parking space.

The turn signal indicator is automatically switched on when exiting a parking space begins and switched off when it is completed. You are responsible for selecting the turn signal indicator in accordance with the traffic conditions. If necessary, select the turn signal indicator accordingly.

After the parking space has been exited, a warning tone and the  **Active Parking Assist finished, take control of vehicle** message prompt you to take control of the vehicle. You have to accelerate, brake, steer and change gear yourself again.

If you do not react to the prompt to take control of the vehicle, the system will brake the vehicle to a standstill.

■ Pausing Active Parking Assist

You can interrupt the parking or exiting procedure of Active Parking Assist by performing one of the following actions, foreexample:

- ▶ Depress the brake pedal.
- ▶ Open the front passenger door, a rear door, the boot or the bonnet.
- ▶ Apply the electric parking brake or activating the HOLD function.
- ▶ **To resume the parking or exiting procedure:** gently depress the accelerator pedal.

❗ If the electric parking brake was applied before Active Parking Assist was activated, depress the accelerator pedal lightly to start the parking or exiting procedure.

Check the area around your vehicle again before resuming a paused parking procedure. Make sure that persons, animals or objects are no longer in the manoeuvring range. Also observe the system limitations of Active Parking Assist.

■ Automatic braking function of Active Parking Assist

Persons or objects detected in the manoeuvring range could cause the vehicle to brake sharply and interrupt the parking or exiting procedure. The vehicle will then be held at a standstill. If you depress the accelerator pedal, the parking or exiting procedure is resumed.

Check the area around your vehicle again before resuming the parking or exiting procedure. Make sure that persons, animals or objects are no longer in the manoeuvring range. Also observe the system limitations of Active Parking Assist.

Manoeuvring assistant

■ Function of Drive Away Assist

Drive Away Assist can reduce the severity of an impact when pulling away. If the system detects an obstacle in the direction of travel, the vehicle's speed is briefly reduced to approximately 2 km/h. A risk of collision may occur in the following situations, foreexample:

- If the driver mixes up the accelerator and brake pedals.

- If the driver engages an incorrect gear.
- If the driver depresses the accelerator pedal with too much force.

Drive Away Assist is active under the following conditions:

- If the vehicle was stationary and the transmission position was changed to **R** or **D**.
- If the vehicle has rolled less than approximately 1.0 m since being at a standstill.
- If the detected obstacle is less than approx. 1.0 m away.

The **Drive-away Assist** can be deactivated or activated in the **Manoeuvring assistance** menu (→ page 308).

If a critical situation is detected, the following symbol appears in red in the selected view in the **Camera & parking** menu:



- i** If Drive Away Assist is not available, the same symbol appears in grey. If the **Camera & parking** menu is not opened in the central display, the symbol and pop-up of Parking Assist PARKTRONIC both appear.

Drive Away Assist is only an aid. It is not a substitute for your attention to the surroundings. The responsibility for safe manoeuvring and parking remains with you. Make sure that no persons, animals or objects etc. are in the manoeuvring range.

! WARNING Risk of accident caused by limited detection performance of Drive Away Assist

Drive Away Assist cannot always clearly identify objects and traffic situations.

- ▶ Always pay careful attention to the traffic situation; do not rely on Drive Away Assist alone.
- ▶ Be prepared to brake or swerve as necessary, provided the traffic situation permits and that it is safe to take evasive action.

System limits

The drive-away assistance  is not available in the driving programme.

The system limits of Active Parking Assist apply (→ page 299).

On uphill gradients, the performance of Drive Away Assist is restricted.

If a transport device, e.g. trailer or bicycle carrier, is attached to the hitch and the electrical connection is correctly established, the drive-away assistance is not available when reversing.

Function of cross traffic warning

The cross traffic warning can warn you of crossing traffic when you are exiting a parking space. The radar sensors in the bumper also monitor the area adjacent to the vehicle.

The cross traffic warning is active under the following conditions:

- **Warning for crossing traffic behind:** the vehicle is driving in reverse at a speed slower than approx. 10 km/h.
- **Warning for crossing traffic ahead:** the vehicle is driving forwards at a speed slower than

approx. 10 km/h and the camera image is shown in the central display (→ page 295).

The **Warning for crossing traffic ahead** can be deactivated or activated in the **Manoeuvring assistance** menu.

Depending on the country, the **Warning for crossing traffic behind** can also be deactivated or activated (→ page 308).

If a critical situation is detected, the following symbol appears in red in the selected view in the **Camera & parking** menu:



Warning for crossing traffic behind

- The vehicle can be braked automatically when crossing traffic is detected.
- If the menu **Camera & parking** is not open and a critical situation is detected, a warning appears in the central display together with the PARKTRONIC Parking Assist pop-up.

Warning for crossing traffic ahead

- If Active Parking Assist is active, the vehicle can be braked automatically when crossing traffic is detected.
- If Active Parking Assist is not active but the menu **Camera & parking** is open, a warning appears.
- If the menu **Camera & parking** is not open, the system cannot react to crossing traffic.

The cross traffic warning is only an aid and not a substitute for your attention to the surroundings. The responsibility for safe manoeuvring and parking remains with you. Make sure that no persons, animals or objects etc. are in the manoeuvring range.



WARNING Risk of accident caused by limited detection performance of the cross traffic warning

The cross traffic warning cannot always clearly identify objects and traffic situations.

- ▶ Always pay careful attention to the traffic situation; do not rely on the cross traffic warning alone.
- ▶ Be prepared to brake or swerve as necessary, provided the traffic situation permits and that it is safe to take evasive action.

System limits

- ① If the cross traffic warning is not available, the  symbol appears in grey.

In the driving programme,  the warning for cross traffic is not available.

The system limits of Active Parking Assist apply (→ page 299).

If the radar sensors are obstructed by vehicles or other objects, detection is not possible.

In the following situations, the cross traffic warning is not available:

- on inclines
- **Warning for crossing traffic behind:** if a transport device, e.g. trailer or bicycle carrier, is

attached to the towbar and the electrical connection is correctly established.

■ Manoeuvring brake function

The manoeuvring brake function can prevent collisions with pedestrians when the vehicle is reversing at slow speeds. If the reversing camera detects a person in the vehicle path, the vehicle can be braked to a standstill.

The manoeuvring brake function can intervene under the following conditions:

- The vehicle is reversing at a speed slower than 10 km/h.
- The camera image is shown in the central display (→ page 295).

Depending on the country, you can activate and deactivate the manoeuvring brake function in the **Manoeuvring assistance** menu (→ page 308).

If the manoeuvring brake function is triggered, the following symbol appears in red in the selected view in the **Camera & parking** menu:



- i** If the manoeuvring brake function is not available, the same symbol appears in grey.

The manoeuvring brake function is only an aid. It is not a substitute for your attention to the surroundings. The responsibility for safe manoeuvring and parking remains with you. Make sure that no persons, animals or objects etc. are in the manoeuvring range.

⚠ WARNING Risk of accident caused by limited detection by the manoeuvring brake function

The manoeuvring brake function cannot always clearly detect people. Other obstacles are not detected by the function.

In these cases, the function may brake unnecessarily or not brake at all.

- ▶ Always pay careful attention to the traffic situation; do not rely on the manoeuvring brake function alone.
- ▶ Be ready to brake.

System limits

In the driving programme,  the shunt braking is not available.

Observe the system limits of the following functions:

- Active Parking Assist (→ page 299)
- 360° Camera (→ page 289)
- Reversing camera (→ page 287)

The manoeuvring brake function is not available in the following situations:

- on inclines
- If transport equipment, for example a trailer or bicycle rack, is attached to the trailer hitch and the electrical connection has been correctly established.

■ Activating/deactivating manoeuvring assistance

Multimedia system:

➔  ➔ Settings ➔ Assistance
➔ Parking

- ① This function is available on demand (→ page 22).
- ▶ Select **Manoeuvring assistance**.
- ▶ Activate or deactivate the desired manoeuvring assistance.

Trailer Manoeuvring Assist

■ Function of Trailer Manoeuvring Assist

- ① This function is an on-demand feature (→ page 22).

⚠ WARNING Risk of accident due to unsuitable trailers

Trailers with a steered axle or a fifth wheel cannot be used with Trailer Manoeuvring Assist.

Due to this, the trailer cannot be manoeuvred in the desired direction and you can cause a collision or the trailer can overturn.

- ▶ Only use Trailer Manoeuvring Assist with trailers with fixed drawbars and axles.

! NOTE Damage due to overhanging loads in front or drawbar installations

The vehicle and the trailer may be damaged during manoeuvring due to overhanging loads at the front of the trailer or drawbar installations.

- ▶ Pay attention to overhanging loads or drawbar installations while manoeuvring.

Trailer Manoeuvring Assist assists you when reversing with a trailer. Using the reversing camera, it monitors the articulation angle between the vehicle and trailer and adjusts it to a specified value. Trailer Manoeuvring Assist also limits your speed.

Trailer Manoeuvring Assist is only an aid. It is not a substitute for your attention to the surroundings. The responsibility for safe manoeuvring and

parking remains with you. Make sure that there are no persons, animals or objects in the manoeuvring area while manoeuvring and parking in/exiting parking spaces.

You can either enter the articulation angle value directly via the multimedia system, or use a straightening manoeuvre or the 90° manoeuvre. When carrying out a straightening manoeuvre, the system calculates the articulation angle automatically and straightens the vehicle/trailer combination to the trailer's current direction.

Observe the notes on towing a trailer (→ page 310).

System limits

Observe the system limits of the following functions:

- Active Parking Assist (→ page 299)
- 360° Camera (→ page 289)
- Reversing camera (→ page 287)

The system may be impaired or may not function in the following situations:


- The gradient is greater than approximately 15 %.

■ Using Trailer Manoeuvring Assist


Requirements:

- The vehicle has been started and is stationary.
- A trailer is selected in the **Vehicle** menu (→ page 315).
- A trailer has been detected.
- The gradient is less than approximately 15 %.
- The tailgate is closed.
- The electric parking brake is not applied.
- The driver's seat belt is fastened.

Using Trailer Manoeuvring Assist

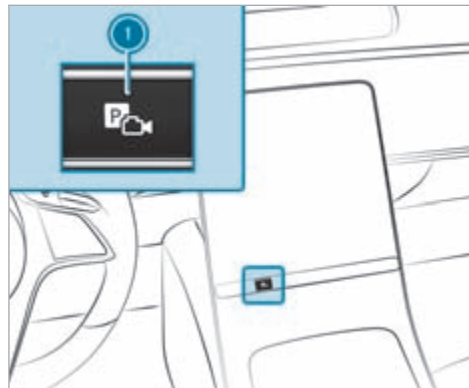

- ▶ Engage reverse **R** gear.
- ▶ Press button ①.
The camera image is shown in the central display.

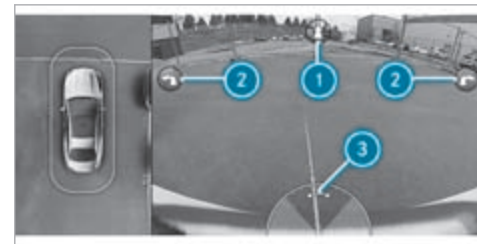

You can select various manoeuvres in the Trailer Manoeuvring Assist menu. The manoeuvres available depend on the current articulation angle and length of the trailer.

- ▶ To adjust the articulation angle: select ③. In the central display, swipe the entire area of the camera image to the left or right to change the bend angle.
- or
- ▶ To activate the straightening manoeuvre: select ①.
The system calculates the articulation angle in such a way that the direction of the trailer at the time of activation is maintained. There is a

short countersteering movement of the trailer while the vehicle is reversed, which then guides it back to the desired line. In this way, the vehicle is aligned straight with the trailer and, at the same time, the direction of the trailer is maintained.

or

- ▶ To activate the 90° manoeuvre:
 - Align the vehicle in the same direction (line) as the trailer.
 - Select (left or right) ②.

The system calculates the articulation angle so that the trailer can be manoeuvred into a space perpendicular to the vehicle using the smallest possible angle. After the manoeuvre, the vehicle is aligned again in the direction of the trailer.

- ▶ Accelerate and brake as required.

- ① The maximum articulation angle depends on the length of the trailer. This is calculated by the system by driving the vehicle forwards, including cornering. Before the length of the trailer has been calculated, the maximum articulation angle is approximately 23°. The

longer the trailer is, the higher the maximum articulation angle (max. approximately 60°).

- ① Pay attention to your surroundings and be ready to brake at all times.

Trailer hitch

Notes on trailer operation

! **NOTE** The operating permit may be invalidated due to the illegal installation of trailer hitches

The installation – including retrofitting – of a non-folding or non-removable trailer hitch that even partially conceals the license plate or the lighting system is prohibited.

- ▶ Observe the applicable legal regulations for the installation of trailer hitches.

Observe the following notes on the tongue weight:

- Do not use a tongue weight that exceeds or falls below the permissible tongue weight

- Use a tongue weight as close as possible to the maximum tongue weight

Do not exceed the following values:

- Permissible towing capacity
- Permissible rear axle load of the towing vehicle
- Permissible gross weight of the towing vehicle
- Permissible gross weight of the trailer
- Maximum permissible speed of the trailer

Ensure the following before starting a journey:

- The tyre pressure on the rear axle of the towing vehicle is set for a maximum load
- The lighting of the connected trailer is operational

In the event of increased rear axle load, the car/trailer combination must not exceed a maximum speed of 100 km/h for reasons concerning the operating permit. This also applies in countries in which the permissible maximum speed for car/trailer combinations is above 100 km/h.

- ❗ When you are reversing with a trailer, remember to use the Trailer Manoeuvring Assist function (→ page 308).

Extending and retracting the ball neck fully electrically

⚠ WARNING Risk of accident due to the ball neck not being engaged

If the ball neck is not engaged, the trailer may come loose.

- ▶ Make sure that the ball neck securely engages and locks into place.

⚠ NOTE Damage to the all-electric trailer hitch due to additional pressure

The all-electric trailer hitch could be mechanically damaged by applying additional pressure when the ball neck is being extended or retracted.

- ▶ Do not make the ball neck extend/retract faster by applying additional pressure.

⚠ NOTE Increased risk of damage to property due to folded-out ball neck

- ▶ When the trailer is not coupled or the bicycle rack is attached, fold in the ball neck or, in the case of a fully electric trailer hitch, retract the ball neck.

⚠ NOTE Damage to the vehicle due to incorrect use of the trailer hitch


When a trailer hitch is used to recover a vehicle, the vehicle may be damaged in the process.

- ▶ Use the trailer hitch only for pulling a trailer or attaching approved carrier systems (e.g. a bicycle rack).

Requirements:

- The vehicle is secured against rolling away.
- The swivel range is clear.
- The trailer cables or adapter plugs have been removed.


Extending the ball neck fully electrically

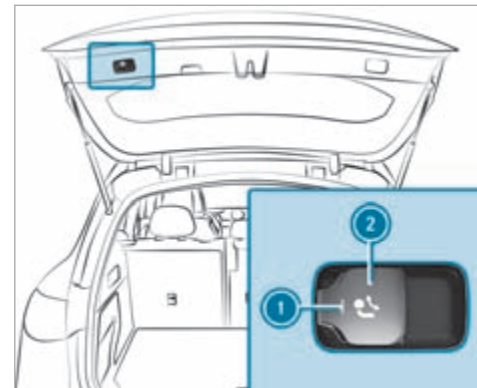

- ▶ Pull button ②. Indicator lamp ① will flash and the message **Trailer coupling in motion** will appear on the driver's display. The ball neck will extend fully electrically.

- ▶ Wait until the ball neck has reached the swung-out position with a clear locking noise. When indicator lamp ❶ is continuously lit, the ball neck is securely locked in place.

If the ball neck is not securely locked in place, indicator lamp ❶ will flash and the message **Trailer coupling Check lock** will appear on the driver's display.

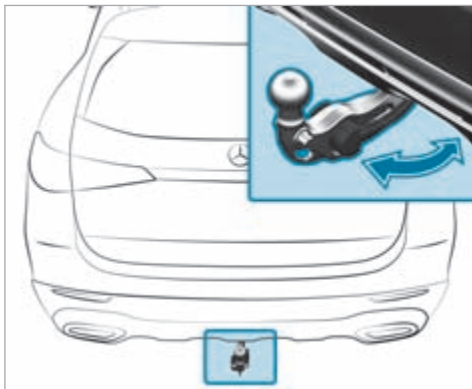

Retracting the ball neck fully electrically

- ▶ Pull button ❷. Indicator lamp ❶ will flash and the message **Trailer coupling in motion** will appear on the driver's display. The ball neck will retract fully electrically.
- ▶ Wait until the ball neck has reached the swung-in locked position. When indicator lamp ❶ goes out, the ball neck is securely locked in place. If the ball neck is not securely locked in place, indicator lamp ❶ will flash and the message **Trailer coupling Check lock** will appear on the driver's display.

Observe the information about the displays on the driver's display:

- Indicator and warning lamps (→ page 538)
- Display messages (→ page 458)

Coupling up/uncoupling a trailer

⚠ WARNING Risk of injury due to a change in vehicle level

Vehicles with level control system: the vehicle level may be changed unintentionally, e.g. by other persons. If you couple or uncouple the trailer during this time, you may become trapped. In addition, other people could become trapped if their limbs are between the vehicle body and the tyres or underneath the vehicle.

Observe the following when coupling or uncoupling:

- ▶ Do not open or close any doors or the tailgate.
- ▶ Do not initiate the level control system and do not operate the DYNAMIC SELECT switch.
- ▶ Do not lock or unlock the vehicle.

Requirements:

- The ball neck is extended and engaged in a securely locked position.

- **Vehicles with level control system:** ensure the vehicle is at the normal level (→ page 284).
Use the normal level in trailer operation. High-level driving is not permitted in trailer operation on public roads.
- A trailer is selected in the **Vehicle** menu (→ page 315).

Trailers with a 7-pin plug can be connected to the vehicle with the following adapters:

- Adapter plug
- Adapter cable

The trailer will be correctly detected by the vehicle only if the following conditions are met:

- The trailer is connected correctly.
- The trailer lighting system is in working order.

The functions of the following systems will be affected by a correctly connected trailer:

- ESP® trailer stabilisation
- Trailer Manoeuvring Assist
- Active Lane Keeping Assist
- Parking Assist PARKTRONIC

- Active Parking Assist
- Blind Spot Assist or Active Blind Spot Assist
- Drive Away Assist
- Cross traffic warning
- Manoeuvring brake function
- Reversing camera
- 360° camera
- AIRMATIC

Coupling up a trailer

! **NOTE** Damage to the starter battery due to full discharge

Charging the trailer battery using the power supply of the trailer can damage the starter battery.

▶ Do not use the vehicle's power supply to charge the trailer battery.

- ▶ Remove the cover cap from the ball head and store it in a safe place.
- ▶ Position the trailer on a level surface behind the vehicle and couple it up to the vehicle.



- ▶ Open the socket cap.
- ▶ Insert the plug with lug ① into groove ③ on the socket.
- ▶ Turn bayonet coupling ② to the right as far as it will go.
- ▶ Let the cap engage.
- ▶ Secure the cable to the trailer with cable ties (only if you are using an adapter cable).
- ▶ Make sure that the cable is always slack for ease of movement during cornering.

In the following circumstances, a message may appear on the driver's display even if the trailer has been connected correctly:

- LEDs have been installed in the trailer lighting system.
- The current has fallen below the trailer lighting system's minimum current (50 mA).

 Accessories can be connected to the permanent power supply up to 180 W and to the power supply that is switched on via the ignition lock.

Uncoupling a trailer

 **WARNING** Risk of being crushed and becoming trapped when uncoupling a trailer

When uncoupling a trailer with an engaged inertia-activated brake, your hand may become trapped between the vehicle and the trailer drawbar.

- ▶ Do not uncouple trailers with an engaged overrun brake.

 **NOTE** Damage during uncoupling with an engaged overrun brake

The vehicle may be damaged if you uncouple with an engaged overrun brake.

- ▶ Do not uncouple trailers with an engaged overrun brake.

 **WARNING** Risk of becoming trapped when disconnecting the trailer cable

Vehicles with level control system: the vehicle may lower when you disconnect the trailer cable.

This could result in other people becoming trapped if their limbs are between the vehicle body and the tyres or underneath the vehicle.

- ▶ Make sure nobody is underneath the vehicle or in the immediate vicinity of the wheel arches when you disconnect the trailer cable.

 **NOTE** Damage to the rear bumper from installing adapter cables or adapter plugs

The following parts could be damaged when swiveling the ball neck fully electrically:

- Bumper
- Adapter cable
- Adapter plug

- ▶ Always remove the adapter cable or adapter plug before swiveling the ball neck fully electrically.

- ▶ Secure the trailer against rolling away.
 - ▶ Disconnect the electrical connection between the vehicle and the trailer.
 - ▶ Uncouple the trailer.
 - ▶ Place the cover cap on the ball head.
-  **Trailers with LED lighting:** after uncoupling the trailer, switch the vehicle on and then off again.

Making settings for trailer operation

Multimedia system:

→  >> Settings >> Vehicle >> Driving
>> Trailer settings

Making settings for a trailer

The settings in this menu enable the calculation of a route suitable for the selected trailer and optimise the calculated arrival time.

- ▶ Select the bicycle rack or the trailer type.
- ▶ Enter the recommended maximum design speed for the bicycle rack or the maximum permissible speed of the selected trailer.
- ① The recommended maximum design speed when driving with a bicycle rack depends on the country.
- ▶ **To save changes:** select **Confirm**.

Bicycle rack function

⚠ WARNING Risk of an accident if the bicycle rack is used incorrectly

The bicycle rack may become detached from the vehicle in the following cases:

- the permissible load capacity of the trailer hitch is exceeded.
- the bicycle rack is used incorrectly.
- the bicycle rack is secured to the ball neck beneath the ball head.

Observe the following for your own safety and that of other road users:

- always adhere to the permissible load capacity of the trailer hitch.
- always observe the permissible rear axle load of the towing vehicle.
- use the bicycle rack only to transport bicycles.

- always mount the bicycle rack properly by attaching to the ball head and the ball neck guide pin, if possible.
- when transporting four bicycles, always use bicycle racks that have additional support on the ball neck guide pin.
- use only bicycle racks approved by Mercedes-Benz.
- always observe the bicycle rack operating instructions.

⚠ NOTE Damage to or breakage of the trailer hitch due to unsuitable or improperly used bicycle rack.

▶ Only use bicycle racks approved by Mercedes-Benz properly as described below.

⚠ NOTE Increased risk of damage to property due to folded-out ball neck


▶ When the trailer is not coupled or the bicycle rack is attached, fold in the ball

neck or, in the case of a fully electric trailer hitch, retract the ball neck.

! NOTE The operating permit may be invalidated due to the illegal installation of trailer hitches

The installation – including retrofitting – of a non-folding or non-removable trailer hitch that even partially conceals the license plate or the lighting system is prohibited.

► Observe the applicable legal regulations for the installation of trailer hitches.

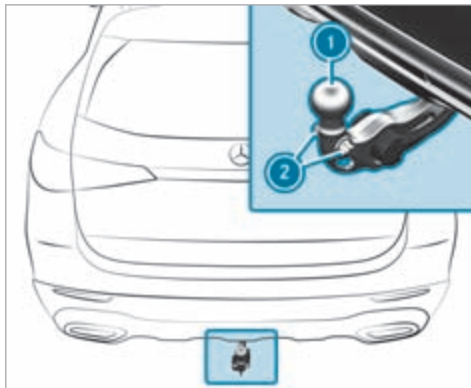

Trailer hitch with additional guide pin

Depending on the bicycle rack's design, different numbers of bicycles can be transported.

The following bicycle rack designs are possible:

- When mounted by attaching to ball head ①, the maximum load capacity is 75 kg. You can transport up to three bicycles.

- When mounted on ball head ① and guide pin ②, the maximum load capacity is 100 kg. You can transport up to four bicycles.

The maximum load capacity is calculated from the weight of the bicycle rack and the bicycle rack load.

Observe the notes on driving with a roof load, trailer or fully laden vehicle (→ page 183).

When using a bicycle rack, set the tyre pressure for increased load on the rear axle of the vehicle. Further information on the tyre pressure can be found in the tyre pressure table (→ page 423).

Notes on loading

The larger the distance between the load's centre of gravity and the ball head, the greater the load on the trailer hitch.


Observe the following notes:

- mount heavy bicycles as close to the vehicle as possible
- always distribute the load on the bicycle rack as evenly as possible across the vehicle's longitudinal axis

Mercedes-Benz recommends removing all detachable parts from bicycles (e.g. baskets, child seats, rechargeable batteries) before loading them onto the bicycle rack. This will improve the aerodynamic resistance and centre of gravity of the bicycle rack.

Always secure the bicycles to prevent them from moving around and check them at regular intervals to ensure that they are secure.

Do not use tarpaulins or other covers. The driving characteristics and rear view may be impaired. In addition, aerodynamic resistance and the load on the trailer hitch will increase.

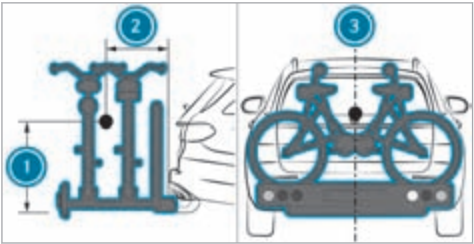

- Load distribution on the bicycle rack
- ① Vertical distance between centre of gravity and ball head
 - ② Horizontal distance between centre of gravity and ball head
 - ③ The centre of gravity is on the vehicle's centre axis

Observe the following information when loading the bicycle rack:

Loading the bicycle rack

	3 bicycles	4 bicycles
Total weight of bicycle rack and load	Up to 75 kg	Up to 100 kg
Max. distance ①	420 mm	420 mm
Max. distance ②	300 mm	400 mm

When transporting four bicycles or a total weight between 75 kg and 100 kg, always use bicycle racks with additional support on both trailer hitch guide pins.

Vehicle towing instructions

The vehicle is not suitable for the use of tow bar systems that are used for flat towing or dinghy towing, for example. Attaching and using tow bar systems can result in damage to the vehicle. When you are towing a vehicle with tow bar systems, safe driving characteristics cannot be guar-

anteed for the towing vehicle or the towed vehicle.
The vehicle-trailer combination may swerve from side to side.

Observe the following information:

- Permitted towing methods (→ page 413)
- **Plug-in hybrid:** permitted towing methods (→ page 413)
- The notes on towing the vehicle with both axles on the ground (→ page 414)

Notes on the driver's display

⚠ WARNING Risk of accident if the driver display fails

If the driver display has failed or is malfunctioning, function restrictions in systems relevant to safety cannot be detected.

The operating safety of your vehicle may be impaired.

- ▶ Drive on carefully.
- ▶ Have the vehicle checked immediately at a qualified specialist workshop.

If the operating safety of your vehicle is impaired, park the vehicle immediately and safely. Contact a qualified specialist workshop.

The driver's display shows basic information such as speed, engine speed, fuel level, coolant temperature as well as indicator and warning lamps.

Additional functions available include the following:

- Different menus, e.g. for assistance and navigation

- Status displays for the driving systems
- Display messages
- Information on speed, **Consumption** and range

Some menu content and settings can be customised.

Operating the driver's display

⚠ WARNING Risk of distraction from information systems and communications equipment


If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- ▶ Only operate this equipment when the traffic situation permits.
- ▶ If you cannot be sure of this, stop the vehicle whilst paying attention to road

and traffic conditions and operate the equipment with the vehicle stationary.

Observe the legal requirements for the country in which you are currently driving when operating the driver's display.

Scrolling on the menu bar

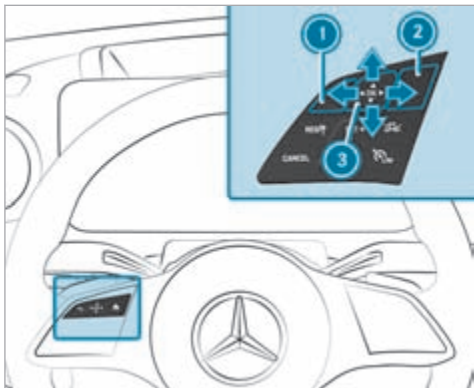

- ❶ Back button
- ❷ Main menu button
- ❸ Touch Control

The content on the driver's display is controlled using the control elements on the left side of the steering wheel. You can use Touch Control ❸ to navigate vertically and horizontally by swiping with

one finger. Confirm your selection by pressing the Touch Control.

❶ To operate Touch Control ❸ in the most effective way, use the tip of your thumb if possible. You can also set the sensitivity of the Touch Control on the central display .

- ▶ Briefly press main menu button ❷.
- ▶ Select a menu by swiping to the left or right on Touch Control ❸.
- ▶ **To confirm:** press Touch Control ❸.

Driver display menus

Notes on menus on the driver's display

⚠ WARNING Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- ▶ Only operate this equipment when the traffic situation permits.
- ▶ If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

Observe the legal requirements for the country in which you are currently driving when operating the driver's display.

The following menus can be called up via the menu bar on the driver's display:

- Understated
- Sport
- Classic
- Navigation
- Assistance
- Offroad
- Service

On some of these menus, you can choose between different display content on the centre display area.

On most of the menus, you can use **Options** to configure further settings for the menu-specific display content.

You can find further information about the possible settings and selections on the menus in the Digital Owner's Manual.

Calling up displays on the Sport menu (plug-in hybrid)

Driver's display:



The **Sport** menu provides additional information about the operating energy as well as the recuperated output of the vehicle.

- ❶ When you call up the **Sport** menu on the menu bar of the driver's display, the menu colour setting will automatically be applied to the MBUX multimedia system.

▶ **To call up the menu:** press the left-hand Touch Control.



- ❶ Display range of recuperated power (recuperation)
- ❷ Display range of the output
- ❸ Additional display range of the output

The following functions are available on the **Options** submenu:

- Setting display content as the standard display

Head-up display

Function of the head-up display


The head-up display projects various content into the driver's field of vision, for example.

You can use the head-up display menu bar to select various contexts, e.g.:

- Minimal
- Sport
- Standard
- ECO display
- Settings
- Head-up display on/off

The following image shows an example of the head-up display. You can choose what content is displayed (→ page 322).

Head-up display content with navigation (9x3°)

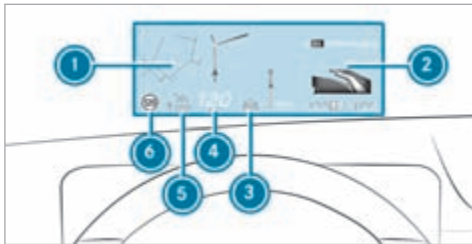

- ① Navigation instructions
- ② Navigation instructions (distance to the next route event)
- ③ Steer Assist status
- ④ Current speed
- ⑤ Set speed in the driving system (e.g. cruise control)
- ⑥ Detected traffic signs (Traffic Sign Assist)

When you receive a call, the  **Call waiting** message will appear on the head-up display and the driver's display.

System limits

Visibility is particularly influenced by the following conditions:

- Seat position
- Image position setting
- Light conditions
- Wet road surfaces
- Objects on the display cover
- Polarisation in sunglasses

Operating the head-up display

Selecting display content of the head-up display via the menu bar of the driver's display

- ▶ Press the  main menu button on the left.
- ▶ **To select the menu bar of the head-up display:** swipe upwards on the left-hand Touch Control.



Switching between display content on the head-up display

- ▶ Swipe to the left or right on the left-hand Touch Control.
A preview of the selected display content will appear on the head-up display.
- ▶ **To confirm:** press the  button.

Switching back to the driver's display

- ▶ Press the  or  button.

Setting the position and brightness

- ▶ Swipe to the left or right on the left-hand Touch Control and select **Settings** on the menu bar of the head-up display.
- ▶ Press the left-hand Touch Control. The current position and brightness settings will be displayed as graphics on the head-up display as well as on the driver's display.
- ▶ **To adjust the position:** swipe upwards or downwards on the left-hand Touch Control.
- ▶ **To adjust the brightness:** swipe to the left or right on the left-hand Touch Control. The settings configured for position and brightness will be saved automatically.
- ▶ Press the  or **OK** button to exit the settings.

Switching the head-up display on/off

Driver's display:



To switch on

- ▶ Swipe upwards on the left-hand Touch Control.
- ▶ Press **OK** on the left-hand Touch Control.

To switch off

- ▶ Swipe upwards on the left-hand Touch Control.
- ▶ Swipe on the left-hand Touch Control and select .
- ▶ Press **OK** on the left-hand Touch Control.

Overview of status displays on the driver's display

The status displays for the driving and driving safety systems can be found in display sections

① to ④.



-  Pedestrian detection (only on assistant display)
-  Active Parking Assist is available (→ page 301)
-  Active Parking Assist has detected a parking space (→ page 301)
-  Parking Assist PARKTRONIC switched off (→ page 299)

-  Cruise control (→ page 246)
-  Limiter (→ page 246)
-  Active Distance Assist DISTRONIC (→ page 249)
-  Specified distance for Active Distance Assist DISTRONIC (→ page 249)
-  Active Brake Assist switched off (→ page 269)
-  Active Brake Assist impaired or not functioning (→ page 269)
-  Active Steering Assist (→ page 258)
-  Active Lane Change Assist (→ page 262)
-  Active Lane Keeping Assist (→ page 279)
-  Active Blind Spot Assist (only on assistant display) (→ page 278)
-  Plug-in hybrid operation activated
-  Haptic accelerator pedal (→ page 192, 197, 194)
-  Sound generator inoperative (→ page 472)
-  ECO start/stop function (→ page 190)
-  HOLD function (→ page 243)

-  Adaptive Highbeam Assist (→ page 148)
Adaptive Highbeam Assist Plus (→ page 149)
-  Maximum permissible speed exceeded (for certain countries only)
-  Active Stop-and-Go Assist (→ page 256)
-  Slippery road surface warning

Vehicles with Speed Limit Assist: detected instructions and traffic signs (→ page 269)

Vehicles with Traffic Sign Assist: detected instructions and traffic signs (→ page 272)

Overview and operation

Notes on the MBUX multimedia system

! WARNING Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- ▶ Only operate this equipment when the traffic situation permits.
- ▶ If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

Depending on the equipment, the scope of function and product designation of your MBUX multimedia system may differ from the description and

images in this Owner's Manual. For example, route guidance with augmented reality is not available in all equipment variants.

! NOTE Increased surface temperature due to direct sunlight on the central display

The surface of the central display is very dark. If the display is exposed to direct sunlight, the surface can become very hot.

- ▶ If the central display has been exposed to direct sunlight, allow it to cool down before touching it for a long time.

Overview of the MBUX multimedia system



- ① Touch Control and control panel for the MBUX multimedia system
MBUX stands for Mercedes-Benz User Experience.
 - Operating Touch Control
- ② Central display with touch functionality
 - Home screen overview
 - Operating the touchscreen
- ③ Switch panel with:
 -  Fingerprint sensor
 -  Switches the MBUX multimedia system on or off



Switches sound on or off



Adjusts the volume

Further operating options:

- Conducting a dialogue with the MBUX voice assistant.
- ① You can find further information about operation as well as about applications and services in the Digital Owner's Manual.

Anti-theft protection

This device is equipped with technical provisions to protect it against theft. More detailed information about anti-theft protection can be obtained at a qualified specialist workshop.

Zero layer

Function of the zero layer

- ① Your software can be upgraded to a more current version at a later date.

The zero layer provides you with dynamic content from the MBUX multimedia system and is used to quickly access and control the applications you

use. When you select  on the central display, the digital map with the applications appears in the lower display area. Compared to the home screen with a classic menu, the steps required to call up the applications are reduced. You can switch between the zero layer and the home screen with a classic menu.

The applications can be hidden from the display area and shown again.

The zero layer provides the following modules and applications:

- Navigation module
In the expanded view you can, for example, display the route overview, switch on the display of traffic information and make settings for [View](#) (map), [Messages & tones](#), [Route](#).
- Entertainment (media, radio) and telephone
When the lower display area is shown, the entertainment sources are always displayed.
A mobile phone must be connected to the MBUX multimedia system for the phone to be displayed.
- Active applications

The lower display area shows an active massage programme, for example.

- Suggestions
Suggestions are displayed on the lower display area based on context and your user behaviour. These can be dialled phone numbers, active massage programmes or vehicle functions, for example.
- Online voice applications
In the lower display area, context-dependent services that can be executed via voice are available for direct access.

The applications are first displayed in a reduced view. By tapping on them, you can operate them or open the associated menu (expanded view).

A long press on a suggestion opens a context menu in which further functions are available.

The learning function can be switched on and off for the options .

Overview zero layer

Digital map and user-specific applications (example)



- ① Navigation module (reduced view)
- ② Enters a destination
Searches for parking
- ③ Calls up the Control Centre
- ④ Status line

- ⑤ Calls up user profile settings
- ⑥ Content sharing menu (if available)
- ⑦ Telephone
Requirement for phone: the mobile phone is connected to the MBUX multimedia system.
- ⑧ Entertainment sources (media, radio)
- ⑨ 
Press briefly: shows all applications (→ page 328)
Press and hold: calls up the home screen with classic menu
- ⑩ Route monitor
e.g. route list, lane recommendations, 3D image of the upcoming driving manoeuvre

The zero layer shows the digital map and the user-specific applications.

The following user-specific applications are displayed in the lower display area:

- Suggestions
Requirement: suggestions are activated (→ page 336).
- Active applications

e.g. a massage programme

- Telephone ⑦
- Entertainment sources ⑧
- Online voice applications

The lower display area can be hidden and shown (→ page 328).

Information about entertainment sources

You can operate the applications in the reduced view or in the menu (expanded view) (→ page 328).

Examples:

- Control a media source, e.g. pause/play, next track, set a station
- Select tracks from the current playlist or stations from the station list
- Select a media source
The media source must be connected to the MBUX multimedia system.

Information about the telephone

To use the functions, the mobile phones must be connected to the MBUX multimedia system.

Requirement for suggestions: the **Calls & messages** option is activated in the suggestions.

Examples:

- Answer a call and call a missed call
The missed calls are displayed for the mobile phones connected to the MBUX multimedia system.
- Display contacts and call list and call a contact
- Use voice functions
- Suggest contacts
The contacts are suggested for the mobile phones connected to the MBUX multimedia system. No contacts are suggested for the mobile phones that are linked to another user profile.
- Write messages to contacts (suggestion)
- Connect a device via the device manager (suggestion)

Information about active applications

The following functions are available:

- Operating the relaxation programme

- Raising or lowering the vehicle level

Suggestions for comfort and vehicle functions as well as navigation

Requirement: the **Comfort**, **Vehicle** and **Navigation** options are activated in the suggestions.

- Operating the relaxation programme
For example, the multimedia system suggests a programme at a certain time.
- Opening the tailgate
Requirement: the vehicle is equipped with boot lid convenience closing.
- Setting the vehicle level
- Making heating settings
- Activating/deactivating Parking Assist PARKTRONIC
- Selecting previous destinations and destinations from favourites

Information on online voice applications

Requirement: the **Online voice services** option is activated in the suggestions.

The suggested voice applications are made available online and are based on your previous voice inputs.

Examples:

- What will the weather be like tomorrow?
- Play the messages.
- Start geoquiz.
- Open the garage door.

Calling up and operating the zero layer

Calling up the zero layer

When the vehicle has been switched on, the zero layer is displayed with the digital map. Navigation is active.

▶ **From another application:** press the  button on the right side of the steering wheel.

or

▶ Tap on .

Operating applications in the reduced view (examples)

▶ **Media:** to play the previous or next track, tap  or .

- ▶ **To answer a call or call a missed call:** tap on the contact.
After the connection has been established, the call functions are available.
- ▶ **To end a call:** tap on the contact again.
- ▶ **To reply to message:** tap on a message and dictate the message via the MBUX voice assistant.
- ▶ **To start a message programme:** tap on the application and start the message programme.
- ▶ **To select a previous destination:** tap on the application and select one of the previous destinations.
- ▶ **To select a destination from the favourites:** tap on the application and select the destination.

Hiding and showing the display area with applications

- ▶ **To hide:** pull the applications down.
 - ▶ **To show:** pull the bar above  upwards.
- or
- ▶ Select .

or

- ▶ Press the  button on the steering wheel on the right.

Navigation module (expanded view)



Example: route guidance is active

- ① Traffic event on the route
Distance from current vehicle position and remaining driving time

- ② Destination
 - ③ Searches for a filling station
 - ④ Switches traffic information display on or off
- ▶ Tap on the navigation module (→ page 327).
 - ▶ Select **Route** in the lower menu bar.

Operating a menu in the lower display area (example: active message programme)



- ① Selects a message programme
- ② Starts/stops a message programme for the driver

- ③ Starts/stops a massage programme for the front passenger
- ④ Sets the massage programme intensity for the driver's or front passenger seat

▶ Tap on the application.
The expanded view of the application is displayed.

▶ **To close the menu:** select .

Opening and closing the context menu for a suggestion

- ▶ Press and hold on a suggestion.
The context menu opens and shows the **Do not suggest** option, for example.
- ▶ **To close:** swipe downwards.

Removing a suggestion from the display area

- ▶ Swipe the suggestion upwards.

Showing all applications



- ▶ Press  briefly.
Available applications are displayed. The global search is available.
- ▶ **To hide applications:** briefly press  again.

Switching between zero layer and home screen with classic menu

- ▶ Long press on .
- ▶ The home screen with classic menu is shown.
- ▶ **To return to the zero layer:** press and hold on .

Home screen overview



- ① Status line
- ② Calls up user profile settings and switches user
- ③ Uses the global search
- ④ Calls up the Control Centre (pull down)
- ⑤ Calls up favourites
- ⑥ Displays in the status line

- ⑦ Calls up an application
- ⑧ Quick-access to application
- ⑨ Global menu

⏮ Calls up previous menu

🏠 Press and hold: switches between home screen and zero layer

⏮ Previous track or previous radio station

⏭ Next track or next radio station


- ⓘ During a telephone call, the call duration is displayed in global menu ⑨.

The following functions are called up in the Control Center:

- Notifications Centre
- Favourites
- Vehicle quick-access

Operating the MBUX multimedia system

Using Touch Control

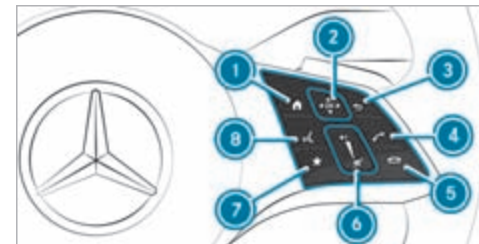

- ① 🏠 Shows the home screen

- ② Touch Control

⏮ ⏭ ⏭ ⏮ swipe in the direction of the arrow (navigate)

OK Press (confirm)

- ③ ⏮ Returns to the previous display

- ④ 📞 Makes or accepts a call

- ⑤ 📞 Rejects or ends a call


- ⑥ To increase volume: swipe upwards
To reduce volume: swipe down

-  Switches off the sound: press
-  Calls up favourites (press briefly) or adds favourites (press and hold)
-  Starts the MBUX Voice Assistant

You can navigate through menus and lists via the touch-sensitive surface of Touch Control  using a **single-finger swipe**, for example:

- ▶ **To enter a character:** select a character using the keyboard and press on Touch Control .
- ▶ **To select a menu option:** scroll in a list and press Touch Control .
- ▶ **To move the digital map:** swipe in any direction.

Using the touchscreen

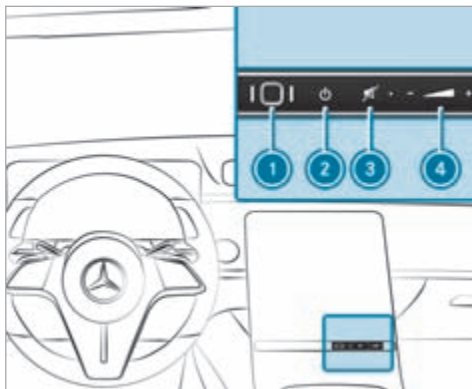

Example: Control elements under the central display

-  Fingerprint sensor
-  Switches the MBUX multimedia system on or off
-  Switches the mute function on/off

-  Adjusts the volume
 Press  or  or swipe over the button
- ▶ **To select a menu item or entry:** tap on a symbol or an entry.
- ▶ **To increase the map scale:** tap twice quickly with one finger.
- ▶ **To reduce the map scale:** tap with two fingers.
- ▶ **To enter characters with the keypad:** tap on a button.
- ▶ **To navigate in menus:** swipe up, down, left or right.
- ▶ **To use handwriting to enter characters:** write the character with one finger on the touchscreen.
- ▶ **To zoom in and out of the map:** move two fingers together or apart.
- ▶ **To enlarge or reduce the size of a section of a website:** move two fingers together or apart.
- ▶ **To turn the digital map:** turn anti-clockwise or clockwise using two fingers.

- ▶ **To move the digital map:** touch the touchscreen and move your finger in any direction.
- ▶ **To save the destination in the digital map:** touch the touchscreen and hold until a message is shown.
- ▶ **To set the volume on a scale:** touch the touchscreen and move the finger to the left or right.
- ▶ **To call up a global menu in the applications:** touch the touchscreen and hold until the **Options** menu appears.

Function of the MBUX voice assistant

⚠ WARNING Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- ▶ Only operate this equipment when the traffic situation permits.
- ▶ If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

For your own safety, always observe the following points when operating mobile communications equipment and especially your voice control system:

- Observe the legal requirements for the country in which you are driving.
- If you use the voice control system in an emergency your voice can change and your telephone call, e.g. an emergency call, can thereby be unnecessarily delayed.
- Familiarise yourself with the voice control system functions before starting the journey.

Using the MBUX voice assistant, vehicle functions and various areas of the MBUX multimedia system can be operated by voice input. The MBUX voice assistant is operational approximately half a minute after switching on the vehicle and can be

operated from all seats. Further information and examples of voice commands can be found in the Digital Owner's Manual.

You can use the MBUX voice assistant to operate the following functions depending on the vehicle equipment:

- Telephone
- Text message and e-mail
- Navigation
- Radio and media
- Vehicle functions
- Online functions

Full functionality of the voice control system is only available for you with activation of online voice control.

Conducting a dialogue

Starting a dialogue

- ▶ Say "Hey Mercedes" to activate the MBUX Voice Assistant. Voice activation must be switched on in the multimedia system.

or

- ▶ Press the  button on the multifunction steering wheel.
A blue line appears in the MBUX multimedia system. The dialogue can be started.

For the dialogue with the MBUX Voice Assistant, you can use complete sentences of colloquial language as voice commands. Voice activation can also be directly combined with a voice command, e.g. "Hey Mercedes, how fast can I drive?".

Calling up help

- ▶ **For information about the MBUX Voice Assistant:** say "Hey Mercedes, what can you do?"
- ▶ **Digital Owner's Manual:** "Show me the Owner's Manual". The full extent of the Digital Owner's Manual is available when the vehicle is stationary.

Operating functions (examples)

- ▶ **To operate the navigation:** "Search for an Asian restaurant, but not Japanese, in South London."
- ▶ **To operate the phone:** "Call my father."

- ▶ **To change the system language to English (short command):** "Change language to English".
- ▶ **To operate the radio:** "Show me the list of radio stations."
- ▶ **To operate media:** "Switch on random playback."
- ▶ **To operate vehicle functions:** "Switch the seat heating to level 2."
- ▶ **To operate online functions:** "What's the time in Sydney?"
- ▶ **To ask a question about the vehicle:** "Do I have Blind Spot Assist?"

Information on users, suggestions and favourites

⚠ WARNING Risk of becoming trapped during adjustment of the driver's seat after calling up a driver profile

Selecting a user profile may trigger an adjustment of the driver's seat to the position saved under the user profile. You or other vehicle occupants could be injured in the process.

- ▶ Make sure that when the position of the driver's seat is being adjusted via the multimedia system, no people or body parts are in the seat's range of movement.

If there is a risk of someone becoming trapped, stop the adjustment process immediately:

- ▶ a) Tap the warning message on the central display.
- or
- ▶ b) Press a memory function position button or a seat adjustment switch on the driver's door.
The adjustment process will be stopped.

The driver's seat is equipped with an access preventer.

If the driver's door is open, the driver's seat will **not** be set after calling up the driver's profile.

User profiles and user-specific content

Prerequisites for the vehicle owner:

- You have a Mercedes me user account.
 - You have a Mercedes me PIN.
 - You have agreed to the terms of use.
 - The vehicle is linked to a Mercedes me user account.
- i** If one of the pre-requisites listed is missing or if no user profile has been selected, the data described in the following section will be saved in the vehicle as the standard setting. Standard settings can be changed by all vehicle users.

User profiles save personal settings. If the vehicle is used by several people, a person can change their profile settings without changing the settings of other users.

You can individualise a user profile in the vehicle using the set-up assistant or using the settings in your user profile. Some settings, e.g. the Mercedes me PIN and a profile photo are made in the Mercedes me App or in the Mercedes me Portal.

User-specific content and applications with personal data are protected by different levels of security. To access protected content, the Mercedes me PIN and, depending on the vehicle equipment, biometric sensors can be used.

- i** The security level is set by the multimedia system and calculated from the combination of all sensor inputs. Some security levels cannot be turned off.
- i** When a user profile is activated, the following personalised comfort systems, for example, can be adjusted or their settings loaded:
- Seat
 - Ambient light
 - Outside mirrors
 - Blinds
 - Climate control settings

If the user profile is activated when driving then the driver's seat position will not be adjusted.

Depending on the vehicle equipment you can, as a user, save the following settings, for example:

- Driver's seat, steering wheel and mirror settings
- Climate control
- Ambient lighting
- Radio (including station list)
- Suggestions and favourites

Suggestions

The vehicle can learn the habits of the driver. It then makes suggestions regarding navigation destinations, phone numbers and music preferences. The requirements for that are the selection of a user, your consent to the recording of data and sufficient collected data.

Favourites

Favourites offer you quick access to frequently used applications. 100 favourites are available in total.

Configuring users, suggestions and favourites

Requirements:

- To use the set-up assistant: the vehicle is stationary.

Multimedia system:



Adding a user

- ▶ Select **+ Add user**.
A QR code is loaded.
- ▶ Scan the displayed QR code with the Mercedes me app or any QR code scanner on a mobile device. If the Mercedes me app is not yet installed on your mobile device, you will be directed to the store of your mobile device.
- ▶ Follow the directions in the app.
The vehicle is connected with your Mercedes me user account. This automatically creates your user profile in the vehicle.
If only your user profile is available, it will be loaded automatically.

If more than one user profile is available, you will be directed to the user selection.

When the vehicle is stationary, the set-up assistant starts automatically after user selection.

Protecting user-specific content and applications

If you add a new user, access protection is already activated for the user profile. The Mercedes me PIN and, depending on the vehicle equipment, biometric sensors are available for access. Biometric sensors must be taught in the vehicle. The authentication process then takes all taught-in and available sensors into account.

The following user-specific content and applications are protected, for example:

- User selection and user profile settings
- Biometric sensors
The teaching-in of biometric sensors is protected.
- Suggestions
The data and determination of the most probable navigation destinations, media sources,

radio stations, contacts and messages are protected.

- **ENERGIZING COACH**
The recorded health data and their evaluation are protected.
- Mercedes me connect store
The purchase of services is protected.
- ▶ Switch **Protect content** on or off.
- ▶ Switch **Access protection** on or off.
- ❗ When access protection is switched off, your user profile can be accessed and changed from every vehicle seat.
- ❗ Access protection is switched on or off on a vehicle-specific basis.

Teaching in, editing and deleting biometric data

The biometric data models are saved in the sensors in the vehicle. If recognition has been taught-in, this sensor serves as a contributory factor for authentication on the multimedia system.

- ▶ Select **Protect content**.
- ▶ Select **Fingerprint recognition** or **Voice recognition**.

- ❗ If necessary, authenticate yourself on the multimedia system.

Authenticating using fingerprints

- ▶ Place and lift your finger several times on the fingerprint sensor under the touchscreen . The finger is scanned. If the scanning procedure is successful, a message appears on the central display. You can unlock your user profile and protected applications with your finger print.

Authenticating using voice recognition

- ▶ Speak the sentence shown on the central display and follow the voice assistant's instructions.
If the voice recognition was successful, a message appears on the central display. You can unlock your user profile.
- ❗ Avoid background or disturbing noises during voice recognition.

Deleting biometric data

- ▶ Tap on  , for example, behind **Fingerprint recognition**.

- ▶ Select **Yes**.

Teaching in the vehicle key for profile selection

- ▶ Select **Protect content**.
- ▶ Select **Key recognition**.
- ▶ Have the key ready and follow the set-up assistant's prompts.
The user profile is linked to the selected key. If you open the vehicle with the key, the light, mirror and seat settings for your user profile are pre-activated. The key you are currently using for unlocking is used.
The key is only stored for the driver and for one user profile.

Selecting a user

- ❗ When you call up your driver profile, the driver's seat and the steering wheel can be set. You can cancel the setting process with the following actions:
 - Press **Tap here to cancel** message on the central display.
 - Press one of the seat operating buttons in the driver's door.

- ▶ Select **Change user**.

- ▶ Select a user.
- ▶ When requested to do so, authenticate with the Mercedes me PIN or a taught-in biometric characteristic.
The user profile is loaded and activated.

- ❗ If you select **Continue without selecting user**, no specific settings for the user profile are loaded.

Configuring and deleting suggestions

- ▶ Select .
- ▶ Select **Settings**.
- ▶ Select **System**.
- ▶ Select **Suggestions**.
- ▶ Select .
- ▶ Switch the options on or off individually.
If an option is switched on and sufficient data has been gathered, personalised suggestions based on your user behaviour will be offered to you on the zero layer. These are, for example, navigation destinations visited, phone

numbers dialled as well as suggestions based on your music preferences.

▶ **To delete collected suggestions:** select .

▶ Select **Yes**.

The suggestions are reset.

Adding favourites from categories

▶ Select .

▶ Select .

▶ Select .

▶ Select  **Create new favourite**.

▶ Select the category.

▶ Select a favourite.

System settings

Overview of the system settings menu

In the system settings menu, you can make settings in the following menus and control elements:

- Display
 - Display brightness

- Control elements
 - Keyboard language and handwriting recognition
 - Sensitivity of the Touch Control
- MBUX voice assistant
- MBUX Interior Assistant
- Sound
 - Entertainment
 - Navigation and traffic announcements
 - Telephone
 - Voice amplification
- Data protection
- Connectivity
 - Wi-Fi, Bluetooth®
- Time & date
- Language
- Units for distance
- System PIN
- Suggestions
- Software update

- System reset

Overview of software updates

Important software updates may be necessary for the security of your multimedia system's data. Install these updates, or else the security of your multimedia system cannot be ensured.

The multimedia system displays a corresponding message when a software update is available.

If the **Automatic online update** option is active, software updates are downloaded automatically. If the option is deactivated, you will be informed of new software updates once. The software updates are available for downloading for a limited period of time.

Carrying out a software update:

- You can start software updates via the communication module.
- You can start software updates via a Wi-Fi hot-spot.
- You can start map updates from an external medium.

- ❗ Online software updates cannot be performed via external Wi-Fi hotspots that are encrypted using TKIP.
- ❗ To complete software updates via the communication module, the vehicle must be connected with the Internet and a Mercedes me user account.
- ❗ To complete software updates via Wi-Fi, the vehicle must be connected to an external Wi-Fi hotspot.

A software update consists of three steps:

- Downloading or copying of the data required for installation
 - Installation of the downloaded software update
 - Activation of the downloaded software update
- ❗ It may be necessary to restart the MBUX multimedia system after completion of a software update.
 - ❗ While some software updates are being downloaded, the multimedia system cannot be operated and the vehicle functions may be restricted.

- ❗ Some software updates require a safe vehicle status for the installation to be completed. They can only be carried out in a safely parked vehicle with the vehicle switched off.

For software updates requiring a safe vehicle status: when the last installation step is reached, a message appears on the central display after the vehicle is switched off. Follow the step-by-step instructions on the central display to complete the installation.

There are software updates that can only be installed when the vehicle is safely parked, there are no more people in the vehicle and the vehicle is locked.

Availability of the driver's and central display

During the installation of software updates, it is not possible to use the vehicle, central display and driver's display. You may receive the following display message when an installation is running:



- ❗ The display message does not appear every time a software update is installed.

In rare cases, an error can occur during the installation. The multimedia system automatically attempts to restore the previous version.

If it is not possible to restore the previous version, the display message shown above appears every time the vehicle is started.

Failure of the driver's display

If the driver's display fails or there is a malfunction, you may not recognise limitations in the functions of systems relevant to safety or the speed display, for example. The operating safety of the vehicle may be impaired. Drive on carefully

and have the vehicle checked at a qualified specialist workshop immediately (→ page 480).

Further information about software updates can be found at <https://me.secure.mercedes-benz.com>

Failure of the central display

If the central display fails or the display message shown above is shown continuously, several systems such as the reversing camera, PARKTRONIC or climate control are no longer available. Drive on carefully and consult a specialist workshop as soon as possible.

Setting up a Wi-Fi hotspot

Requirements

- The Wi-Fi function is activated on the multimedia system and the communication device to be connected.
- The communication device to be connected supports at least one of the types of connection described.

The connection types shown depend on the device to be connected. The function must be

supported by the multimedia system and by the device to be connected. The type of connection established must be selected on the multimedia system and on the device to be connected.

- ❗ Some functions may first need to be activated on the communication device being connected. More detailed information can be found in the manufacturer's operating instructions.
- ❗ The use of the vehicle data tariff by external devices is not available in all countries.

Multimedia system:

→  » Settings » System
» Internet and Bluetooth

- ❗ The availability of the functions is dependent on the country.
- ▶ Select **Wi-Fi**.
The controller is to the right: Wi-Fi is switched on.

When the Wi-Fi function is switched on, you can connect the multimedia system with external hotspots or make it available as a hotspot for external devices.

When the Wi-Fi function is switched off, it is not possible to establish a hotspot connection.

- ❗ Depending on the vehicle equipment, you can purchase a data package directly from a mobile phone network provider via the Mercedes me Store. To be able to use the data package, you conclude a separate contract with a mobile phone network provider via the Mercedes me Store, which can be terminated at any time and for which there are no costs. This contract is a prerequisite for using the services from the previously purchased package. The availability of this option is dependent on the country. If the data package option is not available or can be upgraded, you can purchase data volume directly from the mobile phone network provider for a fee.
- ❗ The use of the vehicle data tariff by external devices is not available in all countries.

Using the multimedia system as a Wi-Fi hotspot

- ▶ Select **MBUX hotspot**.
- ▶ Select one of the following connection options.

Connecting using a QR code

Requirement: an app for scanning the QR code is installed on the device being connected.

Alternatively: the device being connected has an integrated QR code scanner (see manufacturer's operating instructions).

- ▶ Scan the QR code shown.
- ▶ The Wi-Fi connection is established.

Connecting using a security key

- ▶ Select the vehicle from the device to be connected. The vehicle is displayed with the **MBUX XXXXX** network name.
- ▶ Enter the security key which is shown in the central display on the device to be connected.
- ▶ Confirm the entry.

Generating a new security key

- ▶ Select the hotspot name **MBUX XXXXX** in the **MBUX hotspot** menu.
- ▶ Confirm the prompt with **Yes**.
A new security key is generated.

A connection will be established with the newly created security key.

- ❗ When a new security key is generated, all existing Wi-Fi connections are then disconnected. If the Wi-Fi connections are being re-established, the new security key must be entered.

Using a mobile communication device as a Wi-Fi hotspot (tethering)

- ❗ This function is country-dependent.
- ▶ Select the **Manage Internet access** option in the **Internet and Bluetooth** menu.
- ❗ The Wi-Fi function on the mobile phone and Internet access via Wi-Fi must be activated (see the manufacturer's operating instructions).
- ▶ Select **Search for access**.
- ▶ Select the network.
- ▶ Log in to the Wi-Fi network.
- or
- ▶ Select the mobile phone with the  Wi-Fi symbol.
- ❗ With external Wi-Fi hotspots, which are encrypted via TKIP, online software updates

cannot be carried out via the external Wi-Fi hotspot.

System language

Notes on the system language

This function allows you to determine the language for the menu displays and the navigation announcements. The selected language affects the characters available for entry. The navigation announcements are not available in all languages. If a language is not available, the navigation announcements will be in English.

Setting the language

Multimedia system:

→  » **Settings** » **System**
» **Language**

Setting the system language

A list of the available system languages is shown.

- ▶ Select a language.
The system language is switched to the selected language.

Resetting the multimedia system (reset function)

⚠ WARNING Risk of accidents due to failure of the central display functions

While the multimedia system is being reset, its functions such as the reversing camera are not available.

▶ Only reset the multimedia system when the vehicle is stationary.

Requirements:

- The vehicle is switched on.
- Some settings can only be reset when the vehicle is stationary.

Multimedia system:

➡  ➡ Settings ➡ System ➡ Reset

When resetting the system, personal data and settings are deleted, for example:

- Connected devices
- Individual user profiles
- Biometric data

- Vehicles with rear telephony: handset connection

i The data used and saved in the multimedia system by the driver assistance systems is deleted.

i Vehicles with rear telephony: The handset must be in the cradle while the system is reset.

▶ Select **Reset**.

A query appears asking if the system should really be reset.

▶ Select **Yes**.

The multimedia system is reset to the factory settings. The multimedia system is restarted after the system reset.

i Due to data protection, as well as the function of individual driving systems and driving safety systems, it is a requirement to carry out a complete system reset before selling the vehicle or transferring it to a third party, or after use as a hire car.

AMG TRACK PACE

Function of AMG TRACK PACE

i This function is an on-demand feature and can be activated via Mercedes me after you purchase your vehicle. The Digital Owner's Manual contains further information on Mercedes me and on-demand features.

With AMG TRACK PACE, the driving characteristics on race tracks can be analysed and optimised. You can drive previously saved race tracks (e.g. Hockenheimring), or record and save new tracks. The driven lap times are stored for every track. These can be analysed and compared to other lap times to achieve the best possible race results. Additionally, acceleration and braking procedures can be measured and stored.

Note: Use AMG TRACK PACE only on closed-off routes outside the public traffic area. Adapt your driving style to your personal performance and environmental conditions. As the driver, you are solely responsible for driving your vehicle. Park your vehicle safely before operating the application.

Setting Track Race

Multimedia system:

➔ TRACK PACE ➔ Track Race

Recording a new track

- ▶ Select  **New track**.
- ▶ Select  **Start Recording** at the desired starting point.
The track recording starts at this point.

During track recording, sectors can be set to divide up the track.

- ▶  Select **Set Sector**.
- ▶ Select  **Stop Recording** to end track recording or cross the starting line again.
- ▶ Confirm the prompt with **Yes**.
- ▶ Select the weather.
- ❗ The temperature is determined automatically.
- ▶ Enter a name.
- ▶ Press  to confirm.
The track is saved under the name entered.

Searching by track name

- ▶ Select  **Search**.
- ▶ Enter the track name.
Tracks with the searched name are displayed.

Measuring time on a saved track

- ▶  Select **All tracks**.
- ▶ Select the desired track.
- ▶ Select .
- ▶ Select **Start timing** if you are already at the starting line.

or

- ▶ Select **Navigate to** for navigation to the starting line.
Timing begins automatically when the starting line has been crossed.

- ❗ When  is selected, the track display can be switched to AR. In addition, it is possible to switch to the telemetry display by selecting .
- ▶ Select  **Stop timing** to end timing.

- ▶ Confirm the prompt with **OK**.
- ▶ Select the weather.
- ▶ Select **Yes** to save the times driven for this track.

Showing readings during Track Race

The following readings can be shown:

- Tyre temperature
- Miniature map
- Sector overview
- Engine data
- G-force display
- Lap overview
- ▶ Select  **Start timing**.
- ▶  Select .
- ▶ Drag the desired display from the grid on the left or right edge of the central display.
The readings are shown during the Track Race.

By selecting  on the active display, you can deactivate this.

Displaying the analysis

- ▶  Select **All tracks**.
An overview of all the driven tracks appears.
- ▶ Select a track.
- ▶ Select a session.
The following data are displayed:
 - Lap and sector times
 - Average and top speed
 - Driver
 - Vehicle
 - Date
 - Weather
- ▶ Select **Add recording** to use a different session as a reference value.
- ▶ Select  to return to the overview.
- ▶ Select **Diagram**.

- ▶ Set the desired parameters.
The analysis is displayed.



- ① Lap overview
- ② Parameter overview
- ③ Editing parameters
- ④ Deleting parameters
- ⑤ Adding new parameters

- ① The following values can be set for the parameters, for example:

- speed
- Longitudinal/lateral acceleration
- Steering angle
- Engine speed
- Engine oil/tyre temperature

Based on the analysis, you can check and optimise the driving behaviour for any position on the track.

Exporting tracks (USB)

- ▶ Select  **Tracks**.
An overview of all stored tracks appears.
- ▶ Select the desired track.
- ▶ Select options  for the desired track.
- ▶ Select **Export track to...**
The selected track can be exported to a USB storage device connected to the vehicle.

Editing tracks and recordings

- ▶ Select  **Tracks**.
- ▶ Select the desired track.

▶ Select options  for the desired track.

▶ Select [Rename](#) or [Delete](#).

or

▶ Select a track.

▶ Highlight the desired recording.

▶ Select  options.

▶ Select [Exporting to...](#) or [Delete](#).

Setting Drag Race

Multimedia system:

➞ [TRACK PAGE](#) ➞ [Drag Race](#)

Measuring acceleration

▶ Select  [Drag race options](#).

▶ Select [Acceleration](#).

▶ Set a starting speed or select [Automatic](#).
Measurement begins as soon as the specified starting speed has been reached.

▶ Set a target speed.
Measurement stops as soon as the specified target speed has been reached.

▶ Start off and begin the measurement.
Measurement begins when the vehicle accelerates.

Measurement can be stopped early by interrupting the acceleration procedure.

Quarter mile race

▶ Select  [Drag race options](#).

▶ Select [Quarter-mile](#).

▶ Set a target distance.
Measurement stops as soon as the specified target distance has been reached.

▶ Start off and begin the measurement.
Measurement begins when the vehicle accelerates. Timing runs until the target distance or a maximum of one mile has been travelled.

Measurement can be stopped early by interrupting the acceleration procedure.

Measuring braking

▶  [Drag Race options](#)

▶ Select [Braking](#).

▶ Set a starting speed or select [Automatic](#).

▶ Start off and begin the measurement.

▶ Brake to a stop.
Measurement is incremental, in steps of 10 km/h to a stop. If the braking procedure is started e.g. at a speed of 157 km/h, measurement starts as soon as 150 km/h has been reached.

Storing and calling up measured values

If measurement is completed or cancelled, a prompt appears asking whether the measurement should be saved.

▶ Confirm the prompt with [OK](#) to save.

Calling up saved measurements

▶  Select [History](#).

▶ Select [Acceleration](#), [Quarter-mile](#) or [Braking](#).

▶ Select a measurement.
The desired measurement is displayed in detail.

or

▶ Delete a measurement.

Calling up the telemetry display

Multimedia system:

➞ TRACK PACE ➞ Telemetry

The telemetry display shows current vehicle data as a digital value and as a diagram. Up to four parameters can be selected to be shown on the display.

For example:

- Engine speed
- Wheel angle
- Speed
- Steering angle

▶ Set the desired parameters.

▶ Set the time.

The set parameters are evaluated in the diagram for the selected time.

Configuring AMG TRACK PACE

Requirements:

To connect a mobile device to the TRACK PACE app:

- The TRACK PACE app is installed on the mobile end device.
- The mobile end device is connected to the multimedia system via Wi-Fi.

Multimedia system:

➞ TRACK PACE ➞ 

Connect mobile device via the TRACK PACE app

The TRACK PACE app makes it possible to record videos and to synchronise them with stored tracks.

- ▶ Select **TRACK PACE App**.
- ▶ Select **Authorise new device**.
- ▶ Start the TRACK PACE app on the device to be connected.
- ▶ Select **Continue** and confirm the authorisation prompt.
A four-digit code is shown on the central display.
- ▶ Enter the code on the smartphone.
The device is authorised.

De-authorising the mobile device

- ▶ Select **TRACK PACE App**.
- ▶ Select a device.
- ▶ Confirm the message prompt with Yes.
The device is de-authorised.

Setting the TRACK PACE display on the head-up display and driver's display

- ▶ Select **IC and HUD contents**.
- ▶ Activate or deactivate the desired contents.
The contents on the head-up display and the driver's display are adapted.
- ❶ For further information on the Head-up Display (→ page 321).
- ❶ Further information about the driver's display (→ page 319).

Setting acoustic feedback

- ▶ Select **Acoustic feedback**.
A scale with values from 0 to 10 is shown.
- ▶ Select a setting.

Displaying statistics

- ▶ Select **TRACK PACE statistics**.
Statistics on the current user profile are displayed.

The following data are displayed:

- Driving time
- Track driven
- Recorded tracks
- Recorded Track Races
- Laps recorded
- Recorded Drag Races
- Maximum design speed

Activating the ambient light

If this function is active, the vehicle interior is lit in red or green depending on delta time.

- ▶ Select **Ambient lighting**.
- ▶ Activate or deactivate the function.

Adjusting the dashcam

If the vehicle is equipped with a dashcam, it can be used in AMG TRACK PACE.

- ▶ Select **Dashcam**.
- ▶ Select **Track Race** or **Drag Race** and activate **Activate recording**.
- ▶ You can set which overlay is to be used in the recorded video under **Video overlay contents**.

Off-road menu

Off-road menu overview in the multimedia system

The Off-road menu provides an overview of the most important, relevant data for off-road driving. The content is displayed in different tiles that can be changed with directional arrows or swipes. In addition, this menu contains buttons for quick-access to certain off-road functions.

Displayed data are, for example:

- Artificial horizon
- Compass
- Altitude
- Steering angle of the front and rear wheels
- Torque and power
- Tyre pressure and temperature etc.

Setting the off-road menu in the multimedia system

Multimedia system:

➔  ➔ Off-road ➔ Cockpit

Setting displays in the central display

- ▶ Press ,  or on the display itself to jump to the next display.

Activating/deactivating Parking Assist PARKTRONIC

- ▶ Press  to switch the function on or off.
- ⓘ Further information on Parking Assist PARKTRONIC (→ page 296)

Activating/deactivating ESP® (Electronic Stability Program)

- ▶ Press  to switch the function on or off.
- ⓘ Further information on ESP (→ page 240).

Activating or deactivating manual gear changing

- ▶ Press  to switch the function on or off.
- ⓘ Additional information on manual shifting (→ page 204)

Activating or deactivating DSR (Downhill Speed Regulation)

- ▶ Press  to switch the function on or off.
- ❶ Further information on DSR (→ page 257).

Setting the vehicle level

- ▶ Press  to raise or lower the vehicle.
- ❶ Additional information about vehicle level: (→ page 283)
- ❶ The availability of individual functions is country- and equipment-dependent.

Navigation and traffic

Notes on navigation

Route guidance with augmented reality

⚠ WARNING Risk of accident and injury as a result of distraction, incorrect depiction or wrong interpretation of the display

The camera image of the augmented reality display is not suitable as a guide for driving.

- ▶ Always keep an eye on the actual traffic situation.
- ▶ Avoid extended observation of the camera image.

⚠ WARNING Risk of accident and injury due to imprecise positioning of additional information

The additional information from the augmented reality display may be inaccurate and is not a substitute for observing and assessing the actual driving situation.

- ▶ Always keep an eye on the actual traffic situation when carrying out all driving manoeuvres.

Switching navigation on

Multimedia system:



- ▶ Alternatively, press the  button on the steering wheel on the right (→ page 331). The zero layer with the digital map is displayed.

Navigation overview

Digital map



① Navigation module (reduced view)

Route guidance active:

The navigation module shows the information relevant to the route in the zoomed-out view, e.g. the destination or a traffic delay

 ends the current route guidance

Tapping opens the navigation module in the expanded view with the **Route**

- ② Destination entry
- ③ Searches for a parking space
- ④ Map orientation  and set map type
- ⑤ Current vehicle position (vehicle symbol or arrow)
- ⑥ Display area with entertainment sources, phone, active applications and suggestions
- ⑦ Navigation window shows the next driving manoeuvre (zoomed out view) or the route monitor (zoomed in view)

Route guidance active: route monitor shows, e.g. route sections, upcoming driving manoeuvres with lane recommendations, destination, traffic delays, 3D images at motorway exits, online content

 Switches off navigation announcements

 Switches on navigation announcements

The following map orientations ④ are available:

- 2D and to the north
- 2D and direction of travel

- 3D and direction of travel
- Map with complete route
- ① If the map is moved, the map switches between 3D direction of travel and 2D north orientation.

The following map types ④ are available:

- Daytime display
- Night-time display
- Satellite map
- ① If you notice a problem with the digital map you can report this under <https://mapfeedback.here.com/#/report>.

Navigation module (expanded view)



Example: route guidance is active

- ① Traffic event on the route
Distance from current vehicle position and remaining driving time
- ② Destination
- ③ Searches for a filling station
- ④ Switches traffic information display on or off

Entering a destination

Requirements:

- For the online search:
 - There is an Internet connection.
 - Mercedes me connect is available.
 - You have set up a user account in the Mercedes me Portal.
 - The vehicle is connected with the user account and you have accepted the terms of use.
 - Further information can be found at: <https://www.mercedes.me>
 - The service is available and has been activated.

Multimedia system:



Example: entering a POI or address

- ① Input line with current entry
- ② Search result
- ③ Selects destination input, displays further destination inputs with double arrow
- ④ Deletes an entry

- ⑤ Adopts the search result in the input line and continues the search
- ⑥ Deletes the last character entered
- ⑦ Hides the keypad
- ⑧ Switches to handwriting recognition
- ⑨ Starts the MBUX voice assistant
- ⑩ Sets the written language
- ⑪ Switches to digits and special characters
- ⑫ Switches to upper-case or lower-case letters

▶ Enter the destination in ①. The entries can be made in any order.
The search results are displayed in a list.

- ① Online search results for POIs may contain additional information, for example opening times and prices. The information is provided by an online map service.
This online function is not available in all countries.
- ① You can enter a destination as a 3 word address from what3words.
This option is not available in all countries.

▶ Hide the keyboard with **OK**.

▶ Select the destination in the list.
The route is calculated.

- ① Observe the notes on the MBUX multimedia system (→ page 325).

Calculating a route and using settings for route guidance



Example: detailed display

- ① Calls up alternative routes
- ② Calculates the route and starts route guidance

- ③ Selects a point of interest in the vicinity of the destination
- ④ Three-word address from what3words

After selection of a destination the route is be calculated.

- ▶ Select one of the options.

Calling up the route overview

- ▶ Select **Routes**.
- ▶ Select an alternative route.

Starting route guidance

- ▶ Select  **Let's go!**.

Calling up the detailed display with destination address

- ▶ Pull the bar above the  **Let's go!** symbol upwards.
Depending on the destination selection and availability, online content, for example ratings, prices and weather information, is shown.

- ▶ **To share a destination:** select  **Share**.
This option allows you to scan the displayed QR code.

- ▶ **To save a destination as a favourite:** select  **Favourite** and then an option.

- ▶ **To call up an Internet address:** if a web address is available, select **www**.

- ▶ **To call the destination:** if a telephone number is available, select **Call**.

Searching for POIs in the vicinity of the destination shown

- ▶ Select **In the vicinity**.
- ▶ Search using categories, enter a search entry or search for a personal POI .

Selecting a route type

- ▶ In the navigation module (expanded view), select  (→ page 349).
- ▶ Select **Route**.
The route is calculated as a fast route with a short journey time. Trailer mode is available if a trailer has been coupled with the vehicle. If available, you can select online routes. Traffic

announcements for the route are taken into account via **Dynamic route guidance** .

- ❗ Trailer mode and online routes are not available in all countries and for all vehicles.

Calculating alternative routes

- ▶ In the navigation module (expanded view), select .
- ▶ Select **View**.
- ▶ Activate **Overview of route after start**.
Alternative routes are calculated for every route.

Selecting alternative routes

- ❗ If **Overview of route after start** has been switched on and a route has been calculated, the function is available.
- ▶ In the navigation module (expanded view), select **Other routes**.
- ▶ When the alternative routes have been calculated, display the route in the navigation window by swiping to the right or left.
- ▶ Select **Start**.

Activating a commuter route

- ❶ A user profile has been created and [Allow destination suggestions](#) has been activated in the user options (→ page 336). Route guidance is not active.
- ▶ In the navigation module (expanded view), select .
- ▶ Select [Route](#).
- ▶ Activate [Activate commuter route](#).
The navigation system automatically detects that the vehicle is on a commuter route.
For the daily commuter route, traffic events on the route are also reported when driving without active route guidance.
- ▶ To select or delete a commuter route: select [Start](#) or .

Avoiding or using route sections, e.g. motorways or ferries

- ▶ In the navigation module (expanded view), select .
- ▶ Select [Route](#).
- ▶ Select [Avoid options](#).

- ▶ Activate or deactivate the avoid option.

Activating route guidance with augmented reality

- ▶ In the navigation module (expanded view), select .
- ▶ Select [View](#).
- ▶ Select [Augmented reality video](#).
- ▶ Activate or deactivate [Augmented reality video](#).
The camera's video image is shown on the central display before a turning manoeuvre. The video image includes additional information.

Showing property information for route guidance with augmented reality

Road guidance with augmented reality is activated.

- ▶ In the navigation module (expanded view), select .
- ▶ Select [View](#).
- ▶ Select [Augmented reality video](#).

- ▶ Activate [Street names](#) and [House numbers](#).
During route guidance, the activated options are shown as additional information in the camera image.

Using map functions

Multimedia system:



Increasing map scale

- ▶ When the map is shown, tap twice quickly with one finger on the central display.
- or

- ▶ Move two fingers apart on the central display.

Decreasing map scale

- ▶ Tap with two fingers on the central display.
- or

- ▶ Move two fingers together on the central display.

Moving the map

- ▶ When the map is displayed, swipe in any direction with one finger on the central display.

- ▶ To reset the map to the current vehicle position: select  Centre .

Selecting map orientation

- ▶ Tap repeatedly on the  compass symbol on the map.

The map orientations changes in this order:

- The 2D map view is displayed so that north is always at the top.
- The 2D map view is aligned to the direction of travel.
- The 3D map view is aligned to the direction of travel.
- The map shows the complete route.

Using services

Requirements:

- There is an Internet connection.
- Mercedes me connect is available.
- You have set up a user account in the Mercedes me Portal.

- The vehicle is connected to a user account and you have accepted the conditions of use for the service.

Further information can be found at: <https://www.mercedes.me>

- The service is available and has been activated.

Multimedia system:



Showing traffic information

- ▶ In the navigation module (expanded view), select  (→ page 349).
- ▶ Select **View**.
- ▶ Activate **Traffic**.
- ▶ Activate **Traffic incidents** and **Free-flowing traffic**.
Traffic incidents, for example roadworks, local area reports (e.g. fog) and warning messages, are shown on the route.
The traffic delay is displayed for the current route. The smallest value for the display for traffic delays is a minute.

Displaying hazard warnings

If hazard warnings are available these can be shown as symbols on the map. The display depends on the settings for the **Traffic incidents** option.

- ▶ In the navigation module (expanded view), select  (→ page 349).
- ▶ Activate or deactivate **Traffic incidents**.
If the option is activated, all of the symbols are shown.
If the option is deactivated, the symbols are only shown when there is a hazard warning.
The following hazards may be shown on the map:
 - Accidents and breakdowns
 - Slippery roads, fog, crosswinds and heavy rain
 - Hazards reported manually
 - Vehicle with active hazard warning light
 - Roadworks
 - Additional hazards (if available)

Displaying online map contents

- ▶ In the navigation module (expanded view), select  .
 - ▶ Select [View](#).
 - ▶ Switch on an online service, e.g. [Weather](#). Current weather information is displayed on the navigation map, e.g. temperature or cloud cover.
- The service information is not shown in all map scales, e.g. weather symbols.

Parking service

! **NOTE** Damage to the vehicle due to not observing the maximum permitted headroom clearance

If the vehicle height is greater than the maximum permitted headroom clearance, the roof and other parts of the vehicle may be damaged.

- ▶ Observe the signposted headroom clearance.

- ▶ If the vehicle height is greater than the permitted headroom clearance, do not enter.
- ▶ Observe the changed vehicle height with add-on roof equipment.

! **NOTE** Vehicle damage due to failure to observe local information and parking conditions

The data is based on the information provided by the respective service providers.

Mercedes-Benz does not guarantee the accuracy of the information provided in relation to the car park or parking area.

- ▶ Always observe the local information and conditions.

i This service is not available in all countries.

- ▶ In the navigation module (expanded view), select  and switch on [Parking](#).
- ▶ Tap on  in the map.

- ▶ Select a parking option.
The map shows the parking options in the vicinity.

The following information is displayed (if available):

- Destination address, distance from current vehicle position and arrival time
- Information on the multi-storey car park/car park

For example, opening times, parking charges, current occupancy, maximum parking time, **maximum access height**.

The maximum access height shown by the parking service does not replace the need for observation of the actual circumstances.

- Available payment options (Mercedes pay, coins, bank notes, cards)
- Details on parking tariffs
- Number of available parking spaces
- Payment method (e.g. at parking meters)
- Services/facilities at the parking option

- Telephone number
- ▶ Calculate the route (→ page 351).

Notes on the dashcam

! **NOTE** Risk of legal consequences following violation of legal regulations and data protection requirements

You are legally responsible for operation and use of the dashcam functions.

The legal requirements relating to operation and use of the dashcam can vary depending on the country in which the dashcam is operated.

This function is not permitted in all countries.

- ▶ Before using the dashcam, read up on the content of the legal regulations, in particular the data protection requirements in the respective country of use.
- ▶ Observe the legal regulations, in particular the data protection requirements.

- ❗ To ensure secure operation, only use FAT32 or exFAT formatted USB storage devices.
- ❗ The file size and therefore the duration of single recording is limited by the limitations of the USB flash drive format. So FAT32 formatted USB flash drives do not allow files larger than 4 GB, for example. When the file size is reached, the recording stops and you receive a notification.
- ❗ The following functions are available in the Gallery app:
 - Switching write protection on or off
 - Deleting video files

Selecting a USB device for a video recording with the dashcam

Requirements:

- At least one USB device is connected with the multimedia system .

Multimedia system:

→  ▶ Apps ▶ Dashcam

- ▶ Select the USB symbol.

- ▶ Select the USB device.

- ❗ When USB devices contain multiple partitions, recorded video files are not always displayed in the recording list. Mercedes-Benz recommends that you use USB devices with one partition.

Starting or stopping video recording with the dashcam

Requirements:

- For recording and saving a video file: a USB device is connected with the multimedia system.
- The vehicle is switched on.

Multimedia system:

→  ▶ Apps ▶ Dashcam

- ▶ If several USB devices are connected with the multimedia system, select a USB device (→ page 356). If no USB device is selected, a selection is made automatically when recording starts.

- ▶ **To select a recording mode:** select **Loop recording** or **Individual recording**. **Loop recording** records several short video files. When the memory is full, recording is continued automatically. In doing so, other files will be overwritten starting with the oldest file.

Individual recording stops recording when the memory limit is reached. An individual recording is automatically protected against being overwritten.

- ▶ **To start:** select **Start recording**. The length of the recording is shown. The **Do not remove the storage medium during recording. Before removing the storage medium, eject it first.** message appears. The video file is stored on the USB device.

- ▶ **To end:** select **End recording**.

- ① In some countries, geo-coordinates (longitude and latitude) are shown in the video image. For technical reasons, the geo-coordinates may show greater inaccuracies.

A report may appear in the following cases:

- **Individual recording:** the memory is full or there are only a few minutes recording time available. The video recording stops or will be stopped imminently.
Change the USB device or delete a video file.
- The camera is not functional, the **Camera unavailable** message appears.
Have the camera checked in a Mercedes-Benz service centre.
- If the country border indication has been switched on.
- If an outdoor recording is started with the camera app during a dashcam recording, the dashcam recording pauses and resumes automatically after the camera recording is finished. A notification to this effect is displayed.

Telephone

Telephony

Notes on telephony

⚠ WARNING Risk of distraction from operating integrated communication equipment while the vehicle is in motion

If you operate communication equipment integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- ▶ Only operate this equipment when the traffic situation permits.
- ▶ If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

⚠ WARNING Risk of accident from operating mobile communication equipment while the vehicle is in motion

Mobile communication devices distract the driver from the traffic situation. This can also cause the driver to lose control of the vehicle.

- ▶ As a driver, only operate mobile communication devices when the vehicle is stationary.
- ▶ As a vehicle occupant, use mobile communication devices only in the designated area, e.g. in the rear passenger compartment.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system and mobile communication equipment in the vehicle.

⚠ WARNING Risk of injury due to objects being stowed incorrectly

If objects in the vehicle interior are stowed incorrectly, they can slide or be thrown around

and hit vehicle occupants. In addition, cup holders, open stowage spaces and mobile phone receptacles cannot always retain all objects within.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- ▶ Always stow objects so that they cannot be thrown around in such situations.
- ▶ Always make sure that objects do not protrude from stowage spaces, luggage nets or stowage nets.
- ▶ Close the lockable stowage spaces before starting a journey.
- ▶ Always stow and secure heavy, hard, pointed, sharp-edged, fragile or bulky objects in the boot/load compartment.

Observe the additional information on stowing mobile communications devices correctly:

- Loading the vehicle (→ page 120)

Bluetooth® connection:

The menu view and the available functions in the telephone menu are in part dependent on the Bluetooth® profile of the connected mobile phone. If the mobile phone supports all the following Bluetooth® profiles, the full range of features is available:

- PBAP (Phone Book Access Profile)
 - The contacts on the mobile phone are shown automatically on the multimedia system.
- MAP (Message Access Profile)
 - The mobile phone message functions can be used on the multimedia system.
- HFP (hands-free profile)
 - Wireless telephony is available on the multimedia system.
- SAP (SIM Access Profile)
 - The car telephone has access to the SIM card data and dials into the mobile phone network via the exterior aerial.

Irrespective of this, Bluetooth® audio functionality can be used with any mobile radio unit.

For information on the range of functions of the mobile radio unit to be connected, see the manufacturer's operating instructions.

Network connection:

The following cases can lead to the call being disconnected while the vehicle is in motion:

- You switch into a transmission/reception station, in which no communication channel is free.
- The SIM card used is not compatible with the network available
- A mobile phone with "Twincard" is logged into the network with the second SIM card at the same time

The multimedia system supports calls in HD Voice® for improved speech quality. A requirement for this is that the mobile phone and the mobile phone network provider of the person you are calling support HD Voice®.

Depending on the quality of the connection, the voice quality may fluctuate.

Further information can be obtained from a Mercedes-Benz service centre or at: <https://www.mercedes-benz.com/connect>

Telephone menu overview



- ① Bluetooth® device name of the currently connected mobile phone/of the mobile phone
- ② Bluetooth® device name of the currently connected mobile phone/of the mobile phone (two phone mode)
- ③ Signal strength of the mobile phone network
- ④ Battery status of the connected mobile phone

- ⑤ Options
- ⑥ Messages
- ⑦ Calls up my devices
- ⑧ Numerical pad
- ⑨ Starts contact search

■ Telephony operating modes overview

Depending on your equipment, the following telephony operating modes are available:

- A mobile phone is connected to the multimedia system via Bluetooth®.
- Two mobile phones are connected with the multimedia system via Bluetooth® (two phone mode).
 - You can use all the functions of the multimedia system with both mobile phones.

■ Connecting a mobile phone

Requirements:

- Bluetooth® is activated on the mobile phone (see the manufacturer's operating instructions).

- Bluetooth® is activated on the multimedia system.

Multimedia system:


 Phone ►  ► Devices
 ► My devices

Searching for a mobile phone

- Select **Connect new device**.

Connecting a mobile phone

- Select a mobile phone.
A code is displayed in the multimedia system and on the mobile phone.
- If both codes match, confirm the code on the mobile phone.

■ Functions in the telephony menu

In the telephony menu you have the following functions, for example:

- Making calls, e.g.:
 -  Accepting a call
 -  **End call**
 - Answering a call with a message


-  **Conference**
- Accepting or rejecting a waiting call
- Managing contacts, e.g.:
 - Downloading mobile phone contacts
 - Managing the format of a contact's name
 - Deleting favourites
- Receiving and sending messages, e.g.:
 - Using the read-aloud function
 - Dictating a new message

Mercedes me app

Mercedes me calls

■ Making a call via the overhead control panel

- ① Mercedes me calls are not possible in every country. Find out at a Mercedes-Benz service centre if these functions are available in your country.

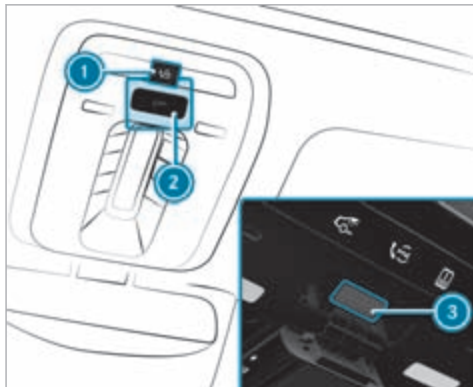

- ① me button for service or information calls
- ② SOS button cover
- ③ SOS button (emergency call system)

Making a Mercedes me call

- ▶ Press me button ①.

Making an emergency call

- ▶ To open the cover of SOS button ②, press it briefly.
- ▶ Press and hold SOS button ③ for at least one second.

If a Mercedes me call is active, an emergency call can still be triggered. This has priority over all other active calls.

Information about the Mercedes me call using the me button

A call to the Mercedes-Benz Customer Centre has been initiated via the me button in the overhead control panel or the multimedia system (→ page 360).

Using the voice dialogue system you access the desired service:

- Accident and Breakdown Management
- Mercedes-Benz Customer Centre for general information about the vehicle

You can find information on the following topics:

- Activation of Mercedes me connect
- Operating the vehicle

- Nearest Mercedes-Benz service centre
- Other products and services from Mercedes-Benz

Data is transferred during the connection to the Mercedes-Benz Customer Centre (→ page 363).

Calling the Mercedes-Benz Customer Centre using the multimedia system

Requirements:

- Access to a GSM network is available.
- The contract partner's GSM network coverage is available in the respective region.
- The vehicle must be switched on so that vehicle data can be transferred automatically.

Multimedia system:



- ▶ Call **Mercedes me connect**. After confirmation, the multimedia system sends the required vehicle data. The data transfer is shown on the central display.

Then, you can select a service and be connected to a specialist at the Mercedes-Benz Customer Centre.

■ Calling the Mercedes-Benz Customer Centre after automatic accident or breakdown detection

Requirements:

- The vehicle has detected an accident or breakdown situation.
- The vehicle is stationary.
- The hazard warning lights are switched on.

 This function is not available in all countries.

The vehicle can detect accident or breakdown situations under certain circumstances.

Requirements for collision detection in the context of accident management:

- The vehicle is equipped with an anti-theft alarm system (ATA) (code 551).
- The vehicle is equipped with the interior protection (code 882).
- The vehicle is equipped with the Anti-Theft Protection Package (code P54).

- The collision detection service with theft notification has been activated on Mercedes me connect.

If a collision is detected when the tow-away protection is primed on a locked vehicle, you will receive a notification in the multimedia system when you switch the vehicle on.

Find out at a Mercedes-Benz service centre if this functions is available in your country.

In the event an accident or breakdown is detected, the emergency guide shows safety notes in the multimedia system display. This may take a few seconds.

 The availability of collision detection depends on the vehicle.

After quitting the emergency guide display on the multimedia system, a prompt appears asking whether you would like to get support from the Mercedes-Benz Customer Centre.

 Select **Call**.

- After your agreement, or if the Mercedes me connect service "Accident and Breakdown Management" is active, the vehicle

data is transferred automatically (→ page 365).

- The Mercedes-Benz Customer Centre takes your call and organises the breakdown and accident assistance.

You may be charged for these services.

 Depending on the severity of the accident, an automatic emergency call can be initiated. This has priority over all other active calls (→ page 372).

 In addition, if the Mercedes me connect service "Telediagnosics" is active, a similar prompt can appear after a delay in the event of a breakdown. If you are already in contact with the Mercedes-Benz Customer Centre or have already received support, this prompt can be ignored or declined.

 If you answer the prompt for support from the Mercedes-Benz Customer Centre with **Call later**, the message will be hidden and appear again later.

The prompt triggered by the Mercedes me connect service "Telediagnosics", can either be confirmed or declined. After being declined, this will not be shown again.

■ Arranging a service appointment via a Mercedes me call

If you have activated the maintenance management service, relevant vehicle data is transferred automatically to the Mercedes-Benz Customer Centre. You will then receive individual recommendations regarding the maintenance of your vehicle.

Regardless of whether you have consented to the maintenance management service, the multimedia system reminds you after a certain amount of time that a service is due. A prompt appears asking if you would like to make an appointment.

- ▶ **To arrange a service appointment:** select **Call**. After your agreement, the vehicle data is transferred and the Mercedes-Benz customer centre takes your preferred appointment date. The information is then sent to your desired service outlet.

This will contact you to confirm the appointment and if necessary consult about the details.

- ❗ If you select **Call later** after the service message appears, the message is hidden and reappears at a later time.

■ Giving consent to data transfer during a Mercedes me call

Requirements:

- There is an active Mercedes me call via the multimedia system or the me button in the overhead control panel (→ page 360).

- ❗ The prompt to confirm data transfer does not appear in all countries.

If the Accident and Breakdown Management services are not activated on Mercedes me, the **Do you want to transfer your vehicle data and the vehicle's position to the Mercedes-Benz Customer Centre to improve the processing of your request?** message is shown.

- ❗ The exact phrase may differ depending on the multimedia system installed.

- ▶ Select **Yes**.

- The relevant vehicle data is sent automatically (→ page 363).

or

- ▶ Select **No** and confirm.

- Only call control data is transmitted (→ page 363).

More information on Mercedes me: <https://www.mercedes.me>

■ Data transferred during a Mercedes me call

If you initiate a service call using Mercedes me, data is transferred to enable targeted advice and an efficient service.

The following requirements must be fulfilled for the transfer of the data:

- The vehicle is switched on.
- The required data transfer technology is supported by the mobile phone network provider.
- The quality of the mobile connection is sufficient.

Multi-stage transfer depends on the following factors:

- Reason for the initiation of the call
- The available mobile phone transmission technology.
- The activated Mercedes me connect services.
- The service selected in the voice control system.

i A prompt for consent to the data transfer only occurs if the corresponding Mercedes me connect service is not activated.

i The scope of the data transmitted depends on the vehicle model and equipment. For technical reasons, not all data is available at all times.

Data transfer if Mercedes me connect services are not activated

If no Mercedes me connect services are activated and the data protection prompt has been confirmed the following data is transmitted:

- Vehicle identification number
- Time of the call

- Reason for the initiation of the call
- Confirmation of the data protection prompt
- Country indicator of the vehicle
- Set language for the multimedia system
- Telephone number of the communication platform installed in the vehicle

If a call is made for a service appointment via the service reminder, the following data is also transmitted:

- Current mileage and maintenance data

If a call is made after automatic accident or breakdown detection using the multimedia system, the following data is also transmitted:

- Current mileage and maintenance data
- Current vehicle location

If Accident and Breakdown Management is called via the voice control system and no service has been activated, but the data protection query has been confirmed, the following data can also be called up from the vehicle by the Mercedes-Benz Customer Centre:

- Current vehicle location

If the data protection prompt has been rejected, the following data is transmitted to enable targeted advice and an efficient service:

- Reason for the initiation of the call
- Rejection of the data protection prompt
- Country indicator of the vehicle
- Set language for the multimedia system
- Telephone number of the communication platform installed in the vehicle

Data transfer if Mercedes me connect services are activated

Only if the respective service is activated will additional incident-specific data be transmitted in the second stage to enable an optimal service.

An overview of the data transferred is contained in the data protection information for the Mercedes me connect services. You can find these in your Mercedes me user account.

Data processing

The data transmitted within the scope of the call is deleted from the processing system after the call is finished, in so far as this data is not being used for other activated Mercedes me connect services.

The incident-specific data is processed and stored in the Mercedes-Benz Customer Centre and, if required to process the incident, forwarded to the service partner authorised by the Mercedes-Benz Customer Centre. Take note of the data protection information on the Mercedes me Internet page <https://www.mercedes.me> or in the recorded message immediately after calling the Mercedes-Benz Customer Centre.

- ❗ The recorded message is not available in every country.

Mercedes me connect

Information on Mercedes me connect

- ❗ Mercedes me connect or individual Mercedes me connect services are not available in every country. Find out at a Mercedes-Benz service centre if these functions are available in your country.

Mercedes me connect consists of multiple services.

You can use the following services via the multimedia system and the overhead control panel, for example:

- Accident and Breakdown Management (me button or situation-dependent display in the multimedia system)
- Mercedes-Benz Emergency Call System (automatic emergency call and SOS button)

The Mercedes me connect Accident and Breakdown Management and the Mercedes-Benz emergency call centre are available to you around the clock.

The me button and the SOS button can be found on the vehicle's overhead control panel (→ page 360).

You can also call the Mercedes-Benz Customer Centre using the multimedia system (→ page 361).

Please note that Mercedes me connect is a Mercedes-Benz service. In emergencies, first call the national emergency services using the standard national emergency service telephone numbers. In emergencies, you can also use the Mercedes-Benz emergency call system (→ page 371).

Please note the Mercedes me connect terms of use and the data protection information for Mercedes me connect. You can find these in your Mercedes me user account.

Information on Mercedes me connect Accident and Breakdown Management

- ❗ Accident and Breakdown Management is not available in every country. Contact a Mercedes-Benz service centre to find out whether this function is available in your country.

The Accident and Breakdown Management can include the following functions:

- Supplement to the Mercedes-Benz emergency call system (→ page 371)

If necessary, the contact person at the Mercedes-Benz emergency call centre forwards the call to Mercedes me connect Accident and Breakdown Management. Forwarding the call is however not possible in all countries.

- Breakdown assistance by a technician on location and/or the towing away of the vehicle to the nearest Mercedes-Benz service centre

You may be charged for these services.

- Addition to the emergency guide after automatic accident or breakdown detection (→ page 362)

In the event of a breakdown or accident, further vehicle data is sent which enables optimal support by the Mercedes-Benz Customer Centre and the authorised service partner or breakdown assistance.

- Addition to the Mercedes me connect service Telediagnosics

With the Telediagnosics function, specific wear and failure reports are recorded by the service provider, in so far as these can be clearly interpreted and are available through the monitoring of components that are subject to diagnostics.

If your vehicle detects a breakdown or threat of a breakdown, you may be prompted via the multimedia system to contact the Mercedes-Benz Customer Centre for further help. This prompt in the multimedia system only appears when the vehicle is stationary.

- i These services are subject to technical restrictions such as the mobile phone coverage, mobile network quality and the ability of the processing systems to interpret the transferred data. In some circumstances, this can result in delays or the failure of the information to appear in the multimedia system.

Please note that the service and breakdown call is a Mercedes-Benz service. In emergencies, be sure to contact the usual national emergency

number first or use the Mercedes-Benz emergency call system (→ page 370).

More information about Mercedes me connect services can be obtained in the Mercedes me Portal: <https://me.secure.mercedes-benz.com>

■ Data transferred during Mercedes me connect call services

The data transferred during a Mercedes me connect call depends on:

- The reason for initiation of the call
- The service that is selected in the voice control system
- The activated Mercedes me connect services

You can find out which data is transferred when using the services in the currently valid Mercedes me connect terms of use and the data protection information for Mercedes me connect. You can find these in your Mercedes me user account.

Overview of the Mercedes me & Apps menu

When you log in with a user account to the Mercedes me Portal, then services and offers from Mercedes-Benz will be available to you.

For more information consult a Mercedes-Benz service centre or visit the Mercedes me portal: <https://me.secure.mercedes-benz.com>

- ① Make sure you always keep the Mercedes me apps updated.

You can call up the menu using **Apps** in the multimedia system.

In the **Apps** menu, the following options can be available:

- Connecting the vehicle with the **Mercedes me** user account
- Deleting a connection between a **Mercedes me** user account and the vehicle
- Calling up the Mercedes me services
- Calling up apps such as, In-Car Office or the web browser depending on availability

Overview of In-Car Office

Using In-Car Office, you can connect your online services with the multimedia system.

Requirements for In-Car Office:

- The In-Car Office service is activated in your Mercedes me user account.
- You have a Mercedes me user account.
- You have set a Mercedes me PIN.
- You have synchronised your Mercedes me user account in the vehicle and via Mercedes me.
- You have a user account with an online service, e.g. with Office 365 or Gmail, and have connected the user account with In-Car Office.

Alternatively you can link this user account from the multimedia system to your Mercedes me user account. You will be offered a QR code that will take you to the website from which you can make the link.

In-Car Office functions

- Display pending appointments in the calendar

- Reading out calendar entries
- Calling (requirement being that a telephone is connected and a telephone number is saved)
- Navigating to appointments (requirement being that the appointment contains a navigable destination)
- Deleting a calendar entry
- Display and selection of tasks and calls to complete
 - Reading aloud
 - Calling (requirement being that a telephone is connected and a telephone number is saved)
 - Deleting
- Marking entry in **Tasks & calls** as completed ☒
- Managing e-mails
 - Showing or reading e-mails
 - Writing, answering and forwarding e-mails

- ❶ Alternatively, you can record text contents for your e-mail via the MBUX voice assistant or via the dictation function. Further information on the MBUX voice assistant (→ page 333).
- ❷ The Zero Layer displays notifications or reminders from In-Car Office, such as birthdays or calls due (→ page 326).
- ❸ You can start the In-Car Office function using the **Apps** menu. Please note that certain functions are only available when the vehicle is stationary.

Web browser overview



- ❶ Previous website
- ❷ Next website
- ❸ Update
- ❹ URL
- ❺ Adds/removes bookmarks
- ❻ Options
- ❼ Settings

- ❶ Under ... you have the following options:

- **Tabs**
- **Bookmarks & Browsing History.**
- **Reading mode**
- **Share link**
- **Share content**
- **Request mobile website**

- ❶ Websites cannot be shown while the vehicle is in motion.

Overview of Smartphone Integration

With Smartphone Integration, you can use certain functions on your mobile phone via the multimedia system display.

Only one mobile phone at a time can be connected via Smartphone Integration to the multimedia system. Also for use with two phone mode with Smartphone Integration, only one additional mobile phone can be connected using Bluetooth® with the multimedia system.

The full range of functions for Smartphone Integration is only possible with an Internet connec-

tion. The appropriate application must be downloaded on the mobile phone to use Smartphone Integration. The mobile phone must be switched on and connected to the multimedia system via the USB port using a suitable cable.

Apps for Smartphone Integration:

- Apple CarPlay® (wireless connection via Bluetooth® also possible)
- Android Auto (wireless connection via Bluetooth® also possible)

i For safety reasons, the first activation of Apple CarPlay® or Android Auto on the multimedia system must be carried out when the vehicle is stationary with the parking brake.

You can start Smartphone Integration using the **My devices** menu.

You can end Smartphone Integration via the **My devices** or by disconnecting the connecting cable between the mobile phone and multimedia system.

i Mercedes-Benz recommends disconnecting the connection via the device manager or the

connecting cable only when the vehicle is stationary.

Overview of transferred vehicle data

When using Smartphone Integration, certain vehicle data is transferred to the mobile phone. This enables you to get the best out of selected mobile phone services. Vehicle data is not directly accessible.

The following system information is transmitted:

- Software release of the multimedia system
- System ID (anonymised)

The transfer of this data is used to optimise communication between the vehicle and the mobile phone.

To do this, and to assign several vehicles to the mobile phone, a vehicle identifier is randomly generated.

This has no connection to the vehicle identification number (VIN) and is deleted when the multimedia system is reset (→ page 342).

The following driving status data is transmitted:

- Transmission position engaged

- Distinction between parked, standstill, rolling and driving
- Day/night mode of the driver's display
- Drive type

The transfer of this data is used to alter how content is displayed to correspond to the driving situation.

The following position data is transmitted:

- Coordinates
- Speed
- Compass direction
- Acceleration direction

The mobile phone uses this data to improve the accuracy of navigation, for example, when driving through a tunnel.

Mercedes-Benz emergency call system
Information on available emergency call systems

Two types of emergency call system are available to you in the vehicle:

- Mercedes-Benz emergency call system
- 112 emergency call system (EU eCall)

The Mercedes-Benz Emergency Call System is not available in all countries. You can find more information on the regional availability of eCall at:

<https://www.mercedes-benz-mobile.com/extra/ecall/>

The following applies for both emergency call systems:

- The transfer of specific data is required for the intended function of both emergency call systems. This will be explained in the "Data transfer" section (→ page 373).
- Both emergency call systems are included as standard equipment in your vehicle and are activated at the factory.

- The use of both emergency call systems is exempt from charges.
 - Both emergency call systems only function in areas in which the mobile phone network providers offer mobile phone coverage.
- For both systems, insufficient network coverage from the mobile phone network providers can result in an emergency call not being transmitted.

Differences between the Mercedes-Benz emergency call system and the 112 emergency call system (EU eCall)

Mercedes-Benz emergency call system	112 emergency call system (EU eCall)
• The Mercedes-Benz emergency call system is permanently logged in to the mobile phone network. • Automatic and manual Mercedes-Benz emergency calls are transmitted to a Mercedes-Benz emergency call centre. In the event that the emergency call centre of the Mercedes-Benz emergency call system cannot be reached (e.g. due to a lack of network coverage), the 112 emergency call is carried out automatically.	• If you decide on the 112 emergency call system (EU eCall) only, then the system only logs in to the mobile phone network after the triggering of a manual or automatic emergency call. • The 112 emergency call system (EU eCall) transmits automatic and manual emergency calls directly to public coordination centres.

- ❗ The 112 emergency call system (EU eCall) in your vehicle meets the delegated regulation EU 2017/79. Proper and full functionality of the 112 emergency call system (EU eCall) depends on circumstances beyond the influence of Mercedes-Benz AG. This includes mobile network coverage and the technical infrastructure of the public reception centres in the respective countries.
- ❗ Please observe that in the event of a repair genuine Mercedes-Benz batteries must be used which have been certified pursuant to the delegated regulation EU 2017/79 (Appendix I). Other manufacturers are also permitted provided their batteries are certified according to the delegated regulation EU 2017/79.

There is the option of deactivating the Mercedes-Benz emergency call system and using only the 112 emergency call system (EU eCall). Contact address for carrying out deactivation of the Mercedes-Benz emergency call system are the local dealers.

Mercedes-Benz recommends the activation of the Mercedes-Benz emergency call system for the following reasons:

- In emergency situations when abroad, you can also get support in a language you speak.
 - Several transmission technologies are used to accelerate the transfer of the accident data and improve reliability of the transmission.
 - The Mercedes-Benz emergency call system is permanently logged in to the mobile phone network, which ensures faster placement of the emergency call and faster transfer of the accident data.
- Measures for rescue, recovery or towing away can then be initiated quickly.
- With a Mercedes-Benz emergency call, the accident data is only transferred to the public coordination centre with the approval of the customer.

In the event of an automatically triggered emergency call in which there is no voice contact, the accident data is transmitted immediately to the public emergency call centre.

- If the Mercedes-Benz emergency call centre is not available, the 112 emergency call is carried out automatically.

Overview of emergency call systems

Both the Mercedes-Benz emergency call system as well as the 112 emergency call system (EU eCall) can help to reduce the time between an accident and the arrival of emergency services at the site of the accident. They help locate an accident site in places that are difficult to access.

Both emergency call systems can initiate an emergency call automatically (→ page 372) or manually (→ page 372).

Only make emergency calls if you or others are in need of rescue. Do not make an emergency call in the event of a breakdown or a similar situation.

Indicators in the displays

The following messages appear on the central display for both emergency call systems:

- **SOS NOT READY:** the vehicle is not switched on or the emergency call system is malfunctioning. This does not necessarily indicate

complete failure of the emergency call system. Emergency calls can still be transmitted.

The display only refers to the vehicle and does not take account of the availability of mobile phone networks and the Mercedes-Benz emergency call centre.

The functional readiness of the emergency call system on the vehicle can be seen when the **SOS NOT READY** display disappears once the vehicle is switched on.

-  **SOS**: the icon appears in the display during an active emergency call.
- ❗ If there is a malfunction of the emergency call system, the loudspeakers, microphone, airbag or the SOS button, for example, are faulty. You can recognise a fault in the emergency call system by the following displays:
 - A corresponding message will also appear in the driver's display.
 - The SOS button lights up red continuously.

Triggering an automatic emergency call

Requirements:

- The vehicle is switched on.
- The starter battery is sufficiently charged.

Both the Mercedes-Benz emergency call system as well as the 112 emergency call system (EU eCall) automatically initiate an emergency call:

- After activation of the restraint systems such as airbags or seat belt tensioners after an accident
- After an automatically initiated emergency stop by Active Emergency Stop Assist

The emergency call has been made:

- A voice connection is established with the emergency call centre.
- A message with accident data is transmitted to the emergency call centre.

The SOS button in the overhead control panel flashes until the emergency call is finished.

If no connection can be made to the public emergency services, a corresponding message appears in the display.

- ▶ Dial the emergency number 112 or the appropriate local emergency call number on your mobile phone.

If an emergency call has been initiated:

- Remain in the vehicle if the road and traffic conditions permit you to do so until a voice connection is established with the emergency call centre.
- On the basis of the call, the emergency call centre decides whether it is necessary to call rescue teams and/or the police to the accident site.
- If no vehicle occupant answers, an ambulance is sent to the vehicle immediately.

Triggering a manual emergency call

- ▶ **To use the SOS button in the overhead control panel:** press the SOS button at least one second long (→ page 360).

or

▶ **To use voice control:** use the voice commands of the MBUX voice assistant.

The emergency call has been made:

- A voice connection is established with an emergency call centre.
- Remain in the vehicle if the road and traffic conditions permit you to do so until a voice connection is established with the emergency call centre.
- On the basis of the call, the emergency call centre decides whether it is necessary to call

rescue teams and the police to the accident site.

- A message with accident data is transmitted to the emergency call centre.

If no connection can be made to the public emergency services, a corresponding message appears in the display.

▶ Dial the emergency number 112 or the appropriate local emergency call number on your mobile phone.

Emergency call system data transfer

For both the Mercedes-Benz emergency call system as well as the 112 emergency call system (EU eCall) data is transferred to the Mercedes-Benz emergency call centre or the public emergency services call centre.

Depending on the emergency call system (→ page 370) activated different data is transmitted to the appropriate emergency call centre.

Transmitted data according to activated emergency call system:

Mercedes-Benz emergency call	112 emergency call
• Position data of the vehicle • Position data on the route (a few 100 m before the incident) • Direction of travel • Vehicle identification number • Drive type of the vehicle (e.g. petrol, diesel, CNG, LPG, electric or hydrogen) • Number of people determined to be in the vehicle • Whether the emergency call was initiated manually or automatically • Time of the accident • Language setting on the multimedia system • Whether Mercedes me connect is available or not This is a requirement for the option of forwarding the call to the Mercedes-Benz Customer Centre if necessary.	• Position data of the vehicle • Position data on the route (a few 100 m before the incident) • Direction of travel • Vehicle identification number • Drive type of the vehicle (e.g. petrol, diesel, CNG, LPG, electric or hydrogen) • Number of people determined to be in the vehicle • Whether the emergency call was initiated manually or automatically • Time of the accident

 If only the 112 emergency call system (EU eCall) is activated in the vehicle, the accident data is transmitted directly to the public emergency call centre.

For accident clarification purposes, the following measures can be taken up to an hour after the emergency call has been initiated:

- The current vehicle position can be determined.
 - A voice connection to the vehicle occupants can be established.
 - Emergency call data can be called up.
- ❗ For Russia: various functions, e.g. receiving traffic information, cannot be performed for up to two hours after sending an emergency call.

Self diagnosis function of the emergency call system

Your car verifies the operability of the emergency call system each time the vehicle is ON. In case of system failure, you will be informed with text message on the instrument cluster and with red indicator SOS NOT READY on the display.

Please, make sure, that during 30 seconds after switching vehicle ON the red indicator SOS NOT READY in the upper right corner of display is

switched OFF, this means the emergency call system passed diagnostics successfully.

Starting/ending ERA-GLONASS test mode

Requirements:

- The starter battery is sufficiently charged.
 - The vehicle is switched on.
 - The vehicle has been stationary for at least one minute.
- ❗ The test mode is currently available in the following countries, for example:
- Russia
 - Belarus
 - Kazakhstan
 - Armenia
 - Kyrgyzstan

▶ **To start the test mode:** press and hold the  button on the multifunction steering wheel for at least five seconds.

The test mode is started and automatically ends after the language test has been performed.

▶ **To stop manual test mode:** switch off the vehicle.
The test mode is ended.

Information on data processing

Processing of personal data via the Mercedes-Benz emergency call system

All processing of personal data via the Mercedes-Benz emergency call system corresponds with the specifications in the EU Regulation 2016/679 "on the protection of natural entities with regard to the processing of personal data (GDPR)".

The data is solely used by the Mercedes-Benz emergency call system for rescue and recovery in the event of an accident.

The owner of a vehicle, that is equipped with a Mercedes-Benz emergency call system in addition to the 112 emergency call system (EU eCall), has

the right to use the 112 emergency call system instead of the Mercedes-Benz emergency call system.

Contact address for carrying out deactivation of the Mercedes-Benz emergency call system are the local dealers.

Processing of personal data via the 112 emergency call system (EU eCall)

All processing of personal data via the 112 emergency call system (EU eCall) corresponds with the specifications in the EU Regulation 2016/679 "on the protection of natural entities with regard to the processing of personal data (GDPR)" and is based particularly on the necessity of upholding the vital interests of the affected person in accordance with Article 6, Clause 1, Letter d of the GDPR.

The processing of this type of data is strictly limited to the purpose of operating the emergency calls to the standard European emergency call number 112.

Data recipient

The recipients of data that is processed using the 112 emergency call system (EU eCall) are the rel-

evant emergency call inquiry terminals that are specified to first receive and handle emergency calls to the standard European emergency call number 112 by the respective country authorities in whose territory you are located.

Arrangements for data processing

Both emergency call systems are designed so that the following requirements are fulfilled:

- The data contained in the system memory is not accessible outside the system prior to the initiation of an emergency call.
- Both emergency call systems cannot be traced and there is no continuous tracking in normal operation.
- The data in the system's internal memory is automatically and continuously deleted.
- The location data of the vehicle is continuously overwritten in the system's internal memory, so that no more than the last three current locations required for the normal function of the system are available.
- The record of the activity data of both emergency call systems is only kept for as long as

is required to fulfil the purpose of handling the emergency call, and under no circumstances for more than 13 hours after the time that an emergency call is initiated.

Rights of persons affected by the data processing

The person affected by the data processing (the vehicle owner) has the right to access the data and if applicable can demand the correction, deletion or barring of data that affects him or her and that the processing of which does not correspond with the GDPR regulations. Each correction, deletion or barring carried out according to this regulation must be shared with the third party to which the data has been transmitted, provided this does not prove to be infeasible and does not incur disproportionate expenditure.

The person affected by the data processing has the right to complain to the appropriate data protection authority should they be of the opinion that their rights have been infringed by the processing of their personal data.

Responsible contact point for the processing of access rights: Konzernbeauftragter für den Daten-

schutz, Daimler AG, HPC G353, D-70546 Stuttgart, Germany

Radio & media

Overview of the symbols and functions in the media menu

Symbol	Designation	Function
	Play	Select to start or continue playback.
	Rest	Select to pause the playback.
	Repeat a track	Select to repeat the current track or the active playlist. • Select once: the active playlist is repeated. • Select twice: the current track is repeated. • Select three times: the function is deactivated.
	Random playback	Select to play back the tracks in random order.
	Skip forwards/back	Select to skip to the next or to the previous track.
	Additional options	Select to show additional options.

Symbol	Designation	Function
	Categories	Select to show or search through available categories (e.g. playback lists, albums, artists, etc.).
	Search	Select to search in the active menu. You can search for artists, genres or moods, for example.
	Settings	Select to make settings.
	Home	Select to return to the home screen.
	Messaging	Select to call up messaging.
	Full screen	Select to switch to full screen mode.

The following functions and settings are available in the media menu:

- Connecting external data storage media with the multimedia system (e.g. using USB or Bluetooth®)
- Playing back audio or video files
- Streaming online music

Overview of the symbols and functions in the radio menu

Symbol	Designation	Function
	Home	Select to return to the home screen.
	Messaging	Select to call up messaging.
	Skip forwards/back	Select to skip to the next or to the previous station.
	Settings	Select to have further options shown. The setting options are country-dependent.
	Additional options	Select to show additional options.
	Traffic information service	Select to switch on the traffic information service. When the traffic information service is switched on, TA is blue.
	Station list	Select to have the station list shown.
	Search	Select to search in the active menu. You can search for artists, genres or moods, for example.

Additional functions of TuneIn Radio

 A relatively large volume of data can be transmitted when using TuneIn Radio.

Symbol	Designation	Function
	Settings	The following additional settings are available in the TuneIn Radio menu: • Selecting stream • Logging on to or out of the TuneIn account
	Favourites	Select during playback to save the station currently set as a favourite.
	Play/Pause	Select to start, stop or continue playback.
	Browse	Select to choose a category and then a radio station.

Depending on the frequency band selected, different functions are available to you.
Select the desired frequency band in the radio menu head runner.

Calling up TuneIn Radio

Requirements:

- There is a user account at <https://www.mercedes.me>.

- The vehicle is linked to the Mercedes me user account.
- The TuneIn Radio service is activated in the Mercedes me portal.
- The data volume is available.

Depending on the country, data volume may need to be purchased.

- A fast Internet connection for data transmission free of interference.
- ❶ Data volume can be purchased **directly from a mobile phone network provider** via the Mercedes me Portal.
- ❶ The functions and services are country-dependent. For more information, consult a Mercedes-Benz service centre.

Multimedia system:

➞  ➞ Radio

- ▶ Select **TuneIn Radio**.
The TuneIn menu appears. The last station set starts playing.
- ❶ The connection quality depends on the local mobile phone reception.

out which sound system is fitted in your vehicle in the Digital Owner's Manual.

Standard sound system

The following functions are available:

- Equaliser
 - Treble, mid-range and bass
- Balance and fader
- Volume
 - Automatic adjustment

Sound settings

Overview of functions in the sound menu

The setting options and functions available depend on the sound system fitted. You can find

ASSYST PLUS service interval display

Function of the ASSYST PLUS service interval display

The ASSYST PLUS service interval display on the driver's display provides information on the remaining time or distance before the next service due date.

You can hide this service display using the back button  on the steering wheel.

Depending on how the vehicle is used, the ASSYST PLUS service interval display may shorten the service interval, e.g. in the following cases:

- Mainly short-distance driving
- When the engine is often left idling for long periods
- In the event of frequent cold start phases
- **Vehicles with diesel particulate filters:** in the event of frequently interrupted regeneration of the diesel particulate filter

Mercedes-Benz recommends avoiding such operating conditions.

You can obtain information concerning the servicing of your vehicle from a qualified specialist workshop, e.g. a Mercedes-Benz Service Centre.

Displaying the service due date

Driver's display:



The next service due date is displayed.

▶ **To exit the display:** press the back button  on the steering wheel.

Bear in mind the following related topic:

- Operating the driver's display (→ page 319).

Information on regular maintenance work

! **NOTE** Premature wear through failure to observe service due dates

Maintenance work which is not carried out at the right time or incompletely can lead to increased wear and damage to the vehicle.

- ▶ Adhere to the prescribed service intervals.
- ▶ Always have the prescribed maintenance work carried out at a qualified specialist workshop.

Notes on special service requirements

The prescribed service interval is based on normal operation of the vehicle. Have the maintenance work carried out more often than prescribed if operating conditions are difficult or the vehicle is subject to increased stress.

The ASSYST PLUS service interval display is only an aid. It is the responsibility of the driver of the vehicle to have maintenance work carried out more often than prescribed due to actual operating conditions and/or stresses.

Examples of arduous operating conditions:

- Regular city driving with frequent intermediate stops
- Mainly short-distance driving

- Frequent operation in mountainous terrain or on poor road surfaces
- When the engine is often left idling for long periods
- Operation in particularly dusty conditions and/or if air-recirculation mode is frequently used

In these or similar operating conditions, have the interior air filter, air filter, engine oil and oil filter, for example, changed more frequently. Check the tyres more frequently if the vehicle is operated under increased stress. Further information can be obtained at a qualified specialist workshop.

Battery disconnection periods

The ASSYST PLUS service interval display can calculate the service due date only when the battery is connected.

- ▶ Display and note down the service due date on the driver display before disconnecting the battery (→ page 382).

Maintenance Management

Notes about Maintenance Management

If the Maintenance Management service is activated, relevant data is automatically transferred to the Mercedes-Benz customer centre.

The customer centre transmits the data to the service partner that you have entered on the Mercedes me website at: <http://www.mercedes.me>. You will then receive individual recommendations regarding the maintenance of your vehicle.

- ❗ The calculation of the optimal transmission time of the maintenance request to the service partner is subject to technical limitations that may cause the maintenance recommendation to be perceived as too early or too late or not to be made at all. In this case, you can conveniently arrange a maintenance appointment with the customer centre via the maintenance reminder in the multimedia system.
- ❗ Maintenance Management and the maintenance reminder in the multimedia system are not available in every country. Contact a

Mercedes-Benz service centre to find out whether this function is available in your country.

Data transferred when using Maintenance Management

When the service is activated, relevant data is automatically transferred to determine the required scope of maintenance as well as fault detection and fault rectification. Details on data transfer can be found in the data protection information for the Mercedes me connect services. These can be found at: <http://www.mercedes.me> under "My Mercedes me account", "Terms of use".

- ❗ Maintenance Management and the maintenance reminder in the multimedia system are not available in every country.

Telediagnosics

Notes about Telediagnosics

- ❗ This service is not available in all countries.

The vehicle can detect if certain wear parts need to be replaced or if malfunctions have occurred in vehicle systems. If the Telediagnosics service is activated, relevant data is automatically transmitted to the manufacturer. If fault conditions are detected by the vehicle system self-diagnosis, the system transmits recommendations for action to the Mercedes-Benz customer centre depending on the fault detected. The customer centre transmits the data to the service partner that you have entered on the Mercedes me website at: <http://www.mercedes.me>.

For selected faults, the notification that a malfunction has been detected may appear in the multimedia system with a request to contact the Mercedes-Benz Customer Centre. From this message, a call can be made directly to the customer centre for assistance.

- ① The transmission of a notification to the multimedia system depends on the country, vehicle model and equipment and requires a fast data connection, over which the service provider has no influence.
- ① Reliable fault detection is subject to technical limitations. Therefore, only a limited selection

of faults can be detected and recommendations for action transmitted to the customer centre and the service partners. Mercedes-Benz AG is continuously working on the expansion of this service. The fault detection depends on the country, vehicle model and equipment.

Data transferred when using Telediagnosics

When the service is activated, relevant data is automatically transferred to determine the next required scope of maintenance as well as fault detection and fault rectification.

Details on data transfer can be found in the data protection information for the Mercedes me connect services. These can be found at: <http://www.mercedes.me> under "My Mercedes me account", "Terms of use".

- ① The scope of the data transmitted depends on the vehicle model and equipment. For technical reasons, not all data is available at all times.

Engine compartment

Opening and closing the bonnet

⚠ DANGER Risk of fatal injuries when carrying out maintenance work during the charging process

During the charging process, the high-voltage on-board electrical system is under high voltage.

- ▶ Do not perform any maintenance work during the charging process.

⚠ WARNING Risk of accident due to driving with the bonnet unlocked

The bonnet may open and block your view.

- ▶ Never release the bonnet when driving.
- ▶ Before every trip, ensure that the engine bonnet is locked.

⚠ WARNING Risk of accident and injury when opening and closing the bonnet

The bonnet may suddenly drop into the end position.

There is a risk of injury for anyone in the engine bonnet's range of movement.

- ▶ Do not open or close the bonnet if there is a person in the bonnet's range of movement.

⚠ WARNING Risk of burns when opening the bonnet

If you open the bonnet in the event of an overheated engine or fire in the engine compartment, the following situations may occur:

- You may come into contact with hot gases.
 - You may come into contact with other escaping hot operating fluids.
- ▶ Before opening the bonnet, allow the engine to cool down.

- ▶ In the event of a fire in the engine compartment, keep the bonnet closed and call the fire service.

⚠ WARNING Risk of injury due to moving parts

Components in the engine compartment may continue to run or start unexpectedly even when the drive system is switched off.

Observe the following if you must open the bonnet:

- ▶ Switch off the vehicle.
- ▶ Never touch the danger zones surrounding moving components, e.g. the rotation area of the fan.
- ▶ Remove jewellery and watches.
- ▶ Keep items of clothing and hair away from moving parts.

⚠ WARNING Risk of injury from touching components under voltage

The ignition system and the fuel injection system operate at high voltage. You could receive an electric shock.

- ▶ Never touch ignition system or fuel injection system components when the vehicle is switched on.

The live components include the following, for example:

- Ignition coils
- Fuel injectors
- Electric lines to the ignition coils and the fuel injectors

⚠ WARNING Risk of burns from hot component parts in the engine compartment

Certain component parts in the engine compartment can be very hot, e.g. the engine, the cooler and parts of the exhaust system.


- ▶ Allow the engine to cool down and only touch component parts described in the following.

⚠ WARNING Risk of injury from using the windscreen wipers when the bonnet is open


If the windscreen wipers start moving when the bonnet is open, you could be trapped by the wiper linkage.

- ▶ Always switch off the windscreen wipers and the vehicle first if you need to open the bonnet.

Opening the bonnet

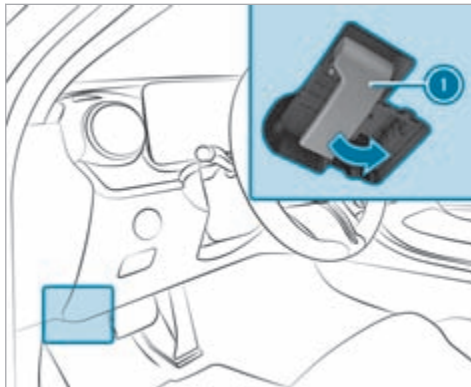

- ▶ To release the bonnet, pull on handle ①.

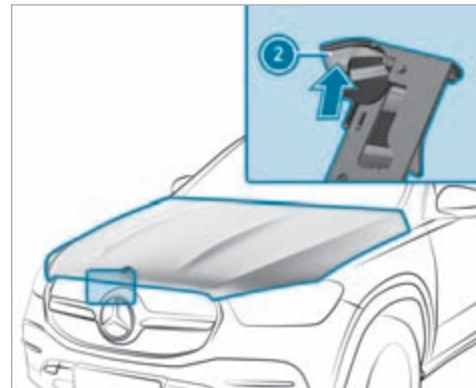

- ▶ Push handle ② of the bonnet catch upwards and lift the bonnet until it opens automatically.

Closing the bonnet

! NOTE Damage to the bonnet

If the bonnet is closed manually, there is a risk of dents.

- ▶ Do not close the bonnet manually.

- ▶ Lower the bonnet to a height of around 30 cm and then allow it to fall, applying a little force as you let it go.
- ▶ If the bonnet can still be lifted slightly, open the bonnet again and close it with a little more force until it engages correctly.

Engine oil

■ Checking the engine oil level using the driver's display

Requirements:

- The engine has been warmed up.
- The vehicle is parked on a level surface.
- The engine is running at idle speed.
- The bonnet is closed.

Determining the engine oil level can take up to 30 minutes with a normal driving style and even longer with an active driving style.

Driver's display:



The engine oil level is shown.

One of the following messages will appear on the driver's display:

- **Engine oil level Measuring now...:** the engine oil level cannot be determined yet.
- ▶ Repeat the request after a maximum of 30 minutes' driving.
- **Engine oil level OK** and the bar display for indicating the engine oil level on the driver's display is green and is between "min" and "max": the engine oil level is correct.
- **Engine oil level Top up 1,0 l** and the bar display for indicating the engine oil level on the driver's display is yellow and is below "min":
- ▶ Add 1 l of engine oil.
- **Engine oil level Reduce** and the bar display for indicating the engine oil level on the driver's display is yellow and is above "max":
- ▶ Drain off any excess engine oil that has been added. To do so, consult a qualified specialist workshop.
- **For engine oil level, switch on vehicle**

- ▶ Switch on the vehicle to check the engine oil level.

- **Engine oil level System inoperative:** The oil level sensor is defective or not connected.
- ▶ Consult a qualified specialist workshop.
- **Engine oil level System currently inoperative**
- ▶ Close the bonnet.

■ Topping up engine oil

⚠ WARNING Risk of burns from hot component parts in the engine compartment

Certain component parts in the engine compartment can be very hot, e.g. the engine, the cooler and parts of the exhaust system.

- ▶ Allow the engine to cool down and only touch component parts described in the following.

⚠ WARNING Risk of fire and injury from engine oil

If engine oil comes into contact with hot component parts in the engine compartment, it may ignite.

- ▶ Make sure that no engine oil is spilled next to the filler opening.
- ▶ Allow the engine to cool off and thoroughly clean the engine oil from component parts before starting the vehicle.

! NOTE Engine damage caused by an incorrect oil filter, incorrect oil or additives


- ▶ Do not use engine oils or oil filters which do not correspond to the specifications explicitly prescribed for the service intervals.
- ▶ Follow the instructions on the service interval display for changing the engine oil and observe the prescribed change intervals.
- ▶ Do not use additives.

! NOTE Damage caused by topping up too much engine oil

Too much engine oil can damage the engine or the catalytic converter.

- ▶ Have excess engine oil removed at a qualified specialist workshop.

- i** Depending on driving style, the vehicle consumes up to 0.8 litres of oil per 1000 km. The oil consumption may also be higher than this when the vehicle is new or if you frequently drive at high engine speeds.

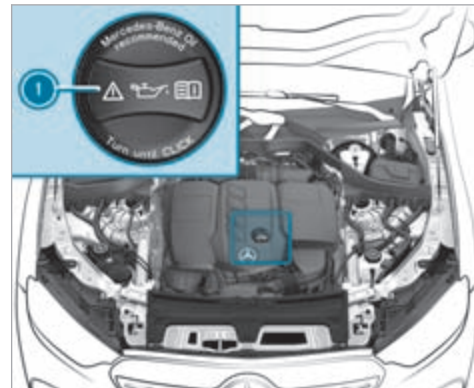

- ▶ Turn cap **1** anti-clockwise and remove it.
- ▶ Top up the engine oil.
- ▶ Replace cap **1** and turn it clockwise until it engages.
- ▶ Check the oil level again (→ page 387).

Checking the coolant level

⚠ WARNING Risk of burns from hot component parts in the engine compartment

Certain component parts in the engine compartment can be very hot, e.g. the engine, the cooler and parts of the exhaust system.

- ▶ Allow the engine to cool down and only touch component parts described in the following.

⚠ WARNING Risk of scalding from hot coolant

If you open the cap, you could be scalded.

- ▶ Let the motor cool down before opening the cap.
- ▶ When opening the cap, wear protective gloves and safety glasses.
- ▶ Open the cap slowly to release pressure.

- ▶ Have the coolant checked or refilled only at a qualified specialist workshop.

Topping up the windscreen washer system

⚠ WARNING Risk of injury due to moving parts

Components in the engine compartment may continue to run or start unexpectedly even when the drive system is switched off.

Observe the following if you must open the bonnet:

- ▶ Switch off the vehicle.
- ▶ Never touch the danger zones surrounding moving components, e.g. the rotation area of the fan.
- ▶ Remove jewellery and watches.
- ▶ Keep items of clothing and hair away from moving parts.

⚠ WARNING Risk of burns from hot component parts in the engine compartment


Certain component parts in the engine compartment can be very hot, e.g. the engine, the cooler and parts of the exhaust system.

- ▶ Allow the engine to cool down and only touch component parts described in the following.

⚠ WARNING - Risk of fire and injury due to windscreen washer concentrate

Windscreen washer concentrate is highly flammable. It could ignite if it comes into contact with hot engine component parts or the exhaust system.

- ▶ Make sure that no windscreen washer concentrate spills out next to the filler opening.

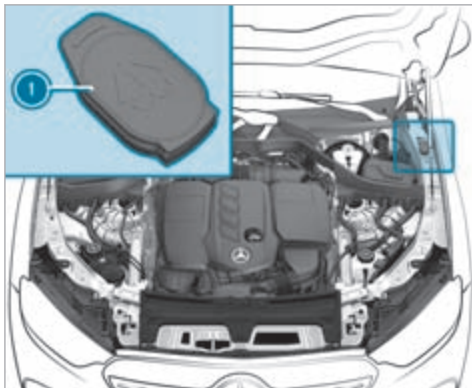

- ▶ Open cap ❶ by the tab.
- ▶ Top up the washer fluid.
- ❶ Further information about the windscreen washer fluid (→ page 450)

Keeping the air/water duct free

- ▶ Keep the area between the bonnet and the windscreen free of deposits, e.g. ice, snow or leaves.

Cleaning and care

Information on washing the vehicle in a car wash

⚠ WARNING Risk of an accident due to reduced braking power after washing the vehicle

Braking efficiency is reduced after washing the vehicle.

- ▶ After the vehicle has been washed, brake carefully while paying attention to the traffic conditions until braking power has been fully restored.

! NOTE Damage from automatic braking

If one of the following functions is activated, the vehicle brakes automatically in certain situations:

- Active Brake Assist
- Active Distance Assist DISTRONIC
- HOLD function
- Active Parking Assist

To avoid damage to the vehicle, deactivate these systems in the following or similar situations:

- ▶ when being towed
- ▶ in a car wash

! NOTE Damage due to unsuitable car wash

- ▶ Before driving into a car wash make sure that the car wash is suitable for the vehicle dimensions.

- ▶ Ensure there is sufficient ground clearance between the underbody and the guide rails of the car wash.
- ▶ Ensure that the clearance width of the car wash, in particular the width of the guide rails, is sufficient.

To avoid damage to your vehicle when using a car wash, ensure the following beforehand:

- Active Distance Assist DISTRONIC is deactivated.
- The HOLD function is switched off.
- The 360° camera or the reversing camera is switched off.
- The side windows and sliding sunroof are completely closed.
- The outside mirrors are folded in.
- The blower for the ventilation and heating is switched off.
- The windscreen wiper switch is in position **0**.
- The key is at a minimum distance of 3 m away from the vehicle. Otherwise, the tailgate could open unintentionally.

- For car washes with a conveyor system:
 - Neutral **N** is engaged.
 - If you would like to leave the vehicle while it is being washed, make sure the key is located in the vehicle. Park position **P** will otherwise be engaged automatically.

i If, after the car wash, you remove the wax from the windscreen and wiper rubbers, this will prevent smearing and reduce wiper noise.

Automatic car wash mode

In car wash mode, the vehicle is prepared for driving into an automatic car wash. Car wash mode can be activated at a speed of up to 20 km/h (→ page 392).

When car wash mode is activated, the **Car wash mode active** message will appear on the driver's display. The following adjustments will be made:

- To prevent the windscreen washer system from starting up automatically, the rain sensor will be deactivated.
- The rear window wiper will be deactivated.

- Parking Assist PARKTRONIC will be deactivated.
- **Vehicles with 360° camera:** the front image will be activated after approximately eight seconds.
- **Vehicles with HANDS-FREE ACCESS:** kick recognition will be deactivated.

If one of the settings cannot be selected, this will be shown by a **X** next to the respective setting.

Pressing **Switch off** will end car wash mode. Above a speed of 20 km/h, car wash mode will be deactivated automatically.

You can also switch off car wash mode via the MBUX multimedia system (→ page 392).

The following settings will be reset when car wash mode is deactivated:

- The rain sensor will be activated.
- The rear window wiper will be activated.
- Parking Assist PARKTRONIC will be reset to the previously selected setting.

- **Vehicles with 360° camera:** the front image will be deactivated at speeds above 18 km/h.
- **Vehicles with HANDS-FREE ACCESS:** kick recognition will be activated.

Activating/deactivating automatic car wash mode

Requirements:

- The vehicle is stationary.
- The vehicle is switched on.

Multimedia system:

→  ► **Settings** ► **Vehicle** ► **Driving**

Activating automatic car wash mode

- ▶ Select **Car wash mode**.
- ▶ Select **Activate**.

If one of the settings cannot be selected, this is shown by a  next to the respective setting.

- ❗ For an overview of the settings made when activating automatic car wash mode (→ page 390).

Deactivating automatic car wash mode

- ▶ Select **Deactivate**.
The automatic car wash settings are reset.
- ❗ The automatic car wash mode is automatically deactivated as soon as a speed of 20 km/h is exceeded.

Information on using a high-pressure cleaner

 **WARNING** Risk of an accident when using high-pressure cleaners with round-spray nozzles

The water jet can cause externally invisible damage.

Components damaged in this way may unexpectedly fail.

- ▶ Do not use a high-pressure cleaner with round-spray nozzles.
- ▶ Have damaged tyres or chassis parts replaced immediately.

To avoid damage to your vehicle, observe the following when using a high-pressure cleaner:

- The key is at a minimum distance of 3 m away from the vehicle. Otherwise, the tailgate could open unintentionally.
- Maintain a distance of at least 30 cm to the vehicle.
- **Vehicles with decorative foils:** Parts of your vehicle are covered with a decorative foil. Maintain a distance of at least 70 cm between the foil-covered parts of the vehicle and the nozzle of the high-pressure cleaner. Move the high-pressure cleaner nozzle around whilst cleaning. The water temperature of the high-pressure cleaner must not exceed 60°C.
- Observe the information on the correct distance in the equipment manufacturer's operating instructions.
- Do not direct the nozzle of the high-pressure cleaner directly at sensitive parts, e.g. tyres, gaps, electrical components, batteries, illuminants or louvres.

Washing the vehicle by hand

! **NOTE** Engine damage due to water ingress

- ▶ Take care not to point the water jet directly towards the air inlet grille below the bonnet.

Observe the relevant legal requirements (e.g. in some countries, washing by hand is permitted only in specially designated wash bays).

- ▶ Use a mild cleaning agent (e.g. car shampoo).
 - ▶ Wash the vehicle with lukewarm water using a soft car sponge. When doing so, do not expose the vehicle to direct sunlight.
 - ▶ Carefully hose the vehicle off with water and dry using a chamois.
- ① Observe the notes on the care of car parts (→ page 394).

Notes on paintwork/matt finish paintwork care

To avoid damaging the paintwork and interfering with the driving assistance systems, please observe the following notes:

Paint

- Insect remains: Soak with insect remover and rinse off the treated areas afterwards.
- Bird droppings: Soak with water and rinse off afterwards.
- Tree resin, oils, fuels and greases: remove by rubbing gently with a cloth soaked in petroleum ether or lighter fluid.
- Coolant and brake fluid: remove with a damp cloth and clean water.
- Tar stains: use tar remover.
- Wax: use silicone remover.
- Do not attach stickers, films or similar materials. Only have film attached to the bumper at a qualified specialist workshop.
- Remove dirt immediately, where possible.

Matt finish

- Only use care products approved for Mercedes-Benz.
- Do not attach stickers, films or similar materials. Only have film attached to the bumper at a qualified specialist workshop.

- Do not polish the vehicle and light-alloy wheels.
- Only use car washes that correspond to the latest engineering standards.
- Do not use car wash programmes with a final hot wax treatment.
- Do not use paint cleaners, buffing or polishing products, gloss preservers, e.g. wax.

In the event of paintwork damage:

- Always have paintwork repairs carried out at a qualified specialist workshop.
- Make sure the radar sensors function (→ page 237).

Notes on cleaning decorative films

Observe the "Notes on paintwork/matt finish paintwork care" (→ page 393). They also apply to matt decorative films.

Observe the notes on cleaning decorative films to avoid damage.

Cleaning

- For cleaning, use plenty of water and a mild cleaning agent without additives or abrasive substances (e.g. a car shampoo approved for Mercedes-Benz).
- Remove dirt as soon as possible. Avoid rubbing too hard in order not to damage the decorative film irreparably.
- If there is dirt on the finish or if the decorative film is dull: use the paint cleaner recommended and approved for Mercedes-Benz.
- Insect remains: soak with insect remover and rinse off the treated areas afterwards.
- Bird droppings: soak with water and rinse off afterwards.
- To prevent water stains, dry a film-wrapped vehicle with a soft, absorbent cloth after every car wash.

Avoiding damage to the decorative film

- The service life and colouring of decorative films are impaired by:
 - Sunlight
 - Temperature (e.g. hot air blower)

- Weather conditions
- Stone chippings and dirt
- Chemical cleaning agents
- Oily products

- Do not use polish on matt decorative film. Polishing will have the effect of shining the film-wrapped surface.
- Do not treat matt or structured decorative films with wax. Permanent stains may occur.

Scratches, corrosive deposits, areas affected by corrosion and damage caused by incorrect care cannot always be completely repaired. In this case, contact a qualified specialist workshop. You can obtain more information on care and cleaning agents from the manufacturer.

In the case of film-wrapped surfaces, visual differences may occur between the surfaces that were not protected by a decorative film after a decorative film has been removed.

- ① Have work or repairs to decorative films carried out at a qualified specialist workshop (e.g. at a Mercedes-Benz Service Centre).

Notes on care of car parts

⚠ WARNING Risk of entrapment if the windscreen wipers are switched on while the windscreen is being cleaned

If the windscreen wipers are set in motion while you are cleaning the windscreen or wiper blades, you can be trapped by the wiper arm.

▶ Always switch off the windscreen wipers and the vehicle before cleaning the windscreen or wiper blades.

To avoid damage to the vehicle, observe the notes on cleaning and care of the following car parts:

Wheels and rims

- Use water and acid-free alloy wheel cleaners.
- Do not use acidic alloy wheel cleaners to remove brake dust. This could damage wheel bolts and brake components.
- To avoid corrosion of the brake disks and brakepads, drive the vehicle for a few minutes after cleaning before parking it. The brake disks and brakepads will warm up and dry out.

Windows

- Clean the windows inside and outside with a damp cloth and with a cleaning agent recommended for Mercedes-Benz.
- Do not use dry cloths or abrasive or solvent-based cleaning agents to clean the insides of windows.
- ❗ After changing the wiper blades or treating the vehicle with wax, clean the windscreen thoroughly with cleaning agents recommended for Mercedes-Benz. Failure to observe the application instructions may result in damage, smear marks or dazzling spots.
- ❗ Remove external fogging or dirt on the windscreen in front of the multifunction camera. Otherwise, driving systems and driving safety systems may be impaired or unavailable (→ page 237).

Wiper blades

- Move the wiper arms into the replacement position (→ page 154).
- With the wiper arms folded out, clean the wiper blades with a damp cloth.

- ❗ Make sure that the wiper blades are coated. The coating may leave residue on a cloth. Do not rub the wiper blades excessively or clean them too often.

Exterior lighting

- Clean the lenses with a wet sponge and mild cleaning agent (e.g. car shampoo).
- Use only cleaning agents or cleaning cloths that are suitable for plastic lenses.

Vehicle socket (high-voltage battery)

- Use clean water and a soft cloth to clean the vehicle socket.
- Do not use high-pressure cleaners or cleaning agents such as soap.

Sensors

- Clean the sensors in the front and rear bumpers with a soft cloth and car shampoo (→ page 237).
- When using a high-pressure cleaner, maintain a minimum distance of 30 cm.

Running boards

- Use water and acid-free cleaning agents.

- Do not clean the aluminium trim inserts of the running board with alkaline or acidic cleaning agents such as wheel cleaners. Do not use acidic alloy wheel cleaners to remove brake dust. The aluminium trim inserts could otherwise be damaged.

Reversing camera and 360° camera

- Open the camera cover with the multimedia system (→ page 296).
- Use clean water and a soft cloth to clean the camera lens.
- Do not use a high-pressure cleaner.

Trailer hitch

- Observe the notes on care in the trailer hitch manufacturer's operator manual.
- Do not clean the ball neck with a high-pressure cleaner or solvent.
- Remove traces of rust on the ball (e.g. using a wire brush).
- Remove dirt with a lint-free cloth.
- After cleaning, lightly oil or grease the ball head.

-  Before using trailers with anti-torsional coupling, observe the manufacturer's operator manual.

Notes on care of the interior

 **WARNING** Risk of injury from plastic parts breaking off after the use of solvent-based care products

Care and cleaning products containing solvents can cause surfaces in the cockpit to become porous. When the airbags are deployed, plastic parts may break away.

-  Do not use any care or cleaning products containing solvents to clean the cockpit.

 **WARNING** Risk of injury or fatal injuries from bleached seat belts

Bleaching or dyeing seat belts can severely weaken them.

This can, for example, cause seat belts to tear or fail in an accident.

-  Never bleach or dye seat belts.

To avoid damage to the vehicle, observe the following notes on cleaning and care:

Seat belts

- Clean with lukewarm soapy water.
- Do not use chemical cleaning agents.
- Do not dry by heating them to over 80°C or exposing them to direct sunlight.

Display

- Switch off the display and let it cool down.
- Clean the surface carefully with a microfibre cloth and a suitable display care product (TFT-LCD).
- Do not use any other agents.

Head-up display

- Clean with a soft, non-static, lint-free cloth.
- Do not use cleaning agents.

Plastic trim

- Clean with a damp microfibre cloth.
- For heavy soiling: use a cleaning agent recommended for Mercedes-Benz.

- Do not attach stickers, films or similar materials.
- Do not allow cosmetics, insect repellent or sun cream to come into contact with the plastic trim.

Real wood and trim elements

- Clean with a microfibre cloth.
- Black piano-lacquer look: clean with a damp cloth and soapy water.
- For heavy soiling: use a cleaning agent recommended for Mercedes-Benz.
- Do not use solvent-based cleaning agents, polishes or waxes.

Roof lining

- Clean with a brush or dry shampoo.

Carpet

- Use a carpet and textile cleaning agent recommended for Mercedes-Benz.

Steering wheel made of genuine leather or DINAMICA

! NOTE Damage caused by wrong cleaners

- ▶ Do not use solvent-based cleaning agents such as tar remover or wheel cleaner; neither should you use polishes or waxes. Otherwise you may damage the finish.

- Clean with a damp cloth and 1% soapy water solution and then wipe with a dry cloth.
- For heavy soiling: use a cleaning agent recommended for Mercedes-Benz.
- Leather care: use a leather care agent that has been recommended for Mercedes-Benz.
- Do not allow the leather to become too damp.
- Do not use a microfibre cloth.

- ① Leather is a natural product. It exhibits natural surface properties such as differences in structure, marks caused by growth and injury or subtle colour differences. These surface properties are characteristics of leather and

not material faults. What's more, leather is subject to a natural ageing process during which the surface properties change.

Genuine leather seat covers

- Vacuum up dirt such as crumbs or dust and then clean the seat covers with a damp cotton cloth and wipe down with a dry cloth. Regularly clean the seat covers.
- For heavy soiling: use a leather care agent recommended for Mercedes-Benz aftercare.
- Leather care: use a leather care agent that has been recommended for Mercedes-Benz.
- Do not use a microfibre cloth.
- Do not allow the leather to become too damp.
- Do not use oil-based cleaning and care products.

- ① Leather is a natural product. It exhibits natural surface properties such as differences in structure, marks caused by growth and injury or subtle colour differences. These surface properties are characteristics of leather and not material faults. What's more, leather is

subject to a natural ageing process during which the surface properties change. Regular cleaning and care of the leather reduces soiling, wear marks and ageing damage and thus significantly extends its life span. Clothing that can leave stains (e.g. jeans) may discolour the leather.

DINAMICA seat covers

- Clean with a damp cloth.
- Do not use a microfibre cloth.

Imitation leather seat covers

- Vacuum up dirt such as crumbs or dust and then use a damp cotton cloth and a 1% soap solution to clean the entire seat cover. Do not spot clean.
- Use cleaning and care products recommended for Mercedes-Benz.
- Do not use a microfibre cloth.
- Do not use oil-based cleaning and care products.

Fabric seat covers

- Vacuum up dirt such as crumbs or dust and then use a damp microfibre cloth and a 1%

soap solution to clean the entire seat cover.
Do not spot clean.

- Use cleaning and care products recommended for Mercedes-Benz.
- Do not use oil-based cleaning and care products.

Emergency


Removing the safety vest



The safety vests are located in the stowage compartments in the driver's and front passenger door.

- ▶ Pull out safety vest bag ① by the loop.
- ▶ Open the safety vest bag and pull out the safety vest.

❗ There are also safety vest compartments in the rear door stowage compartments in which safety vests can be stored.

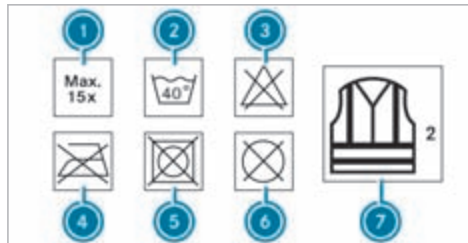

- ① Maximum number of washes
- ② Maximum wash temperature
- ③ Do not bleach
- ④ Do not iron
- ⑤ Do not tumble dry
- ⑥ Do not dry clean
- ⑦ Class 2 safety vest

The requirements defined by the legal standard are only fulfilled if the safety vest is the correct size and is fully closed.


Replace the safety vest in the following cases:

- The reflective strips are damaged or dirty

- The maximum permissible number of washes is exceeded
- The fluorescence has faded

Warning triangle


Removing the warning triangle

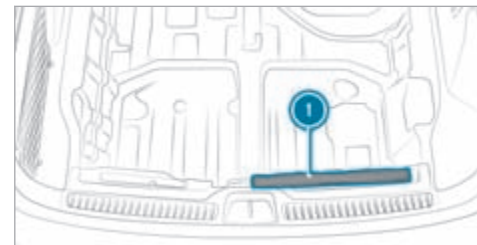

The warning triangle ① is located under the load compartment floor in the load sill.


- ▶ Remove warning triangle ①.

Setting up the warning triangle

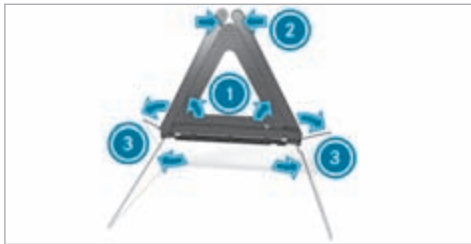

- ▶ Fold side reflectors ① upwards to form a triangle and attach at the top using upper press-stud ②.
- ▶ Fold legs ③ down and out to the side.

First-aid kit (soft sided) overview

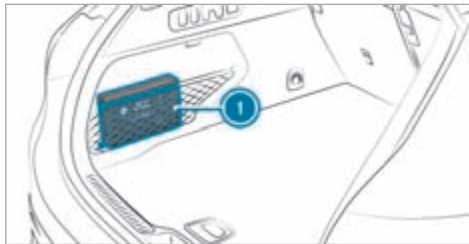

The first-aid bag ① is located in the load compartment on the left in the stowage net.

Removing the fire extinguisher


⚠ WARNING Risk of accident due to an incorrectly secured fire extinguisher in the driver's footwell

A fire extinguisher may impede pedal travel or block a depressed pedal.

This jeopardises the operating and road safety of the vehicle.

The fire extinguisher can be flung around and injure the driver or other vehicle occupants.

- ▶ Always store and secure the fire extinguisher in the bracket.
- ▶ Do not remove the fire extinguisher while driving.

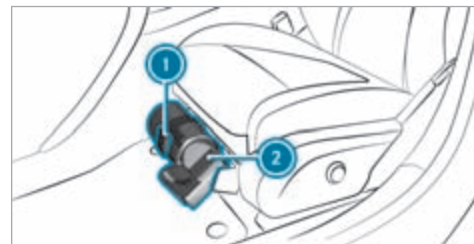

- ▶ **Left-hand drive vehicle:** pull tab ① upwards.
- ▶ **Right-hand drive vehicle:** pull tab ① downwards.
- ▶ Remove fire extinguisher ②.

Flat tyre

Notes on flat tyres

⚠ WARNING Risk of accident due to a flat tyre

A flat tyre severely affects the driving characteristics as well as the steering and braking of the vehicle.

Tyres without run-flat characteristics:

- ▶ Do not drive with a flat tyre.
- ▶ Change the flat tyre immediately with an emergency spare wheel or spare wheel. Alternatively, consult a qualified specialist workshop.

Tyres with run-flat characteristics:


- ▶ Observe the information and warning notes on MOExtended tyres (run-flat tyres).

In the event of a flat tyre, the following options are available depending on your vehicle's equipment:

- **Vehicles with a TIREFIT kit:** you can repair the tyre so that it is possible to continue the journey for a short period of time. To do this, use the TIREFIT kit (→ page 402).
- **Vehicles with Mercedes me connect:** you can make a call for breakdown assistance via the overhead control panel in the case of a breakdown (→ page 360).
- **All vehicles:** change the wheel (→ page 430).


TIREFIT kit storage location

Plug-in hybrid

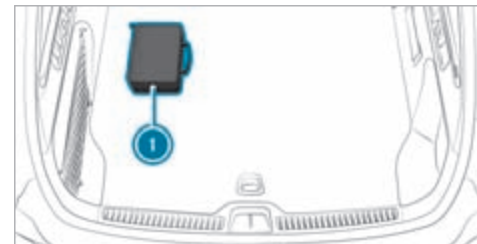

The TIREFIT kit ① is located in the left-hand load compartment when delivered.

Not plug-in hybrid

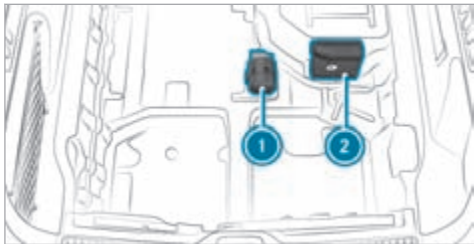

- ① Tyre sealant bottle
- ② Tyre inflation compressor

The TIREFIT kit is located under the load compartment floor when delivered.

Depending on the version, the TIREFIT kit may be located in other positions in the load compartment.

- ① Depending on the power category (LK), the tyre inflation compressor weighs as follows:
 - LK1 – 12 V/10 A, 120 W, 0.8 kg
 - LK2 – 12 V/15 A, 180 W, 0.9 kg

You can find information on the power category (LK) and/or electrical data on the back of the tyre inflation compressor.

The tyre inflation compressor is maintenance-free. If there is a malfunction, please contact a qualified specialist workshop.

Using the TIREFIT kit

Requirements:

- Tyre sealant bottle and tyre inflator compressor are ready for use (→ page 401).
- TIREFIT sticker is present.
- Gloves are present.

TIREFIT kit storage location: (→ page 401)

With the TIREFIT tyre sealant you can seal punctures up to 4mm, especially in the tyre tread. You can use TIREFIT in outside temperatures down to -20 °C.

⚠ WARNING Risk of accident when using tyre sealant

The tyre sealant may be unable to seal the tyre properly, especially in the following cases:

- there are large cuts or punctures in the tyre (larger than damage previously mentioned)
- the wheel rims have been damaged
- after journeys with very low tyre pressure or with flat tyres

- ▶ Do not continue driving.
- ▶ Consult a qualified specialist workshop.

⚠ WARNING Risk of injury and poisoning from tyre sealant

Tyre sealant is hazardous to health and causes irritation. Do not allow it to come into contact with your skin, eyes or clothing, and do not swallow it. Do not inhale any vapours. Keep the tyre sealant away from children.

Observe the following if you come into contact with the tyre sealant:

- ▶ Rinse off the tyre sealant from your skin using water immediately.
- ▶ If tyre sealant gets into your eyes, thoroughly rinse them using clean water immediately.
- ▶ If tyre sealant has been swallowed, thoroughly rinse out your mouth immediately and drink plenty of water. Do not induce vomiting and seek medical attention immediately.
- ▶ Change out of clothing which has come into contact with tyre sealant immediately.
- ▶ If an allergic reaction occurs, seek medical attention immediately.


! **NOTE** Overheating due to the tyre inflation compressor running too long

- ▶ Do not run the tyre inflation compressor for longer than ten minutes without interruption.


Comply with the manufacturer's safety notes on the sticker on the tyre inflation compressor.

Have the tyre sealant bottle replaced in a qualified specialist workshop every five years.

- ▶ Do not remove any foreign objects which have entered the tyre.

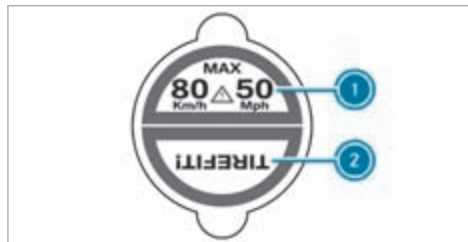

- ▶ Affix part ① of the TIREFIT sticker to the instrument cluster within the driver's field of vision.
- ▶ Affix part ② of the TIREFIT sticker near the valve on the wheel with the defective tyre.

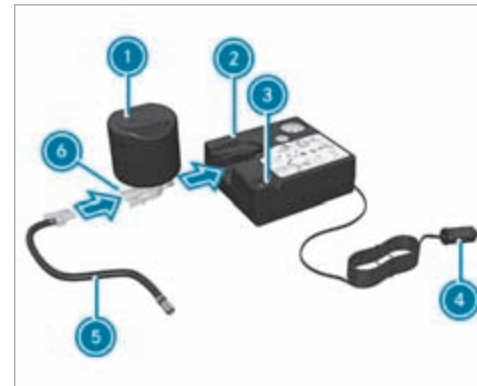

- ▶ Pull plug ④ with the cable and hose ⑤ out of the tyre inflation compressor housing.
- ▶ Push the plug of hose ⑤ into flange ⑥ of tyre sealant bottle ① until the plug engages.
- ▶ Place tyre sealant bottle ① head downwards into recess ② of the tyre inflation compressor.



- ▶ Remove the valve cap from valve ⑦ on the faulty tyre.
- ▶ Screw filling hose ⑧ onto valve ⑦.
- ▶ Insert plug ④ into a 12-V-socket in your vehicle.
- ▶ Switch on the vehicle.
- ▶ Press on and off switch ③ on the tyre inflation compressor.
The tyre inflation compressor is switched on. The tyre is inflated. First, tyre sealant is pumped into the tyre. The pressure may briefly rise to approximately 500 kPa (5 bar/73 psi).

Do not switch off the tyre inflation compressor during this phase!

- ▶ Let the tyre inflation compressor run for a maximum of ten minutes.
The tyre should then have attained a tyre pressure of at least 200 kPa (2.0 bar/29 psi).

If tyre sealant leaks out, make sure you clean the affected area as quickly as possible. It is preferable to use clean water.

If you get tyre sealant on your clothing, have it cleaned as soon as possible with perchloroethylene.

If, after ten minutes, a tyre pressure of 200 kPa (2.0 bar/29 psi) has not been attained:

- ▶ Switch off the tyre inflation compressor.
- ▶ Unscrew the filling hose from the valve of the defective tyre.

Please note that tyre sealant may leak out when unscrewing the filling hose.

- ▶ Drive forwards or in reverse very slowly for approximately 10 m.

- ▶ Pump up the tyre again.
After a maximum of ten minutes the tyre pressure must be at least 200 kPa (2.0 bar/29 psi).

⚠ WARNING Risk of accident due to the specified tyre pressure not being attained

If the specified tyre pressure is not attained after the specified time, the tyre is too badly damaged. The tyre sealant cannot repair the tyre in this instance.

The braking and driving characteristics may be greatly impaired.

- ▶ Do not continue driving.
- ▶ Consult a qualified specialist workshop.

If, after ten minutes, a tyre pressure of 200 kPa (2.0 bar/29 psi) has been attained:

⚠ WARNING Risk of accident from driving with sealed tyres

A tyre temporarily sealed with tyre sealant impairs the handling characteristics and is not suitable for higher speeds.

- ▶ Adapt your driving style accordingly and drive carefully.
- ▶ Do not exceed the maximum speed limit with a tyre that has been repaired using tyre sealant.

- ▶ Observe the maximum permissible speed of 80 km/h for a tyre sealed with tyre sealant.
- ▶ Affix the upper section of the TIREFIT sticker to the instrument cluster in a location where it will be easily seen by the driver.

! NOTE Staining from leaking tyre sealant

After use, excess tyre sealant may leak out from the filling hose.

- ▶ Therefore, place the filling hose in the plastic bag that contained the TIREFIT kit.

🌿 ENVIRONMENTAL NOTE Environmental pollution caused by environmentally irresponsible disposal

Tyre sealant contains pollutants.

- ▶ Have the tyre sealant bottle disposed of professionally, e.g. at a Mercedes-Benz Service Centre.

- ▶ Switch off the tyre inflation compressor.
- ▶ Unscrew the filling hose from the valve of the defective tyre.
- ▶ Stow the tyre sealant bottle and the tyre inflation compressor.
- ▶ **Pull away immediately.**
- ▶ Stop driving after approximately ten minutes and check the tyre pressure using the tyre inflation compressor.
The tyre pressure must now be at least 130 kPa (1.3 bar/19 psi).

⚠ WARNING Risk of accident due to the specified tyre pressure not being attained


If the specified tyre pressure is not reached, the tyre is too badly damaged. The tyre sealant cannot repair the tyre in this instance.

The braking and driving characteristics may be greatly impaired.

- ▶ Do not continue driving.
- ▶ Consult a qualified specialist workshop.


Countries that have Mercedes-Benz Service24h: you will find a sticker with the telephone number, e.g. on the B-pillar on the driver's side.

- ▶ Correct the tyre pressure if it is still at least 130 kPa (1.3 bar/19 psi). See the tyre pressure table on the fuel filler flap for values.
- ▶ **To increase the tyre pressure:** switch on the tyre inflation compressor.

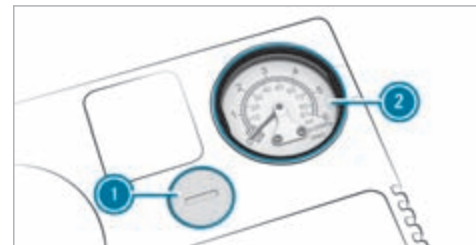

- ▶ **To reduce the tyre pressure:** press pressure release button ① next to manometer ②.

- ▶ When the tyre pressure is correct, unscrew the filling hose from the valve of the sealed tyre.
- ▶ Screw the valve cap onto the valve of the sealed tyre.

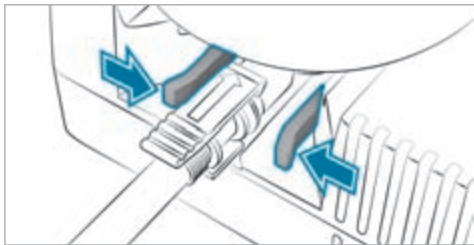

- ▶ Pull the tyre sealant bottle out of the tyre inflation compressor. Press the locking tabs on the yellow cap together to do this. The filling hose stays on the tyre sealant bottle.
- ▶ Drive to the nearest qualified specialist workshop and have the tyre, tyre sealant bottle and filling hose replaced there.

Battery (vehicle)

Notes on the 12 V battery

⚠ WARNING Risk of an accident due to work carried out incorrectly on the battery

Work carried out incorrectly on the battery can, for example, lead to a short circuit. This can restrict functions relevant for safety systems and impair the operating safety of your vehicle.

You could lose control of the vehicle in the following situations in particular:

- when braking
- in the event of abrupt steering manoeuvres and/or when the vehicle's speed is not adapted to the road conditions
- ▶ In the event of a short circuit or a similar incident, contact a qualified specialist workshop immediately.
- ▶ Do not drive on.
- ▶ Always have work on the battery carried out at a qualified specialist workshop.

- Further information on ABS (→ page 239)
- Function of ESP[®] (→ page 240)

For safety reasons, Mercedes-Benz recommends that you only use batteries which have been approved for your vehicle by Mercedes-Benz.

All vehicles except vehicles with a lithium-ion battery

⚠ WARNING Risk of explosion due to electrostatic charge

Electrostatic charge can ignite the highly explosive gas mixture in the battery.

- ▶ To discharge any electrostatic charge that may have built up, touch the metal vehicle body before handling the battery.

The highly flammable gas mixture is created while the battery is charging and during starting assistance.

⚠ WARNING Danger of chemical burns from the battery acid

Battery acid is caustic.

- ▶ Avoid contact with the skin, eyes or clothing.
- ▶ Do not lean over the battery.
- ▶ Do not inhale battery gases.
- ▶ Keep children away from the battery.
- ▶ Immediately rinse battery acid off thoroughly with plenty of clean water and seek medical attention immediately.

All vehicles

 **ENVIRONMENTAL NOTE** Environmental damage due to improper disposal of batteries



Batteries contain pollutants. It is illegal to dispose of them with the household rubbish.



Dispose of batteries in an environmentally responsible manner. Take discharged batteries to a qualified specialist workshop or to a collection point for used batteries.

If you have to disconnect the 12 V battery, contact a qualified specialist workshop.

Comply with safety notes and take protective measures when handling batteries.



Risk of explosion if the 12 V battery is used improperly.



Fire, naked flames and smoking are prohibited when handling the battery. Avoid creating sparks.



Electrolyte or battery acid is corrosive. Avoid contact with the skin, eyes or clothing. Wear suitable protective clothing, in particular gloves, an apron and a face mask. Immediately rinse electrolyte or

acid splashes off with clean water. Consult a doctor immediately.



Do not place heavy objects on the surface of the battery or use the battery to support a person in any way.



Wear safety glasses.



Keep children away.



Observe this Owner's Manual.

Observe the following if you do not intend to use the vehicle over an extended period of time:

- **Not plug-in hybrid:** switch to standby mode. Activating/deactivating standby mode (→ page 237, 236)
- Alternatively: connect the battery to a battery charger approved by Mercedes-Benz or consult a qualified specialist workshop to disconnect the battery.

Notes on the 48 V battery

⚠ WARNING Risk of an accident due to work carried out incorrectly on the battery

Work carried out incorrectly on the battery can, for example, lead to a short circuit. This can restrict functions relevant for safety systems and impair the operating safety of your vehicle.

You could lose control of the vehicle in the following situations in particular:

- when braking
 - in the event of abrupt steering manoeuvres and/or when the vehicle's speed is not adapted to the road conditions
- In the event of a short circuit or a similar incident, contact a qualified specialist workshop immediately.
- Do not drive on.
- Always have work on the battery carried out at a qualified specialist workshop.

- Further information on ABS (→ page 239)

- Further information on ESP® (→ page 240)

For safety reasons, Mercedes-Benz recommends that you only use batteries which have been approved for your vehicle by Mercedes-Benz.



ENVIRONMENTAL NOTE Environmental damage due to improper disposal of batteries



Batteries contain pollutants. It is illegal to dispose of them with the household rubbish.



Li-ion Dispose of batteries in an environmentally responsible manner. Take discharged batteries to a qualified specialist workshop or to a collection point for used batteries.

If you have to disconnect the 48 V battery, contact a qualified specialist workshop.

Comply with safety notes and take protective measures when handling batteries.



Risk of explosion if the 48 V battery is used improperly.



Fire, naked flames and smoking are prohibited when handling the battery. Avoid creating sparks.



Electrolyte or battery acid is corrosive. Avoid contact with the skin, eyes or clothing. Wear suitable protective clothing, in particular gloves, an apron and a face mask. Immediately rinse off splashes of electrolyte or acid with plenty of clean water. Consult a doctor immediately.



Do not place heavy objects on the surface of the battery or use the battery to support a person in any way.



Do not perform any work on the battery. Always have any work on the battery carried out at a qualified specialist workshop. Do not disconnect the battery yourself. Do not remove the battery yourself. Do not attempt to open the battery.



Keep children away.



Wear safety glasses.



Observe this Owner's Manual.

Observe the following if you do not intend to use the vehicle over an extended period of time:

- **Not plug-in hybrid:** switch to standby mode.
Activating/deactivating standby mode
(→ page 237, 236)

Notes on starting assistance and charging the 12 V battery

All vehicles

When charging the battery and during starting assistance, always use the jump-start connection point in the engine compartment.



NOTE Damage to the battery due to over-voltage

When charging using a battery charger without a maximum charging voltage, the battery or the on-board electronics may be damaged.

- ▶ Only use battery chargers with a maximum charging voltage of 14.8 V.



WARNING Risk of explosion due to the ignition of hydrogen gas

If there is a short circuit or sparks are created, there is a danger of hydrogen gas igniting when you charge the battery.

- ▶ Make sure that the POSITIVE terminal of a connected battery does not come into contact with vehicle parts.
- ▶ Never place metal objects or tools on a battery.
- ▶ When connecting and disconnecting the battery, always observe the sequence of battery terminals described.



During starting assistance, always take care to connect only battery terminals of identical polarity.



During starting assistance, observe the sequence described for connecting and disconnecting the jump leads.



Do not connect or disconnect the battery terminals with the engine running.



WARNING Risk of explosion due to explosive mixture of gases

An explosive mixture of gases can escape from the battery during charging and starting assistance.

- ▶ Fire, naked flames, smoking and creating sparks must be avoided.
- ▶ Make sure there is adequate ventilation.
- ▶ Do not stand over the battery.

⚠ WARNING Risk of explosion from a frozen battery

A discharged battery may freeze at temperatures slightly above or below freezing point. During starting assistance or battery charging, battery gas can be released.

- Always allow a battery to thaw before charging it or performing starting assistance.

If the indicator/warning lamps in the instrument cluster do not light up at low temperatures, it is very likely that the discharged battery has frozen. In this case you may neither jump-start the vehicle nor charge the battery.

The service life of a battery that has been thawed may be dramatically shortened. The starting characteristics may be impaired, especially at low temperatures.

It is recommended that you have a thawed battery checked at a qualified specialist workshop.

Plug-in hybrid

If your vehicle has been started with starting assistance, it may not be possible to use the electric drive for approximately 30 minutes.

Starting assistance is not considered to be a normal operating condition.

All vehicles

! NOTE Damage caused by numerous or extended attempts to start the engine

Numerous or extended attempts to start the engine may damage the catalytic converter due to non-combusted fuel.

- Avoid numerous and extended attempts to start the engine.

Observe the following points during starting assistance and when charging the battery:

- Only use undamaged jump lead/charging cables with a sufficient cross-section and insulated terminal clamps.
- Non-insulated parts of the terminal clamps must not come into contact with other metal

parts while the jump lead/charging cable is connected to the battery/jump-start connection point.

- The jump lead/charging cable must not come into contact with any parts which may move when the engine is running.
- Always make sure that neither you nor the battery is electrostatically charged.
- Keep away from fire and naked flames.
- Do not lean over the battery.

Observe the additional following points when charging the battery:

- Only use battery chargers tested and approved for Mercedes-Benz.
- Read the battery charger's operating instructions before charging the battery.

Observe the additional following points during starting assistance:


- Starting assistance may only be provided using vehicles, batteries or other jump start devices with a nominal voltage of 12 V.
- The vehicles must not touch.

- **Vehicles with a petrol engine:** jump-start the vehicle only when the engine and exhaust system are cold.


Starting assistance and charging the 12 V battery

Preparing starting assistance/charging

- ▶ Secure the vehicle by applying the electric parking brake.
- ▶ Shift the transmission to position **P**.
- ▶ Switch off the vehicle and all electrical consumers.
- ▶ Open the bonnet.

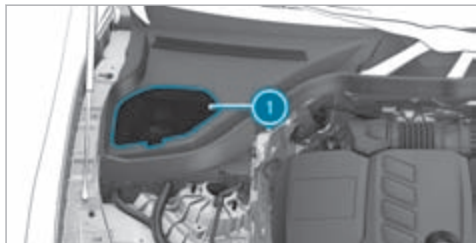

- ▶ Open cover ① of the jump-starting connection points.

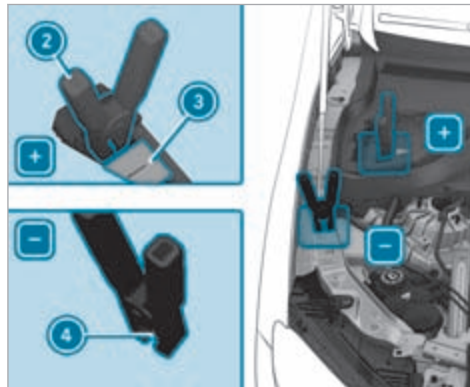

- ▶ Open cover ③ of positive contact ② of the jump-starting connection points.

Starting assistance

- ▶ Connect positive contact ② on your vehicle to the positive terminal of the donor battery

using the jump lead. Always begin with positive contact ② on your own vehicle first.

- ▶ Start the engine of the donor vehicle and run it at idling speed.
- ▶ Connect the negative terminal of the donor battery to earth point ④ of your vehicle using the jump lead. Begin with the donor battery first.
- ▶ Start the engine of your own vehicle.
- ▶ Let the engines run for several minutes.
- ▶ Before disconnecting the jump leads, switch on an electrical consumer in your own vehicle, e.g. the rear window heater or the lighting.

When the starting assistance procedure is complete:

- ▶ First, remove the jump leads from earth point ④ and the negative terminal of the donor battery, then from positive contact ② and the positive terminal of the donor battery. Begin each time with the contacts on your own vehicle first.

- ▶ After removing the jump leads, close cover ③ of positive contact ②.
- ▶ Close cover ①.

If your vehicle has been started with starting assistance, it may not be possible to use the electric drive for approximately 30 minutes.

Further information can be obtained at a qualified specialist workshop.

Charging

- ▶ Connect positive contact ② of the vehicle to the positive terminal of the charger using the charging cable. Always begin with positive contact ② of the vehicle.
- ▶ Connect the negative terminal of the charger and earth point ④ on the vehicle with the charging cable. Start with the charger.
- ▶ Start the charging process.

When the charging process is complete:

- ▶ First, remove the charging cable from earth point ④ and the negative terminal of the charger, then from positive contact ③ and

the positive terminal of the charger. Begin each time with the contacts of the vehicle.

- ▶ After removing the charging cable, close cover ③ of positive contact ②.
- ▶ Close cover ①.

Further information can be obtained at a qualified specialist workshop.

Replacing the 12 V battery

- ▶ Observe the notes on the 12 V battery (→ page 406).

Mercedes-Benz recommends that you have the 12 V battery replaced at a qualified specialist workshop, e.g. at a Mercedes-Benz Service Centre.

Observe the following notes if you want to replace the battery yourself:

- Always replace a faulty battery with a battery which meets the specific vehicle requirements.

The vehicle is equipped with an AGM technology battery (Absorbent Glass Mat) or a lith-

ium-ion battery. Full vehicle functionality is only guaranteed with an AGM battery or lithium-ion battery. For safety reasons, Mercedes-Benz recommends that you only use batteries which have been tested and approved for your vehicle by Mercedes-Benz.

- Carry over detachable parts, such as vent hoses, elbow fittings or terminal covers from the battery being replaced.
- Make sure that the vent hose is always connected to the original opening on the side of the battery.
Fit any existing or supplied cell caps.
Otherwise, gases or battery acid could escape.
- Make sure that detachable parts are reconnected in the same way.

Tow-starting or towing away

Permitted towing methods

! NOTE Damage from automatic braking

If one of the following functions is activated, the vehicle brakes automatically in certain situations:

- Active Brake Assist
- Active Distance Assist DISTRONIC
- HOLD function
- Active Parking Assist

To avoid damage to the vehicle, deactivate these systems in the following or similar situations:

- ▶ when being towed
- ▶ in a car wash

Mercedes-Benz recommends transporting your vehicle in the case of a breakdown, rather than towing it away.

For towing with both axles on the ground, use a tow rope or tow bar. Do not use tow bar systems.

! NOTE Damage to the vehicle due to towing away incorrectly

▶ Observe the instructions and notes on towing away.

Vehicles with automatic transmission

Permitted towing methods

Both axles on the ground	Yes, maximum 50 km at 50 km/h
Front axle raised	No
Rear axle raised	Yes, if the steering wheel is fixed in the centre position with a steering wheel lock

Towing with a raised axle: towing should be performed by a towing company.

4MATIC vehicles

Permitted towing methods

Both axles on the ground	Yes, maximum 50 km at 50 km/h
Front axle raised	No
Rear axle raised	No

Permitted towing methods (plug-in hybrid)

Mercedes-Benz recommends transporting your vehicle in the case of a breakdown, rather than towing it away.

For towing, use a tow rope or tow bar with both axles on the ground. Do not use tow bar systems.

! NOTE Damage to the vehicle due to towing away incorrectly

▶ Observe the instructions and notes on towing away.

Observe the information on towing and transporting the vehicle in the vehicle Owner's Manual.

In the following situations, only transporting the vehicle is permitted:

- the driver's display is not working
- the  **Towing not permitted See Owner's Manual** display message appears in the driver's display

Exception: if the vehicle is located in a danger zone, it can be recovered from the danger zone despite the  **Towing not permitted See Owner's Manual** display message or the display not working. It must not be towed further than 50 m with both axles on the ground. A towing speed of 10 km/h must not be exceeded. Beyond these limits, only transporting is permitted.

Vehicles with rear wheel drive

Permitted towing methods	
Both axles on the ground	Yes, maximum 50 km at 50 km/h, only forwards with the driver in the vehicle
Front axle raised	No
Rear axle raised	Yes, if the steering wheel is fixed in the centre position with a steering wheel lock

4MATIC vehicles

Permitted towing methods	
Both axles on the ground	Yes, maximum 50 km at 50 km/h, only forwards with the driver in the vehicle
Front axle raised	No
Rear axle raised	No

Towing the vehicle with both axles on the ground

- ▶ Observe the notes on the permitted towing methods.
- ▶ Make sure that the battery is connected and charged.

Observe the following points when the battery is discharged:

- the vehicle cannot be started.
- the electric parking brake cannot be released or applied
- Vehicles with automatic transmission:** the transmission cannot be shifted to position **N** or **P**.

i Vehicles with automatic transmission: if the transmission cannot be shifted to position **N** or if the display does not show anything, transport the vehicle (→ page 416). A towing vehicle with lifting equipment is required for vehicle transportation.

! **NOTE** Damage due to towing away at excessively high speeds or over long distances

The drivetrain could be damaged when towing at excessively high speeds or over long distances.

- ▶ A towing speed of 50 km/h must not be exceeded.
- ▶ A towing distance of 50 km must not be exceeded.

! **WARNING** Risk of accident when towing a vehicle which is too heavy

If the vehicle to be tow-started or towed away is heavier than the permissible gross mass of your vehicle, the following situations can occur:

- the towing eye may become detached.
 - the vehicle/trailer combination may swerve or overturn.
- ▶ Before tow-starting or towing away, check if the vehicle to be tow-started or

towed away exceeds the permissible gross mass.

If a vehicle has to be tow-started or towed away, its permissible gross mass must not exceed the permissible gross mass of the towing vehicle.

- ▶ Information on the permissible gross mass of the vehicle can be found on the vehicle identification plate (→ page 439).
- ▶ **Vehicles with automatic transmission:** do not open the driver's door or front passenger door; the transmission otherwise automatically shifts to position **P**.
- ▶ Fit the towing eye (→ page 417).
- ▶ Fasten the towing device.

! **NOTE** Damage due to incorrect connection of the tow bar

- ▶ Only connect the tow rope or tow bar to the towing eyes.

- ▶ Deactivate the automatic locking mechanism .
- ▶ Do not activate the HOLD function.

- ▶ Deactivate tow-away protection (→ page 103).
- ▶ Deactivate Active Brake Assist (→ page 269).
- ▶ **Vehicles with automatic transmission:** shift to position **N**.
- ▶ Release the electric parking brake.

! **WARNING** Risk of accident due to limited safety-related functions during the towing process

Safety-related functions are limited or no longer available in the following situations:

- the vehicle is switched off.
- the brake system or power steering system is malfunctioning.
- the energy supply or the on-board electrical system is malfunctioning.

When your vehicle is towed away, significantly more effort may be required to steer and brake than is normally required.

- ▶ Use a tow bar.

- ▶ Make sure that the steering wheel can move freely before towing the vehicle away.

! NOTE Damage due to excessive tractive power

If you pull away sharply, the tractive power may be too high and the vehicles could be damaged.

- ▶ Pull away slowly and smoothly.

Loading the vehicle for transport


Hybrid vehicles: transportation of vehicles should only be carried out by professional recovery companies.

- ▶ Observe the notes on towing away (→ page 414).
 - ▶ Connect the towing device to the towing eye in order to load the vehicle.
- i** You can also attach the tow bar to the trailer hitch.

- ▶ Shift the automatic transmission to position **N**.

i The automatic transmission may be locked in position **P** in the event of damage to the electrics. To shift to **N**, provide the on-board electrical system with power (→ page 411).

- ▶ Load the vehicle onto the transporter.
- ▶ Shift the automatic transmission to position **P**.
- ▶ Use the electric parking brake to secure the vehicle against rolling away.
- ▶ Only secure the vehicle by the wheels.

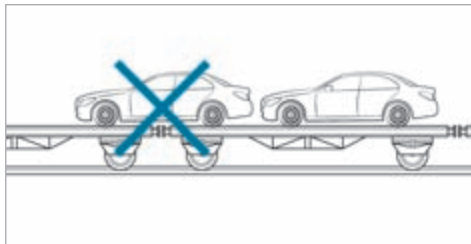

- ▶ Make sure that the front and rear axles come to rest on the same transportation vehicle.

! NOTE Damage to the drive train due to incorrect positioning of the vehicle


- ▶ Do not position the vehicle above the connection point of the transport vehicle.

Towing eye storage location



The towing eye **1** is located under the load compartment floor in the load sill.

Fitting and removing the towing eye

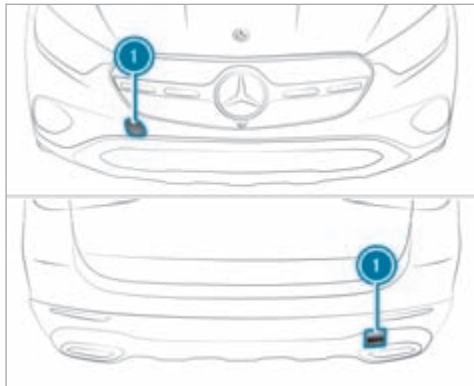

- ▶ Press the cover ① inwards and remove it.
- ▶ Screw in the towing eye clockwise as far as it will go and tighten.

Vehicles with a trailer hitch: vehicles with a trailer hitch do not have a rear bracket for the towing eye. Fasten the tow bar to the trailer hitch.

- ▶ Make sure that cover ① engages in the bumper when you remove the towing eye.

! **NOTE** Damage to the vehicle due to incorrect use of the towing eye or trailer hitch

When a towing eye or trailer hitch is used to recover a vehicle, the vehicle may be damaged in the process.

- ▶ Only use the towing eye or trailer hitch to tow away or tow start the vehicle.
- ▶ Do not use the towing eye or trailer hitch to tow the vehicle during recovery.

Tow-starting the vehicle

Vehicles with automatic transmission

! **NOTE** Damage to the automatic transmission due to tow-starting

The automatic transmission may be damaged in the process of tow-starting vehicles with automatic transmission.

- ▶ Vehicles with automatic transmission must not be tow-started.

- ▶ Vehicles with an automatic transmission must not be tow-started.

Electrical fuses

Notes on electrical fuses

! **WARNING** Risk of accident and injury due to overloaded lines

If you manipulate or bridge a faulty fuse or if you replace it with a fuse with a higher amperage, the electric line could be overloaded.

This could result in a fire.

- ▶ Always replace faulty fuses with specified new fuses containing the correct amperage.

! NOTE Damage due to incorrect fuses

Using incorrect fuses can result in damage to electrical components or systems or their functions being considerably restricted.

- ▶ Use only fuses approved for Mercedes-Benz with the respective specified fuse rating.

Blown fuses must be replaced with fuses of the same rating, which you can recognise by the colour and the label. The fuse ratings and further information to be observed can be found in the fuse assignment diagram.

Fuse assignment diagram: on the fuse box in the load compartment (→ page 420).

! NOTE Damage or malfunctions caused by moisture

Moisture may cause damage to the electrical system or cause it to malfunction.

- ▶ When the fuse box is open, make sure that no moisture can enter the fuse box.

- ▶ When closing the fuse box, make sure that the seal of the lid is positioned correctly on the fuse box.

If the newly inserted fuse also blows, have the cause traced and rectified at a qualified specialist workshop.

Ensure the following before replacing a fuse:

- The vehicle is secured against rolling away.
- All electrical consumers are switched off.
- The vehicle is switched off.

The electrical fuses are located in various fuse boxes:

- Fuse box in the engine compartment on the driver's side (→ page 418)
- Fuse box on the driver's side of the cockpit (→ page 419)
- Fuse box in the front passenger footwell (→ page 420)
- Fuse box in the load compartment (→ page 420)

Opening and closing the fuse box in the engine compartment

Requirements:

- A dry cloth and a screwdriver are available.


Observe the notes on electrical fuses (→ page 417).

Opening


! WARNING Risk of injury from using the windscreen wipers when the bonnet is open

If the windscreen wipers start moving when the bonnet is open, you could be trapped by the wiper linkage.

- ▶ Always switch off the windscreen wipers and the vehicle first if you need to open the bonnet.

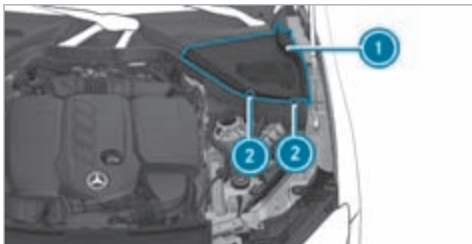

- ▶ Turn both retaining clips (2) on cover (1) on the driver's side a quarter-turn clockwise.
- ▶ Fold cover (1) upwards.

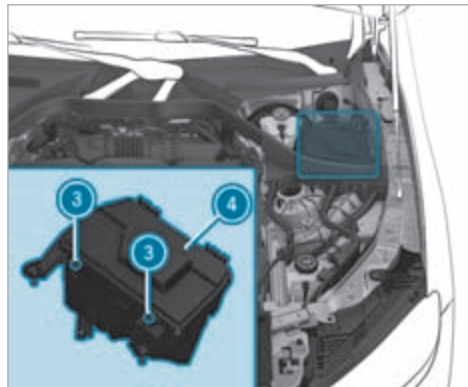

- ▶ Remove any existing moisture from the fuse box using a dry cloth.
- ▶ Loosen screws (3) and remove fuse box lid (4) from the top.

Closing

- ▶ Check whether the seal is positioned correctly in lid (4).

- ▶ Insert lid (4) into the bracket at the rear of the fuse box.
- ▶ Fold down lid (4) of the fuse box and tighten screws (3).
- ▶ Fold down cover (1).
- ▶ Turn both retaining clips (2) on cover (1) a quarter-turn anti-clockwise.
- ▶ Close the bonnet.

Opening and closing the fuse box in the cockpit


- Observe the notes on electrical fuses (→ page 417).

The fuse box is on the driver's side on the side of the cockpit under a cover.

- ▶ Mercedes-Benz recommends you have the fuse box opened at a Mercedes-Benz Service Centre.

Opening and closing the fuse box in the front passenger footwell

Observe the notes on electrical fuses
(→ page 417).

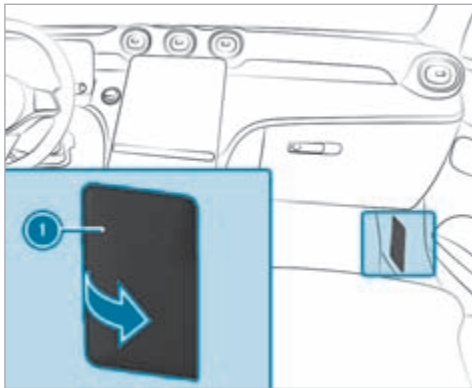

▶ **To open:** fold out and remove cover ①.

▶ **To close:** reinsert cover ①.

Opening and closing the fuse box in the load compartment

Observe the notes on electrical fuses
(→ page 417).



▶ Remove cover ①.

The fuse assignment diagram is on the side of the fuse box.

Notes on noise or unusual handling characteristics

Make sure there are no vibrations, noises or unusual handling characteristics when the vehicle is in motion. This may indicate that the wheels or tyres are damaged. Hidden tyre damage could also be causing the unusual handling characteristics.

If you suspect that a tyre is defective, reduce your speed immediately and have the tyres and wheels checked at a qualified specialist workshop.

Notes on regularly inspecting wheels and tyres

WARNING Risk of injury due to damaged tyres

Damaged tyres can cause tyre pressure loss.

- ▶ Check the tyres regularly for signs of damage and replace any damaged tyres immediately.

WARNING Risk of aquaplaning due to insufficient tyre tread

Insufficient tyre tread will result in reduced tyre grip.

The risk of aquaplaning is increased on wet roads, especially when the speed of the vehicle is not adapted to suit the conditions.

- ▶ Thus, you should regularly check the tread depth and the condition of the tread across the entire width of all tyres.

Minimum tread depth for:

- Summer tyres: 3 mm
- M+S tyres: 4 mm

- ▶ For safety reasons, replace the tyres before the legally-prescribed limit for the minimum tread depth is reached.

Carry out the following checks on all wheels regularly, at least once a month or as required, for example, prior to a long journey or driving off-road:

- Check the tyre pressure (→ page 422).

- Visually inspect wheels and tyres for damage.
- Check the valve caps.
- Visual check of the tyre tread depth and the tyre contact surface across the entire width.
The minimum tread depth for summer tyres is 3 mm and for winter tyres 4 mm.

Notes on snow chains

WARNING Risk of accident due to incorrectly fitted snow chains

If you have fitted snow chains to the front wheels, they may drag against the vehicle body or chassis components.

- ▶ Never fit snow chains to the front wheels.
- ▶ Only fit snow chains on the rear wheels in pairs.

! **NOTE** Damage to components of the vehicle body or chassis due to fitted snow chains

If you fit snow chains to the front wheels of 4MATIC vehicles, you may damage components of the vehicle body or chassis.

▶ Only fit snow chains to the rear wheels of 4MATIC vehicles.

Observe the following notes when using snow chains:

- Snow chains are only permissible for certain wheel/tyre combinations. You can obtain information about this from a Mercedes-Benz Service Centre.
- For safety reasons, only use snow chains that have been specifically approved for your vehicle by Mercedes-Benz, or snow chains with the same quality standard.
- Comply with the installation instructions of the snow chain manufacturer.
- If snow chains are fitted, the maximum permissible speed is 50 km/h.

- **Vehicles with Active Parking Assist:** do not use Active Parking Assist when snow chains are fitted.
- **Vehicles with AIRMATIC:** if snow chains are fitted, only drive at raised vehicle level (→ page 284).
- ① You can permanently limit the maximum speed for driving with winter tyres (→ page 249).
- ① You can deactivate ESP® to pull away (→ page 242). This allows the wheels to spin, achieving an increased driving force.

Activating or deactivating snow chain mode

Multimedia system:



▶ Activate or deactivate **Snow chain mode**.

When the function is active, the vehicle behaves as if snow chains were mounted. For example, the maximum steering movement of the rear wheels is limited and the turning circle is thus increased.

Additionally, parts of the driving and driving safety systems are not available when snow chain mode is active.

Tyre pressure

Notes on tyre pressure

! **WARNING** Risk of accident due to insufficient or excessive tyre pressure

Underinflated or overinflated tyres pose in particular the following risks:

- The tyres can burst.
 - The tyres can wear excessively and/or unevenly.
 - The driving characteristics as well as the steering and braking characteristics may be greatly impaired.
- ▶ Comply with the recommended tyre pressure and check the tyre pressure of all tyres, including the spare wheel, regularly:

- monthly
 - when the load changes
 - before embarking on a longer journey
 - if operating conditions change, e.g. off-road driving
- ▶ Adjust the tyre pressure, if necessary.

Tyre pressure which is too high or too low can:

- Shorten the service life of the tyres.
- Cause increased tyre damage.
- Adversely affect driving characteristics and thus driving safety, e.g. due to aquaplaning.

⚠ WARNING Risk of accident due to repeated pressure drop in the tyres

The wheels, valves or tyres could be damaged. Too low a tyre pressure can lead to the tyres bursting.

- ▶ Examine the tyres for foreign objects.
- ▶ Check whether the tyre has a puncture or the valve has a leak.

▶ If you are unable to rectify the damage, contact a qualified specialist workshop.

Information on the recommended tyre pressure for the vehicle's factory-fitted tyres can be found on the tyre pressure table on the inside of the fuel filler flap (→ page 423).

Use a suitable pressure gauge to check the tyre pressure. The outer appearance of a tyre does not permit any reliable conclusion about the tyre pressure.

Only correct tyre pressures when the tyres are cold. Conditions for cold tyres:

- The vehicle has been parked with the tyres out of direct sunlight for at least three hours.
- The vehicle has travelled less than 1.6 km.

The vehicle's tyres heat up when driving. As the temperature of the tyres increases, so too does the tyre pressure.

Vehicles with a tyre pressure monitoring system: you can also see the tyre pressure in the driver's display (→ page 424).

Notes on trailer operation

Always inflate the rear axle tyres to the recommended tyre pressures on the tyre pressure table for increased load.

Tyre pressure table

The tyre pressure table is on the inside of the fuel filler flap.

		kPa		psi		kPa		psi	
Normal load	Standard	230	250	35	36	230	250	35	36
	M+S	230	250	35	36	230	250	35	36
Increased load	Standard	230	250	35	36	230	250	35	36
	M+S	230	250	35	36	230	250	35	36

A 213 504 37 03 1E3M67

The tyre pressure table shows the recommended tyre pressure for all tyres approved for this vehicle. The recommended tyre pressures apply for cold tyres under various operating conditions, i.e. loading and/or speed of the vehicle.

If one or more tyre sizes precede a tyre pressure, the following tyre pressure information is only valid for those tyre sizes and their respective load condition.

If the preceding tyre sizes are complemented by the  symbol, the tyre pressure information following shows alternative tyre pressures. Fuel consumption may then increase slightly.

The load conditions "partially laden" and "fully laden" are defined in the table for different numbers of passengers and amounts of luggage. The actual number of seats may differ from this.

Tyre pressure monitoring system

■ Function of the tyre pressure monitoring system

The system checks the tyre pressure and the tyre temperature of the tyres fitted to the vehicle by means of a tyre pressure sensor.

The tyre pressure and the tyre temperature appear in the driver's display.

If there is a substantial pressure loss or if the tyre temperature is excessive, you will be warned with display messages (→ page 528) or the  warning lamp in the driver's display (→ page 556).

The tyre pressure monitoring system is only an aid. It is the driver's responsibility to set the tyre pressure to the recommended cold tyre pressure suitable for the operating situation.

In most cases, the tyre pressure monitoring system will automatically update the new reference values after you have changed the tyre pressure. You can, however, also update the reference values by restarting the tyre pressure monitoring system manually (→ page 425).

System limits

The system may be impaired or may not function particularly in the following situations:

- incorrect reference values were taught in
- sudden pressure loss caused by a foreign object penetrating the tyre, for example
- there is a malfunction caused by another radio signal source

■ Checking the tyre pressure with the tyre pressure monitoring system

Requirements:

- The vehicle is switched on.


Driver's display:

   **Service**

 Press  to confirm.

One of the following displays appears:

- Current tyre pressure of each wheel:

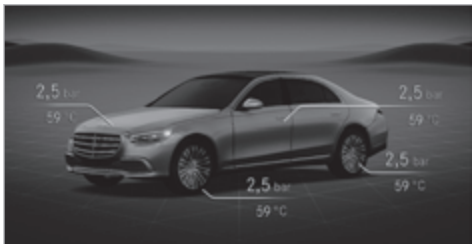

- **Tyre pressures will be displayed after a few minutes of driving:** current values are not yet known to the system. The pressure/temperature values of each tyre are displayed as soon as they are known to the system.
 - **Tyre pressure monitor active:** the teach-in process of the system is not yet complete. The tyre pressures are already being monitored.
- ▶ Compare the current tyre pressure with the recommended tyre pressure for the current operating condition (→ page 423). Additionally, observe the notes on cold tyres (→ page 422).

❗ The values displayed in the driver's display may deviate from those of the tyre pressure gauge as they refer to sea level. At high elevations, the tyre pressure values indicated by a tyre pressure gauge are higher than those shown in the driver's display.

Bear in mind the following related topic:

- Notes on tyre pressure (→ page 422)

Restarting the tyre pressure monitoring system

Requirements:

- The recommended tyre pressure is correctly set for the respective operating status on each of the four wheels (→ page 422).

Restart the tyre pressure monitoring system in the following situations:

- The tyre pressure has changed.
- The wheels or tyres have been changed or newly fitted.

Driver's display:

➡ ➡ Service

- ▶ Select **Tyre pressure** and confirm with **OK**.

▶ Swipe downwards on Touch Control on the steering wheel.
The **Use current tyre pressures as new reference values?** message is shown in the driver's display.

▶ Select **Yes** and confirm the restart with **OK**.
The **Tyre pressure monitor restarted** message is shown in the driver's display.

Current warning messages are deleted and the yellow warning lamp goes out.

After you have been driving for a few minutes, the system checks whether the current tyre pressures are within the specified range. The current tyre pressures are then accepted as reference values and monitored.

If the tyre pressure levels are not within the specified range, the **Please correct tyre pressure** message appears.

Bear in mind the following related topic:

- Notes on tyre pressure (→ page 422)

Wheel change

Notes on selecting, fitting and replacing tyres

⚠ WARNING Risk of accident due to incorrect wheel and tyre dimensions

If wheels and tyres of the wrong size are fitted, the service brakes or components in the brake system and in the wheel suspension may be damaged.

- ▶ Always replace wheels and tyres with those that fulfil the specifications of the original part.

For wheels, pay attention to the following:

- Designation
- Type

For tyres, pay attention to the following:

- Designation
- Manufacturer
- Type

⚠ WARNING Risk of injury through exceeding the specified tyre load-bearing capacity or the permissible speed rating

Exceeding the load-bearing capacity of the tyres can lead to tyre damage and could cause the tyres to explode.

- ▶ Therefore, only use tyre types and sizes approved for your vehicle model.
- ▶ Observe the tyre load-bearing capacity rating and speed rating required for your vehicle.

! NOTE Vehicle and tyre damage caused by non-approved tyre types and sizes

For safety reasons, only use tyres, wheels and accessories which have been specially approved by Mercedes-Benz for your vehicle.

These tyres are specially adapted to the active safety systems, such as ABS, ESP® and 4MATIC, and marked as follows:

- MO = Mercedes-Benz Original

- MOE = Mercedes-Benz Original Extended (run-flat tyres only for certain wheels)
- MO1 = Mercedes-Benz Original (only certain AMG tyres)

Otherwise, certain properties, such as handling characteristics, vehicle noise emissions, consumption, etc. could be adversely affected. Furthermore, other tyre sizes could result in the tyres rubbing against the body and axle components when loaded. This could result in damage to the tyre or the vehicle.

Only use tyres, wheels and accessories that have been checked and recommended by Mercedes-Benz.

! NOTE Risk to driving safety from retreaded tyres

Retreaded tyres are neither tested nor recommended by Mercedes-Benz, since previous damage cannot always be detected on retreaded tyres.

For this reason driving safety cannot be guaranteed.

- ▶ Do not use used tyres if you have no information about their previous usage.

! **NOTE** Possible wheel and tyre damage when driving over obstacles

Large wheels have a smaller section width. As the section width decreases, the risk of wheels and tyres being damaged when driving over obstacles increases.

- ▶ Avoid obstacles or drive especially carefully.
- ▶ Reduce your speed when driving over kerbs, speed bumps, manhole covers and potholes.
- ▶ Avoid particularly high kerbs.

! **NOTE** Possible wheel and tyre damage when parking on kerbs or in potholes

Parking on kerbs or in potholes can damage the wheels and tyres.

- ▶ Only park on level surfaces if possible.
- ▶ Avoid kerbs and potholes when parking.

! **NOTE** Damage to electronic component parts due to the use of tyre-fitting tools

Vehicles with tyre pressure monitoring system: there are electronic component parts in the wheel.

If tyre-fitting tools are positioned in the area of the valve, the electronic components could be damaged.

- ▶ Tyre-fitting tools should not be applied in the area of the valve.
- ▶ Always have tyres changed at a qualified specialist workshop.

! **NOTE** Damage to summer tyres at low ambient temperatures

At low ambient temperatures, tears could form when driving with summer tyres, causing permanent damage to the tyre.

- ▶ At temperatures below 7 °C use  M+S tyres.

Accessory parts which are not approved for your vehicle by Mercedes-Benz, or which are not used correctly, can impair the operating safety.

Before purchasing and using non-approved accessories, visit a qualified specialist workshop and enquire about:

- Suitability
- Legal stipulations
- Factory recommendations

! **WARNING** Risk of accident with high performance tyres

The special tyre tread in combination with the optimised tyre compound means that the risk of skidding and hydroplaning on wet roads is increased.

In addition, the tyre grip is greatly reduced at a low outside temperature and tyre running temperature.

- ▶ Switch on the ESP® and adapt your driving style accordingly.

- ▶ Use  M+S tyres at outside temperatures of less than 10 °C.
- ▶ Only use the tyres for their intended purpose.

Observe the following when selecting, fitting and replacing tyres:

- Country-specific requirements for tyre approval that define a specific tyre type for your vehicle.
- Furthermore, the use of certain tyre types in certain regions and areas of operation can be highly beneficial.
- Only use tyres and wheels of the same type (summer tyres, winter tyres, MOExtended tyres) and the same make.
- Only fit wheels of the same size on one axle (left and right).

It is only permissible to fit a different wheel size in the event of a flat tyre in order to drive to the specialist workshop.

- Do not make any modifications to the brake system, the wheels or the tyres.

The use of shims or brake dust shields is not permitted and may invalidate the vehicle's general operating permit.

- **Vehicles with a tyre pressure monitoring system:** all fitted wheels must be equipped with functioning sensors for the tyre pressure monitoring system.
- At temperatures below 7 °C use winter tyres or all-season tyres marked  M+S for all wheels.

Winter tyres provide the best possible grip in wintry road conditions.

- For M+S tyres, only use tyres with the same tread.
- Observe the maximum permissible speed for the M+S tyres fitted.

If the tyre's maximum speed is below that of the vehicle, this must be indicated by an appropriate label in the driver's field of vision.

- Run in new tyres at moderate speeds for the first 100 km.
- Replace the tyres after six years at the latest, regardless of wear.

- **When replacing with tyres that do not feature run-flat characteristics:** vehicles with MOExtended tyres are not equipped with a TIREFIT kit at the factory. Equip the vehicle with a TIREFIT kit after replacing with tyres that do not feature run-flat characteristics, e.g. winter tyres.

 You can permanently limit the maximum speed for driving with winter tyres (→ page 249).

For more information on wheels and tyres, contact a qualified specialist workshop.

Be sure to also observe the following further related subjects:

- Notes on tyre pressure (→ page 422)
- Tyre pressure table (→ page 423)
- Notes on the emergency spare wheel (→ page 435)

Notes on interchanging wheels

⚠ WARNING Risk of injury through different wheel sizes

Interchanging the front and rear wheels can severely impair the driving characteristics.

The disk brakes or wheel suspension components may also be damaged.

► Only interchange the front and rear wheels if the wheels and tyres have the same dimensions.

Interchanging the front and rear wheels if the wheels or tyres have different dimensions can render the general operating permit invalid. Observe the instructions and safety notes on "Changing a wheel" (→ page 426)

The wear patterns on the front and rear wheels differ:

- front wheels wear more on the tyre shoulder
- rear wheels wear more in the centre of the tyre

Do not drive with tyres that have too little tread depth. This significantly reduces traction on wet roads (aquaplaning).

On vehicles with the same front and rear wheel size, you can interchange the wheels every 5,000 to 10,000 km, depending on the wear. Ensure the direction of rotation is maintained for the wheels.

Notes on storing wheels

When storing wheels, observe the following notes:

- After removing wheels, store them in a cool, dry and preferably dark place.
- Protect the tyres from contact with oil, grease or fuel.

Overview of the tyre-change tool kit


Apart from some country-specific variants, vehicles are not equipped with a tyre-change tool kit. For more information on which tools are required and approved to perform a wheel change on your vehicle, consult a qualified specialist workshop.

Required tyre-changing tools may include, forexample:

- Jack
- Chock
- Wheel wrench

❗ The jack weighs approximately 3.4 kg. The maximum load capacity of the jack can be found on the sticker affixed to the jack. The jack is maintenance-free. If there is a malfunction, please contact a qualified specialist workshop.

Tyre-change tool kit ❶ is located under the load compartment floor.

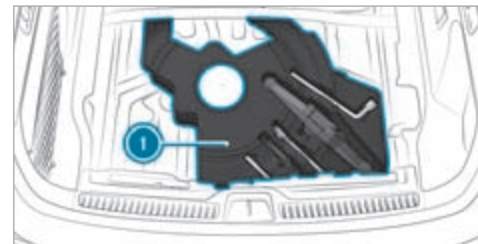

The tyre-change tool kit includes the following:

- Jack
- Wheel wrench
- Wheel studs
- Extension attachment for wheel studs, if necessary (depending on vehicle version)
- Folding chock
- Ratchet ring spanner

Preparing the vehicle for a wheel change

Requirements:

- The vehicle is not on a slope.
- The vehicle is on solid, non-slippery and level ground.
- The required tyre-change tool kit is available.

i If your vehicle is not equipped with the tyre-change tool kit, consult a qualified specialist workshop to find out about suitable tools.

- ▶ Apply the electric parking brake manually.
- ▶ Move the front wheels to the straight-ahead position.

- ▶ Shift the transmission to position **P**.
- ▶ **Vehicles with AIRMATIC:** set the normal vehicle level (→ page 284).
- ▶ Switch off the vehicle.
- ▶ Make sure that the vehicle cannot be started.
- ▶ Place chocks or other suitable items under the front and rear of the wheel that is diagonally opposite the wheel you wish to change.
- ▶ Unload the vehicle.

Removing and fitting the wheel trim/hub caps


Requirements:

- The vehicle is prepared for a wheel change (→ page 430).

Plastic hub cap

- ▶ **To remove:** turn the centre cover of the hub cap anti-clockwise and remove the hub cap.
- ▶ **To fit:** make sure that the centre cover of the hub cap is turned anti-clockwise.

Aluminium hub cap

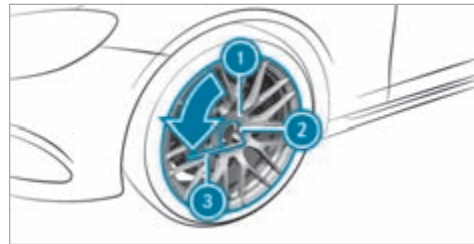

- ▶ **To remove:** position socket **2** from the tyre-change tool kit on hub cap **1**.
- ▶ Position wheel spanner **3** on socket **2**.
- ▶ Using wheel spanner **3**, turn hub cap **1** anti-clockwise and remove it.
- ▶ **To fit:** follow the instructions above in reverse order.

i **Specified tightening torque:** 25 Nm.


Raising the vehicle when changing a wheel

Requirements:

- There are no persons in the vehicle.
- The vehicle has been prepared for a wheel change (→ page 430).
- The wheel trims and hub caps have been removed (→ page 430).

Important notes on using the jack:

- Use only a vehicle-specific jack that has been approved by Mercedes-Benz to raise the vehicle.
- The jack is only designed for raising and holding the vehicle for a short time while a wheel is being changed and not for maintenance work under the vehicle.
- The jack must be placed on a firm, flat and non-slip surface. If necessary, use a large, flat, load-bearing, non-slip underlay.
- The foot of the jack must be positioned vertically under the jack support point.

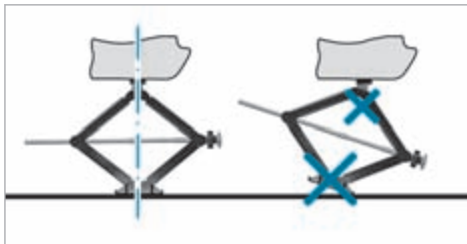


Rules of conduct when the vehicle is raised:

- Never place your hands or feet under the vehicle.
- Never lie under the vehicle.

- Do not start the vehicle and do not release the electric parking brake.
- Do not open or close any doors or the tailgate.



- ▶ Using the wheel wrench, loosen the wheel bolts on the wheel you wish to change by about one full turn. Do not unscrew the screws completely.

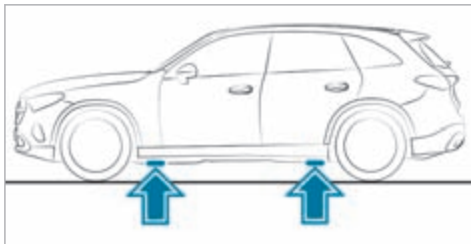

Position of the jack support points

⚠ WARNING Risk of injury from incorrect positioning of the jack

If you do not position the jack correctly at the appropriate jacking point of the vehicle, the jack could tip with the vehicle raised.


- Only position the jack at the appropriate jacking point of the vehicle. The base of the jack must be positioned vertically under the jacking point of the vehicle.

! NOTE Damage to the vehicle due to the jack

If you do not position the jack at the jack support points provided for this purpose, you could damage your vehicle.

- Only position the jack at the jack support points provided for this purpose.

- Take the ratchet out of the tyre-change tool kit and place it on the hexagon nut of the jack so that the letters "AUF" are visible.

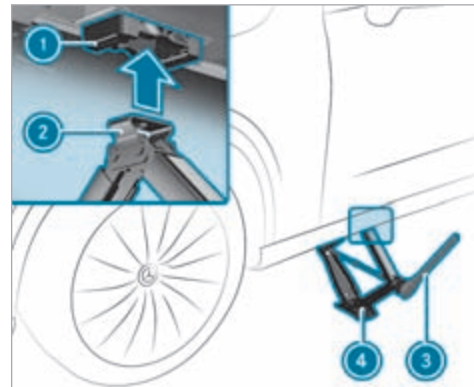

- Position support ② of jack ④ on jack support point ①.
- Turn ratchet ③ clockwise until support ② sits completely on jack support point ① and the base of the jack lies evenly on the ground.
- Turn ratchet ③ until the tyre is raised a maximum of 3 cm from the ground.
- Loosen and remove the wheel (→ page 433).

Removing a wheel

Requirements:

- The vehicle is raised (→ page 431).

When changing a wheel, avoid applying any force to the brake discs, as this could impair the level of comfort when braking.

! **NOTE** Damage to the wheels' plastic elements when changing a wheel

Plastic elements on wheels may be damaged when removing and repositioning the wheel.

- ▶ Do not raise the wheels by the plastic elements when removing and repositioning.

! **NOTE** Damage to threading from dirt on wheel bolts

- ▶ Do not place wheel bolts in sand or on a dirty surface.

- ▶ Unscrew the uppermost wheel bolt completely.



- ▶ Screw centring pin ① into the thread instead of the wheel bolt.
- ▶ Unscrew the remaining wheel bolts completely.
- ▶ Remove the wheel.
- ▶ Fit the new wheel (→ page 433).

Fitting a new wheel

Requirements:

- The wheel to be changed is removed and the centring pin is screwed in (→ page 433).

! **WARNING** Risk of accident from losing a wheel

Oiled or greased wheel bolts can cause the wheel bolts to come loose, as too can damaged wheel bolts or wheel hub threads.

- ▶ Never oil or grease the threads.
- ▶ In the event of damage to the threads, contact a qualified specialist workshop immediately.
- ▶ Have the damaged wheel bolts or damaged hub threads replaced.
- ▶ Do not continue driving.

- ▶ Observe the information on the choice of tyres (→ page 426).

For tyres with a specified direction of rotation, an arrow on the side wall of the tyre indicates the correct direction of rotation. Observe the direction of rotation when fitting.

! NOTE Damage to the wheels' plastic elements when changing a wheel

Plastic elements on wheels may be damaged when removing and repositioning the wheel.

- ▶ Do not raise the wheels by the plastic elements when removing and repositioning.

- ▶ Slide the wheel to be mounted onto the centring pin and push it on.

! WARNING Risk of injury from tightening wheel bolts and nuts

If you tighten the wheel bolts or wheel nuts when the vehicle is raised, the jack could tip.

- ▶ Only tighten wheel bolts or wheel nuts when the vehicle is on the ground.

- ▶ Be sure to observe the instructions and safety notes on "Changing a wheel" (→ page 426).
- ▶ For safety reasons, only use wheel bolts which have been approved by Mercedes-Benz and for the wheel in question.

- ▶ Tighten the wheel bolts evenly in a diagonal pattern in the order indicated until they are finger-tight.
- ▶ Unscrew and remove the centring pin.
- ▶ Tighten the last wheel bolt until it is finger-tight.
- ▶ Lower the vehicle (→ page 434).

Lowering the vehicle after a wheel change

Requirements:

- The new wheel has been fitted (→ page 433).

! NOTE Risk of vehicle jack becoming trapped by the AIRMATIC system

If the AIRMATIC system has released air when raising the vehicle, the jack can become trapped when the vehicle is lowered.

- ▶ Start the engine. This adapts the vehicle level.
- ▶ Remove the jack from under the vehicle.

- ▶ **To lower the vehicle:** place the ratchet onto the hexagon nut of the jack so that the letters "AB" are visible and turn anti-clockwise.



- ▶ Tighten the wheel bolts evenly in a diagonal pattern in the order indicated ① to ⑤ with an initial maximum force of 80 Nm.
- ▶ Tighten the wheel bolts evenly in a diagonal pattern in the order indicated ① to ⑤ with the specified tightening torque of 150 Nm.

⚠ WARNING Risk of accident due to incorrect tightening torque

The wheels could come loose if the wheel bolts or wheel nuts are not tightened to the prescribed torque.

- ▶ Ensure that the wheel bolts or wheel nuts are tightened to the prescribed tightening torque.
- ▶ If you are not sure, do not move the vehicle. Contact a qualified specialist workshop and have the tightening torque checked immediately.

- ▶ Check the tyre pressure of the newly fitted wheel and adjust it if necessary.

i The following does not apply if the new wheel is an emergency spare wheel.

- ▶ **Vehicles with a tyre pressure monitoring system:** restart the tyre pressure monitoring system (→ page 425).

Emergency spare wheel

Notes on the emergency spare wheel

⚠ WARNING Risk of accident caused by incorrect wheel and tyre dimensions

The wheel or tyre size and the tyre type of the emergency spare wheel or spare wheel and the wheel to be replaced may differ. The emergency spare wheel or spare wheel can significantly impair driving characteristics of the vehicle.

To prevent hazardous situations:

- ▶ Drive carefully.
- ▶ Never fit more than one emergency spare wheel or spare wheel that differs in size.
- ▶ Only use an emergency spare wheel or spare wheel briefly.
- ▶ Do not deactivate ESP®.
- ▶ Have the emergency spare wheel or spare wheel of a different size replaced at the nearest qualified specialist work-

shop. The new wheel must have the correct dimensions.

i The emergency spare wheel is fastened in the load compartment under the load compartment floor.

Observe the following notes on fitting an emergency spare wheel:

- The maximum permissible speed with an emergency spare wheel fitted is 80 km/h.
 - Do not fit the emergency spare wheel with snow chains.
 - Replace the emergency spare wheel after six years at the latest, regardless of wear.
 - Use the wheel bolts that are included with the emergency spare wheel.
 - Check the tyre pressure of the emergency spare wheel fitted. Correct the pressure as necessary.
- i** The specified tyre pressure is stated on the label of the emergency spare wheel.

- i Vehicles with a tyre pressure monitoring system:** if an emergency spare wheel is fitted, the tyre pressure monitoring system cannot function reliably. For a few minutes after an emergency spare wheel is fitted, the system may still display the tyre pressure of the removed wheel. Only restart the system again when the emergency spare wheel has been replaced with a new wheel.

Be sure to also observe the following further related subjects:

- Notes on tyre pressure (→ page 422)
- Tyre pressure table (→ page 423)
- Notes on fitting tyres (→ page 426)
- Fitting an emergency spare wheel (→ page 430)

Notes on technical data

The technical data was determined in accordance with EU Directives. The data stated only applies to vehicles with standard equipment. You can obtain further information from a Mercedes-Benz Service Centre.

Only for certain countries: you can find vehicle-specific vehicle data in the COC documents (CERTIFICATE OF CONFORMITY). These documents are supplied when the vehicle is delivered.

On-board electronics

Notes on tampering with the engine electronics

! **NOTE** Premature wear through improper maintenance

Improper maintenance may cause vehicle components to wear more quickly and the vehicle's operating permit may be invalidated.

- ▶ Always have work on the engine electronics and related components carried out at a qualified specialist workshop.

Two-way radios

Notes on fitting two-way radios

! **WARNING** Risk of accident due to improper work on two-way radios

If two-way radios are manipulated or retrofitted incorrectly, the electromagnetic radiation from the two-way radios can interfere with the vehicle electronics and jeopardise the operating safety of the vehicle.

- ▶ You should have all work on electrical and electronic components carried out at a qualified specialist workshop.

! **WARNING** Risk of accident due to improper operation of two-way radios

If you use two-way radios in the vehicle improperly, their electromagnetic radiation can disrupt the vehicle's electronics. This is the case in the following situations, in particular:

- The two-way radio is not connected to an exterior aerial.
- The exterior aerial is fitted incorrectly or is not a low-reflection aerial.


This could jeopardise the operating safety of the vehicle.

- ▶ Have the low-reflection exterior aerial fitted at a qualified specialist workshop.
- ▶ When operating two-way radios in the vehicle, always connect them to the low-reflection exterior aerial.

! **NOTE** Invalidation of the operating permit due to failure to comply with the instructions for installation and use

The operating permit may be invalidated if the instructions for installation and use of two-way radios are not observed.

- ▶ Only use approved frequency bands.
- ▶ Observe the maximum permissible output power in these frequency bands.
- ▶ Only use approved aerial positions.

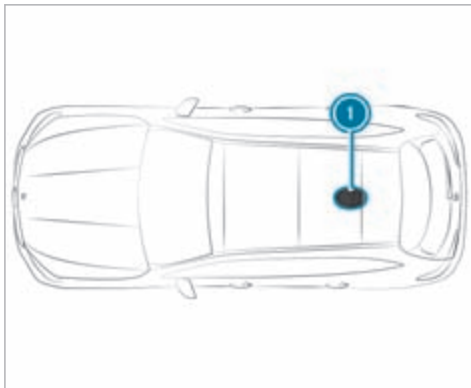

Vehicles without panoramic sliding sunroof
 ❶ Rear roof area

On vehicles with a panoramic sliding sunroof, fitting an aerial is not permitted.

Use Technical Specification ISO/TS 21609 (Road Vehicles – "EMCs for installation of aftermarket radio frequency transmitting equipment") when

retrofitting two-way radios. Comply with the legal requirements for detachable parts.

If your vehicle has fittings for two-way radio equipment, use the power supply and aerial connectors provided in the pre-installation. Observe the manufacturer's supplements when fitting.

■ Two-way radio transmission output

The maximum transmission output (PEAK) at the base of the aerial must not exceed the values in the following table.

Frequency band and maximum transmission output

Frequency band	Maximum transmission output
2-m- frequency band 144 - 174 MHz	50 W
Terrestrial Trunked Radio (TETRA) 380 - 460 MHz	10 W

Frequency band	Maximum transmission output
Two-way radio 2G	2 W
Two-way radio 3G/4G/5G	0.5 W

The following devices can be used in the vehicle without restrictions:

- two-way radios with a maximum transmission output of up to 100 mW
- two-way radios with transmitter frequencies in the 380 - 420 MHz frequency band and a maximum transmission output of up to 2 W (TETRA)
- mobile phones (2G/3G/4G/5G)

There are no restrictions when positioning the aerial on the outside of the vehicle for the following frequency bands:

- TETRA
- 2G/3G/4G/5G

Regulatory radio identification and notes

Regulatory radio identification of small components

Manufacturer information about radio-based vehicle components can be found using the key phrase "Regulatory radio identification" in the Digital Owner's Manual in the vehicle, on the internet and in the app.

Regulatory radio identification – Indonesia and Israel

Manufacturer information about radio-based vehicle components for Indonesia and Israel can be found using the key phrase "Regulatory radio identification – Indonesia and Israel" in the Digital Owner's Manual in the vehicle, on the internet and in the app.


-  These are not small components. Information about small components can be found using the key phrase "Regulatory radio identification of small components".


Further component-specific information

Further component-specific information can be found using the key phrase "further component-specific information" in the Digital Owner's Manual in the vehicle, on the internet and in the app.

Vehicle identification plate, VIN and engine number overview


Vehicle identification plate

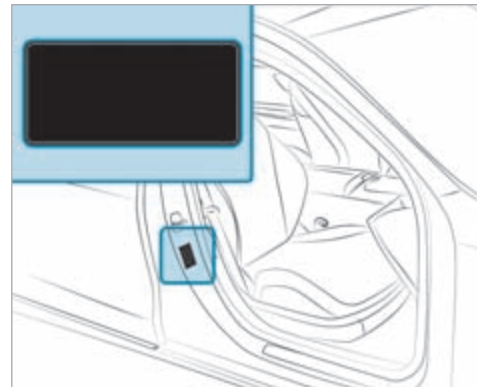

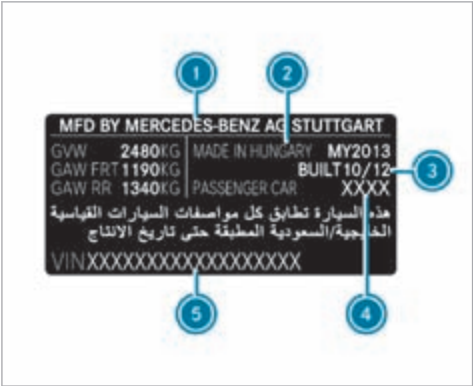

Vehicle identification plate (example: Kuwait)

- ① Vehicle manufacturer
- ② Place of manufacture
- ③ Manufacturing date
- ④ Vehicle model
- ⑤ VIN

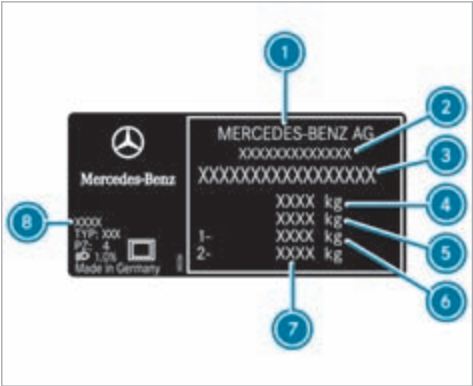


Vehicle identification plate (example: all other countries)

- ① Vehicle manufacturer
- ② EU general operating permit number (only for certain countries)
- ③ VIN (vehicle identification number)
- ④ Maximum permissible gross vehicle weight (kg)

- ⑤ Maximum permissible gross weight of vehicle combination (kg) (only for specific countries)
- ⑥ Maximum permissible front axle load (kg)
- ⑦ Maximum permissible rear axle load (kg)
- ⑧ Paint code
- i The data shown in the illustration is example data.

VIN below the front right-hand seat

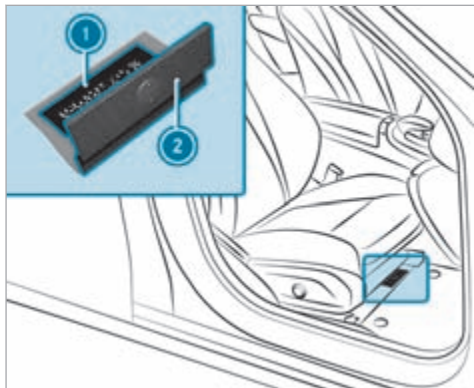

- ① Imprinted VIN (vehicle identification number)
- ② Floor covering

VIN at the lower edge of the windscreen



- ① VIN (vehicle identification number) as label

The VIN as a label at the lower edge of the windscreen is only available in some countries.

Engine number

The engine number is stamped into the crankcase. Further information can be obtained at a qualified specialist workshop.

Operating fluids

Notes on operating fluids

⚠ WARNING Risk of injury from operating fluids harmful to your health

Operating fluids may be poisonous and harmful to your health.

- ▶ Observe the text on the original containers when using, storing or disposing of operating fluids.
- ▶ Always store operating fluids sealed in their original containers.
- ▶ Always keep children away from operating fluids.

🌿 ENVIRONMENTAL NOTE Pollution of the environment due to irresponsible disposal of operating fluids

Incorrect disposal of operating fluids can cause considerable damage to the environment.

- ▶ Dispose of operating fluids in an environmentally responsible manner.

Operating fluids include the following:

- fuels
- DeNOx agent AdBlue® for exhaust gas after-treatment
- lubricants
- Coolant
- Brake fluid
- windscreen washer fluid
- climate control system refrigerant

Only use products approved by Mercedes-Benz. Damage caused by the use of products that have not been approved is not covered by the Mercedes-Benz warranty or goodwill gestures.

The operating fluids approved by Mercedes-Benz can be identified by the following inscriptions on the container:

- MB-Freigabe (e.g. MB-Freigabe 229.51)
- MB-Approval (e.g. MB-Approval 229.51)

Further information on approved operating fluids:

- in the Mercedes-Benz Specifications for Operating Fluids by entering the designation
 - At <https://operatingfluids.mercedes-benz.com>
- At a qualified specialist workshop

⚠ WARNING Risk of fire or explosion from fuel

Fuels are highly flammable.

- ▶ Fire, naked flames, smoking and creating sparks must be avoided.
- ▶ Before and during refuelling, switch off the vehicle and, if fitted, the stationary heater.

⚠ WARNING Risk of injury from fuels

Fuels are poisonous and hazardous to your health.

- ▶ Do not swallow fuel or let it come into contact with skin, eyes or clothing.
- ▶ Do not inhale fuel vapour.

- ▶ Keep children away from fuel.
- ▶ Keep doors and windows closed during the refuelling process.

If you or other people come into contact with fuel, observe the following:

- ▶ Immediately rinse fuel off your skin with soap and water.
- ▶ If fuel comes into contact with your eyes, immediately rinse them thoroughly with clean water. Seek medical attention immediately.
- ▶ If you swallow fuel, seek medical attention immediately. Do not induce vomiting.
- ▶ Change immediately out of clothing that has come into contact with fuel.

Flexible-fuel vehicles can be refuelled with the following fuel types:

- unleaded petrol
- E85 fuel
- a mixture of E85 fuel and unleaded petrol

Flexible-fuel vehicles can be identified by the **Ethanol up to E85** sticker on the inside of the fuel filler flap.

Depending on the country, the fuels you can use in your vehicle may differ from the information in the Owner's Manual. The fuels that have been approved for your vehicle can be found on the instruction label on the inside of the fuel filler flap.

Fuel

Information on fuel quality for vehicles with petrol engines

Observe the notes on operating fluids (→ page 441).

! NOTE Damage caused by the wrong fuel

Even small amounts of the wrong fuel could result in damage to the fuel system, the engine and the emission control system.

- ▶ Only refuel using unleaded, sulphur-free spark-ignition engine fuel that conforms to European EN 228, or an equivalent specification.

Fuel of this specification may contain up to 10% ethanol by volume. Your vehicle is suitable for use with E10 fuel.

- ▶ See the information label in fuel filler flap for other compatible fuels.

Never refuel with one of the following fuels:

- Diesel
- Regular petrol with an octane number lower than 91 RON
- Petrol with more than 3% methanol by volume, e.g. M15, M30
- Petrol with additives containing metal

If you have accidentally refuelled with the wrong fuel:

- ▶ Do not switch on the vehicle.
- ▶ Consult a qualified specialist workshop.

The following compatibility indications for fuel apply to your vehicle:



- ① For petrol with a maximum of 5% ethanol by volume
- ② For petrol with a maximum of 10% ethanol by volume

According to European standard EN 16942, you can find the compatibility indications at the following locations:

- On the vehicle on the information label in the fuel filler flap (→ page 206).
- On the fuel pump or pump nozzle suitable for your vehicle throughout Europe.

If the available fuel is not sufficiently low in sulphur, it may produce unpleasant odours.

The recommended octane number for your vehicle can be found on the information label in the fuel filler flap (→ page 206).

Never refuel using petrol with a lower RON.

Further information on fuel can be obtained at a filling station or a qualified specialist workshop.

■ Information on additives in petrol (vehicles with petrol engine)

Observe the notes on operating fluids (→ page 441).

! **NOTE** Damage from use of unsuitable additives

Even small amounts of the wrong additive may lead to malfunctions occurring.

▶ Only add cleaning additives recommended by Mercedes-Benz to the fuel.

Mercedes-Benz recommends that you use brand-name fuels with additives.

In some countries, the fuel available may not have sufficient additives. Deposits could build up in the fuel injection system as a result. In this case, in

consultation with a Mercedes-Benz service centre, mix the fuel with the cleaning additive recommended by Mercedes-Benz. Observe the notes and mixing ratios indicated on the tank.

■ Information on fuel quality for vehicles with a diesel engine

General notes

Observe the notes on operating fluids (→ page 441).

⚠ WARNING Risk of fire from fuel mixture

If you mix diesel fuel with petrol, the flash point of the fuel mixture is lower than that of pure diesel fuel.

- ▶ Never refuel using petrol in diesel engines.
- ▶ Never mix petrol with diesel fuel.

! **NOTE** Damage caused by the wrong fuel

Even small amounts of the wrong fuel could result in damage to the fuel system, the engine and the emission control system.

Vehicles with a diesel particulate filter:

- ▶ Only refuel using sulphur-free diesel fuel that conforms to European standard EN 590, or an equivalent specification. In countries without sulphur-free diesel fuel, refuel using only low-sulphur diesel fuel with a sulphur content less than 50 ppm.

Vehicle without diesel particulate filter:

- ▶ Only refuel using diesel fuel with a sulphur content less than 500 ppm.


Never refuel with one of the following fuels:

- Petrol
- Marine diesel
- Heating oil
- Pure fatty acid methyl ester or vegetable oil
- Paraffin or kerosene

If you have accidentally refuelled with the wrong fuel:

- ▶ Do not switch on the vehicle.
- ▶ Consult a qualified specialist workshop.

The following compatibility indications for fuel apply to your vehicle:

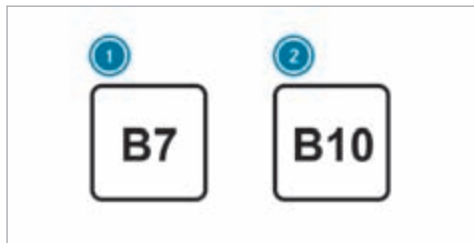

- ① For diesel fuel with a maximum of 7% fatty acid methyl ester by volume (bio-diesel)
- ② For diesel fuel with a maximum of 10% fatty acid methyl ester by volume (bio-diesel)

According to European standard EN 16942 you can find the compatibility indications at the following locations:

- On the vehicle on the information label on the fuel filler flap (→ page 206)
- On the fuel dispenser or pump nozzle suitable for your vehicle throughout Europe

Information on low outside temperatures

Refuel your vehicle with as much winter diesel fuel as possible at the beginning of winter.

Before changing over to winter diesel fuel, the fuel tank should be empty, if possible. When first refuelling with winter diesel fuel, keep the fuel level low, e.g. to reserve level. The fuel tank can be filled as usual when next refuelling.

Further information on fuel can be obtained at a filling station or a qualified specialist workshop.

■ Tank content and fuel reserve

Not for plug-in hybrid:

Total fuel tank capacity

Model	
All models	62.0 litres

Fuel tank reserve

Model	
All models	7.0 litres

Plug-in hybrid

Total fuel tank capacity (plug-in hybrid)

Model	
GLC 300 de 4MATIC	62.0 litres
GLC 350 e 4MATIC	49.0 litres or 62.0 litres
All other models	49.0 litres

Fuel tank reserve (plug-in hybrid)

Model	
All models	7.0 litres

AdBlue® (vehicles with a diesel engine only)

Notes on AdBlue®

Observe the notes on operating fluids (→ page 441).

AdBlue® is a water-soluble fluid for the NOx exhaust gas aftertreatment of diesel engines.

It may be improper or punishable in some countries to operate a vehicle that uses no AdBlue® or one that does not comply with the specifications of this Owner's Manual.

NOTE Malfunctions due to the dilution of AdBlue® or the use of additive-enhanced AdBlue®

The function of the NOx exhaust gas after-treatment can be impaired by the use of unsuitable denoxification agents.

- ▶ Only use AdBlue® in accordance with ISO 22241.
- ▶ Do not dilute AdBlue® with water.
- ▶ Do not use additive-enhanced AdBlue®.

NOTE Damage and malfunctions due to impurities in AdBlue®

Consequences of impurities in AdBlue®:

- increased emission values
- damage to the catalytic converter
- NOx exhaust gas aftertreatment malfunctions

▶ Avoid impurities in AdBlue®.

AdBlue® residues crystallise after a period of time, and contaminate the surfaces with which they come into contact. Clean the dirty surfaces with water as soon as possible.

When you open the AdBlue® tank, small amounts of ammonia vapour may escape. Do not inhale any ammonia vapours that may be released. Only fill the AdBlue® tank in well-ventilated areas.

AdBlue® filling capacity and consumption

Total capacity of AdBlue® tank

Model	Total capacity
All models	24.0 litres

AdBlue® consumption

The average AdBlue® consumption is between 1% and 5% of fuel consumption. Like fuel consumption, AdBlue® consumption is highly dependent upon driving style and operating conditions. For this reason, your vehicle's actual consumption figures in day-to-day operating conditions may differ from the consumption figures calculated. The frequency at which you will have to top up AdBlue® will also vary. Have the AdBlue® supply checked at a qualified specialist workshop before making journeys outside Europe. Before a longer stay outside Europe, consult a qualified specialist workshop.

AdBlue® range and fill level

You can have the AdBlue® range and level displayed on the driver's display.

- ❗ The AdBlue® range shown depends strongly on the driving style and operating conditions. The actual range may therefore differ from the range currently displayed on the driver's display.

The information supplied in the Owner's Manual regarding the reserve quantity at the first warning on the driver's display and the minimum top-up quantity when the AdBlue® tank is empty is also to be understood as guide values.

Engine oil

■ Notes on engine oil

Observe the notes on operating fluids (→ page 441).



❗ **NOTE** Engine damage caused by an incorrect oil filter, incorrect oil or additives

- ▶ Do not use engine oils or oil filters other than those which meet the specifications necessary for the prescribed service intervals.
- ▶ Do not alter the engine oil or oil filter in order to achieve longer change intervals than prescribed.
- ▶ Do not use additives.
- ▶ Have the engine oil changed after the prescribed intervals.

Mercedes-Benz recommends having the oil changed at a qualified specialist workshop.

Only use engine oils approved for your vehicle by Mercedes-Benz.

Petrol engines: for certain countries, different engine oils can be used in conjunction with reduced maintenance intervals. Further information on different engine oils can be obtained at a qualified specialist workshop.

■ Engine oil quality and filling capacity Not for plug-in hybrid:

Engine oil specification (petrol engines)

Model	MB-Freigabe or MB-Approval
All models ¹⁾	229.71, 229.72 ²⁾
1) Use only SAE 0W-20 viscosity class engine oils. 2) Recommended for the lowest possible fuel consumption (lowest SAE viscosity class in each case; observe possible restrictions of the approved SAE viscosity classes)	

Engine oil specification (diesel engines)

Model	MB-Freigabe or MB-Approval
All models	229.52, 229.61, 229.71, 229.72 ¹⁾
1) Recommended for the lowest possible fuel consumption (lowest SAE viscosity class in each case; observe possible restrictions of the approved SAE viscosity classes)	

To achieve the lowest possible fuel consumption, it is recommended to use the engine oil specifications marked in the table for the lowest SAE viscosity class. Observe any possible restrictions of the approved SAE viscosity classes.

- i** If the engine oils listed in the table are not available, you may add a maximum of 1.0 litre of the following engine oils once only.

Vehicles with petrol engines: MB-Freigabe or MB-Approval 229.31 or ACEA C3

Vehicles with diesel engines: ACEA C3

Not for plug-in hybrid:

Engine oil filling capacity

Model	Capacity
All models	6.0 litres

The specified filling capacity refers to an oil change with the oil filter.

Plug-in hybrid**Engine oil specification (plug-in hybrid)**

Model	MB-Freigabe or MB-Approval
GLC 300 de 4MATIC	229.52
All other models ¹⁾	229.51, 229.52
1) Use only SAE 0W-40 viscosity class engine oils.	

To achieve the lowest possible fuel consumption, it is recommended to use the engine oil specifications marked in the table for the lowest SAE viscosity class. Observe any possible restrictions of the approved SAE viscosity classes.

- i** If the engine oils listed in the table are not available, you may add a maximum of 1.0 litre of the following engine oils once only.

Petrol: MB-Freigabe or MB-Approval 229.31 or ACEA C3

Diesel: ACEA C3

Engine oil filling capacity (plug-in hybrid)

Model	Capacity
GLC 300 de 4MATIC	6.0 litres
All other models	5.3 litres

The specified filling capacity refers to an oil change with the oil filter.

Notes on brake fluid

Observe the notes on operating fluids (→ page 441).

⚠ WARNING Risk of an accident due to vapour pockets forming in the brake system

The brake fluid constantly absorbs moisture from the air. This lowers the boiling point of the brake fluid. If the boiling point is too low, vapour pockets may form in the brake system when the brakes are applied hard.

This impairs the braking effect.

- ▶ Have the brake fluid renewed at the specified intervals.

Have the brake fluid regularly replaced at a qualified specialist workshop.

Only use a brake fluid approved by Mercedes-Benz according to MB-Freigabe or MB-Approval 331.0.

Coolant

■ Notes on coolant

Observe the notes on operating fluids (→ page 441).

⚠ WARNING Risk of fire- and injury from antifreeze

If antifreeze comes into contact with hot component parts in the engine compartment, it may ignite.

- ▶ Allow the engine to cool down before you top up the antifreeze.
- ▶ Make sure that no antifreeze spills out next to the filler opening.
- ▶ Thoroughly clean the antifreeze from component parts before starting the vehicle.

! NOTE Damage caused by incorrect coolant

- ▶ Only use coolant that has been premixed with the required antifreeze protection.

Information on coolant is available at the following locations:

- In the Mercedes-Benz Specification for Operating Fluids 320.1

- At <https://operatingfluids.mercedes-benz.com>

- At a qualified specialist workshop

! NOTE Overheating at high outside temperatures

If an inappropriate coolant is used, the cooling system is not sufficiently protected against overheating and corrosion at high outside temperatures.

- ▶ Only use coolant approved for Mercedes-Benz.
- ▶ Observe the instructions in the Mercedes-Benz Specifications for Operating Fluids 320.1.

Have the coolant regularly replaced at a qualified specialist workshop.

Proportion of antifreeze concentrate in the cooling system:

- A minimum of 50% (antifreeze protection down to about -37°C)

- A maximum of 55% (antifreeze protection down to -45°C)

Notes on windscreen washer fluid

Observe the notes on operating fluids (→ page 441).

⚠ WARNING - Risk of fire and injury due to windscreen washer concentrate

Windscreen washer concentrate is highly flammable. It could ignite if it comes into contact with hot engine component parts or the exhaust system.

- ▶ Make sure that no windscreen washer concentrate spills out next to the filler opening.

⚠ NOTE Damage to the exterior lighting due to unsuitable windscreen washer fluid

Unsuitable windscreen washer fluids may damage the plastic surface of the exterior lighting.

- ▶ Only use windscreen washer fluids which are also suitable for use on plastic surfaces, e.g. MB SummerFit or MB WinterFit.

⚠ NOTE Blocked spray nozzles caused by mixing windscreen washer fluids

- ▶ Do not mix MB SummerFit and MB WinterFit with other windscreen washer fluids.

Do not use distilled or de-ionised water. Otherwise, the fill level sensor may be triggered erroneously.

Recommended windscreen washer fluid:

- above freezing point: e.g. MB SummerFit
- below freezing point: e.g. MB WinterFit

For the correct mixing ratio, refer to the information on the antifreeze container.


Mix washer fluid with windscreen washer fluid all year round.

Vehicle data

Vehicle dimensions

The heights specified may vary as a result of the following factors:

- Tyres
- Load
- Condition of the suspension
- optional equipment

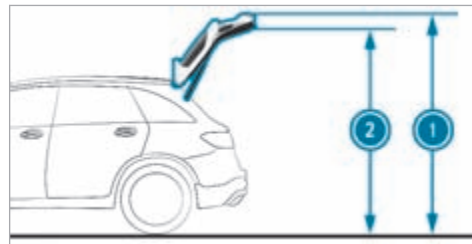

- ① Height when open
- ② Headroom

Not for plug-in hybrid:

Height when open and headroom

Model	① Height when open	② Headroom
All models	2149 mm	1969 mm

Vehicle dimensions

All models	
Vehicle length	4716 mm
Vehicle width including exterior mirrors	2076 mm
Vehicle width excluding exterior mirrors	1890 mm
Vehicle height	1640 mm
Wheelbase	2888 mm

Plug-in hybrid

Height when open and headroom (plug-in hybrid)

Model	① Height when open	② Headroom
All models	2150 mm	1970 mm

Vehicle dimensions (plug-in hybrid)

All models	
Vehicle length	4716 mm
Vehicle width including exterior mirrors	2076 mm
Vehicle width excluding exterior mirrors	1890 mm
Vehicle height	1648 mm
Wheelbase	2888 mm

Weights and loads

Please observe the following notes for the specified vehicle data:

- Items of optional equipment increase the unladen weight and reduce the payload.
- Vehicle-specific weight information can be found on the vehicle identification plate (→ page 439).

Not for plug-in hybrid:

Roof load

Model	Maximum roof load
All models	75 kg

Plug-in hybrid

Roof load (plug-in hybrid)

Model	Maximum roof load
All models	75 kg

Off-road driving


Also observe the notes on driving off-road, driving in mountainous terrain and fording (→ page 187).

Fording

! NOTE Water damage from fording

Water can enter the engine bay and the vehicle interior in the following cases:

- The maximum permissible fording depth for driving through standing water is exceeded.
 - A bow wave forms during fording.
 - Water pools when fording moving water.
- Do not exceed the maximum permissible fording depth.
- Drive slowly through the water.
- Keep in mind that driving through moving water reduces the permissible fording depth due to the pooling of water.

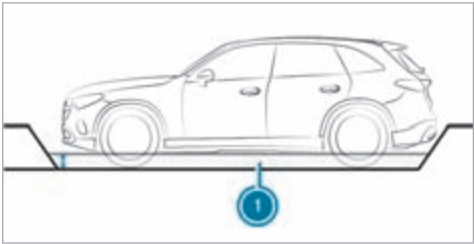

The maximum permissible fording depth ① in ready-to-drive loading condition is 30 cm.

Ready-to-drive loading condition means:

- Full fuel tank
- All fluids are topped up
- With driver in vehicle

Notes on the angle of approach/departure

The specified values are maximum values for vehicles that are in ready-to-drive loading condition. The values depend on the vehicle tyres and vehicle weight.

Ready-to-drive loading condition means:

- Full fuel tank

- All fluids are topped up
- With driver in vehicle

On vehicles with AIRMATIC, loads up to the maximum payload have no influence on the approach/departure angles.



Not for plug-in hybrid:

Angle of approach/departure

Model	① front	② rear
All models	21.2°	21.8°

Plug-in hybrid

Angle of approach/departure (plug-in hybrid)

Model	① front	② rear
All models	23.2°	22.4°

High-voltage battery (plug-in hybrid)


Notes on the power supply for vehicles with high-voltage battery

In accordance with European standard EN 17186:2019, vehicle identifiers are located on the vehicle in the following places:

- On the inside of the socket flap
- On the charging cable connector

In addition, charging stations in European countries are equipped with energy supply identifiers. You can recharge your vehicle at charging stations whose charging station identifier corresponds to the vehicle identifier.

For further information on charging the high-voltage battery, refer to the "Charging the high-voltage battery" section(→ page 213).

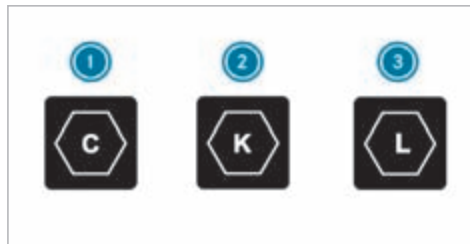

- ① Supply type: AC
Standard: EN 62196-2
Design: type 2
Plug type: charging cable socket and vehicle plug
Voltage range: 480 V RMS
- ② Supply type: DC
Standard: EN 62196-3
Design: FF
Plug type: charging cable socket and vehicle plug
Voltage range: 50 V to 500 V
- ③ Supply type: DC

Standard: EN 62196-3

Design: FF

Plug type: charging cable socket and vehicle plug

Voltage range: 200 V to 920 V

Missing values were not available at the time of going to press.

Energy content and charging times (GLC 350 e 4MATIC)

GLC 350 e 4MATIC	
Type	Lithium-ion
Maximum energy content	31.2 kWh
Range in all-electric mode	
Charging time – mode 4 with a maximum charging capacity of 60 kW	approx. 20 min

GLC 350 e 4MATIC	
Charging time – mode 3 with 11 kW charging capacity	approx. 2 h 15 min
Charging time – mode 2 with 1.8 kW charging capacity	approx. 14 h 30 min

Energy content and charging time (all other models)

All other models	
Type	Lithium-ion
Maximum energy content	31.2 kWh
Range in all-electric mode	

All other models	
Charging time – mode 4 with a maximum charging capacity of 60 kW	approx. 20 min
Charging time – mode 3 with 11 kW charging capacity	Approx. 2 h 15 min
Charging time – mode 2 with 3.7 kW charging capacity	Approx. 6 h 30 min
Charging time – mode 2 with 1.8 kW charging capacity	Approx. 14 h 30 min

Charging times –modes 2 and 3 apply to AC charging from 10 % to 100 % of the usable energy

content. Charging time –mode 4 applies to DC charging from 10 % to 80 % of the usable energy content.

The time taken to charge the battery depends on the state of charge of the battery, the ambient temperature and the charging capacity of the battery. The charging capacity, in turn, depends on the supply voltage, the current and the type of power supply.

The nominal voltage range for your vehicle can be found on the information label in the socket cover (→ page 213).



Trailer hitch

General notes on the trailer hitch

Modifications to the cooling system may be necessary, depending on the vehicle model. The retrofitting of a trailer hitch is only permissible if a towing capacity is specified in your vehicle documents.

Further information can be obtained at a qualified specialist workshop.

Mounting dimensions

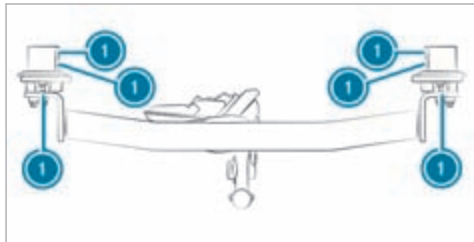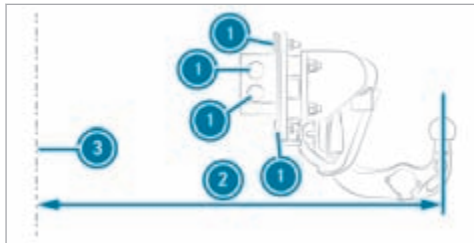

- ① Fastening points
- ② Overhang dimension
- ③ Rear axle centre line

The overhang dimension and fastening points are valid for a trailer hitch installed at the factory.

Not for plug-in hybrid:

Overhang dimension length

Model	② Overhang dimension
All models	1090 mm

Plug-in hybrid

Overhang dimension length (plug-in hybrid)

Model	② Overhang dimension
All models	1090 mm

Towing capacity

- ❗ The tongue weight is not included in the towing capacity.
The values for the **trailer load, braked** apply with a minimum start-off climbing ability of 12 %.

Not for plug-in hybrid:

Towing capacity, braked

Model	
GLC 200 4MATIC	2000 kg
GLC 220 d 4MATIC	2500 kg
GLC 300 d 4MATIC	
GLC 300 4MATIC	2400 kg

Towing capacity, unbraked

Model	
All models	750 kg

Plug-in hybrid

Missing values were not available at the time of going to press.

Trailer load, braked (plug-in hybrid)

Model	
GLC 350 e 4MATIC	
All other models	2000 kg

Trailer load, unbraked (plug-in hybrid)

Model	
GLC 350 e 4MATIC	
All other models	750 kg

Maximum trailer hitch tongue weight -and load capacity

! **NOTE** Damage caused by the trailer coming loose

If the tongue weight used is too low, the trailer may come loose.

- ▶ The tongue weight must not be below 50 kg.
- ▶ Use a tongue weight that is as close as possible to the maximum permissible tongue weight.

! **NOTE** Damage caused by the bicycle rack coming loose

When using a bicycle rack, both the maximal tongue weight and the maximal load capacity should be observed.

- ▶ Do not exceed the permissible load capacity.

Observe the additional notes on the maximum load capacity (→ page 315).

Not for plug-in hybrid:

Tongue weight

Model	Maximum tongue weight
GLC 200 4MATIC	80 kg
GLC 220 d 4MATIC GLC 300 d 4MATIC	100 kg
GLC 300 4MATIC	96 kg

Plug-in hybrid

Missing values were not available at the time of going to press.

Tongue weight (plug-in hybrid)

Model	Maximum tongue weight
GLC 350 e 4MATIC	
All other models	80 kg

Load capacity

All models	Maximum load
When attaching the bicycle rack to the ball head	75 kg
When attaching the bicycle carrier to the ball head and additionally to the guide pins	100 kg

Permissible rear axle load (trailer operation)

Not for plug-in hybrid:

Axle load in when towing trailer

Model	Axle load
GLC 200 4MATIC	1411 kg
GLC 220 d 4MATIC	1449 kg
GLC 300 4MATIC	1410 kg
GLC 300 d 4MATIC	1450 kg

Plug-in hybrid

Missing values were not available at the time of going to press.

Axle load when towing trailer (plug-in hybrid)

Model	Axle load
GLC 300 e 4MATIC	1775 kg
GLC 300 de 4MATIC	1806 kg

Model	Axle load
GLC 350 e 4MATIC	
GLC 400 e 4MATIC	1 778 kg

Display messages

Introduction

Information about display messages

Display messages appear on the driver display.

Display messages with graphical symbols are simplified in the Owner's Manual and may differ from the symbols on the driver display. The driver display shows high-priority display messages in red. Certain display messages are accompanied by a warning tone.

Please act in accordance with the display messages and follow the additional notes in the Owner's Manual.

For some display messages, symbols will also be shown:

- ⓘ Further information
- ✕ Hide display message

With the left-hand Touch Control, you can select the respective symbol by swiping to the left or right. Pressing ⓘ displays further information on the central display. Press the ✕ symbol to hide the display message.

Display messages to be acknowledged can be hidden by pressing the back button  or with the left-hand Touch Control. The display messages will then be stored in the message memory.

Rectify the cause of a display message as quickly as possible.

High-priority display messages cannot be hidden. The driver display will show these display messages continuously until the cause of the display message has been rectified.

Calling up saved display messages

Driver's display:

 Service

The **Message memory: XX** message appears on the driver's display.

▶ Scroll through the display messages by swiping upwards or downwards on the left-hand Touch Control.

▶ **To exit the display:** press the  back button.

Occupant safety

Display messages	Possible causes/consequences and ► Solutions
Restraint system malfunction Consult workshop	* The restraint system is malfunctioning (→ page 44). ⚠ WARNING Risk of injury due to malfunctions in the restraint system Components in the restraint system may be activated unintentionally or not deploy as intended in an accident. ► Have the restraint system checked and repaired immediately at a qualified specialist workshop. Plug-in hybrid: ⚠ DANGER Risk of fatal injuries due to restraint system malfunctions Components in the restraint system may be activated unintentionally or not deploy as planned in an accident. In the event of an accident, the high-voltage on-board electrical system may not be deactivated as intended. You may suffer an electric shock if you touch the damaged components of the high-voltage on-board electrical system. ► Have the restraint system checked and repaired immediately at a qualified specialist workshop. ► After an accident, switch off the vehicle immediately.

Display messages	Possible causes/consequences and ► Solutions
 Front left malfunction Consult workshop (example)	* The corresponding restraint system is malfunctioning (→ page 44). ⚠ WARNING Risk of injury due to malfunctions in the restraint system Components in the restraint system may be activated unintentionally or not deploy as intended in an accident. ► Have the restraint system checked and repaired immediately at a qualified specialist workshop. Plug-in hybrid: ⚠ DANGER Risk of fatal injuries due to restraint system malfunctions Components in the restraint system may be activated unintentionally or not deploy as planned in an accident. In the event of an accident, the high-voltage on-board electrical system may not be deactivated as intended. You may suffer an electric shock if you touch the damaged components of the high-voltage on-board electrical system. ► Have the restraint system checked and repaired immediately at a qualified specialist workshop. ► After an accident, switch off the vehicle immediately.

Display messages	Possible causes/consequences and ► Solutions
 Left window airbag malfunction Consult workshop (example)	* The corresponding restraint system is malfunctioning (→ page 44). ⚠ WARNING Risk of injury or fatal injury due to a malfunction in the windowbag The windowbag might be triggered unintentionally or might not be triggered at all in the event of an accident. ► Have the windowbag checked and repaired immediately at a qualified specialist workshop.
Front passenger airbag disabled See Owner's Manual	* The front passenger airbag has been disabled even though an adult or a person of adult build is on the front passenger seat. If additional forces are applied to the seat, the weight the system detects may be too low. ⚠ WARNING - Risk of injury or even fatal injury when the front passenger airbag is disabled If the front passenger airbag is disabled, It will not be deployed in the event of an accident and cannot perform its intended protective function. A person in the front passenger seat could then, for example, come into contact with the vehicle interior, especially if the person is sitting too close to the dashboard. ► Be aware of the status of the front passenger airbag both before and during the journey. ► Stop the vehicle immediately in accordance with the traffic conditions. ► Make sure that no objects are trapped under the front passenger seat. ► Check the status of automatic front passenger airbag actuation (→ page 54). ► If necessary, consult a qualified specialist workshop immediately.

Display messages	Possible causes/consequences and ► Solutions
Front passenger airbag enabled See Owner's Manual	* The front passenger airbag will be enabled while the vehicle is in motion in the following situations: • even when a child, a small adult or an object weighing less than the system weight threshold is located on the front passenger seat • even when the front passenger seat is not occupied The system may detect objects or forces that are adding to the weight applied to the seat. ⚠ WARNING Risk of injury or death when using a child restraint system while the front passenger airbag is enabled If you secure a child in a child restraint system on the front passenger seat and the front passenger airbag is enabled, the front passenger airbag can deploy in the event of an accident. The child could be struck by the airbag. ► Ensure, both before and during the journey, that the status of the front passenger airbag is correct. NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur. ► Stop the vehicle immediately in accordance with the traffic conditions. ► Make sure that no objects are trapped under the front passenger seat. ► Check the status of automatic front passenger airbag actuation (→ page 54). ► If necessary, consult a qualified specialist workshop immediately.

Display messages	Possible causes/consequences and ► Solutions
PRE-SAFE inoperative See Owner's Manual	* The PRE-SAFE® functions are malfunctioning. ► Consult a qualified specialist workshop.
PRE-SAFE impulse side inoperative See Owner's Manual	* The PRE-SAFE® Impulse Side system is malfunctioning or inoperative after having already been triggered. ► Consult a qualified specialist workshop.

Key

Display messages	Possible causes/consequences and ► Solutions
 Replace key	* Have the key replaced. ► Consult a qualified specialist workshop.
 Change key batteries	* The key battery is discharged. ► Replace the battery (→ page 82).

Display messages	Possible causes/consequences and ► Solutions
 Key not detected (white display message)	* The key is currently undetected. ► Change the location of the key in the vehicle. ► Try to start the vehicle. ► If the key is still not detected, place it in the slot for starting with the key (→ page 180). ► Start the vehicle.
 Key not detected (red display message)	* The key can no longer be detected during a journey and may no longer be in the vehicle. If the key is no longer in the vehicle and you switch off the vehicle: • You can no longer start the vehicle. • You cannot centrally lock the vehicle. ► Ensure that the key is in the vehicle. If the key is in the vehicle and is still not detected: ► Stop the vehicle immediately in accordance with the traffic conditions. ► Place the key in the slot for starting the engine with the key (→ page 180). The key battery is weak or discharged. ► Check the battery using the indicator lamp (→ page 80). ► Replace the key battery, if necessary (→ page 82).

Display messages	Possible causes/consequences and ► Solutions
 Key being taught in Please wait	* The vehicle is processing in order to teach in the new key. ► Wait until processing is complete.
Place the key in the marked space See Owner's Manual	* Key detection is malfunctioning. ► Change the location of the key in the vehicle. ► Place the key in the slot for starting the engine with the key (→ page 180).

Lights

Display messages	Possible causes/consequences and ► Solutions
 Left low beam (example)	* The corresponding light source is defective. ► Drive on carefully. ► Consult a qualified specialist workshop immediately. ❗ LED light sources: the display message for the corresponding light appears only when all the light-emitting diodes in the light are faulty.

Display messages	Possible causes/consequences and ► Solutions
 Malfunction See Owner's Manual	* The exterior lighting is malfunctioning. ► Consult a qualified specialist workshop. * Vehicles with a trailer hitch: a fuse may have blown. ► Stop the vehicle in accordance with the traffic conditions. ► Check the fuses and replace them if necessary (→ page 417).
 Automatic driving lights inoperative	* The light sensor for automatic driving lights is malfunctioning. ► Consult a qualified specialist workshop.
 Active Light System inoperative	* The active headlamps are malfunctioning. ► Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ► Solutions
 Switch on headlamps	* You are driving without low-beam headlamps. ► Turn the light switch to the  or AUTO position.
 Switch off lights	* You are leaving the vehicle and the lights are still switched on. ► Turn the light switch to the AUTO position.
DIGITAL LIGHT Functions limited	* The DIGITAL LIGHT system is malfunctioning. The lighting system will continue to work even without the functions of the DIGITAL LIGHT system. ► Consult a qualified specialist workshop.
Check low beam setting (left/right-side traffic)	* The type of traffic has been selected manually. ► Check the setting and change it manually if necessary (→ page 151).
Low beam setting (left/right-side traffic) Manual adjustment only	* The automatic headlamp conversion for left-hand/right-hand traffic has malfunctioned. ► Change the headlamps over manually (→ page 151).

Display messages	Possible causes/consequences and ► Solutions
Adaptive Highbeam Assist currently unavailable See Owner's Manual	* Adaptive Highbeam Assist is temporarily unavailable. The system limits have been reached (→ page 148). Once the cause of the problem is no longer present, the system will be available again. The Adaptive Highbeam Assist available again display message will appear. ► Drive on ► Operate the high beam manually until Adaptive High Beam Assist is available again.
Adaptive Highbeam Assist inoperative	* Adaptive Highbeam Assist is malfunctioning. ► Drive on - or ► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ► If the display message does not disappear: consult a qualified specialist workshop. ► Until then, operate the high beam manually.
Adaptive Highbeam Assist Plus currently unavailable See Owner's Manual	* Adaptive Highbeam Assist Plus is temporarily unavailable. The system limits have been reached (→ page 149). Once the cause of the problem is no longer present, the system will be available again. The Adaptive Highbeam Assist Plus available again display message will appear. ► Drive on ► Operate the high beam manually until Adaptive High Beam Assist Plus is available again.

Display messages	Possible causes/consequences and ► Solutions
Adaptive Highbeam Assist Plus inoperative	* Adaptive Highbeam Assist Plus is malfunctioning. ► Drive on - or ► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ► If the display message does not disappear: consult a qualified specialist workshop. ► Until then, operate the high beam manually.
Hazard warning lamp system Malfunction	* The hazard warning lamp switch is malfunctioning. ► Consult a qualified specialist workshop.

Climate control

Display messages	Possible causes/consequences and ► Solutions
 inoperative See Owner's Man.	* The stationary heater is temporarily malfunctioning. ► When the vehicle is stationary on a level surface and the engine has cooled down, make up to four attempts to switch on the stationary heater, waiting several minutes between each attempt. ► If the stationary heater does not switch on, consult a qualified specialist workshop. ❗ The stationary heater cannot be activated if the outside temperature is above 15°C.

Display messages	Possible causes/consequences and ► Solutions
 Currently unavailable Battery low	* The on-board electrical system voltage is too low. The stationary heater has switched itself off. ► Drive an extended distance until the battery has reached a sufficient charge level again.
 Currently unavailable Refuel	* There is too little fuel in the fuel tank. The stationary heater cannot be switched on. ► Refuel the vehicle.
 Currently unavailable High-voltage battery charging incomplete.	* The high-voltage battery is charging. Pre-entry climate control cannot be switched on. ► Wait until the charging process has achieved a minimum state of charge.

Display messages	Possible causes/consequences and ► Solutions
 Currently unavailable Charge high-voltage battery	* The charge of the high-voltage battery is too low. Pre-entry climate control cannot be switched on. ► Charge the high-voltage battery (→ page 213).
 Pre-entry climate control via key available again after starting vehicle	* You have attempted to switch on pre-entry climate control more than twice with the vehicle switched off. ► Start the vehicle for ten seconds. Pre-entry climate control is operational again.
 Pre-entry climate control via key currently unavailable. High-voltage battery low	* The charge of the high-voltage battery is too low. Pre-entry climate control cannot be switched on. ► Charge the high-voltage battery (→ page 213). When the high-voltage battery is sufficiently charged, pre-entry climate control will be operational again.

Hybrid system

Display messages	Possible causes/consequences and ► Solutions
 Towing not permitted See Owner's Manual	* The drive system is malfunctioning. ► Have the vehicle transported only using a transporter or trailer (→ page 413).
 Acoustic presence indicator inoperative	* The sound generator (acoustic vehicle warning system) is malfunctioning. No vehicle noises are being produced. The vehicle may not be heard by other road users. ► Drive with particular care. ► Consult a qualified specialist workshop.
 Charger cable connected	* You cannot pull away while the charging cable is connected. ► Disconnect the charging cable from the vehicle.
Not possible to unlock charging cable See Owner's Manual	* The charging cable connector cannot be removed from the charging station's socket. ► Press the EMERGENCY OFF switch on the charging station. If the charging cable connector cannot be removed after that:

Display messages	Possible causes/consequences and ► Solutions
	► Request service personnel from the operator of the charging station via the emergency call button or the emergency numbers attached to the charging station.
Vehicle not currently being charged Charging station fault	* A malfunction has occurred in the charging station or the RFID card is not recognised. ► Start the charging process at a different charging station. - or ► Have the RFID card checked to ensure it is functioning.
Charging method currently unavailable Please try again or change charging method	* A temporary malfunction has occurred in the charging station. ► Wait until the malfunction has passed. - or ► Start the charging process at a different charging station.
Charging fault Please change charging method See Owner's Manual	* A temporary malfunction has occurred in the charging station. ► Wait until the malfunction has passed. - or ► Start the charging process at a different charging station.
AC charging inoperative Consult workshop	* The charging process cannot be started due to a malfunction. ► Consult a qualified specialist workshop.
DC charging inoperative Consult workshop	* The charging process cannot be started due to a malfunction. ► Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ► Solutions
Only electric drive available Power limited	* The fuel tank is empty and the combustion engine is switched off. The output of your vehicle is limited because you are driving in electric mode. ► Refuel immediately. Subsequently, there may be temporary restrictions in the availability of electric mode over a driving distance of 50 km. If there is fuel in the vehicle, there is a fault with the combustion engine. ► Consult a qualified specialist workshop.
"Electric" drive program currently unavailable	* The state of charge of the high-voltage battery is not sufficient for the Electric drive program. Charge the high-voltage battery (→ page 213).
Reduced drive system performance See Owner's Manual	* The drive system switches to emergency operation mode due to a malfunction. ► Drive on carefully. ► Consult a qualified specialist workshop.
Preparing drive system...	* The insulation of the drive system is being tested. This process can last for up to ten seconds.

Display messages	Possible causes/consequences and ► Solutions
 Battery overheated Stop, everybody out! Outdoors if possible	* The high-voltage battery has overheated. There is a risk of fire. ► Stop the vehicle immediately in accordance with the traffic conditions. ► If possible, stop the vehicle in the open air and ensure that all vehicle occupants get out. ❗ Supporting vehicle functions may activate automatically, e.g. air-recirculation mode as part of climate control. ► Do not continue driving. ► If smoke is present, leave the danger zone and call the fire service immediately. ► Consult a qualified specialist workshop even if there are no external signs of a fire.
 Malfunction	* The drive system is malfunctioning. A warning tone will also sound. ► Consult a qualified specialist workshop.
 Malfunction Visit workshop	* The drive system is malfunctioning. ► Consult a qualified specialist workshop.
Without changing gear, consult workshop	* The drive system cannot be restarted due to a malfunction. If the transmission position is changed using the DIRECT SELECT lever, the drive system will be switched off in park position P or neutral N.

Display messages	Possible causes/consequences and ► Solutions
 Have high-voltage system checked See Owner's Manual	► Consult a qualified specialist workshop and do not change the transmission position.
Consult workshop without changing the transmission position	* The transmission is malfunctioning. It is no longer possible to change the transmission position. ► If transmission position D is selected, consult a qualified specialist workshop and do not change the transmission position. ► For all other transmission positions, park the vehicle safely. ► Consult a qualified specialist workshop.
Consult workshop without starting the vehicle again	* It is not possible to restart the drive system due to a malfunction. ► Do not switch off the drive system; drive on to the nearest qualified specialist workshop.
 Output and range reduced See Owner's Manual	* A malfunction has occurred in the high-voltage battery. Output and range will be severely restricted. ► Switch the vehicle off and lock it. ► After waiting for a short time, unlock the vehicle and start it again.

Display messages	Possible causes/consequences and ► Solutions
	If the display message appears again: ► Drive on carefully. ► Fully charge the high-voltage battery (→ page 213). If the output and range are still reduced, there is a malfunction in the drive system. ► Drive on carefully. ► Consult a qualified specialist workshop.
Cannot start vehicle See Owner's Manual	* It is not possible to start the vehicle. A malfunction has occurred in the drive system. ► Switch the vehicle off and lock it. ► After waiting for a short time, unlock the vehicle and start it again. ► If the display message appears again and the vehicle does not start, consult a qualified specialist workshop.
Drive malfunction Achievable speed limited Stop soon	* The drive system is malfunctioning. The maximum vehicle speed is restricted. The drive system will shut off within a few kilometres. ► Stop the vehicle immediately in accordance with the traffic conditions and switch off the drive system. Do not continue driving. ► Do not tow the vehicle; stop towing if necessary. ► Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ► Solutions
Drive malfunction Achievable speed severely limited See Owner's Manual	* The drive system is malfunctioning. The maximum vehicle speed is restricted. ► Consult a qualified specialist workshop.
 Malfunction	* The drive system is malfunctioning. The output of your vehicle is restricted. ► Consult a qualified specialist workshop.
 Stop Switch off the vehicle	* The drive system is malfunctioning. ► Stop the vehicle immediately in accordance with the traffic conditions and switch off the drive system. Do not continue driving. ► Do not tow the vehicle; stop towing if necessary. ► Consult a qualified specialist workshop.
 Performance severely limited	* The drive system is outside the normal operating temperature range, e.g. due to extremely low or high outside temperatures. The output is severely restricted. Once the operating temperature of the drive system returns to normal, the full output will be available again. The display message will disappear. * If the drive system power output is still reduced, there is a fault in the drive system.

Display messages	Possible causes/consequences and ► Solutions
	► Drive on carefully. ► Consult a qualified specialist workshop.
 Please wait Depressurising fuel tank	* Vehicles with petrol engines: the pressure in the fuel tank is reduced before the fuel filler flap is opened. This pressure reduction can take up to 15 minutes.
 Fuel tank is depressurised Ready for refuelling	* Vehicles with petrol engines: the pressure in the fuel tank is released and the fuel filler flap opens.
 Tank ventilation Malfunction Consult workshop	* Vehicles with petrol engines: There is a malfunction in the fuel system. ► Consult a qualified specialist workshop.

Vehicle

Display messages



Possible causes/consequences and ► Solutions

- * The driver's display is inoperative due to a failed software update.
The display message will be shown every time the engine is started.

⚠ WARNING Risk of accident if the driver display fails

If the driver display has failed or is malfunctioning, function restrictions in systems relevant to safety cannot be detected.

The operating safety of your vehicle may be impaired.

- Drive on carefully.
- Have the vehicle checked immediately at a qualified specialist workshop.

If the operating safety of your vehicle is impaired, park the vehicle immediately and safely. Contact a qualified specialist workshop.

⚠ WARNING Risk of accident due to failure of the driver display

In the event that the driver display fails or malfunctions, you will not recognise function restrictions affecting systems relevant to safety. This may impair operating safety.

- Park the vehicle safely as soon as possible and notify a qualified specialist workshop.

If the driver's display fails, you may not recognise function restrictions affecting systems relevant to safety or the speed display, for example. The operating safety of the vehicle may be impaired (→ page 338).

Display messages	Possible causes/consequences and ► Solutions
 Vehicle is operational Switch off vehicle before exiting	► Have the vehicle checked by a qualified specialist workshop immediately. * You are leaving the vehicle in a ready-to-drive state. ► Get out of the vehicle, secure it against rolling away and take the key with you. ► If you do not leave the vehicle, switch off the electrical consumers, e.g. the seat heating. Otherwise, the 12-V battery may discharge and starting the engine may be possible only with the help of a second battery (jump start).
Vehicle is ready to drive Shutdown occurs when locked or automatically in XX mins	* You are about to leave the vehicle and the engine is running. The vehicle will switch off automatically in 20 minutes. ► To prevent the vehicle from switching off automatically, confirm the message in the central display of the multimedia system. * You are in the vehicle. Park position P is engaged and the engine is running. After ten minutes, this display message appears in the driver display. The vehicle is switched off automatically after a further ten minutes. ► To prevent the vehicle from switching off automatically, confirm the message in the central display of the multimedia system.

Display messages	Possible causes/consequences and ► Solutions
 Operation only possible in transmission position P	* The ball neck will not swivel because transmission position D, R or neutral N is selected. ► Depress the brake pedal. ► Engage park position P.
 Trailer coupling in motion	* The ball neck is retracting/extending. Do not attempt to speed up, slow down or initiate the swivel movement using your hand, foot or other aids. During the swivel movement, do not couple a trailer. When the ball neck has reached an operational position, the display message will disappear.
 Trailer coupling Check lock(white display message)	* The trailer hitch is not operational during a journey with a trailer. ⚠ WARNING Risk of an accident if the ball neck is not locked The trailer may become detached. ► Stop the vehicle immediately in accordance with the traffic conditions. Do not continue driving. ► Uncouple the trailer and secure it against rolling away. ► Initiate a new swivelling procedure and do not re-couple the trailer until the display message disappears. ► Initiate a new swivel movement (→ page 311). ► When the display message disappears, couple up the trailer and drive on.

Display messages	Possible causes/consequences and ► Solutions
	If the display message does not disappear, the trailer hitch is malfunctioning and the ball neck is not locked. ► Do not couple up the trailer. Drive on without the trailer. Note the reduced ground clearance due to the unlocked ball neck. ► Consult a qualified specialist workshop. * When the vehicle is stationary with a coupled trailer, the trailer hitch is not operational. ► Uncouple the coupled trailer and secure it against rolling away. ► If the ball neck has been retracted: initiate a new swivel movement (→ page 311). The ball neck will engage vertically in the locked position and then engage beneath the bumper. ► If the ball neck has been extended: initiate a new swivel movement (→ page 311). The ball neck will engage beneath the bumper. If the display message does not disappear, the trailer hitch is malfunctioning and the ball neck is not locked. ► Do not couple up the trailer. Drive on without the trailer. Note the reduced ground clearance due to the unlocked ball neck. ► Consult a qualified specialist workshop.
Please teach in trailer coupling again using the button in load compartment Wait for it to extend/ retract	* The swivel movement of the trailer hitch is impaired. ► Use the button on the tailgate to trigger a new, complete swivel movement until the ball neck engages beneath the bumper.

Display messages	Possible causes/consequences and ► Solutions
Head-up display currently unavailable See Owner's Manual	* The head-up display is temporarily unavailable. Possible causes: • malfunctions in the power supply • signal interference ► Stop in accordance with the traffic conditions and switch the vehicle off and on again. ► If the display message still appears, consult a qualified specialist workshop.
Head-up display inoperative	* The head-up display has an internal error. ► Consult a qualified specialist workshop.
Head-up display Brightness currently reduced See Owner's Manual	* The brightness of the head-up display is reduced. Possible causes: • Dirt on the windscreen in the camera's field of vision • Faulty exterior brightness signals ► Switch on the windscreen wipers. ► Clean the windscreen if necessary. ► Switch the vehicle off and switch it back on ► If the display message still appears, consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ► Solutions
 Steering malfunction Drive carefully Visit workshop	* A power steering malfunction has occurred. Steering characteristics may be impaired as a result. ► Drive on carefully. ► Consult a qualified specialist workshop.
 Steering malfunction Increased physical effort See Owner's Manual	* The power steering assistance is malfunctioning. ⚠ WARNING Risk of an accident due to altered steering characteristics If the power assistance of the steering fails partially or completely, you will need to use more force to steer. ► If safe steering is possible, drive on carefully. ► Visit or consult a qualified specialist workshop immediately.
 Steering malfunction Stop immediately See Owner's Manual	* The steering is malfunctioning. Steering capability is significantly impaired. ⚠ WARNING Risk of accident if steering capability is impaired If the steering does not function as intended, the vehicle's operating safety is jeopardised. ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ► Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ► Solutions
 Rear axle steering currently malfunctioning	* The rear-axle steering is temporarily unavailable. The turning circle may become wider. ► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. If the display message does not disappear: ► Drive on carefully. ► Consult a qualified specialist workshop.
 Rear axle steering Malfunction Visit workshop	* The rear axle steering is malfunctioning. The rear axle has no steering capability. The steering wheel may be at an angle when you drive in a straight line. ► Adapt your speed and drive on carefully. ► Consult a qualified specialist workshop immediately.
 Rear axle steering Malfunction Stop immediately	* The rear axle steering is malfunctioning. The rear axle has no steering capability. The steering wheel may be tilted considerably when you drive in a straight line. Depending on the steering wheel's tilted position, the steering wheel will also vibrate and a continuous warning tone will sound. ⚠ WARNING Risk of accident if steering capability is impaired If the steering does not function as intended, the vehicle's operating safety is jeopardised.

Display messages	Possible causes/consequences and ► Solutions
	► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ► Consult a qualified specialist workshop. ► When stopping, bear the enlarged vehicle width in mind.
Snow chain mode Maximum speed exceeded	* The maximum permissible speed for snow chain mode has been exceeded. ► Drive more slowly.
	* At least one door is open. ► Close all doors.
	* The bonnet is open. ⚠ WARNING Risk of accident due to driving with the bonnet unlocked The bonnet may open and block your view. ► Never release the bonnet when driving. ► Before every trip, ensure that the engine bonnet is locked. ► Stop the vehicle immediately in accordance with the traffic conditions. ► Close the bonnet.

Display messages	Possible causes/consequences and ► Solutions
	* The tailgate is open. ⚠ DANGER Risk of poisoning from exhaust gases Combustion engines emit poisonous exhaust gases, such as carbon monoxide. Exhaust gases can enter the vehicle interior if the tailgate is open when the engine is running, especially if the vehicle is in motion. ► Always switch off the engine before opening the tailgate. ► Never drive with the tailgate open. ► Close the tailgate.
 Rear left seat backrest not locked (Example)	* The seat backrest of the corresponding seat is not engaged. ► Fold the seat backrest back until it engages.
 Top up washer fluid	* The washer fluid level in the washer fluid reservoir has dropped below the minimum. ► Top up the washer fluid (→ page 389).
Wiper Malfunction	* The windscreen wiper is malfunctioning.

Display messages	Possible causes/consequences and ► Solutions
	► Restart the vehicle. If the display message still appears: ► Consult a qualified specialist workshop.

Engine

Display messages	Possible causes/consequences and ► Solutions
To switch off the vehicle, press the Start/Stop button for at least 3 seconds or 3 times	* You have pressed the start/stop button while the vehicle is in motion. ► Information about switching off the vehicle while driving (→ page 180).
Cannot start vehicle See Owner's Manual	* The vehicle cannot be started. ► Switch the vehicle off and switch it back on ► If the display message still appears, consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ► Solutions
 Top up coolant See Owner's Manual	* The coolant level is too low. ! NOTE Engine damage due to insufficient coolant ► Avoid long journeys with insufficient coolant. ► Add coolant (→ page 389). ► Have the engine cooling system checked at a qualified specialist workshop.
 Coolant Stop Switch off the vehicle	* The coolant is too hot. ► Stop immediately in accordance with the traffic conditions and switch off the vehicle. ▲ WARNING Risk of burns when opening the bonnet If you open the bonnet in the event of an overheated engine or fire in the engine compartment, the following situations may occur: • You may come into contact with hot gases. • You may come into contact with other escaping hot operating fluids. ► Before opening the bonnet, allow the engine to cool down. ► In the event of a fire in the engine compartment, keep the bonnet closed and call the fire service. ► Wait until the engine has cooled down.

Display messages	Possible causes/consequences and ► Solutions
	► Make sure that the air supply to the radiator is not obstructed. ► Avoiding high loads on the engine, drive to the nearest qualified specialist workshop. In doing so, ensure that the coolant temperature display remains below 120°C.
	* There is a malfunction in the engine cooling system. ► Avoiding high loads on the engine, drive to the nearest qualified specialist workshop. In doing so, ensure that the coolant temperature display remains below 120°C.
 Reserve fuel level	* The fuel supply has dropped into the reserve range. ► Refuel.
 Clean the fuel filter	* Vehicles with diesel engines: the fuel filter is dirty or the water in the fuel filter needs to be drained. ► Consult a qualified specialist workshop.
 Replace air filter	* Vehicles with diesel engines: the engine air filter is dirty and must be replaced. ► Consult a qualified specialist workshop.

Transmission

Display messages	Possible causes/consequences and ► Solutions
Only select P when vehicle is stationary	* It is possible to select the park position P only if the vehicle is stationary. ► Depress the brake pedal to stop. ► Shift the transmission to park position P when the vehicle is stationary.
Apply brake to deselect P position	* You have attempted to shift the transmission out of park position P and into another transmission position. ► Depress the brake pedal. ► Select transmission position D, R or neutral N.
Apply brake and start vehicle to shift out of P or N	* You have attempted to shift the transmission out of park position P or neutral N and into another transmission position. ► Depress the brake pedal. ► Start the vehicle. ► Change the transmission position.
Apply brake to engage D or R	* You have attempted to select transmission position D or R. ► Depress the brake pedal. ► Select transmission position D or R.
Apply brake to engage R	* You have attempted to select transmission position R. ► Depress the brake pedal.

Display messages	Possible causes/consequences and ► Solutions
	► Select transmission position R.
Apply parking brake to park Visit workshop	* A malfunction has occurred in the emergency power supply to park position P. ► Consult a qualified specialist workshop. ► Until then, always select park position P manually before you switch off the vehicle. ► Before leaving the vehicle, apply the electric parking brake.
Risk of vehicle rolling away Driver's door open Transmission not in P	* The driver's door is not fully closed and transmission position D, R or neutral N is selected. The vehicle may roll away. ► Select park position P when switching off the vehicle.
Risk of vehicle rolling away Apply parking brake to park	* The transmission is malfunctioning. Park position P cannot be selected. ► Park the vehicle safely. ► Use the electric parking brake to secure the vehicle against rolling away. ► On gradients, turn the front wheels so that the vehicle will roll towards the kerb if it starts moving.
Risk of vehicle rolling away N activated manually No automatic switch to P	* While the vehicle was at a standstill or driving at very low speed, neutral N was engaged with the engine running or the vehicle switched on. ! NOTE Damage to the vehicle due to rolling away When the vehicle is switched off or the driver's door is opened, automatic engagement of park position P is deactivated.

Display messages	Possible causes/consequences and ► Solutions
	The vehicle may roll away. ► Be ready to brake. ► Do not leave the vehicle unattended. ► Depress the brake pedal until the vehicle comes to a standstill. ► Engage park position P when the vehicle is stationary with the brake pedal depressed. ► To continue driving with the brake pedal depressed, select transmission position D or R.
N automatically activated Please engage transmission position again	* Neutral N was automatically engaged when the vehicle was rolling or being driven. ① When you open the driver's door in neutral N, park position P will be engaged automatically. ► Engage park position P when the vehicle is stationary with the brake pedal depressed. ► To continue driving with the brake pedal depressed, select transmission position D or R.
N is selected Please select desired transmission position	* The accelerator pedal was depressed while the vehicle was rolling or moving in neutral N. ► To accelerate the vehicle, select transmission position D or R.
Reversing not poss. Consult workshop	* The transmission is malfunctioning. It is not possible to select transmission position R. ► Consult a qualified specialist workshop.
Transmission Malfunction Stop	* The transmission is malfunctioning. The transmission shifts to neutral N automatically. ► Stop the vehicle immediately in accordance with the traffic conditions.

Display messages	Possible causes/consequences and ► Solutions
	► Depress the brake pedal. ► Engage park position P. ► Consult a qualified specialist workshop.
Consult workshop without changing the transmission position	* The transmission is malfunctioning. It is no longer possible to change the transmission position. ► If transmission position D is selected, consult a qualified specialist workshop and do not change the transmission position. ► For all other transmission positions, park the vehicle safely. ► Consult a qualified specialist workshop.
Auxiliary battery malfunction (white display message)	* There is a malfunction in the auxiliary battery. ► Consult a qualified specialist workshop. ► Until then, always select park position P manually before you switch off the vehicle. ► Before leaving the vehicle, apply the electric parking brake.
Auxiliary battery malfunction (red display message)	* There is a malfunction in the auxiliary battery. ► Consult a qualified specialist workshop. ► Until then, always select park position P manually before you switch off the vehicle. ► Before leaving the vehicle, apply the electric parking brake.

Brakes

Display messages	Possible causes/consequences and ► Solutions
Parking brake See Owner's Manual	* The yellow  indicator lamp is lit. The electric parking brake is malfunctioning. To apply: ► Switch the vehicle off and switch it back on ► Apply the electric parking brake manually (→ page 234). If it is not possible to apply the electric parking brake: ► Consult a qualified specialist workshop. ► Where necessary, also secure the parked vehicle against rolling away. * The yellow  indicator lamp and the red  indicator lamp are lit. The electric parking brake is malfunctioning. To release: ► Switch the vehicle off and switch it back on. ► Release the electric parking brake manually (→ page 234). or ► Release the electric parking brake automatically (→ page 234). If it is still not possible to release the electric parking brake: ► Do not continue driving. Consult a qualified specialist workshop. * The yellow  indicator lamp is lit and the red  indicator lamp is flashing. The electric parking brake is malfunctioning.

Display messages	Possible causes/consequences and ► Solutions
	The electric parking brake could not be applied or released. ► Switch the vehicle off and switch it back on. To apply: ► Release and then apply the electric parking brake manually (→ page 234). To release: ► Apply and then release the electric parking brake manually. If it is not possible to apply the electric parking brake or the red  indicator lamp continues to flash: ► Do not continue driving. Consult a qualified specialist workshop. ► Where necessary, also secure the parked vehicle against rolling away. * The yellow  indicator lamp is lit and the red  indicator lamp flashes for approximately ten seconds after the electric parking brake has been applied or released. It then remains lit or goes out. The electric parking brake is malfunctioning. If the state of charge is too low: ► Charge the 12 V battery. To apply: ► Apply the electric parking brake manually.

Display messages	Possible causes/consequences and ► Solutions
	If it is not possible to apply the electric parking brake: ► Consult a qualified specialist workshop. ► Where necessary, also secure the parked vehicle against rolling away. To release: ► If the conditions for automatic release are fulfilled and the electric parking brake is not released automatically, release the electric parking brake manually (→ page 234). If it is still not possible to release the electric parking brake: ► Do not continue driving. Consult a qualified specialist workshop.
Release parking brake	* The red  indicator lamp is flashing. The electric parking brake is applied while you are driving: • A condition for automatic release of the electric parking brake has not been fulfilled (→ page 234). • You are performing emergency braking using the electric parking brake (→ page 235). ► Check the conditions for automatic release of the electric parking brake. ► Release the electric parking brake manually.

Display messages	Possible causes/consequences and ► Solutions
 Parking brake Switch on vehicle to release	* The red  indicator lamp is lit. You have attempted to release the electric parking brake with the vehicle switched off. ► Switch on the vehicle.
 Brake immediately	* A malfunction has occurred while the HOLD function was activated. A horn may also sound at regular intervals. You cannot start the vehicle system. ► Immediately depress the brake pedal firmly until the display message disappears. You cannot start the vehicle system again.
 Malfunction See Owner's Manual	* The brake force boosting function is impaired. Hill Start Assist may be impaired. ⚠ WARNING Risk of an accident due to a brake system malfunction If the brake system is malfunctioning, braking characteristics may be impaired. ► Drive on carefully. ► Have the brake system checked immediately at a qualified specialist workshop.

Display messages	Possible causes/consequences and ► Solutions
 Malfunction Stop vehicle	* The brake force boosting function is impaired and the braking characteristics may be affected. ▲ WARNING Risk of accident and injury if brake force boosting is malfunctioning If brake force boosting is malfunctioning, increased brake pedal force may be necessary for braking. The braking characteristics may be impaired. The braking distance can increase in emergency braking situations. ► Stop in a safe location immediately. Do not continue driving! ► Consult a qualified specialist workshop.
 Check brake fluid level	* There is insufficient brake fluid in the brake fluid reservoir. ▲ WARNING Risk of an accident due to low brake fluid level If the brake fluid level is too low, the braking effect and the braking characteristics may be impaired. ► Stop the vehicle as soon as possible, paying attention to road and traffic conditions. Do not continue driving. ► Consult a qualified specialist workshop. ► Do not top up the brake fluid.
Check brake pads See Owner's Manual	* The brakepads have reached the wear limit. ► Consult a qualified specialist workshop.

Driving systems

Display messages	Possible causes/consequences and ► Solutions
 Off	* The HOLD function is deactivated because the vehicle is slipping or a condition for activation is not fulfilled. ► Reactivate the HOLD function later or check the activation conditions for the HOLD function (→ page 243).
 ATTENTION ASSIST: Take a break!	* ATTENTION ASSIST has detected fatigue or an increasing lack of concentration on the part of the driver (→ page 244). ► If necessary, take a break.
 --- km/h	* Cruise control cannot be activated as not all activation conditions are fulfilled. ► Observe the activation conditions for cruise control (→ page 247).
Cruise control inoperative	* Cruise control is malfunctioning. ► Consult a qualified specialist workshop.
Cruise control and Limiter inoperative	* Cruise control and the limiter are malfunctioning. ► Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ► Solutions
Cruise control off	* Cruise control has been deactivated. If there is an additional warning tone, cruise control has been deactivated automatically (→ page 246).
 --- km/h	* The limiter can temporarily not be engaged. Once the cause of the problem is no longer present, the system will be available again.
 passive	* If you depress the accelerator pedal beyond the point of resistance (kickdown), the limiter will be switched to passive mode (→ page 246).
Limiter inoperative	* The limiter is malfunctioning. ► Consult a qualified specialist workshop.
 --- km/h	* Active Distance Assist DISTRONIC cannot be activated as not all activation conditions are fulfilled. ► Comply with the activation conditions of Active Distance Assist DISTRONIC (→ page 252).

Display messages	Possible causes/consequences and ► Solutions
 suspended	* If you depress the accelerator pedal beyond the setting of Active Distance Assist DISTRONIC, the system will switch to passive mode (→ page 249).
 Off	* Active Distance Assist DISTRONIC was deactivated. If a warning tone also sounds, Active Distance Assist DISTRONIC has deactivated automatically (→ page 252).
Active Distance Assist currently unavailable See Owner's Manual	* Active Distance Assist DISTRONIC is temporarily unavailable. The ambient conditions are outside the system limits (→ page 249). As soon as the ambient conditions are within the system limits, the system will become available again. ► Drive on carefully. or ► If the display message does not disappear, stop the vehicle in accordance with the traffic conditions and restart the vehicle.
Active Distance Assist inoperative	* Active Distance Assist DISTRONIC is malfunctioning. Other driving systems and driving safety systems may also be malfunctioning. ► Drive on carefully.

Display messages	Possible causes/consequences and ► Solutions
	or ► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ► If the display message does not disappear: consult a qualified specialist workshop.
Active Distance Assist available again	* Active Distance Assist DISTRONIC is operational again. ► Switch on Active Distance Assist DISTRONIC (→ page 252).
Speed Limit Assist currently unavailable See Owner's Manual	* Speed Limit Assist is temporarily unavailable. ► Drive on - Once the cause of the problem is no longer present, the system will be available again.
Speed Limit Assist inoperative	* Speed Limit Assist is malfunctioning. ► Drive on - or ► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ► If the display message does not disappear: consult a qualified specialist workshop.
Speed limit (winter tyres) XXX km/h	* You have reached the maximum permissible stored speed for winter tyres. It is not possible to exceed this speed.

Display messages	Possible causes/consequences and ► Solutions
 Maximum speed exceeded	* You have exceeded the maximum permissible speed (for certain countries only). ► Drive more slowly.
 inoperative	* The Downhill Speed Regulation is malfunctioning. ► Consult a qualified specialist workshop.
 Not in curr. drive prog.	* The Downhill Speed Regulation is not available in the currently selected drive program. ► Change the drive program.
 Max. speed 40 km/h	* The maximum speed of 40 km/h for the Downhill Speed Regulation has been exceeded. ► Drive more slowly.

Display messages	Possible causes/consequences and ► Solutions
Active Steering Assist currently unavailable See Owner's Manual	* Active Steering Assist is temporarily unavailable. The ambient conditions are outside the system limits (→ page 258). As soon as the ambient conditions are within the system limits, the system will become available again. ► Drive on ► Check the tyre pressure if necessary.
Active Steering Assist inoperative	* Active Steering Assist is malfunctioning. Active Distance Assist DISTRONIC remains available. ► Drive on or ► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ► If the display message does not disappear: consult a qualified specialist workshop.
	* Active Steering Assist has reached the system limits (→ page 258). You have not steered independently for a considerable period of time. ► Take over the steering and drive on in accordance with the traffic conditions.
Active Steering Assist currently unavailable due to multiple emergency stops	* Active Steering Assist is temporarily unavailable due to multiple emergency stops. ► Take over the steering and stop in accordance with the traffic conditions. ► Switch the vehicle off and switch it back on Active Steering Assist is available once more.

Display messages	Possible causes/consequences and ► Solutions
 Beginning emergency stop	* Your hands are not on the steering wheel. Active Steering Assist will initiate an emergency stop (→ page 258). ► Put your hands on the steering wheel. Information on cancelling an emergency stop (→ page 261).
Active Emergency Stop Assist currently unavailable See Owner's Manual	* Active Emergency Stop Assist is temporarily unavailable. The ambient conditions are outside the system limits (→ page 261). As soon as the ambient conditions are within the system limits, the system will become available again. ► Drive on - or ► If the display message does not disappear, stop the vehicle in accordance with the traffic conditions and restart the vehicle. * Vehicles without the Driving Assistance Package: Active Emergency Stop Assist is temporarily unavailable due to multiple emergency stops. ► Take over the steering and stop in accordance with the traffic conditions. ► Switch the vehicle off and switch it back on Active Emergency Stop Assist is available once more.
Active Emergency Stop Assist inoperative	* Active Emergency Stop Assist is malfunctioning. ► Drive on - or


Display messages	Possible causes/consequences and ► Solutions
	► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ► If the display message does not disappear: consult a qualified specialist workshop.
Active Lane Change Assist currently unavailable See Owner's Manual	* Active Lane Change Assist is temporarily unavailable. The ambient conditions are outside the system limits (→ page 262). As soon as the ambient conditions are within the system limits, the system will become available again. ► Drive on - or ► If the display message does not disappear, stop the vehicle in accordance with the traffic conditions and restart the vehicle.
Active Lane Change Assist inoperative	* Active Lane Change Assist is malfunctioning. ► Drive on - or ► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ► If the display message does not disappear: consult a qualified specialist workshop.
Active Stop-and-Go Assist currently unavailable see Owner's Manual	* Active Stop-and-Go Assist is temporarily unavailable. Active Distance Assist DISTRONIC and Active Steering Assist are still available. The ambient conditions are outside the system limits (→ page 249). As soon as the ambient conditions are within the system limits, the system will become available again. ► Drive on

Display messages	Possible causes/consequences and ► Solutions
Active Stop-and-Go Assist inoperative See Owner's Manual	* Active Stop-and-Go Assist is malfunctioning. Active Stop-and-Go Assist has been deactivated. Active Distance Assist DISTRONIC and Active Steering Assist are still available. ► Drive on or ► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ► If the display message does not disappear: consult a qualified specialist workshop.
Traffic Sign Assist currently unavailable See Owner's Manual	* Traffic Sign Assist is temporarily unavailable. Once the cause of the problem is no longer present, the system will be available again. ► It is possible to continue driving in compliance with the traffic regulations.
Traffic Sign Assist inoperative	* Traffic Sign Assist is malfunctioning. ► It is possible to continue driving in compliance with the traffic regulations. or ► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ► If the display message does not disappear: consult a qualified specialist workshop.
Blind Spot Assist currently unavailable See Owner's Manual	* Blind Spot Assist is temporarily unavailable. The system limits have been reached (→ page 276). Once the cause of the problem is no longer present, the system will be available again.

Display messages	Possible causes/consequences and ► Solutions
	► Drive on or ► If the display message does not disappear, stop the vehicle in accordance with the traffic conditions and restart the vehicle.
Blind Spot Assist inoperative	* Blind Spot Assist is malfunctioning. ► Drive on or ► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ► If the display message does not disappear: consult a qualified specialist workshop.
Blind Spot Assist unavailable when towing a trailer See Owner's Manual	* When you establish the electrical connection to the trailer, Blind Spot Assist will be unavailable. ► Press the left-hand Touch Control and acknowledge the display message.
Active Blind Spot Assist currently unavailable See Owner's Manual	* Active Blind Spot Assist is temporarily unavailable. The system limits have been reached (→ page 276). Once the cause of the problem is no longer present, the system will be available again. ► Drive on or ► If the display message does not disappear, stop the vehicle in accordance with the traffic conditions and restart the vehicle.



Display messages	Possible causes/consequences and ► Solutions
Active Blind Spot Assist inoperative	* Active Blind Spot Assist is malfunctioning. ► Drive on or ► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ► If the display message does not disappear: consult a qualified specialist workshop.
Active Blind Spot Assist unavailable when towing a trailer See Owner's Manual	* When you establish the electrical connection to the trailer, Active Blind Spot Assist will be unavailable. ► Press the left-hand Touch Control and acknowledge the display message.
Active Lane Keeping Assist currently unavailable See Owner's Manual	* Active Lane Keeping Assist is temporarily unavailable. The ambient conditions are outside the system limits (→ page 279). As soon as the ambient conditions are within the system limits, the system will become available again. ► Drive on
Active Lane Keeping Assist inoperative	* Active Lane Keeping Assist is malfunctioning. ► Drive on or ► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ► If the display message does not disappear: consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ► Solutions
 Beginning emergency stop	* Your hands are not on the steering wheel. The Active Lane Keeping Assist will initiate an emergency stop (→ page 279). ► Put your hands on the steering wheel. Information on cancelling an emergency stop (→ page 261).
Active Lane Keeping Assist functions restricted See Owner's Manual	* Active Lane Keeping Assist is available but restricted. ► Drive on or ► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ► If the display message does not disappear: consult a qualified specialist workshop.

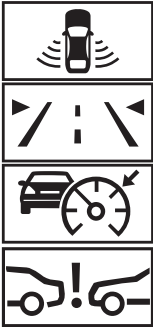Display messages	Possible causes/consequences and ► Solutions
 temporarily unavailable Sensors dirty	* Front and corner radar sensors (hereafter "sensors") are malfunctioning. Possible causes: • The sensors are dirty • Heavy rain or snow • Extended country driving without other traffic, e.g. in the desert Driving systems and driving safety systems may be malfunctioning or temporarily unavailable. The brake system, steering and drive system will continue to function normally. ► Drive on carefully. Once the causes of the problem are no longer present, the driving systems and driving safety systems will be available again and the corresponding symbols will be switched off. If the display message does not disappear: ► Stop the vehicle in accordance with the traffic conditions. ► Clean all sensor covers from outside (→ page 237). ► Restart the vehicle.

Display messages	Possible causes/consequences and ► Solutions
 Camera view restricted See Owner's Manual	* The view of the multifunction camera is restricted. Possible causes: • Dirt on the windscreen in the field of vision of the multifunction camera • Heavy rain, snow or fog • Mist on the inside of the windscreen: in certain weather conditions, mist can form on the inside of the windscreen during cold times of year in particular. ❗ This mist on the windscreen will be removed automatically within a short time with the aid of a heater. The restriction is temporary. Driving systems and driving safety systems may be malfunctioning or temporarily unavailable. The brake system, steering and drive system will continue to function normally. ► Drive on carefully. Once the causes of the problem are no longer present, the driving systems and driving safety systems will be available again and the corresponding symbols will be switched off. If the display message does not disappear: ► Stop the vehicle in accordance with the traffic conditions. ► Clean the windscreen, especially in the position of the multifunction camera (→ page 237). ► Restart the vehicle.

Display messages	Possible causes/consequences and ► Solutions
 Restricted during trailer operation	* When the trailer socket is occupied, some driving systems will be available only to a limited extent. ► Drive carefully if you are towing a trailer or have the bicycle rack mounted.
 Fault Drive at max. 80 km/h	* AIRMATIC is functioning only to a limited extent. The vehicle's handling characteristics may be affected. ! NOTE The tyres on the front axle or the fenders could be damaged by large steering movements ► Avoid large steering movements while driving and listen for scraping sounds. ► If you hear scraping sounds, pull over and stop the vehicle in accordance with the traffic conditions, and set a higher vehicle level if possible. ► Drive in a manner appropriate for the current level, but do not exceed 80 km/h. ► Consult a qualified specialist workshop.

  Display messages	Possible causes/consequences and ► Solutions
 Lowering	* The vehicle level will lower for the following reasons: • You have selected a different drive program. • You have exceeded the speed limit. • You have changed the vehicle level by pressing the button. • Operation with a trailer or bicycle rack: if an electrical connection has been correctly made, you have exceeded the speed limit.
 Rising	* Your vehicle is adjusting to the level you have selected.
 Max. speed 20km/h	* AIRMATIC is functioning only to a limited extent. The vehicle's handling characteristics may be affected. ► The current level is too high. Do not drive at speeds greater than 20 km/h. ► Consult a qualified specialist workshop.
 STOP Vehicle level too low	* You have pulled away despite the vehicle level being too low. ► Stop the vehicle in accordance with the traffic conditions. The vehicle will be raised to the selected vehicle level. ► Wait until the display message disappears before pulling away.

Display messages	Possible causes/consequences and ► Solutions
	If the display message does not disappear and a warning tone also sounds, AIRMATIC is malfunctioning: ► Do not drive at speeds greater than 80 km/h and consult a qualified specialist workshop immediately. ! NOTE The tyres on the front axle or the fenders could be damaged by large steering movements ► Avoid large steering movements while driving and listen for scraping sounds. ► If you hear scraping sounds, pull over and stop the vehicle in accordance with the traffic conditions, and set a higher vehicle level if possible. ► Set a higher vehicle level (→ page 284). Depending on the malfunction, the vehicle will be raised.
 Vehicle rising Please wait	* The vehicle level is too low. The vehicle will be raised to the selected vehicle level. ► Wait until the display message disappears before pulling away.
 Compressor is cooling	* Due to frequent level changes within a short space of time, the compressor first needs to cool down in order to set the selected vehicle level. When the compressor has cooled down, the vehicle will continue rising to the selected vehicle level. ► Drive on in a manner appropriate for the current level. Make sure that there is sufficient ground clearance.

Display messages	Possible causes/consequences and ► Solutions
PARKTRONIC inoperative See Owner's Manual	* Parking Assist PARKTRONIC is malfunctioning. Once the cause of the problem is no longer present, the system will be available again. ► Continue driving while paying attention to the vehicle's surroundings. or ► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ► If the display message still appears, consult a qualified specialist workshop.
PARKTRONIC and manoeuvring assistant unavailable at rear when towing a trailer	* When you establish the electrical connection to the trailer, the rear Parking Assist PARKTRONIC and manoeuvring assistant will be unavailable. ► Press the left-hand Touch Control and acknowledge the display message.
Active Parking Assist and PARKTRONIC inoperative See Owner's Manual	* Active Parking Assist and Parking Assist PARKTRONIC are malfunctioning. Once the cause of the problem is no longer present, the system will be available again. ► Continue driving while paying attention to the vehicle's surroundings. or ► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ► If the display message still appears, consult a qualified specialist workshop.


Display messages	Possible causes/consequences and ► Solutions
Limited availability of Active Parking Assist manoeuvring assistant See Owner's Manual	* Active Parking Assist's manoeuvring assistant is temporarily unavailable or only partially available. ► Clean all sensors of the parking and camera system (→ page 394). ► If the display message still appears, consult a qualified specialist workshop.

Driving safety systems

Display messages	Possible causes/consequences and ► Solutions
 currently unavailable See Owner's Manual	* ABS and ESP® are temporarily unavailable. Other driving systems and driving safety systems (e.g. BAS) may also be temporarily unavailable. The brake system will continue to operate normally. Braking distance may increase in an emergency braking situation. ⚠ WARNING Risk of skidding if ABS and ESP® are malfunctioning The wheels may lock during braking and ESP® does not perform any vehicle stabilisation. The steerability and braking characteristics are heavily impaired and the braking distance may increase. In addition, other driving safety systems are switched off. ► Drive carefully on a suitable stretch of road, making slight steering movements at a speed above 30 km/h. ► If the display message does not disappear, consult a qualified specialist workshop immediately. Drive carefully.

Display messages	Possible causes/consequences and ► Solutions
inoperative See Owner's Manual	* ABS and ESP® are malfunctioning. Other driving systems and driving safety systems (e.g. BAS) may also be malfunctioning. The brake system will continue to operate normally. Braking distance may increase in an emergency braking situation. ▲ WARNING Risk of skidding if ABS and ESP® are malfunctioning The wheels may block during braking and ESP® does not perform any vehicle stabilization. The steerability and braking characteristics are heavily impaired and the braking distance may increase. In addition, other driving safety systems are switched off. ► Drive on carefully. ► Have ABS and ESP® checked immediately at a qualified specialist workshop.
currently unavailable See Owner's Manual	* ESP® is temporarily unavailable. Other driving systems and driving safety systems (e.g. BAS) may also be malfunctioning. ▲ WARNING Risk of skidding if ESP is malfunctioning® If ESP® is malfunctioning, ESP® cannot carry out vehicle stabilisation. In addition, other driving safety systems are switched off. ► Drive carefully on a suitable stretch of road, making slight steering movements at a speed above 30 km/h.

Display messages	Possible causes/consequences and ► Solutions
	► If the display message does not disappear, consult a qualified specialist workshop immediately. Drive carefully.
 inoperative See Owner's Manual	* ESP® is malfunctioning. Other driving systems and driving safety systems (e.g. BAS) may also be malfunctioning. The brake system will continue to operate normally. Braking distance may increase in an emergency braking situation. ⚠ WARNING Risk of skidding if ESP® is malfunctioning If ESP® is malfunctioning, ESP® cannot carry out vehicle stabilisation. In addition, other driving safety systems are switched off. ► Drive on carefully. ► Have ESP® checked at a qualified specialist workshop.

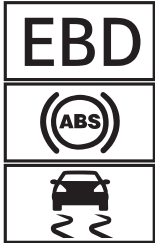Display messages	Possible causes/consequences and ► Solutions
 inoperative See Owner's Manual	* EBD, ABS and ESP® are malfunctioning. Other driving systems and driving safety systems (e.g. BAS) may also be malfunctioning. ▲ WARNING Risk of skidding if EBD, ABS and ESP® are malfunctioning The wheels may block during braking and ESP® does not perform any vehicle stabilization. The steerability and braking characteristics are heavily impaired and the braking distance may increase. In addition, other driving safety systems are switched off. ► Drive on carefully. ► Have the brake system checked immediately at a qualified specialist workshop.
Active Brake Assist Functions currently limited See Owner's Manual	* For vehicles with the Driving Assistance Package, the following functions may be temporarily unavailable or only partially available: • Active Brake Assist with cross-traffic function • Evasive Steering Assist • PRE-SAFE® PLUS Vehicles with Blind Spot Assist: PRE-SAFE® PLUS is temporarily unavailable. The ambient conditions are outside the system limits (→ page 265). Vehicles without the Driving Assistance Package: Active Brake Assist is temporarily unavailable.

Display messages	Possible causes/consequences and ► Solutions
	► Drive on carefully. As soon as the ambient conditions are within the system limits, the system will become available again. or ► If the display message does not disappear, stop the vehicle in accordance with the traffic conditions and restart the vehicle.
Active Brake Assist Functions limited See Owner's Manual	* For vehicles with the Driving Assistance Package, the following functions may be temporarily unavailable or only partially available: • Active Brake Assist with cross-traffic function • Evasive Steering Assist • PRE-SAFE® PLUS Vehicles without the Driving Assistance Package: Active Brake Assist is temporarily unavailable or only partially available. ► Drive on carefully. or ► Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ► If the display message does not disappear: consult a qualified specialist workshop.

Mercedes-Benz emergency call system

Display messages	Possible causes/consequences and ► Solutions
 Inoperative	* The Mercedes-Benz emergency call system is malfunctioning. The Mercedes me connect system is also malfunctioning. ► Consult a qualified specialist workshop.

Battery

Display messages	Possible causes/consequences and ► Solutions
 12 V on-board electrical system Visit workshop	* The 12 V on-board electrical system is malfunctioning. ► Consult a qualified specialist workshop immediately.
 Stop vehicle See Owner's Manual	* The 12 V battery is no longer being charged and the state of charge is too low.  NOTE Possible engine damage if you continue driving  Do not continue driving under any circumstances.

Display messages	Possible causes/consequences and ► Solutions
	► Consult a qualified specialist workshop. ► Stop the vehicle immediately in accordance with the traffic conditions. Do not continue driving. ► Switch off the vehicle. ► Consult a qualified specialist workshop.
 Start the vehicle to charge the 12 V battery	* The vehicle is off and the state of charge of the 12 V battery is too low. ► Switch off electrical consumers that are not required. ► Drive for 30–60 mins. - or ► Charge the 12 V battery when stationary (→ page 411). ► Plug-in hybrid: Charge the vehicle at a charging station (→ page 213).
 Stop vehicle Leave vehicle on to charge the 12 V battery	* The 12 V battery charge level is too low. ► Stop the vehicle immediately in accordance with the traffic conditions. Do not continue driving. ► Leave the vehicle running ► If the display message disappears: drive on. ► If the display message does not disappear: consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ► Solutions
 Stop vehicle See Owner's Manual	* The 48 V on-board electrical system is malfunctioning. ► Stop the vehicle immediately in accordance with the traffic conditions. Do not continue driving. ► Switch off the vehicle. ► Consult a qualified specialist workshop.
 Battery overheated Stop, everybody out! Outdoors if possible	* The 48 V battery is overheating. There is a risk of fire. ► Stop the vehicle immediately in accordance with the traffic conditions. ► If possible, stop the vehicle in the open air and ensure that all vehicle occupants get out. ❗ Supporting vehicle functions may activate automatically, e.g. the air-recirculation mode as part of climate control. ► Do not continue driving. ► If smoke is present, leave the danger zone and call the fire service immediately. ► Consult a qualified specialist workshop even if there are no external signs of a fire.
 48 V battery See Owner's Manual	* The 48 V on-board electrical system has function restrictions. Comfort functions may be restricted. ► Consult a qualified specialist workshop immediately.

Display messages	Possible causes/consequences and ► Solutions
 Please wait 48 V battery charging	* The 48 V battery is discharged. You have switched on the vehicle while the 12 V battery was being charged with a suitable charger or while another vehicle was providing starting assistance. The discharged 48 V battery is charged automatically via the voltage converter. After a few minutes, the Possible to start the vehicle again display message will be shown on the driver's display. ► Start the vehicle. ► Drive the vehicle for a while to charge the 12 V battery and the 48 V battery after disconnecting the charger from the vehicle. If the Possible to start the vehicle again display message does not appear after a few minutes: ► Try to start the vehicle. ► If the vehicle does not start, consult a qualified specialist workshop.
Cannot start vehicle See Owner's Manual	* The state of charge of the 48 V battery is too low. You can no longer start the vehicle. ► Switch off electrical consumers that are not required. ► Connect a suitable charger approved for Mercedes-Benz with sufficient charge output to the jump-start connection point of the 12 V battery (→ page 411). The 48 V battery is charged via the voltage converter in the vehicle.
Possible to start the vehicle again	* The 48 V battery has been charged automatically via the voltage converter. ► Start the vehicle and drive for a while to charge the 12 V battery and the 48 V battery.

Tyre pressure monitor

Display messages	Possible causes/consequences and ► Solutions
Tyre press. monitor currently unavailable	* There is interference from a powerful radio signal source. As a result, no signals from the tyre pressure sensors are being received. The tyre pressure monitoring system is temporarily unavailable. The tyre pressure monitoring system will restart automatically as soon as the cause has been rectified. ► Drive on
Tyre press. monitor inoperative	* The tyre pressure monitoring system is malfunctioning. ⚠ WARNING There is a risk of an accident if the tyre pressure monitoring system is malfunctioning The tyre pressure monitoring system cannot issue a warning if there is pressure loss in one or more of the tyres. Tyres with insufficient tyre pressure may impair the driving characteristics as well as steering and braking. ► Have the tyre pressure monitoring system checked at a qualified specialist workshop.
Tyre pressure monitor inoperative No tyre pressure sensors	* The wheels fitted do not have suitable tyre pressure sensors. The tyre pressure monitoring system is deactivated. ► Fit wheels with suitable tyre pressure sensors.
 Wheel sensor(s) missing	* There is no signal from the tyre pressure sensor in at least one wheel. No pressure value is displayed for the affected tyre. ► Have the faulty tyre pressure sensor replaced at a qualified specialist workshop.

Display messages	Possible causes/consequences and ► Solutions
 Check tyre(s)	* The tyre pressure in one or more tyres has dropped significantly. The wheel position is displayed. A warning tone will also sound. ⚠ WARNING Risk of an accident due to insufficient tyre pressure • The tyres can burst. • The tyres can wear excessively and/or unevenly. • The driving characteristics as well as the steering and braking may be greatly impaired. You could then lose control of the vehicle. ► Observe the recommended tyre pressures. ► Adjust the tyre pressure if necessary. ► Stop the vehicle in accordance with the traffic conditions. ► Check the tyre pressure (→ page 422) and the tyres.
 Rectify tyre pressure	* The tyre pressure is too low in at least one of the tyres, or the difference in tyre pressure between the individual wheels is too great. ► Check the tyre pressure and add air, if necessary. ► When the tyre pressure is correct, restart the tyre pressure monitor (→ page 425).

Display messages	Possible causes/consequences and ► Solutions
 Warning tyre malfunction	* The pressure in one or more tyres has dropped suddenly. The wheel position is displayed. ⚠ WARNING Risk of an accident from driving with a flat tyre • The tyres can overheat and be damaged. • The driving characteristics as well as the steering and braking characteristics may be greatly impaired. You could then lose control of the vehicle. ► Do not drive with a flat tyre. ► Do not exceed the maximum permissible driving distance in emergency mode and the maximum permissible speed with a flat MOExtended tyre. ► Observe the notes on flat tyres. Notes on flat tyres (→ page 401). ► Stop the vehicle in accordance with the traffic conditions. ► Check the tyres.
 Tyre(s) overheated	* At least one tyre is overheating. The affected tyres are displayed in red. At temperatures close to the limit value, the tyres are displayed in yellow. ⚠ WARNING Risk of an accident from driving with overheated tyres Overheated tyres can burst.

Display messages	Possible causes/consequences and ► Solutions
	► Reduce speed so that the tyres cool down.
 Reduce speed	* At least one tyre is overheating. The affected tyres are displayed in red. At temperatures close to the limit value, the tyres are displayed in yellow. ⚠ WARNING Risk of an accident from driving with overheated tyres Overheated tyres can burst. ► Reduce speed so that the tyres cool down.

Exhaust gas aftertreatment

Display messages	Possible causes/consequences and ► Solutions
 Refill AdBlue See Owner's Manual	* The AdBlue® level has fallen into the reserve range. ► Top up AdBlue® immediately (→ page 211).

Display messages	Possible causes/consequences and ► Solutions
 Top up AdBlue Emergency op. in XXX km See Owner's Manual	* The low AdBlue® level will lead to limited performance after the remaining distance displayed has been covered. ► Top up AdBlue® immediately (→ page 211).
 Top up AdBlue XX,X l Emerg. op.: max. XXX km/h Start not poss. in XXX km	* The low AdBlue® level will lead to limited performance from the speed displayed. After the remaining distance displayed has been covered, it will no longer be possible to start the vehicle. ► Add at least the amount of AdBlue® displayed (→ page 211).
 Top up AdBlue XX,X l Switch vehicle on, wait 60 sec. or engine start not poss.	* The AdBlue® tank is empty. You can no longer start the vehicle. ► Add at least the amount of AdBlue® displayed (→ page 211). ► Switch on the vehicle and wait for approximately 60 seconds. ► Start the vehicle.

Display messages	Possible causes/consequences and ► Solutions
 AdBlue system fault See Owner's Manual	* The AdBlue[®] system is malfunctioning. ► Consult a qualified specialist workshop immediately.
 AdBlue system malfunction Emergency op. in XXX km See Owner's Manual	* The AdBlue[®] system is malfunctioning. Performance will be reduced once the remaining distance displayed has been covered. ► Consult a qualified specialist workshop immediately.
 AdBlue system malfunction Emerg. op.: max. XXX km/h Start not poss. in XXX km	* Power restriction due to the AdBlue[®] system fault. After the distance displayed has been covered, it will no longer be possible to start the vehicle. ► Consult a qualified specialist workshop immediately.

Display messages	Possible causes/consequences and ► Solutions
 AdBlue system fault Engine start not possible	* The AdBlue® system is malfunctioning. You can no longer start the vehicle. ► Consult a qualified specialist workshop immediately.
 Top up AdBlue In XXX km Electric only. See Owner's Manual	* Plug-in hybrid: The low AdBlue® level will result in the combustion engine being switched off after the displayed remaining distance has been driven. From this point on, the vehicle can be driven only in all-electric mode, depending on the state of charge of the high-voltage battery. ► Top up with AdBlue® immediately (→ page 211).
 XX,X l Top up AdBlue Only "Electric" available See Owner's Manual	* Plug-in hybrid: The AdBlue® tank is empty. The vehicle can be driven only in all-electric mode, depending on the state of charge of the high-voltage battery. ► Top up with at least the indicated amount of AdBlue® (→ page 211). ► Switch on the vehicle and wait for approximately 60 seconds. ► Start the vehicle.

Display messages	Possible causes/consequences and ► Solutions
 AdBlue® system malfunction In XXX km Electric only. See Owner's Manual	* Plug-in hybrid: The AdBlue® system is malfunctioning. The combustion engine will switch off after the remaining distance displayed. From this point on, the vehicle can be driven only in all-electric mode, depending on the state of charge of the high-voltage battery. ► Consult a qualified specialist workshop immediately.
 AdBlue® system fault Only "Electric" drive program available	* Plug-in hybrid: The AdBlue® system is malfunctioning. The vehicle can be driven only in all-electric mode, depending on the state of charge of the high-voltage battery. ► Consult a qualified specialist workshop immediately.

Engine oil

Display messages	Possible causes/consequences and ► Solutions
 Add 1 litre engine oil when next refuelling	* The engine oil level has dropped to the minimum level. ! NOTE Engine damage caused by driving with insufficient engine oil ► Avoid long journeys with insufficient engine oil. ► When next refuelling, add 1 litre of engine oil (→ page 387). Notes on engine oil (→ page 447).
 Engine oil level Reduce oil level	* The engine oil level is too high. ! NOTE Engine damage caused by driving with excess engine oil ► Avoid long journeys with excess engine oil. ► Consult a qualified specialist workshop immediately and have the engine oil level reduced.
 Engine oil level Stop Switch off the vehicle	* The engine oil level is too low. ! NOTE Engine damage caused by driving with insufficient engine oil ► Avoid long journeys with insufficient engine oil. ► Stop the vehicle immediately in accordance with the traffic conditions. Do not continue driving.

Display messages	Possible causes/consequences and ► Solutions
	► Switch off the vehicle. ► Add 1 l of engine oil (→ page 387). ► Check the engine oil level. Notes on engine oil (→ page 447).
 Engine oil pressure Stop Switch off the vehicle	* The oil pressure is too low. ! NOTE Engine damage caused by driving with insufficient oil pressure ► Avoid driving with insufficient oil pressure. ► Stop the vehicle immediately in accordance with the traffic conditions. Do not continue driving. ► Switch off the vehicle. ► Consult a qualified specialist workshop.
 Engine oil level cannot be measured	* The electrical connection to the oil level sensor has been interrupted or the oil level sensor is faulty. ► Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ► Solutions
 Engine oil Quality loss Oil change required	* Vehicles with a diesel engine: the engine oil quality is no longer sufficient. ► Visit a qualified specialist workshop and have the oil changed.

Warning and indicator lamps

Overview of indicator and warning lamps

Some systems will perform a self-test when the vehicle is switched on. Some indicator and warning lamps may briefly light up or flash. This behaviour is non-critical. These indicator and warning lamps indicate a malfunction only if they light up or flash after the vehicle has been started or during a journey.

Driver's display



Indicator and warning lamps

Occupant safety

-  Restraint system (→ page 540)

-  Seat belt (→ page 540)

Drive system

-  Reduced power (→ page 541)
-  System error (→ page 541)
-  Electrical fault (→ page 541)

Vehicle

-  Trailer hitch (→ page 542)
-  Power steering (yellow) (→ page 542)
-  Power steering (red) (→ page 542)
-  Rear-axle steering (yellow) (→ page 542)
-  Rear-axle steering (red) (→ page 542)

Engine

-  Coolant temperature (→ page 545)
-  Engine diagnostics (→ page 545)
-  Vehicles with a diesel engine: preglow
-  Electrical fault (→ page 545)
-  Reserve fuel with fuel filler flap location indicator (→ page 545)

Brakes

-  Electric parking brake (yellow) (→ page 548)
-  Electric parking brake (red) (→ page 548)
-  Brakes (yellow) (→ page 548)
-  Brakes (red) (→ page 548)

Driving systems

-  Attention Assist (→ page 550)
-  Traffic Sign Assist (→ page 550)
-  Distance warning (→ page 550)
-  Active Brake Assist (→ page 550)
-  Active Brake Assist (→ page 550)



Active Brake Assist (→ page 550)



AIRMATIC (→ page 550)

Driving safety systems



ABS (→ page 553)



ESP® (→ page 553)



ESP® OFF (→ page 553)

Mercedes-Benz emergency call system



Mercedes-Benz emergency call system (→ page 555)

Tyre pressure monitoring system



Tyre pressure monitoring system (→ page 556)

Exterior lighting



Standing lights (→ page 140)



Low beam (→ page 140)



High beam (→ page 142)



Turn signal lights (→ page 142)



Rear fog light (→ page 140)

Symbols on the central display



Drive Away Assist (→ page 304)



Rear cross traffic warning (→ page 305)



Manoeuvring brake function (→ page 307)

Occupant safety

Warning/indicator lamp	Possible causes/consequences and ► Solutions
Restraint system warning lamp	* The restraint system red warning lamp is lit while the vehicle is on. The restraint system is malfunctioning (→ page 44). ⚠ WARNING Risk of injury due to malfunctions in the restraint system Components in the restraint system may be activated unintentionally or not deploy as intended in an accident. ► Have the restraint system checked and repaired immediately at a qualified specialist workshop. Plug-in hybrid: ⚠ DANGER Risk of fatal injuries due to restraint system malfunctions Components in the restraint system may be activated unintentionally or not deploy as planned in an accident. In the event of an accident, the high-voltage on-board electrical system may not be deactivated as intended. You may suffer an electric shock if you touch the damaged components of the high-voltage on-board electrical system. ► Have the restraint system checked and repaired immediately at a qualified specialist workshop. ► After an accident, switch off the vehicle immediately. ► Drive on carefully. ► Note the messages on the driver's display. ► Consult a qualified specialist workshop immediately.

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 Seat belt warning lamp flashes	* The red seat belt warning lamp flashes and an intermittent warning tone sounds. The driver or front passenger has not fastened his/her seat belt while the vehicle is in motion. ► Fasten your seat belt (→ page 47). There are objects on the front passenger seat. ► Remove the objects from the front passenger seat.
 Seat belt warning lamp lights up	* The red seat belt warning lamp lights up once the vehicle has started. In addition, an intermittent warning tone may sound. The red seat belt warning lamp reminds the driver and front passenger to fasten their seat belts. ► Fasten your seat belt (→ page 47). If you have placed objects on the front passenger seat, the red seat belt warning lamp may remain lit.

Hybrid system

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 Reduced-power warning lamp	* The yellow reduced-power warning lamp is on. Drive system power output is reduced. ► Note the messages on the driver's display.

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 System error warning lamp	* The red system error warning lamp is lit while the vehicle is in a state of operational readiness READY. There is a malfunction in the drive system. ► Note the messages on the driver's display.
 Electrical fault warning lamp	* The red electrical fault warning lamp is lit. There is a fault with the electrics. ► Note the messages on the driver's display.

Vehicle

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 Trailer tow hitch warning lamp	* The red trailer hitch warning lamp is lit. The trailer hitch is not operational or is swivelling. ⚠ WARNING Risk of an accident if the ball neck is not locked The trailer may become detached. ► Stop the vehicle immediately in accordance with the traffic conditions. Do not continue driving. ► Uncouple the trailer and secure it against rolling away.

Warning/indicator lamp	Possible causes/consequences and ► Solutions
	► Initiate a new swivelling procedure and do not re-couple the trailer until the display message disappears. ► Note the messages on the driver's display. If the trailer hitch is swivelling: ► Wait until the ball neck has reached the operational position.
 Power steering warning lamp (yellow)	* The yellow power steering warning lamp is lit while the vehicle is running. The power assistance or the steering itself is malfunctioning. ► Note the messages on the driver's display.
 Power steering warning lamp (red)	* The red power steering warning lamp is lit while the vehicle is running. The power assistance or the steering itself is malfunctioning. ⚠ WARNING Risk of accident if steering capability is impaired If the steering does not function as intended, the vehicle's operating safety is jeopardised. ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ► Consult a qualified specialist workshop. ► Note the messages on the driver's display.

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 Rear axle steering warning lamp (yellow)	* The yellow rear axle steering warning lamp is lit while the vehicle is running. The rear axle steering is malfunctioning. ► Note the messages on the driver's display.
 Rear axle steering warning lamp (red)	* The red rear axle steering warning lamp is lit while the vehicle is running. The rear axle steering is malfunctioning. ⚠ WARNING Risk of accident if steering capability is impaired If the steering does not function as intended, the vehicle's operating safety is jeopardised. ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ► Consult a qualified specialist workshop. ► Note the messages on the driver's display.

Engine

Warning/indicator lamp	Possible causes/consequences and ► Solutions
Coolant warning lamp (red)	* The red coolant warning lamp is lit while the engine is running. Possible causes: • The temperature sensor is malfunctioning • The coolant level is too low • The air supply to the radiator is obstructed • The radiator fan is faulty • The engine coolant pump is faulty If there is an additional warning tone, the coolant temperature has exceeded 120°C. ⚠ WARNING Risk of burns when opening the bonnet If you open the bonnet in the event of an overheated engine or fire in the engine compartment, the following situations may occur: • You may come into contact with hot gases. • You may come into contact with other escaping hot operating fluids. ► Before opening the bonnet, allow the engine to cool down. ► In the event of a fire in the engine compartment, keep the bonnet closed and call the fire service. ► Stop immediately in accordance with the traffic conditions and switch off the vehicle. Do not continue driving.

Warning/indicator lamp	Possible causes/consequences and ► Solutions
	► Note the messages on the driver's display. If the coolant temperature display is at the lower end of the temperature scale: ► Consult a qualified specialist workshop. If the coolant temperature display is at the upper end of the temperature scale: ► Exit the vehicle and keep a safe distance from it until the engine has cooled down. ► Check the coolant level (→ page 389). ► Make sure that the air supply to the radiator is not obstructed. ► Avoiding high loads on the engine, drive to the nearest qualified specialist workshop. In doing so, ensure that the coolant temperature display remains below 120°C.
 Coolant warning lamp (yellow)	* The yellow coolant warning lamp is lit while the engine is running. Possible causes: • The temperature sensor is malfunctioning • The charge air, transmission oil or battery cooling is faulty • The radiator shutters are blocked or defective ► Avoiding high loads on the engine, drive to the nearest qualified specialist workshop.

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 Engine diagnosis warning lamp	* The yellow engine diagnostics warning lamp is lit while the engine is running. A malfunction has occurred in the engine, the exhaust system or the fuel system. The emissions limit value may have been exceeded and the engine may be running in emergency operation mode. ► Have the vehicle checked as soon as possible at a qualified specialist workshop. Vehicles with a diesel engine: the fuel tank may have been run dry. ► Start the engine three to four times after refuelling. If the yellow engine diagnosis warning lamp goes out, emergency operation mode is cancelled. The vehicle need not be checked.
 Electrical fault warning lamp	* The red electrical fault warning lamp is lit. There is a fault in the electrics. ► Note the messages on the driver's display.
 Fuel reserve warning lamp lights up	* The yellow fuel reserve warning lamp lights up while the engine is running. The fuel supply has dropped into the reserve range. ► Refuel.

Brakes

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 Electric parking brake indicator lamp (red)  Electric parking brake indicator lamp (yellow)	* The red electric parking brake indicator lamp flashes or is lit. The yellow electric parking brake indicator lamp is also lit in the event of a malfunction. ► Note the messages on the driver's display.
 Brake system warning lamp (yellow)	* The yellow brake warning lamp is lit while the vehicle is running. ⚠ WARNING Risk of an accident due to a brake system malfunction If the brake system is malfunctioning, braking characteristics may be impaired. ► Drive on carefully. ► Have the brake system checked immediately at a qualified specialist workshop. The Hill Start Assist may be malfunctioning. ► Adjust your speed and drive on carefully, leaving a suitable distance to the vehicle in front.

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 Brake system warning lamp (red)	► If the driver's display shows a display message, observe it. ► Consult a qualified specialist workshop. * The red brake warning lamp is lit while the vehicle is running. Possible causes: • The brake force boosting is malfunctioning and the braking characteristics may be affected. • There is insufficient brake fluid in the brake fluid reservoir. ► Note the messages on the driver's display. ⚠ WARNING Risk of accident and injury if brake force boosting is malfunctioning If brake force boosting is malfunctioning, increased brake pedal force may be necessary for braking. The braking characteristics may be impaired. The braking distance can increase in emergency braking situations. ► Stop in a safe location immediately. Do not continue driving! ► Consult a qualified specialist workshop. ⚠ WARNING Risk of an accident due to low brake fluid level If the brake fluid level is too low, the braking effect and the braking characteristics may be impaired. ► Stop the vehicle as soon as possible, paying attention to road and traffic conditions. Do not continue driving. ► Consult a qualified specialist workshop.

Warning/indicator lamp	Possible causes/consequences and ► Solutions
	► Do not top up the brake fluid.

Driving systems

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 ATTENTION ASSIST warning lamp	* The ATTENTION ASSIST warning lamp is lit. ATTENTION ASSIST is malfunctioning. ► Consult a qualified specialist workshop.
 Traffic Sign Assist warning lamp	* The Traffic Sign Assist warning lamp is lit. Traffic Sign Assist is malfunctioning. ► Note the messages on the driver's display.

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 Warning lamp for distance warning function	* The red distance warning lamp lights up while the vehicle is in motion. The distance to the vehicle in front is too small for the speed selected. If there is an additional warning tone, you are approaching an obstacle at too high a speed. ► Be prepared to brake immediately. ► Increase the distance. Function of Active Brake Assist (→ page 265).
 Active Brake Assist warning lamp	* The Active Brake Assist warning lamp is on. Due to dirty sensors or a malfunction, the system is not available or the range of functions is restricted. ► Note the messages on the driver's display.
 Active Brake Assist warning lamp	* The Active Brake Assist warning lamp is on. The system is switched off or the range of functions has been automatically restricted. This may be the case if the driver is not wearing a seat belt or another driving system has been activated. ► Observe the notes on Active Brake Assist (→ page 265).

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 Active Brake Assist warning lamp	* The Active Brake Assist warning lamp is on. After you drive off, the system's range of functions will be restricted due to the teach-in process. Depending on the ambient conditions, the teach-in process may take a few minutes. ► Observe the notes on Active Brake Assist (→ page 265).
 Suspension warning lamp (yellow)	* The yellow AIRMATIC warning lamp is lit. A fault has occurred in AIRMATIC. ► Note the messages on the driver's display.
 Suspension warning lamp (red)	* The red AIRMATIC warning lamp is lit. A fault has occurred in AIRMATIC. ! NOTE The vehicle's driving characteristics will have changed significantly. ► Consult a qualified specialist workshop. ► Note the messages on the driver's display. ► Consult a qualified specialist workshop.

Driving safety systems

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 ABS warning lamp	* The yellow ABS warning lamp is lit while the vehicle is running. ABS is malfunctioning. If an additional warning tone sounds, EBD is malfunctioning. Other driving systems and driving safety systems may also be malfunctioning. ► Note the messages on the driver's display. ⚠ WARNING There is a risk of skidding if EBD or ABS is malfunctioning The wheels may lock during braking. The steerability and braking characteristics are heavily impaired and the braking distance may increase. In addition, other driving safety systems are switched off. ► Drive on carefully. ► Have the brake system checked immediately at a qualified specialist workshop.
 ESP® warning lamp flashes	* The yellow ESP® warning lamp flashes while the vehicle is in motion. One or more wheels have reached their grip limit (→ page 240). ► Adapt your driving style to suit the road and weather conditions.

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 ESP® warning lamp lights up	* The yellow ESP® warning lamp is lit while the vehicle is running. ESP® is malfunctioning. Other driving systems and driving safety systems (e.g. BAS) may also be malfunctioning. ► Note the messages on the driver's display. ⚠ WARNING Risk of skidding if ESP® is malfunctioning If ESP® is malfunctioning, ESP® cannot carry out vehicle stabilisation. In addition, other driving safety systems are switched off. ► Drive on carefully. ► Have ESP® checked at a qualified specialist workshop.
 ESP® OFF warning lamp	* The yellow ESP® OFF warning lamp is lit while the vehicle is running. ESP® is deactivated. Other driving systems and driving safety systems may also be inoperative. ⚠ WARNING Risk of skidding when driving with ESP® deactivated ESP® does not act to stabilise the vehicle. The availability of further driving safety systems is also limited. ► Drive on carefully. ► Deactivate ESP® only for as long as the situation requires.

Warning/indicator lamp	Possible causes/consequences and ► Solutions
	If ESP® cannot be activated, ESP® is malfunctioning. ► Have ESP® checked immediately at a qualified specialist workshop. ► Observe the notes on deactivating ESP® (→ page 240).

Mercedes-Benz emergency call system

Warning/indicator lamp	Possible causes/consequences and ► Solutions
Mercedes-Benz emergency call system warning lamp	*The Mercedes-Benz emergency call system is malfunctioning. The Mercedes me connect system is also malfunctioning. ► Consult a qualified specialist workshop.

Tyre pressure monitor

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 Tyre pressure monitoring system warning lamp flashes	*The yellow tyre pressure monitor warning lamp (pressure loss/malfunction) flashes for approximately one minute and then remains lit. The tyre pressure monitoring system is malfunctioning. ⚠ WARNING There is a risk of an accident if the tyre pressure monitoring system is malfunctioning The tyre pressure monitoring system cannot issue a warning if there is pressure loss in one or more of the tyres. Tyres with insufficient tyre pressure may impair the driving characteristics as well as steering and braking. ► Have the tyre pressure monitoring system checked at a qualified specialist workshop.
 Tyre pressure monitoring system warning lamp lights up	*The yellow tyre pressure monitoring system warning lamp (pressure loss/malfunction) is lit. The tyre pressure monitoring system has detected tyre pressure loss in at least one of the tyres. ⚠ WARNING Risk of an accident due to insufficient tyre pressure • The tyres can burst. • The tyres can wear excessively and/or unevenly. • The driving characteristics as well as the steering and braking may be greatly impaired. You could then lose control of the vehicle. ► Observe the recommended tyre pressures. ► Adjust the tyre pressure if necessary.

Warning/indicator lamp	Possible causes/consequences and ► Solutions
	► Stop the vehicle in accordance with the traffic conditions. ► Check the tyre pressure and the tyres.

1, 2, 3 ...

48 V on-board electrical system	
Operating safety.....	22

A

A/C function	
Activating/deactivating (operating unit).....	164
MBUX.....	165

ABS, Anti-lock braking system.....	239
---	-----

Acceleration	
Kickdown.....	205
Optimised acceleration.....	183

Accelerator pedal, Haptic accelerator pedal.....	197
---	-----

Accident	
ERA-GLONASS test mode.....	375

Accident prevention.....	304
---------------------------------	-----

Accident, emergency call.....	371
--------------------------------------	-----

Acoustic locking verification signal, activating/deactivating.....	81
---	----

Acoustic presence indicator, Sound generator.....	176
--	-----

Acoustic Vehicle Indication, Sound generator.....	176
--	-----

Active Blind Spot Assist	
Activating/deactivating.....	279
Brake application.....	278
Exit warning.....	276
Function.....	276
Trailer operation.....	278

Active Brake Assist	
Function.....	265
Setting.....	269

Active Distance Assist DISTRONIC	
Activate/deactivate variable limiter.....	252
Activating/deactivating.....	252
Active Emergency Stop Assist.....	261
Active Lane Change Assist.....	262
Calling up a speed.....	252
Function.....	249
Increasing/decreasing the speed.....	252
Route-based speed adaptation.....	255
Storing a speed.....	252

Active Lane Change Assist	
Activating/deactivating.....	264
Function.....	262

Active Lane Keeping Assist	
Activating/deactivating.....	282
Function.....	279
Setting the sensitivity.....	282
Trailer operation.....	279

Active light function.....	143
-----------------------------------	-----

Active Parking Assist	
Automatic braking function.....	304
Cross traffic warning.....	305
Drive Away Assist.....	304
Exiting a parking space.....	303
Function.....	299
Manoeuvring brake function.....	307
Parking.....	301
Pausing.....	304

Active Service System PLUS, ASSYST PLUS.....	382
---	-----

Active Speed Limit Assist.....	254
---------------------------------------	-----

Active Steering Assist	
Activating/deactivating.....	260
Active Emergency Stop Assist.....	261

Active Lane Change Assist.....	262	Fuel.....	444	Front airbag.....	49
Function.....	258	After-sales service, ASSYST PLUS.....	382	Overview.....	49
Active Stop-and-Go Assist		Air conditioning menu		PASSENGER AIR BAG indicator lamps.....	54
Function.....	256	Air distribution.....	165	Protection.....	51
Adaptive brake lights.....	244	Climate control.....	165	Reduced protection.....	52
Adaptive cruise control, Active Distance		Fragrance system.....	167	Warning lamp.....	44
Assist DISTRONIC.....	255	Ionisation.....	167	Airflow	
Adaptive Highbeam Assist, High beam		Rear compartment climate control.....	165	Setting.....	161, 162
Activating/deactivating.....	149	Stationary heater/ventilation.....	174	AIRMATIC	
Function.....	148	Air distribution		Air suspension.....	283
Adaptive Highbeam Assist Plus		Setting.....	161, 162, 165	Lowering/raising the rear area of the	
Function.....	149	Air freshener system.....	167	vehicle.....	285
Switching on/off.....	151	Air inlet.....	390	Setting the vehicle level.....	284
AdBlue®		Air pressure.....	422	Vehicle levels.....	283
Additives.....	446	Air suspension, AIRMATIC.....	283	Alarm system, ATA.....	102
Capacity.....	446	Air vents		All-wheel drive, 4MATIC.....	206
Notes.....	210	Setting.....	174	Alternative route.....	351
Purity.....	446	Air/water duct.....	390	Ambient lighting.....	152
Topping up.....	211	Airbag, Occupant safety		AMG TRACK PACE	
Additional door lock.....	84	Automatic front passenger airbag shut		Configuring.....	346
Additives		off.....	53	Drag Race.....	345
AdBlue®.....	211, 446	Centre airbag (driver's backrest).....	49	Function.....	342
Engine oil.....	447	Deployment.....	44	Telemetry display.....	346
				Track Race.....	343

Angle of approach/departure	452	Interior protection	104	Automatic mirror folding function	160
Animals, Pets in the vehicle	78	Tow-away protection	103	Automatic seat adjustment	112
Anti-lock braking system, ABS	239	ATTENTION ASSIST		Automatic transmission	
Anti-theft alarm system, ATA	102	Function.....	244	Changing gear.....	202
Anti-theft protection, ATA		Setting.....	246	DIRECT SELECT lever.....	202
Additional door lock.....	84	Attention assistant, ATTENTION ASSIST	244	Drive programs.....	197
Immobiliser.....	102	Authorised workshop	36	DYNAMIC SELECT button.....	197
Anticipatory operating-mode strategy,		Automatic car wash	390	Engaging drive position.....	204
Route-based.....	196	Automatic car wash mode	390, 392	Engaging neutral.....	203
Approval numbers	439	Automatic climate control	165	Engaging reverse gear.....	203
Apps, Mercedes me		Automatic distance control, Active Dis-		Kickdown.....	205
Mercedes me calls.....	361	tance Assist DISTRONIC.....	249	Manual shifting.....	204
Mercedes me connect.....	365	Automatic driving lights	141	Oil temperature (driver's display).....	321
Assembly licence plate, front	25	Automatic emergency call, Mercedes-		Selecting park position.....	203
Assistance system, Driving safety system	238	Benz emergency call system.....	372	Steering wheel gearshift paddles.....	204
ASSYST PLUS		Automatic engine start/stop, ECO start/		Transmission position display.....	202
Battery disconnection periods.....	383	stop function.....	190	Transmission positions.....	202
Service interval display.....	382	Automatic front passenger airbag shutoff		Autonomous braking	265
Service requirements.....	382	Function.....	53	AVAS, Acoustic vehicle alerting system	176
ATA		PASSENGER AIR BAG indicator lamps.....	54	Axle load	
Deactivating the alarm.....	103	Automatic measures after an accident,		Trailer operation.....	457
Function.....	102	Occupant safety.....	58		

B

Bad weather light	145
--------------------------------	-----

Bag hook	132	Trailer operation.....	315	BAS (Brake Assist System).....	240
Ball neck		Blind Spot Assist , Active Blind Spot Assist		Driving tips.....	183
Extending/retracting.....	311	Activating/deactivating.....	279	EBD (Electronic Brakeforce Distribu-	
Trailer coupling.....	312	Function.....	276	tion).....	242
BAS , Brake Assist System.....	240	BlueTec		HOLD function.....	243
Battery (12 V battery)		AdBlue®.....	210	Limited braking effect (salt-treated	
Charging.....	411	Bluetooth®	360	roads).....	183
Notes.....	406	Bonnet		New/replaced brakepads/brake disks...	182
Notes (starting assistance and charg-		Opening/closing.....	384	Post-collision brake.....	58
ing).....	409	Brake Assist		Recuperation.....	193
Replacing.....	412	Active Brake Assist.....	265	Running-in notes.....	182
Starting assistance.....	411	Brake Assist System.....	240	Braking assistance	
Battery (48 V)		Brake Assist System , BAS.....	240	Brake Assist System.....	240
Notes.....	408	Brake fittings	182	Breakdown	
Battery (high-voltage on-board electrical		Brake fluid	448	Flat tyre.....	401
system)	453	Brake force distribution , EBD.....	242	Overview of aids.....	16
Battery (key)	82	Brake lamps		Tow-starting.....	417
Battery (starter battery)		Adaptive brake lights.....	244	Towing away.....	414
Charging via Remote Online.....	181	Brakes		Transporting the vehicle.....	416
Battery operation , Plug-in hybrid operation...	176	ABS (Anti-lock Braking System).....	239	Wheel change.....	430
Belt , Seat belt.....	45	Active Brake Assist.....	265	C	
Bicycle rack		Adaptive brake lights.....	244	Calling the customer centre for	
Load capacity.....	456			Mercedes-Benz	361

-
- Calls**
 Mercedes me..... 360
 Using overhead control panel..... 360
- Camera**
 360° camera..... 289
 Activating using GPS (reversing camera)..... 295
 Button..... 295
 Cleaning..... 394
 Function..... 289
 Information..... 237
 Manage activation points..... 295
 Opening the camera cover (reversing camera)..... 296
 Reversing camera..... 287
 Selecting the view..... 295
- Car key**..... 80
- Car wash**..... 390
- Car-to-X communication**
 Hazard warnings..... 354
- Care**
 Air/water duct..... 390
 Automatic car wash..... 390
 Camera..... 394
- Car parts..... 394
 Decorative foil..... 393
 Display..... 396
 Exterior lighting..... 394
 Head-up display..... 396
 High-pressure cleaner..... 392
 Paint..... 393
 Plastic trim..... 396
 Real wood/trim elements..... 396
 Roof lining..... 396
 Running boards..... 394
 Trailer hitch..... 394
 Vehicle interior..... 396
 Vehicle socket for the high-voltage battery..... 394
 Washing by hand..... 393
- Caring for plastic trim**..... 396
- Caring for real wood**..... 396
- Caring for rims**..... 394
- Caring for the steering wheel**..... 396
- Caring for trim elements**..... 396
- Central display, Home screen**
 Operating..... 331
- Central locking system**
 Button..... 85
 Key..... 81
- Centre airbag (driver's backrest)**..... 49
- Charge level display**..... 231
- Charge level/charge display**..... 231
- Charging**
 12 V battery..... 411
 Charge level display..... 231
 Charging cable control panel..... 220
 Charging station, mode 3..... 218
 Ending the charging process (alternating current, mode 2/3)..... 226
 Ending the charging process (direct current, mode 4)..... 229
 Indicator lamps on vehicle socket..... 221
 Mains socket, mode 2..... 217
 Maximum charging current (mains socket)..... 220
 Notes on charging the high-voltage battery..... 213
 Rapid charging station, mode 4..... 219
 Starting the charging process (alternating current, mode 2/3)..... 223

Starting the charging process (direct current, mode 4).....	227	Seats suitable for i-Size child restraint systems.....	67	Paint.....	393
Stowing the charging cable.....	216	Seats suitable for ISOFIX child restraint systems.....	66	Vehicle interior.....	396
USB port.....	137	Securing.....	63	Vehicle socket for the high-voltage battery.....	394
Wallbox, mode 3.....	218	Securing to the front passenger seat with the seat belt.....	75	Washing by hand.....	393
Wirelessly charging a mobile phone.....	138	Securing to the rear seat with the seatbelt.....	73	Cleaning carpets.....	396
Charging cable		Top Tether.....	69	Cleaning seat covers.....	396
Control panel.....	220	Without automatic front passenger airbag shutoff.....	74	Cleaning the roof lining.....	396
Stowing.....	216	Children		Cleaning the sensors.....	394
Checking the coolant level.....	389	Avoiding dangers in the vehicle.....	60	Climate control	
Child safety lock		Basic instructions.....	59	A/C function.....	165
Rear door.....	77	Chock.....	429	Activating/deactivating.....	163
Side window (rear).....	78	City lighting.....	145	Activating/deactivating (rear operating unit).....	164
Child seat		Clean varnish.....	393	Activating/deactivating the A/C function (control panel).....	164
Approval categories.....	64	Cleaning		Air distribution.....	161, 162
Basic instructions.....	59	Air/water duct.....	390	Air vents (front).....	174
Fitting ISOFIX/i-Size.....	67	Automatic car wash.....	390	Air vents (rear).....	175
Front passenger seat.....	75	Car parts.....	394	Airflow.....	161, 162
Recommendations for child restraint systems.....	62	Decorative foil.....	393	Automatic control.....	165
Risks/dangers.....	60	High-pressure cleaner.....	392	Defrost.....	164
Seats suitable for belt-secured child restraint systems.....	71			Demisting the windscreen.....	161, 162
				Demisting windows.....	166

- | | | | | | |
|---|----------|---|----------|--|------|
| Fragrance system..... | 167 | Collision detection (parked vehicle) | | Cruise control | |
| Immediate pre-entry climate control..... | 172 | Information..... | 235 | activating/deactivating..... | 247 |
| Inserting/removing the flacon (fragrance system)..... | 167 | Setting..... | 235 | Calling up a speed..... | 247 |
| Ionisation..... | 167 | Combination switch | | Function..... | 246 |
| Notes..... | 161 | Lights..... | 142 | Requirements:..... | 247 |
| Operating unit..... | 161, 162 | Windscreen wipers..... | 153 | Setting a speed..... | 247 |
| Pre-entry climate control for departure time..... | 170 | Commuter route | 351 | Storing a speed..... | 247 |
| Pre-entry climate control when the vehicle is unlocked..... | 168 | Component-specific information | 439 | Cup holder, Drinks holder | 136 |
| Rear operating unit..... | 163 | Control elements: | 21 | Current boost pressure (driver's display) | 321 |
| Rear window heater..... | 161, 162 | Convenience closing | 96 | Current engine output (driver's display) | 321 |
| Residual heat..... | 166 | Convenience opening | 96 | | |
| Stationary heater/ventilation..... | 172 | Coolant | 449 | D | |
| Switching air-recirculation mode on/off..... | 166 | Cooling | 161, 162 | Damping system ADS PLUS | |
| Synchronisation function..... | 166 | Copyright | 42 | AIRMATIC..... | 283 |
| Temperature..... | 161, 162 | Cornering light | 144 | Dashboard | |
| Ventilation with comfort opening..... | 96 | Correct use | 37 | Cockpit overview..... | 6, 8 |
| COC papers, Certificate of conformity | 437 | Cover, Roller sunblind | 98 | Dashcam | |
| Cockpit | | Cross traffic (warning), | | Selecting a USB device..... | 356 |
| Dashboard overview..... | 6, 8 | Manoeuvring assistant..... | 305 | Starting/stopping a video recording..... | 356 |
| Coffee cup symbol, ATTENTION ASSIST | 244 | Crosswind Assist, ESP® | 241 | Data processing in the vehicle | 38 |
| | | | | Data protection rights | 41 |
| | | | | Data storage | |
| | | | | Data protection rights..... | 41 |

Electronic control units.....	38
Online services.....	41
Deactivating the alarm.....	103
Dealership.....	36
Declaration of conformity	
Electromagnetic compatibility.....	26
Importer addresses.....	33
Jack.....	34
Specific absorption rate.....	26
TIREFIT kit.....	34
Wireless vehicle components.....	26
Decorative foil.....	393
Defrost function.....	164
DeNOx agent	
AdBlue®.....	210
Destination entry	
Entering a POI or address.....	350
Detecting inattentiveness,	
ATTENTION ASSIST.....	244
Diagnostics connection.....	35
Diesel	
Low outside temperatures.....	444
Notes.....	444

DIGITAL LIGHT

Activating/deactivating.....	148
Active light function.....	143
Assistance functions.....	145
Bad weather light.....	145
City lighting.....	145
Cornering light.....	144
Enhanced fog light function.....	144
Motorway mode.....	144
Overview.....	143
Topographical compensation.....	145

Digital Owner's Manual.....	18
------------------------------------	-----------

DIRECT SELECT lever

Automatic transmission.....	202
Engaging drive position.....	204
Engaging neutral.....	203
Engaging park position automatically.....	203
Engaging reverse gear.....	203
Function.....	202
Gearshift recommendation.....	205
Manual gearshifting.....	204
Selecting park position.....	203

Display

Care.....	396
Home screen.....	331

Display (driver's display)

Overview of displays.....	323
---------------------------	-----

Display message

Calling up on driver display.....	458
-----------------------------------	-----

Display messages

 --- km/h.....	502
 --- km/h.....	502
 --- km/h.....	501
 12 V on-board electrical system	
Visit workshop.....	524
 48 V battery See Owner's Manual.....	526
 Acoustic presence indicator	
inoperative.....	472
 Active Light System inoperative.....	466
 AdBlue system fault Engine	
start not possible.....	534
 AdBlue system fault Only "Electric" drive program available.....	535

-  AdBlue system fault See Owner's Manual..... 533
-  AdBlue system malfunction Emerg. op.: max. XXX km/h Start not poss. in XXX km..... 533
-  AdBlue system malfunction Emergency op. in XXX km See Owner's Manual..... 533
-  AdBlue system malfunction In XXX km Electric only. See Owner's Manual..... 535
-  Add 1 litre engine oil when next refuelling..... 536
-  ATTENTION ASSIST: Take a break!..... 501
-  Automatic driving lights inoperative..... 466
-  Battery overheated Stop, everybody out! Outdoors if possible..... 475, 526
-  Beginning emergency stop.... 507, 512
-  Brake immediately..... 499
-  Camera view restricted See Owner's Manual..... 514
-  Change key batteries..... 463
-  Charger cable connected..... 472
-  Check brake fluid level..... 500
-  Check tyre(s)..... 529
-  Clean the fuel filter..... 491
-  Compressor is cooling..... 517
-  Coolant Stop Switch off the vehicle..... 490
-  Currently unavailable Battery low.. 470
-  Currently unavailable Charge high-voltage battery..... 471
-  Currently unavailable High-voltage battery charging incomplete..... 470
-  Currently unavailable Refuel..... 470
-  currently unavailable See Owner's Manual..... 519
-  currently unavailable See Owner's Manual..... 520
-  Engine oil level cannot be measured..... 537
-  Engine oil level Reduce oil level.... 536
-  Engine oil level Stop Switch off the vehicle..... 536
-  Engine oil pressure Stop Switch off the vehicle..... 537
-  Engine oil Quality loss Oil change required..... 538
-  Fault Drive at max. 80 km/h..... 515
-  Front left malfunction Consult workshop (example)..... 460
-  Fuel tank is depressurised Ready for refuelling..... 479
-  Have high-voltage system checked See Owner's Manual..... 476
-  inoperative See Owner's Man..... 469
-  inoperative See Owner's Manual... 520

 inoperative See Owner's Manual... 521	 Malfunction..... 475	 Please wait Depressurising fuel tank..... 479
 inoperative See Owner's Manual... 522	 Max. speed 20km/h..... 516	 Pre-entry climate control via key available again after starting vehicle..... 471
 Inoperative..... 524	 Max. speed 40 km/h..... 505	 Pre-entry climate control via key currently unavailable. High-voltage battery low..... 471
 inoperative..... 505	 Maximum speed exceeded..... 505	 Pre-entry climate control via key currently unavailable. High-voltage battery low..... 471
 Key being taught in Please wait..... 465	 Not in curr. drive prog..... 505	 Rear axle steering currently malfunctioning..... 486
 Key not detected (red display message)..... 464	 506	 Rear axle steering Malfunction Stop immediately..... 486
 Key not detected (white display message)..... 464	 Off..... 503	 Rear axle steering Malfunction Visit workshop..... 486
 Left low beam (example)..... 465	 Off..... 501	 Rear left seat backrest not locked (Example)..... 488
 Left window airbag malfunction Consult workshop (example)..... 461	 Operation only possible in transmission position P..... 482	 Rectify tyre pressure..... 529
 Lowering..... 516	 Output and range reduced See Owner's Manual..... 476	 Reduce speed..... 531
 Malfunction See Owner's Manual..... 466	 Parking brake See Owner's Manual..... 496	 Refill AdBlue See Owner's Manual..... 531
 Malfunction See Owner's Manual..... 499	 Parking brake Switch on vehicle to release..... 499	 Release parking brake..... 498
 Malfunction Stop vehicle..... 500	 passive..... 502	
 Malfunction Visit workshop..... 475	 Performance severely limited..... 478	
 Malfunction..... 478	 Please wait 48 V battery charging..... 527	

 Replace air filter.....	491	 Stop vehicle See Owner's Manual.....	524	 Top up AdBlue XX,X I Switch vehicle on, wait 60 sec. or engine start not poss.....	532
 Replace key.....	463	 Stop vehicle See Owner's Manual.....	526	 Top up coolant See Owner's Manual.....	490
 Reserve fuel level.....	491	 suspended.....	503	 Top up washer fluid.....	488
 Restraint system malfunction Consult workshop.....	459	 Switch off lights.....	467	 Towing not permitted See Owner's Manual.....	472
 Restricted during trailer operation.....	515	 Switch on headlamps.....	467	 Trailer coupling Check lock (white display message).....	482
 Rising.....	516	 Tank ventilation Malfunction Consult workshop.....	479	 Trailer coupling in motion.....	482
 Start the vehicle to charge the 12 V battery.....	525	 temporarily unavailable Sensors dirty.....	513	 Tyre(s) overheated.....	530
 Steering malfunction Drive carefully Visit workshop.....	485	 Top up AdBlue Emergency op. in XXX km See Owner's Manual.....	532	 Vehicle is operational Switch off vehicle before exiting.....	481
 Steering malfunction Increased physical effort See Owner's Manual.....	485	 Top up AdBlue In XXX km Electric only. See Owner's Manual.....	534	 Vehicle rising Please wait.....	517
 Steering malfunction Stop immediately See Owner's Manual.....	485	 Top up AdBlue XX,X I Emerg. op.: max. XXX km/h Start not poss. in XXX km.....	532	 Warning tyre malfunction.....	530
 Stop Switch off the vehicle.....	478			 Wheel sensor(s) missing.....	528
 Stop vehicle Leave vehicle on to charge the 12 V battery.....	525			 XX,X I Top up AdBlue Only "Electric" available See Owner's Manual.....	534
 STOP Vehicle level too low.....	516				

"Electric" drive program currently unavailable.....	474	Active Emergency Stop Assist inoperative.....	507	Active Stop-and-Go Assist currently unavailable see Owner's Manual.....	508
AC charging inoperative Consult workshop.....	473	Active Lane Change Assist currently unavailable See Owner's Manual.....	508	Active Stop-and-Go Assist inoperative See Owner's Manual.....	509
Active Blind Spot Assist currently unavailable See Owner's Manual.....	510	Active Lane Change Assist inoperative...	508	Adaptive Highbeam Assist currently unavailable See Owner's Manual.....	468
Active Blind Spot Assist inoperative.....	511	Active Lane Keeping Assist currently unavailable See Owner's Manual.....	511	Adaptive Highbeam Assist inoperative....	468
Active Blind Spot Assist unavailable when towing a trailer See Owner's Manual.....	511	Active Lane Keeping Assist functions restricted See Owner's Manual.....	512	Adaptive Highbeam Assist Plus currently unavailable See Owner's Manual...	468
Active Brake Assist Functions currently limited See Owner's Manual.....	522	Active Lane Keeping Assist inoperative...	511	Adaptive Highbeam Assist Plus inoperative.....	469
Active Brake Assist Functions limited See Owner's Manual.....	523	Active Parking Assist and PARKTRONIC inoperative See Owner's Manual.....	518	Apply brake and start vehicle to shift out of P or N.....	492
Active Distance Assist available again.....	504	Active Steering Assist currently unavailable due to multiple emergency stops.....	506	Apply brake to deselect P position.....	492
Active Distance Assist currently unavailable See Owner's Manual.....	503	Active Steering Assist currently unavailable See Owner's Manual.....	506	Apply brake to engage D or R.....	492
Active Distance Assist inoperative.....	503	Active Steering Assist inoperative.....	506	Apply brake to engage R.....	492
Active Emergency Stop Assist currently unavailable See Owner's Manual...	507			Apply parking brake to park Visit workshop.....	493
				Auxiliary battery malfunction (red display message).....	495

- | | | | | | |
|---|---------------|---|-----|---|-----|
| Auxiliary battery malfunction (white display message)..... | 495 | Consult workshop without starting the vehicle again..... | 476 | Head-up display currently unavailable See Owner's Manual..... | 484 |
| Blind Spot Assist currently unavailable See Owner's Manual..... | 509 | Cruise control and Limiter inoperative.... | 501 | Head-up display inoperative..... | 484 |
| Blind Spot Assist inoperative..... | 510 | Cruise control inoperative..... | 501 | Limited availability of Active Parking Assist manoeuvring assistant See Owner's Manual..... | 519 |
| Blind Spot Assist unavailable when towing a trailer See Owner's Manual..... | 510 | Cruise control off..... | 502 | Limiter inoperative..... | 502 |
| Cannot start vehicle See Owner's Manual..... | 477, 489, 527 | DC charging inoperative Consult workshop..... | 473 | Low beam setting (left/right-side traffic) Manual adjustment only..... | 467 |
| Charging fault Please change charging method See Owner's Manual..... | 473 | DIGITAL LIGHT Functions limited..... | 467 | N automatically activated Please engage transmission position again..... | 494 |
| Charging method currently unavailable Please try again or change charging method..... | 473 | Drive malfunction Achievable speed limited Stop soon..... | 477 | N is selected Please select desired transmission position..... | 494 |
| Check brake pads See Owner's Manual..... | 500 | Drive malfunction Achievable speed severely limited See Owner's Manual..... | 478 | Not possible to unlock charging cable See Owner's Manual..... | 472 |
| Check low beam setting (left/right-side traffic)..... | 467 | Front passenger airbag disabled See Owner's Manual..... | 461 | Only electric drive available Power limited..... | 474 |
| Consult workshop without changing the transmission position..... | 476, 495 | Front passenger airbag enabled See Owner's Manual..... | 462 | Only select P when vehicle is stationary..... | 492 |
| | | Hazard warning lamp system Malfunction..... | 469 | | |
| | | Head-up display Brightness currently reduced See Owner's Manual..... | 484 | | |

-
- | | | | | | |
|---|-----|---|-----|--|-----|
| PARKTRONIC and manoeuvring assistant unavailable at rear when towing a trailer..... | 518 | Risk of vehicle rolling away Apply parking brake to park..... | 493 | Tyre press. monitor currently unavailable..... | 528 |
| PARKTRONIC inoperative See Owner's Manual..... | 518 | Risk of vehicle rolling away Driver's door open Transmission not in P..... | 493 | Tyre press. monitor inoperative..... | 528 |
| Place the key in the marked space See Owner's Manual..... | 465 | Risk of vehicle rolling away N activated manually No automatic switch to P... | 493 | Tyre pressure monitor inoperative No tyre pressure sensors..... | 528 |
| Please teach in trailer coupling again using the button in load compartment | | Snow chain mode Maximum speed exceeded..... | 487 | Vehicle is ready to drive Shutdown occurs when locked or automatically in XX mins..... | 481 |
| Wait for it to extend/retract..... | 483 | Speed limit (winter tyres) XXX km/h..... | 504 | Vehicle not currently being charged Charging station fault..... | 473 |
| Possible to start the vehicle again..... | 527 | Speed Limit Assist currently unavailable See Owner's Manual..... | 504 | Wiper Malfunction..... | 488 |
| PRE-SAFE impulse side inoperative See Owner's Manual..... | 463 | Speed Limit Assist inoperative..... | 504 | Without changing gear, consult workshop..... | 475 |
| PRE-SAFE inoperative See Owner's Manual..... | 463 | To switch off the vehicle, press the Start/Stop button for at least 3 seconds or 3 times..... | 489 | Displaying road names/house numbers..... | 351 |
| Preparing drive system..... | 474 | Traffic Sign Assist currently unavailable See Owner's Manual..... | 509 | Distance control , Active Distance Assist DISTRONIC..... | 249 |
| Reduced drive system performance See Owner's Manual..... | 474 | Traffic Sign Assist inoperative..... | 509 | Distance warning , Active Brake Assist..... | 265 |
| Reversing not poss. Consult workshop... | 494 | Transmission Malfunction Stop..... | 494 | DISTRONIC , Active Distance Assist DISTRONIC..... | 249 |
| | | | | Door | |
| | | | | Additional door lock..... | 84 |

- Child safety lock (rear door)..... 77
- Emergency key..... 87
- Opening (from the inside)..... 85
- Unlocking (inside)..... 85
- Door control panel**
 - Seat operation..... 14
- Downhill Speed Regulation, DSR**..... 257
- Drag Race**
 - Setting..... 345
- Drinks holder, Cup holder**..... 134
- Drive Away Assist, Manoeuvring assistant**.... 304
- Drive position**
 - Engaging..... 204
- Drive program display**..... 199
- Drive programs, DYNAMIC SELECT**
 - Selecting..... 199
- Driver's display**
 - Head-up display..... 321
 - Menus..... 320
 - Notes..... 319
 - Operating..... 319
 - Service due date..... 382
 - Status displays..... 323
- Warning/indicator lamps..... 10, 538
- Driver's seat**
 - Adjusting (Seat Comfort)..... 106
 - Adjusting electrically..... 108
 - Easy entry and exit feature..... 117
 - Seat heating..... 113
- Driving abroad**
 - Light adjustment low beam..... 140
- Driving off-road, Off-road driving**..... 187
- Driving safety system**
 - ABS (Anti-lock Braking System)..... 239
 - Active Brake Assist..... 265
 - Adaptive brake lights..... 244
 - ATTENTION ASSIST..... 244
 - BAS..... 240
 - Blind Spot Assist/Active Blind Spot Assist..... 276
 - Cameras..... 237
 - Cruise control..... 246
 - EBD (Electronic Brakeforce Distribution)..... 242
 - ESP® (Electronic Stability Program)..... 240
 - Hill Start Assist..... 244
 - HOLD function..... 243
- Off-road ABS..... 240
- On radar and ultrasonic sensors..... 237
- Overview..... 238
- STEER CONTROL..... 242
- Traffic Sign Assist..... 272
- Trailer Manoeuvring Assist..... 308
- Your responsibility..... 237
- Driving system, Driving safety system**..... 238
- Driving tips**
 - Acoustic presence indicator (sound generator)..... 176
 - General driving tips..... 183
 - Light adjustment when driving abroad.... 140
 - Off-road driving..... 187
 - Optimised acceleration..... 182
 - Rear axle steering..... 187
 - Recuperation..... 193
- Drowsiness detection, ATTENTION ASSIST**.... 244
- DSR, Downhill Speed Regulation**
 - Activating/deactivating..... 258
 - Changing the target speed..... 258
 - Function..... 257
 - Notes..... 257
- Duplicate key**..... 84

Dynamic handling control system, ESP®	240
DYNAMIC SELECT	
Calling up the fuel consumption indicator.....	202
Configuring drive program I.....	200
Displaying engine data.....	201
Displaying vehicle data.....	201
Drive program display.....	199
Drive programs.....	197
Function.....	197
Selecting the drive program.....	199

E

E10	443
Easy entry feature	
Function.....	117
Easy exit feature	
Function.....	117
EBD, Electronic Brakeforce Distribution	242
ECO Assist	
48 V on-board electrical system.....	192
Activating/deactivating.....	196
Plug-in hybrid.....	194

ECO display	191
ECO start/stop button	
Automatic engine start/stop.....	191
ECO start/stop function	
Automatic engine start.....	190
Automatic engine stop.....	190
Function.....	190
Switching off/on.....	191
Electric drive, Plug-in hybrid operation	176
Electric parking brake	
Applying automatically.....	233
Emergency braking.....	235
Manual.....	234
Releasing automatically.....	234
Electrical fuses	417
Electromagnetic compatibility	
Declaration of conformity.....	26
Electronic Stability Program, ESP®	240
Emergency	
Fire extinguisher.....	400
First-aid kit (soft sided).....	400
Overview of aids.....	16
Safety vest.....	399

Warning triangle.....	400
Emergency braking	
Active Brake Assist.....	265
Brake Assist System.....	240
Carrying out.....	235
Electric parking brake/handbrake.....	233
Emergency call	
Automatic.....	372
Manual.....	372
Emergency call system	
Mercedes me connect.....	371
Emergency key	
Door.....	87
Inserting/removing.....	82
Tailgate.....	94
Emergency operation mode	
Start the vehicle.....	180
Emergency shutoff (high-voltage on-board electrical system)	
177	
Emergency stop assistant, Active Emergency Stop Assist	
261	
Engine	
Emergency operation mode.....	180

Engine number.....	439	ERA-GLONASS test mode.....	375	Favourites.....	336
Starting assistance.....	409	Error message		Film covering	
Switching off, start/stop button.....	231	Driver's display.....	458	On cameras/sensors.....	237
Tow-starting.....	417	ESC, Electronic Stability Control.....	240	On radar and ultrasonic sensors.....	237
Engine data		ESP®		Fire extinguisher.....	400
Displaying.....	201	Crosswind Assist.....	241	First aid	
DYNAMIC SELECT.....	201	Function.....	240	First-aid kit (soft sided).....	400
Engine electronics	437	Setting.....	242	Fitting	
Engine number	439	Trailer stabilisation.....	242	Snow chains.....	421
Engine oil		EU type approval number	439	Tyres/wheels.....	433
Additives.....	447	Exhaust gas aftertreatment, diesel engine....	446	Flacon.....	167
Capacity.....	447	Exit warning.....	276	Flat towing, Tow bar system	
Checking the oil level using the driver		Exiting a parking space		Pulling/towing.....	317
display.....	387	Active Parking Assist.....	299	Flat tyre	
MB-Freigabe or MB-Approval.....	447	Drive Away Assist.....	304	Notes.....	401
Quality.....	447	PARKTRONIC.....	296	TIREFIT kit.....	402
Temperature (driver's display).....	321	Exterior lighting		Wheel change.....	430
Topping up.....	387	Care.....	394	Fog light (extended range).....	144
Engine oil temperature (driver's display)	321	F		Fording water.....	452
Engine starting		Factory settings		Fragrance.....	167
Remote Online.....	181	MBUX.....	342	Fragrance system	
Start/stop button.....	180			Activating/deactivating.....	167
Environmentally friendly driving	19				

Inserting/removing the flacon.....	167
Perfume vial.....	167
Setting.....	167
Free software , Open Source Software.....	42
Frequencies	
Mobile phone.....	438
Two-way radio.....	438
Front airbag	49
Front headlamps	140
Front passenger airbag shutoff , PASSENGER AIR BAG OFF.....	53
Front passenger seat	
Adjusting (Seat Comfort).....	106
Adjusting electrically.....	108
Fuel	
Additives.....	444
Depressurising the fuel tank (plug-in hybrid with petrol engine).....	210
Diesel.....	444
Diesel quality.....	444
E10.....	443
Low outside temperatures.....	444
Petrol.....	443
Petrol quality.....	443

Refilling.....	206
Reserve.....	445
Sulphur content.....	443
Tank content.....	445
Fuel consumption indicator	202
Fuel filler cap/flap	206
Fuel reserve	445
Function seat	14
Fuses	
Cockpit.....	419
Engine compartment.....	418
Front passenger footwell.....	420
Fuse assignment diagram.....	417
Load compartment.....	420
Notes.....	417

G

G-meter , Accelerometer.....	321
Gearshift	
Automatic transmission.....	204
Manual transmission.....	204
Gearshift paddles	
Steering wheel gearshift paddles.....	204

General driving tips	183
Genuine parts	20
Glide mode	205
Glove compartment	123
Grab handles	
Notes.....	105
Gross mass	439
H	
Handbrake , Electric parking brake.....	233
Handling characteristics	
Unusual.....	421
HANDS-FREE ACCESS	91
Haptic accelerator pedal , Pressure point.....	197
Hazard warning lights	143
Hazard warnings	
Car-to-X communication.....	354
Head restraint	
Adjusting (rear).....	111
adjusting manually (front, 4-way).....	109
Removing/fitting (rear).....	111

Head-up display

Care.....	396
Function.....	321
Memory function.....	120
Operating.....	322
Switching on/off.....	323

Headlamp flashing..... 142**Headlamps**

Automatic.....	140
----------------	-----

Heating

Activating/deactivating.....	163
Centre console.....	163
Climate control.....	161, 162
Rear window.....	162
Seat.....	113
Stationary heater.....	173
Steering wheel.....	117

Help call

Mercedes-Benz emergency call system..	371
---------------------------------------	-----

High beam

Activating/deactivating.....	142
------------------------------	-----

High-pressure cleaner..... 392**High-voltage battery**

Charge level display.....	231
---------------------------	-----

Charging cable control panel.....	220
-----------------------------------	-----

Charging duration.....	453
------------------------	-----

Charging station, mode 3.....	218
-------------------------------	-----

Connection types.....	453
-----------------------	-----

Ending the charging process (alternating current, mode 2/3).....	226
--	-----

Ending the charging process (direct current, mode 4).....	229
---	-----

General notes on charging.....	213
--------------------------------	-----

Mains socket, mode 2.....	217
---------------------------	-----

Maximum charging current (mains socket).....	220
--	-----

Range.....	453
------------	-----

Rapid charging station, mode 4.....	219
-------------------------------------	-----

Starting the charging process (alternating current, mode 2/3).....	223
--	-----

Starting the charging process (direct current, mode 4).....	227
---	-----

Stowing the charging cable.....	216
---------------------------------	-----

Type.....	453
-----------	-----

Voltage types.....	453
--------------------	-----

Wallbox, mode 3.....	218
----------------------	-----

High-voltage on-board electrical system

Indicator lamps on vehicle socket.....	221
--	-----

Manual switch-off.....	177
------------------------	-----

Operating safety.....	22
-----------------------	----

Hill descent control, DSR.....	257
---------------------------------------	------------

Hill Start Assist.....	244
-------------------------------	------------

HOLD function, Roll away protection

Switching on/off.....	243
-----------------------	-----

Home screen

Central display.....	331
----------------------	-----

**i-Size child seat anchor**

Fitting.....	67
--------------	----

Suitable seats.....	67
---------------------	----

Identification plate

Engine.....	439
-------------	-----

Vehicle.....	439
--------------	-----

Immediate pre-entry climate control.....	172
---	------------

Immobiliser.....	102
-------------------------	------------

Implied warranty.....	38
------------------------------	-----------

Importer addresses

Wireless components.....	33
--------------------------	----

In-Car Office, Online services.....	367
--	------------

Indicator/warning lamps.....	538
-------------------------------------	------------

Individual drive program					
Configuring.....	200				
Inside rearview mirror, Rear-view mirror.....	158				
Intelligent Light System					
Activating/deactivating.....	148				
Active light function.....	143				
Adaptive Highbeam Assist.....	148				
Adaptive Highbeam Assist Plus.....	149				
Assistance functions.....	145				
Bad weather light.....	145				
City lighting.....	145				
Cornering light.....	144				
Enhanced fog light function.....	144				
Motorway mode.....	144				
Overview.....	143				
Topographical compensation.....	145				
Interior lighting					
Adjusting.....	152				
Ambient lighting.....	152				
Switch-off delay time.....	153				
Interior protection.....	104				
Internet					
Mercedes me connect.....	365				
Setting up a Wi-Fi hotspot.....	340				
		Web browsers.....	368		
		Ionisation.....	167		
		ISOFIX child seat anchor			
		Fitting.....	67		
		Suitable seats.....	66		
		J			
		Jack			
		Declaration of conformity.....	34		
		Jump-start connection.....	411		
		K			
		Key			
		Acoustic locking verification signal.....	81		
		Battery.....	82		
		Deactivating a function.....	81		
		Emergency key.....	82		
		Energy consumption.....	81		
		Function.....	80		
		Key ring attachment.....	82		
		Problem.....	84		
		Unlocking setting.....	81		
		KEYLESS-GO			
		Deactivating.....	81		
				Locking/unlocking the vehicle.....	85
				Problem.....	86
				Unlocking setting.....	81
				Kickdown	
				Using.....	205
				Knee airbag.....	49
				L	
				Lamp	
				Interior lighting.....	152
				Lane Change Assistant, Active Lane	
				Change Assist.....	262
				Lane Keeping Assist, Active Lane	
				Keeping Assist.....	279
				Lane recognition	
				Active Lane Change Assist.....	262
				Lane recognition (automatic)	
				Active Lane Keeping Assist.....	279
				Language, System settings	
				Notes.....	341
				Setting.....	341
				Level control	
				AIRMATIC.....	283

Level regulation			
Suspension.....	282	Locator lighting.....	151
Licence plate, front assembly.....	25	Low beam.....	140
Light adjustment		Motorway mode.....	144
Driving abroad.....	140	Off-road light.....	145
Light switch.....	140	Parking lights.....	140
Lighting		Rear fog light.....	140, 141
Intelligent Light System.....	143	Responsibility for lighting systems.....	140
Interior lighting.....	152	Standing lights.....	140
Lights		Switch-off delay time.....	151
Active light function.....	143	Switching the Intelligent Light System	
Adaptive Highbeam Assist.....	148	on/off.....	148
Adaptive Highbeam Assist Plus.....	149	Topographical compensation.....	145
Assistance functions.....	145	Turn signal light.....	142
Automatic driving lights.....	141	Lights assistant	
Bad weather light.....	145	High beam.....	149
City lighting.....	145	Limiter	
Combination switch.....	142	Activating/deactivating.....	247, 252
Cornering light.....	144	Buttons.....	247
Fog light (extended range).....	144	Calling up a speed.....	247
Hazard warning lights.....	143	Function.....	246
High beam.....	142	Passive mode.....	246
Intelligent Light System.....	143	Permanent setting.....	249
Light adjustment when driving abroad....	140	Requirements:.....	247
		Selecting.....	247
		Setting a speed.....	247
		Storing a speed.....	247
		LINGUATRONIC, MBUX voice assistant.....	333
		Live Traffic Information, Traffic information...	354
		Load capacity	
		Bicycle rack.....	456
		Load compartment cover	
		Extending/retracting.....	129
		Removing/fitting.....	130
		Load protection net	
		Attaching.....	130
		Loading	
		Bag hook.....	132
		Roof luggage rack.....	133
		Tie-down eyes.....	131
		Loading guidelines.....	120
		Loads	
		Securing.....	120
		Locator lighting.....	151
		Locking/unlocking	
		Additional door lock.....	84
		Automatic locking.....	87
		Doors (from the inside).....	85
		Emergency key.....	87

KEYLESS-GO.....	85
Mercedes me connect.....	84
Loud sound	
PRE-SAFE® Sound.....	57
Low beam	
Activating/deactivating.....	140
Left-hand/right-hand traffic.....	151
Light adjustment when driving abroad....	140
Setting.....	151
Lowering/raising the loading sill, AIR-MATIC.....	285
Lowering/raising the rear of the vehicle, AIRMATIC.....	285
lubricants.....	441
Luggage	
Securing.....	120
Luggage rack.....	120
Lumbar support, Lumbar support.....	109

M

Maintaining safe distance	
Active Distance Assist DISTRONIC.....	252

Maintenance, ASSYST PLUS.....	382
Maintenance Management	
Notes.....	383
Transferred data.....	383
Malfunction	
Restraint system.....	44
Manoeuvring brake function, Manoeuvring assistant.....	307
Manoeuvring	
Drive Away Assist.....	304
Manoeuvring brake function.....	307
Manoeuvring assistant	
Activating/deactivating.....	308
Cross traffic warning.....	305
Drive Away Assist.....	304
Manoeuvring brake function.....	307
Manual gearshifting	
Activating/deactivating.....	205
Map	
Displaying online map contents.....	354
Displaying weather information.....	354
Moving.....	353
Selecting the map orientation.....	353
Setting the map scale.....	353

Massage programme.....	113
Massage programmes.....	113
Maximum full-stop braking, Brake Assist System.....	240
Maximum permissible gross vehicle weight....	439
MBUX	
Snow chain mode.....	422
MBUX multimedia system	
Activating/deactivating DSR.....	258
Activating/deactivating standby mode....	237
Calling up the Zero Layer.....	328
Collision detection.....	235
Drive programs.....	200
Factory setting.....	342
Home screen.....	331
Language settings.....	333
Media.....	377
Mercedes me & Apps.....	367
Notes.....	325
Operating the Zero Layer.....	328
Overview.....	325
Set collision detection.....	235
Setting route-based speed adaptation....	256
Steering wheel heater/seat heating.....	117

Telephone.....	357	Calling the Mercedes-Benz Customer		Mirror heater.....	168
Touchscreen.....	331	Centre after automatic accident/		Mirrors	
Zero layer.....	326	breakdown detection.....	362	Mirror folding function.....	160
MBUX voice assistant		Calls via the overhead control panel.....	360	Outside mirrors.....	157
Function.....	333	Consenting to the transfer of data.....	363	Rear-view mirror.....	158
Voice prompting.....	333	Information.....	361	Mobile phone	
Media		Mercedes-Benz Customer Centre.....	361	Frequencies.....	438
Overview of functions/symbols.....	377	Transferred data.....	363	Maximum transmission output.....	438
Medical aids	37	Mercedes me connect		Notes on wireless charging.....	138
Memory function		Accident/Breakdown Management.....	365	Wireless charging (front).....	139
Head-up display.....	120	Information.....	365	Model type	439
Outside mirrors.....	120	Transferred data.....	366	Motorway mode	144
Seat.....	120	Mercedes-Benz emergency call system			
Steering wheel.....	120	Automatic emergency call.....	372	N	
Menus (driver's display)		Data processing.....	375	Navigation	
Notes.....	320	Data transfer.....	373	Activating.....	348
Sport.....	321	ERA-GLONASS test mode.....	375	Announcements.....	349
Mercedes me App		Information.....	370	Notes.....	348
Activating on-demand features.....	22	Manual emergency call.....	372	Neutral	
Mercedes me Apps	367	Overview.....	371	Engaging.....	203
Mercedes me calls		Self-diagnosis.....	375		
Arranging a service appointment.....	363	Mercedes-Benz GenuineParts	20		
		Mercedes-Benz service centre	36		
		Message memory	458		

O**Occupant safety, Restraint system**

Airbag.....	49
Automatic front passenger airbag shut off.....	53
Child seat.....	59
Pets in the vehicle.....	78
PRE-SAFE®.....	57
Seat belt.....	45

Off-road driving, Off-road driving..... 187, 452**Off-road light.....** 145**Off-road menu**

Overview.....	347
Setting.....	347

On-board diagnostics interface, Diagnostics connection..... 35**On-board electronics**

Engine electronics.....	437
Two-way radios.....	437

On-demand feature..... 22**Online services.....** 41**Open Source Software, Free software.....** 42**Opening angle**

Limiting (tailgate).....	93
--------------------------	----

Opening the tailgate using your foot

HANDS-FREE ACCESS.....	91
------------------------	----

Operating fluids

AdBlue®.....	446
Additives.....	444
Brake fluid.....	448
Coolant.....	449
Diesel.....	444
Engine oil.....	447
Notes.....	441
Petrol.....	443
Windscreen washer fluid.....	450

Operating safety

48 V on-board electrical system.....	22
High-voltage on-board electrical system... ..	22
Information.....	22

Outside mirrors

Automatic mirror folding function.....	160
Blind Spot Assist/Active Blind Spot Assist.....	276
Folding in/out.....	157
Memory function.....	120

Parking position.....	159
Setting.....	157
Warning lamp.....	276

Overhead control panel..... 12**Overview of airbags.....** 49**Owner's Manual.....** 21**P****Paint code.....** 439**Park position**

DIRECT SELECT lever.....	202
Engaging.....	203

Parking

Active Parking Assist.....	299
PARKTRONIC.....	296

Parking aid

Active Parking Assist.....	299
PARKTRONIC.....	296

Parking Assist

Active Parking Assist.....	299
PARKTRONIC.....	296

Parking Assist PARKTRONIC

Activating/deactivating.....	299
------------------------------	-----

Adjusting warning tones.....	299	Personalisation		Notes on plug-in hybrid operation.....	176
Function.....	296	User profiles.....	334	Operating safety.....	22
Parking assistance systems		Petrol	443	Route-based operating-mode strategy....	196
Active Parking Assist.....	299	Pets in the vehicle, Occupant safety	78	Sets recuperation.....	194
Drive Away Assist.....	304	Plug-in hybrid operation		Starting the charging process (alternating current, mode 2/3).....	223
Manoeuvring brake function.....	307	Charging cable control panel.....	220	Starting the charging process (direct current, mode 4).....	227
PARKTRONIC.....	296	Charging the high-voltage battery at a rapid charging station (mode 4).....	219	Stowing the charging cable.....	216
Parking brake, Electric parking brake		Ending the charging process (alternating current, mode 2/3).....	226	Post-collision brake, Occupant safety	58
Electric.....	233	Ending the charging process (direct current, mode 4).....	229	Power supply	
Parking lights	140	Function of the regenerative brake system.....	193	Start/stop button.....	179
Parking position		Haptic accelerator pedal.....	197	Switching on (start/stop button).....	179
Outside mirrors.....	159	Indicator lamps on vehicle socket.....	221	Pre-entry climate control	
Storing the position of the passenger outside mirror using reverse gear.....	159	Manually disconnecting the high-voltage on-board electrical system.....	177	activating/deactivating for departure time.....	171
Parking up	236	Maximum charging current (mains socket).....	220	At departure time.....	171
PARKTRONIC, Parking Assist PARKTRONIC ...	296	Notes on charging (charging station, mode 3).....	218	At time of departure.....	170
PASSENGER AIR BAG		Notes on charging (mains socket, mode 2).....	217	immediate.....	172
Status display, front passenger airbag.....	54	Notes on charging (wallbox, mode 3).....	218	when the vehicle is unlocked.....	168
Period out of use				When vehicle is unlocked.....	169
Activating/deactivating standby mode...	237			Pre-heating	
Permissible axle load	439			Pre-entry climate control.....	168
Permitted towing methods					
Overview.....	413				

PRE-SAFE® , Anticipatory occupant protection					
Function.....	57				
PRE-SAFE® Sound.....	57				
Reversing measures.....	57				
PRE-SAFE® Impulse Side , Occupant safety					
Deployment.....	44				
Function.....	58				
PRE-SAFE® PLUS , Occupant safety					
Function.....	57				
Reversing measures.....	57				
Preventative occupant protection system , PRE-SAFE®	57				
Profile					
Notes.....	334				
Programme , Drive programs.....	197				
Protection against collision					
Drive Away Assist.....	304				
Manoeuvring brake function.....	307				
Protection of the environment					
Driving style.....	19				
Take-back of end-of-life vehicles.....	19				
Pulling away					
Hill Start Assist.....	244				
		Optimised acceleration.....	183		
		Q			
		QR code rescue card	38		
		Qualified specialist workshop	36		
		R			
		Radar and ultrasonic sensors	237		
		Radio			
		Overview of functions/symbols.....	379		
		Radio equipment approval numbers	439		
		Rain closing function			
		Side windows.....	95		
		Sliding sunroof.....	100		
		Rain sensor			
		Side windows.....	95		
		Sliding sunroof.....	100		
		Windscreen wipers.....	153		
		REACH regulation	37		
		Reading lamp			
		Interior lighting.....	152		
		Rear axle level control	282		
				Rear axle steering	187
				Rear compartment climate control	165
				Rear door (child safety lock)	
				Securing.....	77
				Rear fog lamp	141
				Rear fog light	141
				Rear seat	
				Adjusting the backrest angle.....	128
				Rear seat belt	
				Status display.....	49
				Rear window	
				Replacing wiper blade.....	156
				Rear window heater	161, 162
				Rear window wiper	
				Switching on/off.....	154
				Rear-view mirror	
				Automatic anti-glare mode.....	158
				Recuperation	
				Function.....	193
				Setting.....	194
				Recycling , Take-back of end-of-life vehicles.....	19

Reducing agent					
AdBlue®.....	211				
Refuelling					
Depressurising the fuel tank (plug-in hybrid with petrol engine).....	210				
Fuel.....	206				
Refuelling the vehicle.....	206				
Topping up AdBlue®.....	211				
Registration	36				
Regulatory radio identification					
Indonesia.....	439				
Israel.....	439				
Small components.....	439				
Remote Online					
Charging the starter battery.....	181				
Cooling/heating the vehicle interior.....	181				
Starting the vehicle.....	181				
Replacement key, Duplicate key	84				
Reserve					
Fuel.....	445				
Resetting					
MBUX reset function.....	342				
Residual heat	166				
Responsibility					
Driving safety systems.....	237				
Restraint system					
Basic instructions for children.....	59				
Function in the event of an accident.....	44				
Functionality.....	44				
Limited protection.....	43				
Malfunction.....	44				
Protection.....	43				
Self-test.....	44				
Warning lamp.....	44				
Reverse gear					
DIRECT SELECT lever.....	202				
Engaging.....	203				
Reversing camera					
360° Camera.....	287				
Activate via GPS.....	295				
Activating/deactivating.....	295				
Care.....	394				
Function.....	287				
Manage activation points.....	295				
Opening the camera cover.....	296				
Setting.....	295				
Roll away protection, HOLD function	243				
Roller sunblind					
Side windows.....	102				
Sliding sunroof.....	98				
Roof load	451				
Roof load display					
Information.....	199				
Roof luggage rack					
Loading.....	133				
Securing.....	133				
Route, Navigation					
Alternative route.....	351				
Calculating.....	351				
Commuter route.....	351				
Navigation.....	349				
Selecting a type.....	351				
Route guidance with augmented reality					
Activating.....	351				
Activating/deactivating the traffic light view.....	276				
Displaying road names/house numbers.....	351				
Switching video on or off.....	351				
Route-based operating-mode strategy					
Function.....	196				

Route-based speed adaptation, DISTRONIC

Function.....	255
Setting.....	256

Running boards

Care.....	394
Notes.....	88

Running-in notes.....	182
-----------------------	-----

S

Safety system , Driving safety system.....	238
---	-----

Safety vest	399
--------------------------	-----

Seat

Adjusting (Seat Comfort).....	106
Adjusting electrically.....	108
Adjusting the angle of the backrests (rear).....	128
Automatic adjustment.....	112
Centre airbag (driver's backrest).....	49
Configuring settings.....	112
Correct driver's seat position.....	105
Folding back the backrest (rear).....	127
Folding the backrest forwards (rear).....	124
Locking the backrest (rear).....	128
Lumbar support.....	109

Massage programme.....	113
Memory function.....	120
Resetting the settings.....	113
Settings.....	14
Side airbag.....	49
Workout programme.....	113

Seat belt

Activating/deactivating seat belt adjustment.....	48
Adjusting the height.....	47
Automatic tightening.....	48
Care.....	396
Fastening.....	47
Protection.....	45
Rear seat belt status display.....	49
Reduced protection.....	46
Releasing.....	48
Warning lamp.....	49

Seat belt adjustment

Activating/deactivating.....	48
Function.....	48

Seat belt tensioners

Deployment.....	44
-----------------	----

Seat belt warning	49
--------------------------------	----

Seat heating	113
---------------------------	-----

Seat height	108
--------------------------	-----

Seat ventilation	114
-------------------------------	-----

Selecting a gear	204
-------------------------------	-----

Selector lever , DIRECT SELECT lever.....	202
--	-----

Self-test

Automatic front passenger airbag shut off.....	54
Restraint system.....	44

Service centre	36
-----------------------------	----

Service due date	382
-------------------------------	-----

Service interval display, ASSYST PLUS	382
--	-----

Service, ASSYST PLUS	382
-----------------------------------	-----

Shifting

Automatic transmission.....	204
Gearshift recommendation.....	205
Manual transmission.....	204
Steering wheel gearshift paddles.....	204

Shortening the braking distance

Brake Assist System.....	240
--------------------------	-----

Shunting assistant, Trailer

Manoeuvring Assist.....	308
-------------------------	-----

-
- | | | | | | |
|---|-----|---|-----|--|-----|
| Shunting support, Manoeuvring assistant..... | 305 | Snow chain mode | | Speed | |
| Side airbag..... | 49 | Activating/deactivating..... | 422 | Limit, Limiter..... | 246 |
| Side windows | | Snow chains..... | 421 | Save, cruise control..... | 252 |
| Automatic function..... | 95 | Socket | | Save, DISTRONIC..... | 252 |
| Child safety lock (rear)..... | 78 | 12 V..... | 137 | Save, Limiter..... | 252 |
| Close with key..... | 96 | Trailer operation..... | 312 | Speed control | |
| Convenience closing..... | 96 | Socket flap, Socket flap..... | 213 | Active Distance Assist DISTRONIC..... | 249 |
| Convenience opening..... | 96 | Software update | | Cruise control..... | 246 |
| Opening/closing..... | 94 | System updates..... | 338 | Limiter..... | 246 |
| Problem..... | 97 | SOS button..... | 360 | Speed limit | |
| Rain closing function..... | 95 | Sound | | Winter tyres..... | 249 |
| Roller sunblind..... | 102 | PRE-SAFE® Sound..... | 57 | Speed Limit Assist | |
| Skid chains..... | 421 | Settings..... | 381 | Setting..... | 271 |
| Sliding sunroof | | Sound menu..... | 381 | System limits..... | 269 |
| Automatic functions..... | 100 | Wheels/tyres..... | 421 | Standing lights..... | 140 |
| Close with key..... | 96 | Sound generator, Acoustic presence indi- | | Start-off assist | |
| Opening with the key..... | 96 | cator..... | 176 | Hill Start Assist..... | 244 |
| Opening/closing..... | 98 | Spare parts, Mercedes-Benz GenuineParts..... | 20 | Optimised acceleration..... | 182 |
| Problem..... | 101 | Spare wheel | | Start/stop button | |
| Rain closing function..... | 100 | Emergency spare wheel..... | 435 | Parking the vehicle..... | 231 |
| Smartphone Integration, iPhone® | | Specialist workshop..... | 36 | Starting the vehicle..... | 180 |
| Android Auto..... | 368 | Specific absorption rate..... | 26 | Switching on the power supply/vehicle.. | 179 |
| Apple CarPlay®..... | 368 | | | Start/stop function, ECO start/stop func- | |
| | | | | tion..... | 190 |

Tank content			
AdBlue®.....	446		
Fuel.....	445		
Reserve.....	445		
Technical data			
Axle load (trailer operation).....	457		
Component-specific information.....	439		
Fastening points of the trailer hitch.....	455		
High-voltage battery.....	453		
Information.....	437		
Mounting dimensions of a trailer hitch....	455		
Overhang dimension of the trailer hitch..	455		
Radio frequencies.....	438		
Regulatory radio identification.....	439		
Regulatory radio identification – Indo-			
nesia and Israel.....	439		
Roof load.....	451		
Tongue weight.....	456		
Towing capacity.....	455		
Vehicle dimensions.....	450		
Telediagnosis			
Diagnostic data.....	383		
Telediagnosics			
Transferred data.....	384		
Telemetry display			
Calling up.....	346		
Telephone			
Bluetooth®.....	360		
Connecting a mobile phone/Secure			
Simple Pairing.....	360		
Emergency call.....	371		
Menu.....	360		
Notes.....	357		
Notes on wireless charging (mobile			
phone).....	138		
Operating modes.....	360		
Telephone menu overview.....	359		
Wirelessly charging a(mobile phone,			
front).....	139		
Telephony operating modes			
Bluetooth® telephony.....	360		
Temperature			
Setting.....	161, 162		
THERMATIC			
Air conditioning control panel.....	161		
THERMOTRONIC			
Air conditioning control panel.....	162		
Tie-down eyes	131		
TIREFIT kit			
Declaration of conformity.....	34		
Storage location.....	401		
Tongue weight	456		
Top Tether	69		
Topographical compensation			
DIGITAL LIGHT.....	145		
Intelligent Light System.....	145		
Torque (driver's display)	321		
Touch Control			
Driver's display.....	319		
MBUX.....	331		
Touch-sensitive controls	21		
Touchscreen	331		
Tow bar system			
Towing away.....	317		
Tow-away protection	103		
Tow-starting	417		
Towing, Tow bar system			
Pulling/towing.....	317		
Towing methods.....	413		

Towing away		Trailer hitch		Making settings.....	315
Both axes on the ground.....	414	Axle load.....	457	Notes.....	310
Towing eye	416, 417	Bicycle rack.....	315	Socket.....	312
Towing methods		Care.....	394	Trailer stabilisation, ESP®	242
Overview.....	413	Coupling up/uncoupling a trailer.....	312	Transmission position display	202
Track Race		Extending/retracting the ball neck.....	311	Transmission positions	
Setting.....	343	Fastening points.....	455	DIRECT SELECT lever.....	202
Traffic information		General notes.....	454	Transporting	
Activating.....	354	Mounting dimensions.....	455	Vehicle.....	416
Traffic Jam Assistant, Active Stop-and-Go Assist	256	Overhang dimension.....	455	TuneIn Internet Radio	
Traffic light view		Socket.....	312	Calling up.....	380
Activating/deactivating.....	276	Tongue weight.....	456	Turn signal indicator	142
Information.....	276	Towing capacity.....	455	Turn signal light	142
Traffic light warning/display	272	Trailer Manoeuvring Assist.....	308	Two-way radios	
Traffic Sign Assist		Trailer Manoeuvring Assist		Frequencies.....	438
Function.....	272	Function.....	308	Installation.....	437
Setting.....	275	Trailer Manoeuvring Assist, Manoeuvring assistant		Transmission output.....	438
Trailer coupling, Ball neck	311	Operation.....	309	Type approval number EG	439
Trailer drawbar, Pulling/towing, Tow bar system	317	Trailer operation		Tyre pressure	
		Active Blind Spot Assist.....	278	Checking.....	424
		Active Lane Keeping Assist.....	279	TIREFIT kit.....	402
		Bicycle rack.....	315	Tyre pressure table.....	423
		Coupling up/uncoupling a trailer.....	312		
		Extending/retracting the ball neck.....	311		

Tyre pressure monitoring system

Function.....	424
Restarting.....	425

Tyre pressure table..... 423**Tyre sealant..... 402****Tyre tread..... 421****Tyre-change tool..... 429****Tyre-change tool kit**

Overview.....	429
---------------	-----

Tyres

Breakdown.....	401
Checking.....	421
Fitting.....	433
Interchanging.....	429
Noise.....	421
Notes on fitting.....	426
Removing.....	433
Removing/fitting hub cap.....	430
Removing/fitting wheel trim.....	430
Replacing.....	426, 430
Selection.....	426
Snow chains.....	421
Storing.....	429
TIREFIT kit.....	402

Tyre pressure table.....	423
--------------------------	-----

Unusual handling characteristics.....	421
---------------------------------------	-----

U**Unfastening..... 48****Unlocking setting..... 81****Updates**

System updates.....	338
---------------------	-----

USB port

Front.....	123
Rear.....	137

User profiles

Adding a user.....	336
Note.....	334
Selecting options.....	336

V**Variable limiter, Limiter..... 246****Vehicle**

48 V on-board electrical system.....	22
Activating/deactivating standby mode...	237
Additional door lock.....	84
Automatic locking.....	87

Collision detection.....	235
--------------------------	-----

Correct use.....	37
------------------	----

Data storage.....	38
-------------------	----

Diagnostics connection.....	35
-----------------------------	----

Emergency key.....	87
--------------------	----

enabling, Remote Online.....	181
------------------------------	-----

Equipment.....	21
----------------	----

High-voltage on-board electrical system...	22
--	----

Implied warranty.....	38
-----------------------	----

KEYLESS-GO.....	85
-----------------	----

Locking/unlocking (from inside).....	85
--------------------------------------	----

Locking/unlocking using the emer- gency key.....	87
---	----

Lowering.....	434
---------------	-----

Medical aids.....	37
-------------------	----

Parking up.....	236
-----------------	-----

QR code rescue card.....	38
--------------------------	----

Raising.....	431
--------------	-----

REACH regulation.....	37
-----------------------	----

Registration.....	36
-------------------	----

Set collision detection.....	235
------------------------------	-----

Standby mode function.....	236
----------------------------	-----

Starting (start/stop button).....	180
-----------------------------------	-----

starting, emergency operation mode.....	180
---	-----

SVHC/substances of very high concern...	37
---	----

Switching off, start/stop button.....	231
---------------------------------------	-----

- | | | |
|--|---|---|
|  Brake system warning lamp (yellow)..... 548 |  Power steering warning lamp (yellow)..... 543 |  Warning lamp for distance warning function..... 551 |
|  Coolant warning lamp (red)..... 545 |  Rear axle steering warning lamp (red)..... 544 | Warning/indicator lamps |
|  Coolant warning lamp (yellow)..... 546 |  Rear axle steering warning lamp (yellow)..... 544 | Driver's display..... 538 |
|  Electric parking brake indicator lamp (red)..... 548 |  Reduced-power warning lamp..... 541 | PASSENGER AIR BAG..... 54 |
|  Electric parking brake indicator lamp (yellow)..... 548 |  Restraint system warning lamp..... 540 | Washer fluid |
|  Electrical fault warning lamp..... 542, 547 |  Seat belt warning lamp flashes..... 541 | Topping up..... 389 |
|  Engine diagnosis warning lamp..... 547 |  Seat belt warning lamp lights up.... 541 | Windscreen washer fluid..... 450 |
|  ESP® OFF warning lamp..... 554 |  Suspension warning lamp (red)..... 552 | Washing by hand 393 |
|  ESP® warning lamp flashes..... 553 |  Suspension warning lamp (yellow)..... 552 | Water tank 390 |
|  ESP® warning lamp lights up..... 554 |  System error warning lamp..... 542 | Weather information 354 |
|  Fuel reserve warning lamp lights up..... 547 |  Traffic Sign Assist warning lamp.... 550 | Web browsers |
|  Mercedes-Benz emergency call system warning lamp..... 555 |  Trailer tow hitch warning lamp..... 542 | Overview..... 368 |
|  Power steering warning lamp (red)..... 543 |  Tyre pressure monitoring system warning lamp flashes..... 556 | Wedge 429 |
| |  Tyre pressure monitoring system warning lamp lights up..... 556 | Weight information 439 |
| | | Wheel change |
| | | Fitting a new wheel..... 433 |
| | | Lowering the vehicle..... 434 |
| | | Preparation..... 430 |
| | | Raising the vehicle..... 431 |
| | | Removing a wheel..... 433 |
| | | Removing/fitting hub caps..... 430 |

Removing/fitting wheel trim.....	430
Wheel rotation	429
Wheels	
Breakdown.....	401
Care.....	394
Checking.....	421
Fitting.....	433
Interchanging.....	429
Noise.....	421
Notes on fitting.....	426
Removing.....	433
Removing/fitting hub cap.....	430
Removing/fitting wheel trim.....	430
Replacing.....	426, 430
Selection.....	426
Snow chains.....	421
Storing.....	429
TIREFIT kit.....	402
Tyre pressure.....	422
Tyre pressure monitoring system.....	424
Unusual handling characteristics.....	421
Wi-Fi	
Setting up a hotspot.....	340
Window airbag	49

Windows	
Care.....	394
De-icing.....	164
Opening/closing.....	94
Removing mist.....	166
Windscreen	
De-icing.....	164
Demisting.....	161, 162
Replacing the wiper blades.....	154
Windscreen heater	162
Windscreen washer fluid	450
Windscreen washer system	389
Windscreen wipers	
Activating/deactivating.....	153
Replacing the wiper blades.....	154
Winter operation	
Activating/deactivating snow chain mode.....	422
Snow chains.....	421
Winter tyres	
Limiter.....	249
Setting the permanent speed limit.....	249

Wiper blades	
Care.....	394
Replacing (windscreen).....	154
Wipers	
Windscreen wipers.....	153
Wireless charging	
Mobile phone (front).....	139
Overview.....	138
Wireless components	
Importer addresses.....	33
Wireless vehicle components	
Declaration of conformity.....	26
Specific absorption rate.....	26
Workout programme	113
Workshop	36

Z

Zero layer	
Calling up.....	328
Function.....	326
Operating.....	328
Overview.....	327

Publication details

Germany

Internet

Further information about Mercedes-Benz vehicles and about Mercedes-Benz AG can be found on the following websites:

<https://www.mercedes-benz.com>

<https://www.daimler.com>

Documentation team

You are welcome to forward any queries or suggestions you may have regarding this Owner's Manual to the technical documentation team at the following address:

Mercedes-Benz AG, HPC: CAC, Customer Service,
70546 Stuttgart, Germany

©Mercedes-Benz AG: Not to be reprinted, translated or otherwise reproduced, in whole or in part, without written permission from Mercedes-Benz AG.

Vehicle manufacturer

Mercedes-Benz AG

Mercedesstraße 120

70372 Stuttgart

As at 09.12.21



Digital – in the vehicle

Familiarise yourself with the contents of the Owner's Manual directly via the vehicle's multimedia system (menu item "Vehicle information"). Start with the quick guide or broaden your knowledge with practical tips.



Vehicle document wallet

Here you can find comprehensive information about operating your vehicle and about services and guarantees in printed form.



Digital – on the Internet

You can find the Owner's Manual on the Mercedes-Benz homepage.



Digital – as an App

The Mercedes-Benz Guides App is available free-of-charge in familiar App stores.



2545844301Z102

Order no. P254 0022 02 Part no. 254 584 43 01 Z102
Edition NA2022-09b



Apple® iOS



Android™