

S-Class Maybach

Owner's Manual +

Mercedes-Benz

P223 0210 02

Front passenger airbag warning



WARNING Risk of injury or death if the co-driver airbag is enabled

If the co-driver airbag is enabled, a child on the co-driver seat may be struck by the co-driver airbag during an accident.

NEVER use a rearward-facing child restraint system on a seat with an ENABLED FRONT AIRBAG; DEATH or SERIOUS INJURY to the CHILD can occur.

Observe the chapter "Children in the vehicle".

Thank you for purchasing a Mercedes-Benz

Before you first drive off, read this Owner's Manual carefully and familiarise yourself with your vehicle. For your own safety and a longer operating lifespan of the vehicle, follow the instructions and warning notices in this Owner's Manual. Disregarding them may lead to damage to the vehicle or injury to people.

The standard equipment and product description of your vehicle may vary and depends on the following factors:

- Model
- order
- national version
- availability

The illustrations in this Owner's Manual show a left-hand drive vehicle. On right-hand-drive vehicles, the layout of car parts and control elements differs accordingly.

Mercedes-Benz is constantly developing its vehicles further.

Mercedes-Benz therefore reserves the right to introduce changes in the following areas:

- design
- equipment
- technical features

The equipment in your vehicle may therefore differ from that shown in the descriptions and illustrations.

The following documents are integral parts of the vehicle:

- printed Owner's Manual
- service booklet
- equipment-dependent Supplements

Keep these documents in the vehicle at all times. If you sell the vehicle, always pass all of the documents on to the new owner.

Disclaimer

All language versions of the following PDF document for this vehicle model only refer to vehicles intended for the German market and which conform to German regulations. Please contact your authorised Mercedes-Benz service centre if you would like to have a printed Owner's Manual for other vehicle models and vehicle model years.

This PDF document illustrates the current version. Possible variations to your vehicle may not be taken into account as Mercedes-Benz constantly updates their vehicles and equipment to the state of the art and introduces changes in design and equipment. Please note that this PDF document does not replace the printed Owner's Manual that was included when the vehicle was delivered.

Symbols 5

At a glance 6
Cockpit 6
Indicator and warning lamps (standard) 8
Indicator and warning lamps (with driver camera): 10
Overhead control panel 12
Door operating unit and seat adjustment 14
Control settings in the rear passenger compartment 16
Emergencies and breakdowns 18

Digital Owner's Manual 20
Calling up the Digital Owner's Manual 20

General notes 21
Protection of the environment 21
Take-back of end-of-life vehicles 21
Mercedes-Benz GenuineParts 22
Owner's Manual 23
Touch-sensitive controls 23
Operating safety 24
Declaration of conformity 25
Diagnostics connection 31
Qualified specialist workshop 33
Vehicle registration 33
Correct use of the vehicle 33
Information on the REACH regulation 33
Notes for persons with electronic medical aids 34
Implied warranty 34
QR code for rescue card 34
Data storage 35
Copyright 38

Occupant safety 39
Restraint system 39
Seat belts 41
Airbags 46
PRE-SAFE® system 57
Automatic measures after an accident 58
Safely transporting children in the vehicle 59
Notes on pets in the vehicle 80

Opening and closing 81
Key 81
Doors 85
Boot 93
Side windows 99
Sliding sunroof 103
Roller sunblinds 108
Anti-theft protection 110

Seats and stowing 113
Notes on the correct driver's seat position 113
Seats 113
Steering wheel 132
Easy entry and exit feature 134
Memory function 135
Memory function in the rear compartment 136
Stowage areas 139
Cup holders 149
Sockets 149
Coolbox 152
Wireless charging of the mobile phone and connection with the exterior aerial 155
Fitting and removing the floor mats 157

Light and sight 159
Exterior lighting 159

Interior lighting 168
Windscreen wipers and windscreen washer system 171
Mirrors 173
Area permeable to radio waves on the windscreen 176
Infrared-reflective windscreen function 176

Climate control 177
Overview of climate control systems 177
Operating the climate control system 178

Driving and parking 192
Driving 192
DYNAMIC SELECT switch 203
Automatic transmission 205
Function of the 4MATIC 209
Refuelling 209
Parking 212
Driving and driving safety systems 219
Vehicle towing instructions 277

Driver display 278
Notes on the driver display 278
Notes on the 3D driver display 278
Operating the driver display 278
Menus on the driver display 279
Head-up display 280
Vehicles with a 48 V on-board electrical system (EQ Boost technology) 283
Overview of status displays on the driver display 283

MBUX multimedia system 285
Overview and operation 285
System settings 299
Navigation and traffic 303
Telephone 309
Mercedes me and apps 312
Mercedes-Benz emergency call system 320
Radio, media & TV 328
Sound settings 334

Maintenance and care 335
ASSYST PLUS service interval display 335
Engine compartment 336
Cleaning and care 341

Breakdown assistance 348
Emergency 348
Flat tyre 350
Battery (vehicle) 355
Tow-starting or towing away 361
Electrical fuses 365

Wheels and tyres 369
Notes on noise or unusual handling characteristics 369
Notes on regularly inspecting wheels and tyres 369
Notes on snow chains 369
Activating or deactivating snow chain mode 370
Tyre pressure 370
Wheel change 373
Emergency spare wheel 382

Technical data 384
Notes on technical data 384

On-board electronics 384
Radio operating permits for vehicle components 386
Vehicle identification plate, VIN and engine number overview 459
Operating fluids 461
Vehicle data 469

Display messages and warning/indicator lamps 471
Display messages 471
Warning and indicator lamps 523

Index 539

In this Owner's Manual, you will find the following symbols:

DANGER Danger due to not observing the warning notices

Warning notices draw your attention to hazards that may endanger your health or life, or the health or life of others.

▶ Observe the warning notices.

ENVIRONMENTAL NOTE Environmental damage due to failure to observe environmental notes

Environmental notes include information on environmentally responsible behaviour or environmentally responsible disposal.

▶ Observe environmental notes.


NOTE Damage to property due to failure to observe notes on material damage

Notes on material damage inform you of risks which may lead to your vehicle being damaged.

▶ Observe notes on material damage.

These symbols indicate useful instructions or further information that could be helpful to you.


▶	Instruction
(⟶ page)	Further information on a topic
Display	Messages in the central display
⟶	Highest menu level, which is to be selected in the multimedia system
▶▶	Relevant submenus, which are to be selected in the multimedia system
*	Indicates a cause

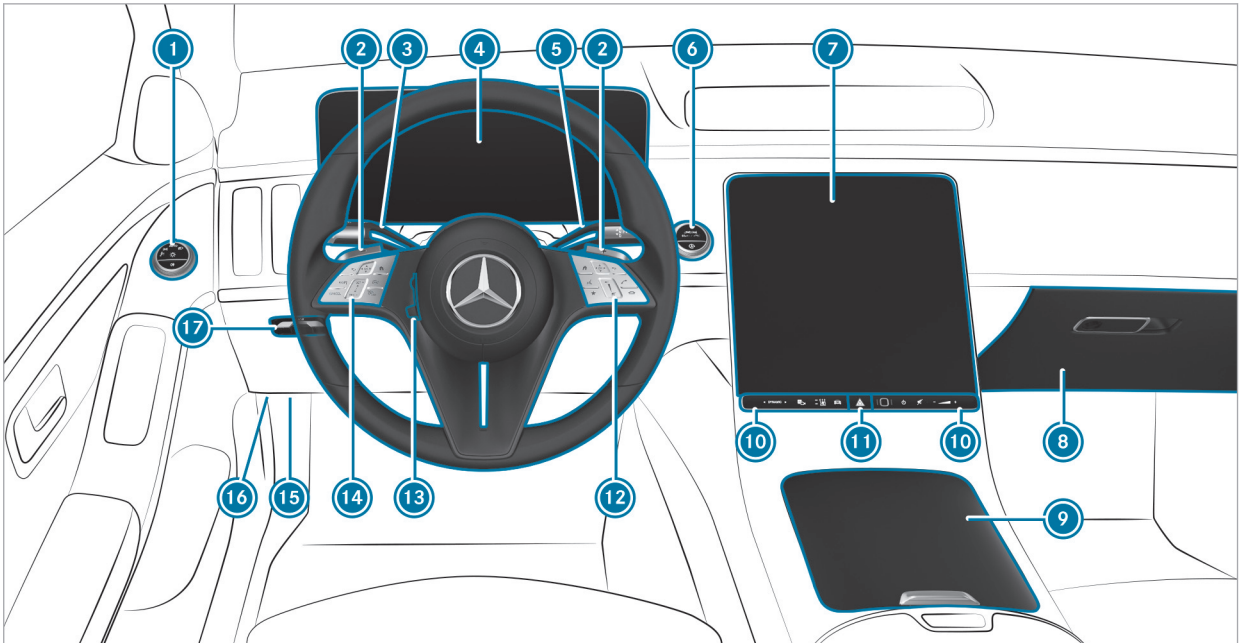

Left-hand-drive vehicles

P223 0210 02


1 Light switch → 159
2 Steering wheel gearshift paddles → 207
3 Combination switch → 161
4 Driver display → 278
5 DIRECT SELECT lever → 205
6 ENGINE START / STOP Start/stop button → 193
ECO start/stop function → 201
7 Central display → 285
8 Glove compartment → 142
9 Stowage compartment → 142
10 Control panel for:
DYNAMIC SELECT switch → 204
Active Parking Assist → 268
Switching the stationary heater on/off → 186
Quick vehicle access
Fingerprint sensor → 285
Switching the MBUX multimedia system on/off → 285
Switching sound on/off → 285
Adjusting the volume → 285
11 Hazard warning light system → 162
12 Control panel for the MBUX multimedia system → 287
13 Adjusts the steering wheel → 132
Switches the steering wheel heater on/off → 133
14 Control panel:
driver display → 278
LIM Active Distance Assist DISTRONIC and variable limiter → 231
15 Diagnostics connection → 31
16 Opens the bonnet → 336
17 Electric parking brake → 215

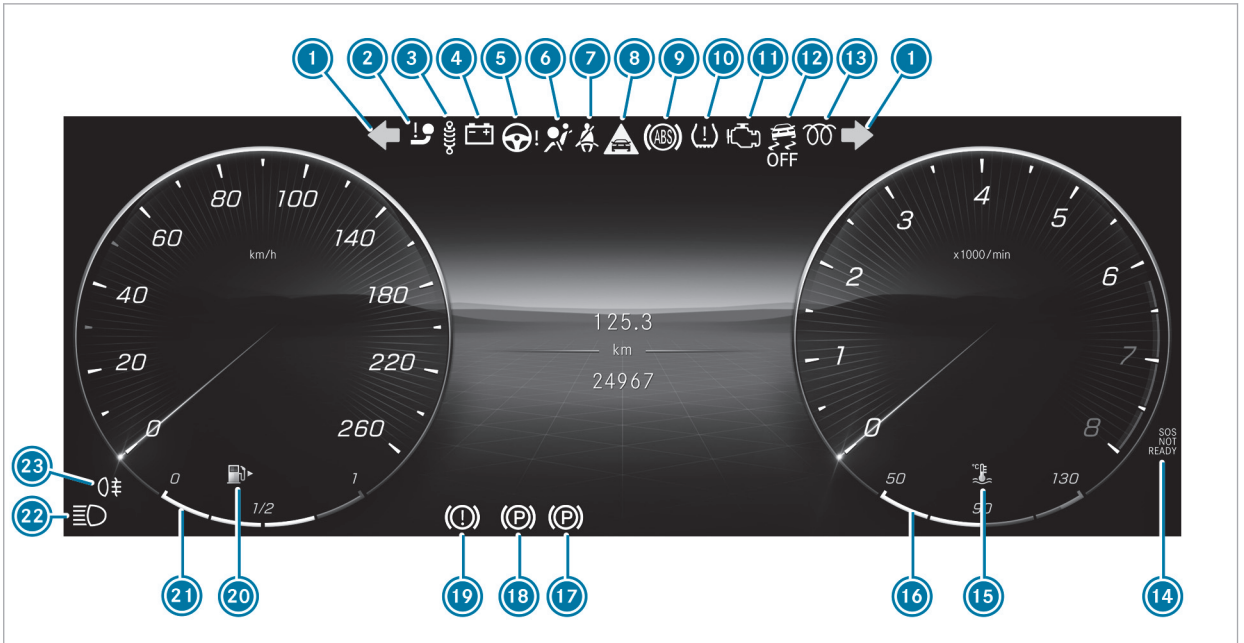

Driver display (standard)

P223 0210 02


1	Turn signal lights	→ 161
2	Indicator lamp inoperative	
3	Suspension (red)	→ 532
	Suspension (yellow)	→ 532
4	Electrical fault	→ 527
5	Power steering (red)	→ 525
	Power steering (yellow)	→ 525
	Rear-axle steering (red)	→ 525
	Rear-axle steering (yellow)	→ 525
6	Restraint system	→ 524
7	Seat belt	→ 524
8	Distance warning	→ 532
9	ABS	→ 534
10	Tyre pressure monitoring system	→ 537
11	Engine diagnostics	→ 527
12	ESP® OFF	→ 534
	ESP®	→ 534
13	Indicator lamp inoperative	
14	Mercedes me connect	→ 536
15	Coolant temperature	→ 527
16	Coolant temperature display	
17	Electric parking brake (yellow)	→ 530
18	Electric parking brake (red)	→ 530
19	Brakes (red)	→ 530
	Brakes (yellow)	→ 530
20	Reserve fuel with fuel filler flap location indicator	→ 527
21	Fuel level	
22	High beam	→ 161
	Low beam	→ 159
	Standing lights	→ 159
23	Rear fog light	→ 160

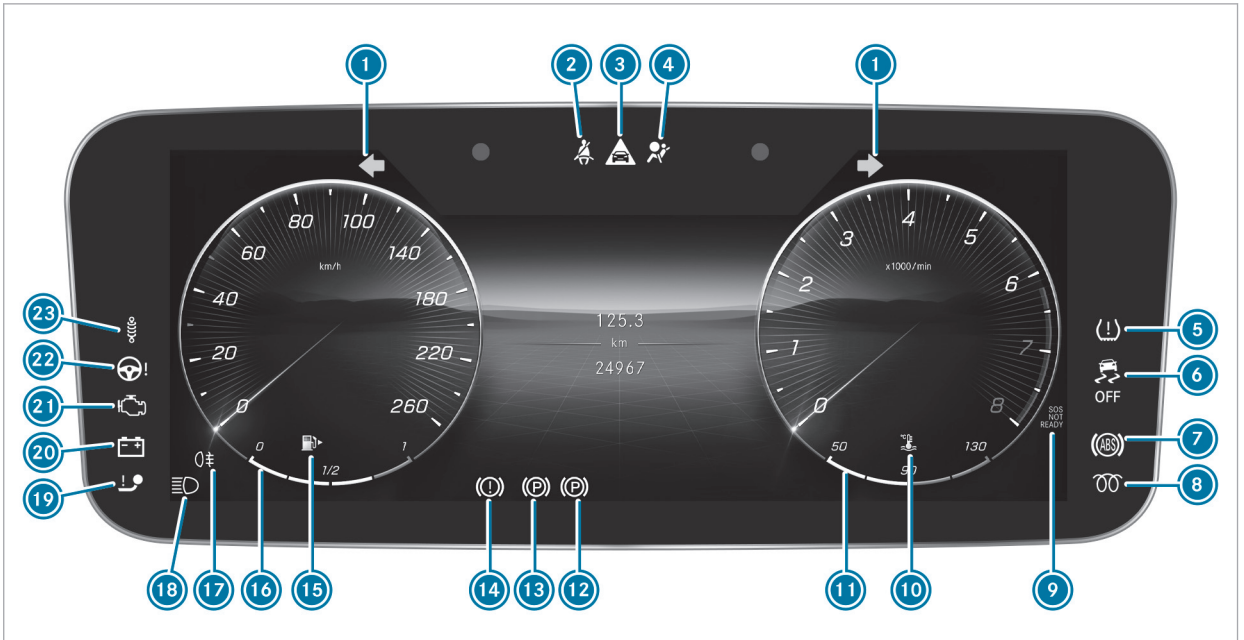

Driver display with driver camera


P223 0210 02

1	Turn signal lights	→	161
2	Seat belt	→	524
3	Distance warning	→	532
4	Restraint system	→	524
5	Tyre pressure monitoring system	→	537
6	ESP® OFF	→	534
	ESP®	→	534
7	ABS	→	534
8	Indicator lamp inoperative		
9	Mercedes me connect	→	536
10	Coolant temperature	→	527
11	Coolant temperature display		
12	Electric parking brake (yellow)	→	530
13	Electric parking brake (red)	→	530
14	Brakes (red)	→	530
	Brakes (yellow)	→	530
15	Reserve fuel with fuel filler flap location indicator	→	527
16	Fuel level		
17	Rear fog light	→	160
18	High beam	→	161
	Low beam	→	159
	Standing lights	→	159
19	Indicator lamp inoperative		
20	Electrical fault	→	527
21	Engine diagnostics	→	527
22	Power steering (red)	→	525
	Power steering (yellow)	→	525
	Rear axle steering (red)	→	525
	Rear axle steering (yellow)	→	525
23	Suspension (red)	→	532
	Suspension (yellow)	→	532

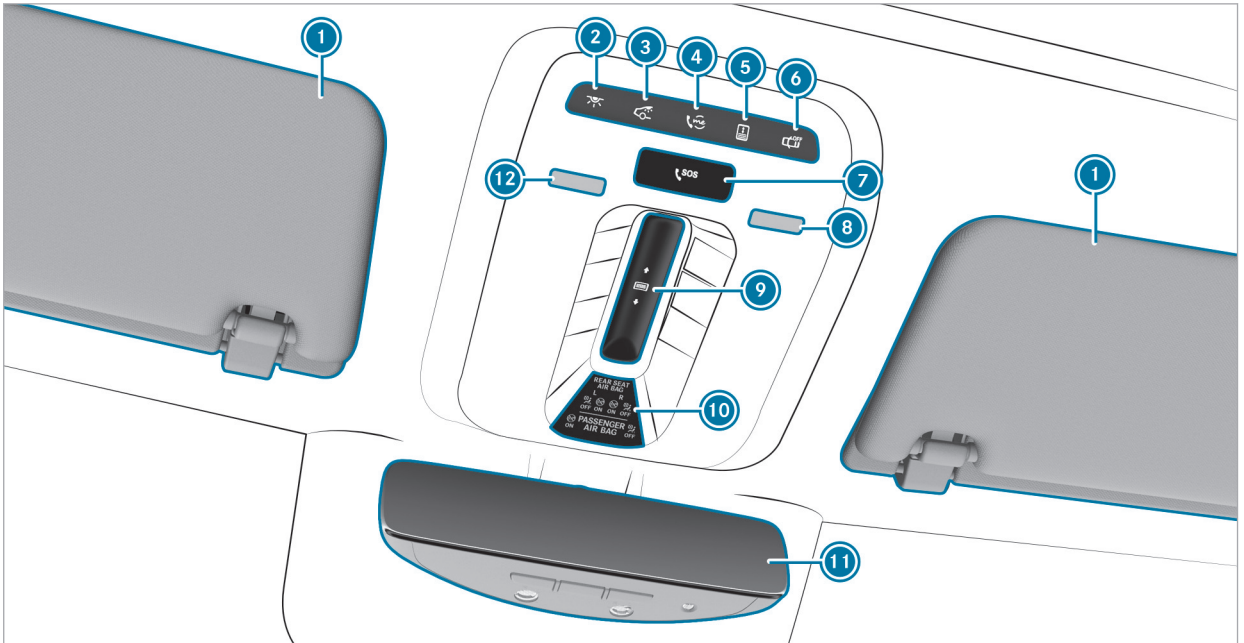


P223 0210 02

1	Sun visors		
2	Switches the front interior lighting on/off	→	168
3	Switches the rear interior lighting on/off	→	168
4	me button	→	314
5	Opens/closes the panorama sliding sunroof rear roller sunblind	→	103
6	Switches automatic interior lighting control on/off	→	168
7	SOS button	→	314
8	Switches the right-hand reading lamp on/off	→	168
9	Opens/closes the panorama sliding sunroof	→	103
	Opens/closes the panorama sliding sunroof front roller sunblind	→	103
10	Indicator lamps:		
	PASSENGER AIRBAG	→	52
	REAR SEAT AIRBAG	→	56
11	Inside rearview mirror	→	174
12	Switches the left-hand reading lamp on/off	→	168

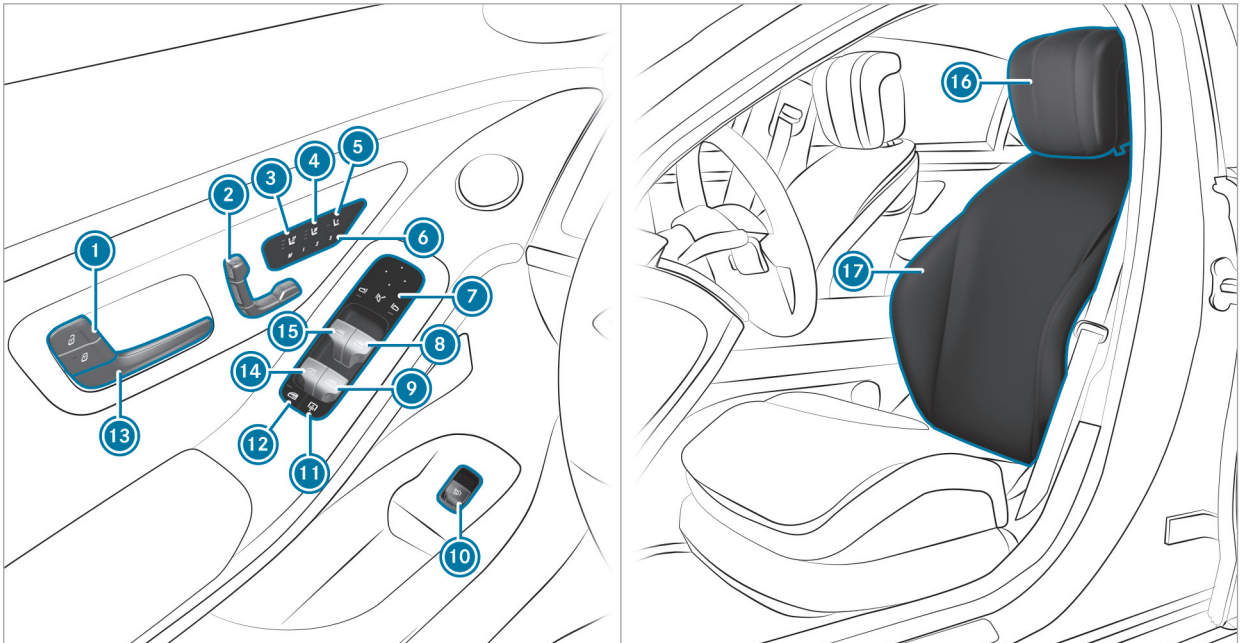

P223 0210 02


1	Locks/unlocks the vehicle	→ 86
2	Adjusts the seats electrically	→ 113
3	Switches the seat heating on/off	→ 130
4	Switches the seat ventilation on/off	→ 131
5	Adjusts the front passenger seat from the driver's seat	→ 116
6	Operates the memory function	→ 136
7	Operates the outside mirrors	→ 173
8	Opens/closes the right side window	→ 99
9	Opens/closes the rear right side window	→ 99
10	Opens/closes the boot lid	→ 93
11	Rear-window roller sunblind	→ 108
12	Child safety lock for the rear side windows	→ 79
13	Opens the door	→ 86
14	Opens/closes the rear left side window	→ 99
15	Opens/closes the left side window	→ 99
16	Adjusts the head restraints	→ 124
17	Seat adjustment using the multimedia system	→ 128

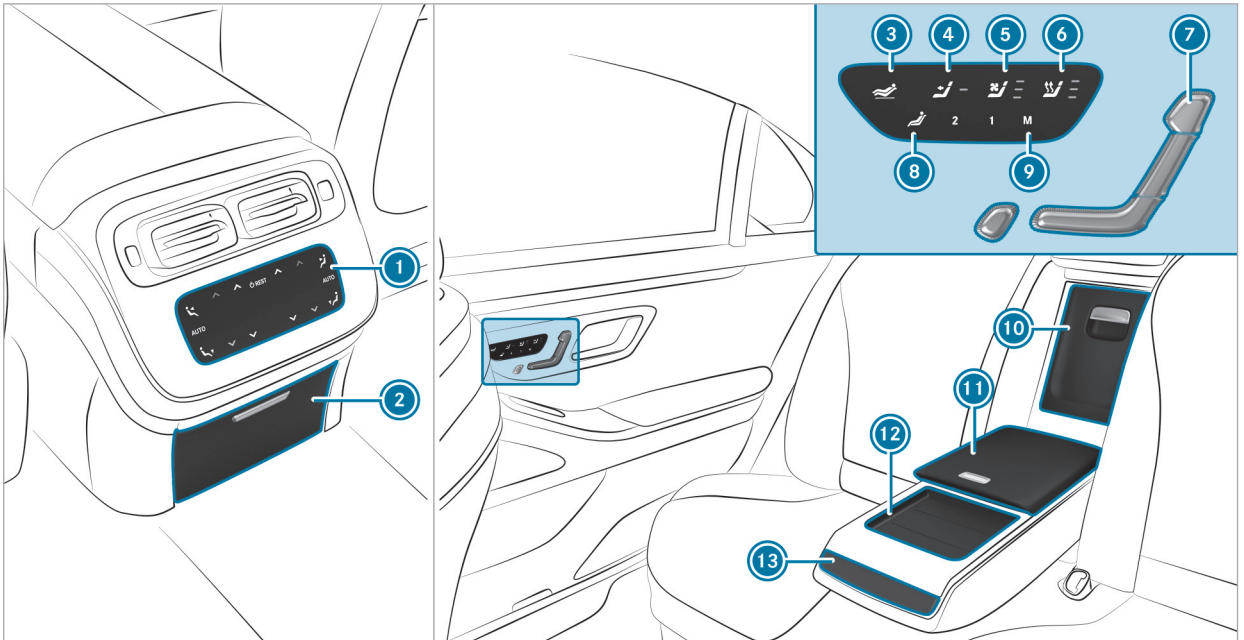

Vehicles with a reclining rear seat

P223 0210 02

1	Climate control rear operating unit	→	178
2	Electronics compartment in the centre console		
	230 V socket	→	150
3	Sets the fully reclined position	→	118
4	Selects the front passenger seat	→	117
5	Switches the rear seat ventilation on/off	→	131
6	Switches the rear seat heating on/off	→	130
7	Adjusts the reclining rear seats electrically	→	117
8	Resets the standard seat adjustment settings	→	118
9	Memory function in the rear compartment	→	137
10	Stowage box in the seat backrest		
	Refrigerator box	→	152
11	Stowage compartment in the rear armrest		
12	MBUX rear tablet bracket		
13	Cup holder		

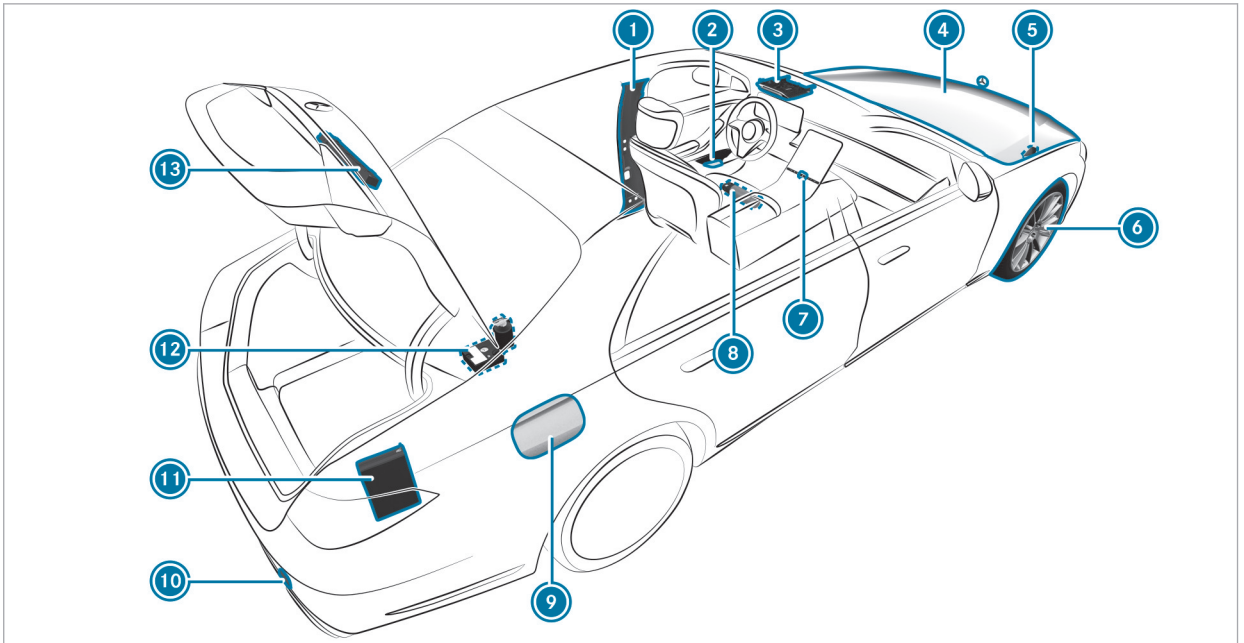

P223 0210 02

1	B-pillar with:		
	QR code for accessing the rescue card	→	34
2	Safety vests	→	348
3	me button	→	314
	SOS SOS button	→	314
4	To check and top up operating fluids	→	461
	Starting assistance	→	359
5	Tow-starting or towing away	→	362
6	Flat tyre	→	350
7	Hazard warning light system	→	162
8	Fire extinguisher	→	349
9	Fuel filler flap with:		
	information label on fuel type	→	209
	information label on tyre pressure	→	371
	QR code for accessing the rescue card	→	34
10	Tow-starting or towing away	→	362
11	First-aid kit (soft sided)	→	349
12	TIREFIT kit	→	351
13	Warning triangle	→	348

Calling up the Digital Owner's Manual

Multimedia system:


→ ⌂ ▸▸ Settings ▸▸ Info
▸▸ Owner's Manual
▸▸ Open Digital Owner's Manual

The Digital Owner's Manual describes the functions and operation of the vehicle and the multimedia system.

▶ Select one of the following menu items in the Digital Owner's Manual:

- Quick start: find the first steps towards setting up your vehicle.
- Tips: find information that prepares you for certain everyday situations with your vehicle.
- Animations: watch animations of the vehicle functions.
- Messages: receive additional information about the messages in the driver display.
- Language: select the language for the Digital Owner's Manual.

You can search for keywords using the search field Search, in order to find quick answers to questions about the operation of the vehicle.

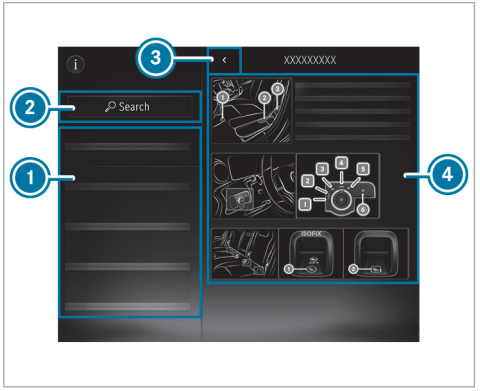

① Menu
② Search
③ Back
④ Contents section

Some sections in the Digital Owner's Manual, such as warning notes, can be expanded and collapsed.

Additional methods of calling up the Digital Owner's Manual:

Driver display: call up brief information as display messages in the instrument cluster

MBUX Voice Assistant: call up via the voice control system

Global search: call up search results for contents of the Digital Owner's Manual in the home screen

For safety reasons, the Digital Owner's Manual is deactivated while driving.

ⓘ With automatic content updates, you can always keep the Digital Owner's Manual up to date. This function is country-dependent.

Protection of the environment

ENVIRONMENTAL NOTE Environmental damage due to operating conditions and personal driving style

The pollutant emission of the vehicle is directly related to the way you operate the vehicle.

Operate your vehicle in an environmentally responsible manner to help protect the environment. Please observe the following recommendations on operating conditions and personal driving style.

Operating conditions:

- Make sure that the tyre pressure is correct.
- Do not carry any unnecessary weight.
- Adhere to the service intervals.
  A regularly serviced vehicle will contribute to environmental protection.
- Always have maintenance work carried out at a qualified specialist workshop.

Personal driving style:

- Do not depress the accelerator pedal when starting the engine.
- Do not warm up the engine while the vehicle is stationary.
- Drive carefully and maintain a suitable distance from the vehicle in front.
- Avoid frequent, sudden acceleration and braking.
- Change gear in good time and use each gear only up to ⅔ of its maximum engine speed.
- Switch off the engine in stationary traffic, e.g. by using the ECO start/stop function.
- Drive fuel-efficiently. Observe the ECO display for an economical driving style.

Take-back of end-of-life vehicles

EU countries only:
Mercedes-Benz will take back your end-of-life vehicle for environment-friendly disposal in accordance with the European Union (EU) End-of-Life Vehicles Directive.

A network of vehicle take-back points and dismantlers has been established for you to return your vehicle. You can leave it at any of these points free of charge. This makes an important contribution to closing the recycling circle and conserving resources.

For further information about the recycling and disposal of end-of-life vehicles, and the take-back conditions, please visit the national Mercedes-Benz website for your country.

Mercedes-Benz GenuineParts

ENVIRONMENTAL NOTE Environmental damage caused by not using recycled reconditioned components

Mercedes-Benz AG offers recycled reconditioned components and parts with the same quality as new parts. The same entitlement from the implied warranty is valid as for new parts.

- ▶ Recycled reconditioned components and parts from Mercedes-Benz AG.

NOTE Impairment of the operating efficiency of the restraint systems from installing accessory parts or from repairs or welding

Airbags and seat belt tensioners, as well as control units and sensors for the restraint systems, may be installed in the following areas of your vehicle:

- doors
- door pillars
- door sills
- seats
- cockpit
- instrument cluster
- centre console
- lateral roof frame

- ▶ Do not install accessory parts such as audio systems in these areas.
- ▶ Do not carry out repairs or welding.
- ▶ Have accessories retrofitted at a qualified specialist workshop.

You could jeopardise the operating safety of your vehicle if you use parts, tyres and wheels as well as accessories relevant to safety which have not been approved by Mercedes-Benz. Safety-relevant systems, e.g. the brake system, may malfunction. Only use Mercedes-Benz GenuineParts or parts of equal quality. Only use tyres, wheels and accessories that have been specifically approved for your vehicle model.

Mercedes-Benz tests original parts and conversion parts and accessories that have been specifically approved for your vehicle model for their reliability, safety and suitability. Despite ongoing market research, Mercedes-Benz is unable to assess other parts. Mercedes-Benz therefore accepts no responsibility for the use of such parts in Mercedes-Benz vehicles, even if they have been officially approved or independently approved by a testing centre.

Certain parts are only officially approved for installation or modification if they comply with legal requirements. All Mercedes-Benz GenuineParts meet the approval requirements. The use of non-approved parts may invalidate the vehicle's general operating permit.

This is the case in the following situations:

- the vehicle type is different from that for which the vehicle's general operating permit was granted.
- other road users could be endangered.
- the exhaust gas or noise level gets worse.

Always specify the vehicle identification number (VIN) (⟶ page 459) when ordering Mercedes-Benz GenuineParts.

Owner's Manual

This Owner's Manual describes all models and all standard and optional equipment available for your vehicle at the time of this Owner's Manual going to press. Country-specific differences are possible. Note that your vehicle may not be fitted with all features described. This is also the case for systems and functions relevant to safety. Therefore, the equipment on your vehicle may differ from that in the descriptions and illustrations.

The original purchase agreement for your vehicle contains a list of all of the systems in your vehicle.

Should you have any questions concerning equipment and operation, please consult a Mercedes-Benz Service Centre.

The Owner's Manual and Service Booklet are important documents and should be kept in the vehicle.

Touch-sensitive controls

In addition to conventional switches and buttons, your vehicle is equipped with touch-sensitive controls.

These are located in the following areas of your vehicle:

- Roof and door control panel
- Climate control
- Steering wheel
- MBUX multimedia system

The controls have touch-sensitive user interface surfaces. The surfaces are controlled by pressing or swiping to adjust settings or to trigger functions, for example.

In the area of the touchscreen, you also receive haptic feedback in the form of a pulse or a vibration, or the surface structure changes on the touch-sensitive user interface surface, for example.

You receive haptic feedback in the following situations, for example:

- When pressing a button on the user interface surface
- When scrolling in a list or table
- When reaching a new area on the user interface surface, e.g. a pop-up window

When handling touch-sensitive user interface surfaces, observe the following points to avoid problems operating:

- Do not affix stickers or similar objects on the surfaces.
- Keep the surfaces protected from moisture and wet conditions.
- Keep the surfaces free of dust and dirt.

Some touch-sensitive control elements have a symbol and integrated indicator lamps. When operating, make sure to press on the symbol of the control element.

Operating safety

WARNING Risk of injury due to malfunctions or system failure

In order to avoid malfunctions or system failures:

- Always have the specified service/maintenance work as well as any necessary repairs carried out at a qualified specialist workshop.

WARNING Risk of accident or injury due to improper modifications to electronic components

Modifications to electronic components, their software or wiring can impair their functionality and/or the functionality of other networked components or safety-relevant systems.

This can endanger the vehicle's operating safety.

- You must not tamper with wiring, electronic components, or their software.
- Always have work on electrical and electronic devices carried out at a qualified specialist workshop.

If you modify the on-board electronics, the general operating permit is rendered invalid.

Observe the "On-board electronics" section in "Technical data".

WARNING Risk of fire due to flammable materials on hot parts of the exhaust system

Flammable material such as leaves, grass or twigs may ignite if they come into contact with hot parts of the exhaust system.

- When driving on unpaved roads or off-road, regularly check the vehicle underside.
- Remove trapped plants or other flammable material, in particular.
- If there is damage, consult a qualified specialist workshop immediately.

NOTE Damage to the vehicle due to driving too fast and due to impacts to the vehicle underbody or suspension components

In the following situations, in particular, there is a risk of damage to the vehicle:

- the vehicle becomes grounded, e.g. on a high kerb or an unpaved road
- the vehicle is driven too fast over an obstacle, e.g. a kerb, speed bump or pothole
- a heavy object strikes the underbody or suspension components

In situations such as these, damage to the body, underbody, suspension components, wheels or tyres may not be visible. Components damaged in this way can unexpectedly fail or, in the case of an accident, may no longer absorb the resulting force as intended.

If the underbody panelling is damaged, flammable materials such as leaves, grass or twigs can collect between the underbody and the underbody panelling. These materials may

ignite if they come into contact with hot parts of the exhaust system.

- Have the vehicle checked and repaired immediately at a qualified specialist workshop.

or

- If driving safety is impaired while continuing your journey, pull over and stop the vehicle immediately, while paying attention to road and traffic conditions, and contact a qualified specialist workshop.

Vehicles with a 48 V on-board electrical system (EQ Boost technology)

⚠ **DANGER** Risk of fatal injury by touching damaged high-voltage components


Vehicles with a 48 V on-board electrical system contain individual high-voltage components. These high-voltage components are under high voltage.

If you modify component parts of these high-voltage components or touch damaged component parts, you may be electrocuted.

High voltage components may be damaged in an accident, although the damage may not be visible.

- Never perform modifications to component parts of high-voltage components.
- Never touch damaged component parts of high-voltage components.
- Never touch component parts of high-voltage components after an accident.

Vehicles with a 48 V on-board electrical system contain high voltage components. These components are marked with a high voltage label:

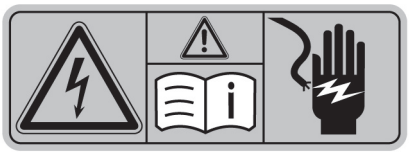

All work on high voltage components must be carried out at a qualified specialist workshop.

Declaration of conformity

Electromagnetic compatibility

The electromagnetic compatibility of the vehicle components has been checked and certified according to the currently valid version of Regulation UN R10.

Wireless vehicle components

For EU and EFTA countries only:
The following information applies to all wireless components of the vehicle and of the information systems and communication devices integrated in the vehicle:

The manufacturers of the wireless components ensure that all wireless components installed in the vehicle comply with Directive 2014/53/EU. The full texts of the EU declarations of conformity are available at the following website: https://moba.i.daimler.com/markets/ece-row/baix/cars/certificates-of-conformity/en_GB/index.html



You can obtain further information from a Mercedes-Benz service centre.

Brazil only:
Note on the two-way radio systems in the vehicle:

These systems are not protected from harmful interference and must not cause interference in duly approved systems.

Nigeria only:
Connection and use of the wireless communication equipment in this vehicle are permitted by the Nigerian Communications Commission.

Ukraine only:
The manufacturer hereby declares that the wireless vehicle components meet the technical regulations for two-way radios. You can obtain further information from a Mercedes-Benz Service Centre.

Wireless applications in the vehicle
Besides the typical frequencies for mobile communications, cars from Mercedes-Benz make use of the following automotive radio applications:

Wireless applications in the vehicle

Technology	Frequency range	Transmission output/magnetic field strength
Convenience central locking system	20 kHz (9–90 kHz)	≤ 72 dBµA/m at 10 m
Wireless power transmission	105 kHz (90–119 kHz)	≤ 42 dBµA/m at 10 m

Technology	Frequency range	Transmission output/magnetic field strength
Convenience central locking system, Wireless power transmission	125 kHz (119–135 kHz) 127 kHz (119–135 kHz)	≤ 42 dBµA/m at 10 m ≤ 55.77 dBµA/m at 10 m
Near-field communication	13.553–13.567 MHz	≤ 42 dBµA/m at 10 m
Convenience central locking system, garage door opener, tyre pressure monitoring system	433 MHz (433.05–434.79 MHz)	≤ 10 mW ERP
Heater booster function remote control, garage door opener	868 MHz (868.0–868.6 MHz)	≤ 25 mW ERP
Heater booster function remote control, garage door opener	869 MHz (868.7–869.2 MHz)	≤ 25 mW ERP
Bluetooth®, Kleer, RLAN, wireless headphones	2.4 GHz ISM band (2400–2483.5 MHz)	≤ 100 mW EIRP
RLAN	5 GHz	≤ 25 mW EIRP
Sensor for interior protection, RLAN	5.8 GHz UNII-3 (5725–5875 MHz)	≤ 25 mW EIRP
Convenience central locking system	7.25 GHz UWB (6.0–8.5 GHz)	≤ -41.3 dBm/MHz EIRP mean ≤ 0 dBm/MHz EIRP peak
76 GHz radar	76–77 GHz	≤ 55 dBm peak EIRP

Technology	Frequency range	Transmission output/magnetic field strength
Carsharing module	**NFC:** 13.553–13.567 MHz **Bluetooth®:** 2402–2480 MHz	**NFC:** ≤ 42 dBµA/m at 10 m **Bluetooth®:** ≤ +4 dBm (power category 2)
Two-way radio (Tel7 telephone control unit)	E-GSM (900 MHz) GSM (1800 MHz)	+33 dBm +30 dBm
	UMTS (Band I) UMTS (Band III) UMTS (Band VIII)	+24 dBm (+1/-3 dB) +24 dBm (+1/-3 dB) +24 dBm (+1/-3 dB)
	LTE (Band 1) LTE (Band 3) LTE (Band 7) LTE (Band 8) LTE (Band 20) LTE (Band 28)	+23 dBm (±2 dB) +23 dBm (±2 dB) +23 dBm (±2 dB) +23 dBm (±2 dB) +23 dBm (±2 dB) +23 dBm (±2 dB)
Two-way radio (Router And Mobile SErviceS)	GSM (E-GSM 850 / E-GSM 900, Class 4) GSM (E-GSM 1800 / E-GSM 1900, Class 4)	< +32.5 dBm (±1 dB) < +29.5 dBm (±1 dB)

Technology	Frequency range	Transmission output/magnetic field strength
	UMTS (WCDMA FDD I, II, III, IV, V, VIII, XIX Class 3)	< + 23.5 dBm (±1 dB)
	LTE (FDD B1, Class 3)	< + 23 dBm (±1 dB)
	LTE (FDD B2, Class 3)	< + 23 dBm (±1 dB)
	LTE (FDD B3, Class 3)	< + 23 dBm (±1 dB)
	LTE (FDD B4, Class 3)	< + 23 dBm (±1 dB)
	LTE (FDD B5, Class 3)	< + 23 dBm (±1 dB)
	LTE (FDD B7, Class 3)	< + 23 dBm (±1 dB)
	LTE (FDD B8, Class 3)	< + 23 dBm (±1 dB)
	LTE (FDD B9, Class 3)	< + 23 dBm (±1 dB)
	LTE (FDD B18, Class 3)	< + 23 dBm (±1 dB)
	LTE (FDD B19, Class 3)	< + 23 dBm (±1 dB)
	LTE (FDD B21, Class 3)	< + 23 dBm (±1 dB)
	LTE (FDD B28, Class 3)	< + 23 dBm (±1 dB)
	LTE (TDD B38, Class 3)	< + 23 dBm (±1 dB)
	LTE (TDD B40, Class 3)	< + 23 dBm (±1 dB)
	LTE (TDD B41, Class 3)	< + 23 dBm (±1 dB)
	GNSS (1559–1610 MHz)	Receiving only

P223 0210 02

Information about the specific absorption rate
For France only:

The values were determined and tested in accordance with the Décret n° 2019-1186 guideline regarding the indication of the specific absorption rate (SAR) of wireless vehicle components.

Information about the specific absorption rate

Vehicle component (designation in accordance with EU DoC)	SAR value in W/kg
Radio data transmission telephone system	< 0.4 W/kg
Hermes 2.1	< 0.4 W/kg
Compensator ECE DE003 & ECE DE004	< 0.4 W/kg
Tablet PC SM-T230NZ	< 0.82 W/kg
DAI RSE	< 1.8 W/kg

Jack

Copy and translation of the original declaration of conformity:

EC declaration of conformity

1.

The undersigned, representing

Manufacturer:

BRANO a.s.

747 41 Hradec nad Moravicí, Opavská 1000,

The Czech Republic

ID No.: 64-387-5933

VAT No.: CZ64-387-5933

herewith declares under our sole responsibility that the product:

2. a)

Name:

Car jack

Type, Number:

A) A 164 580 02 18, A 166 580 01 18

B) A 240 580 00 18

C) A 639 580 02 18

D) A 639 580 03 18

E) A 910 580 00 00

F) A 293 580 00 00

Year of manufacture: 2020

Complies with all relevant provisions

Directive No. 2006/42/EC

b)

Description and purpose of use:

Car jack is intended solely for lifting of the concrete car, in accordance with the instruction label on the car jack.

3.

References of harmonized and other standards or specifications

ISO 4063, EN ISO 14341-A, AS 2693, DBL 8230.10, DBL 7382.20, DBL 7392.10, DBL 8451.15, MBN 10435,

Technical documentation of the product is stored at the premise of the manufacturer. The person responsible for assembling the technical documentation of the product: Head of the Technical Department Brano a.s.

4.

Hradec nad Moravicí

Place

5.

11/5/2020

Date

Engineer Petr Wozniak

[Signature]

Director of Quality

TIREFIT kit

Copy and translation of the original declaration of conformity:

EC declaration of conformity

In accordance with EC Directive 2006/42/EC

We hereby declare that the product

Product designation: Daimler electric air pump

Model designation: 0872, DT/UW 200077 - IBK-LK2P

MB part no.: A 000 583 9204

complies with the following relevant regulations:

2014/30/EU

Applied harmonised standards, in particular:

DIN EN 55014-1: 2017

DIN EN 55014-2: 2015

Manufacturer: Dunlop Tech GmbH

Address: Offenbacher Landstrasse. 8, 63456 Hanau

Authorised representative: IMS dept.

Date: March 2020

Signature: IMS-AE, IMS-AE-L

Diagnostics connection

The diagnostics connection is a technical interface in the vehicle. It is used, for example, within the scope of repair and maintenance work or for reading out vehicle data by a specialist workshop. Diagnostic devices should therefore only be connected by a qualified specialist workshop.

WARNING Risk of accident due to connecting devices to the diagnostics connection

If you connect devices to the diagnostics connection of the vehicle, the function of vehicle systems and operating safety may be impaired.

- For safety reasons, we recommend that you only use and connect products approved by your Mercedes-Benz service centre.

WARNING Risk of accident due to objects in the driver's footwell

Objects in the driver's footwell may impede pedal travel or block a depressed pedal.


This jeopardises the operating and road safety of the vehicle.

- Stow all objects in the vehicle securely so that they cannot get into the driver's footwell.
- Always fit the floor mats securely and as prescribed in order to ensure that there is always sufficient room for the pedals.
- Do not use loose floor mats and do not place floor mats on top of one another.

NOTE Battery discharging from using devices connected to the diagnostics connection

Using devices at the diagnostics connection drains the battery.

- Check the charge level of the battery.
- If the charge level is low, charge the battery, e.g. by driving a considerable distance.

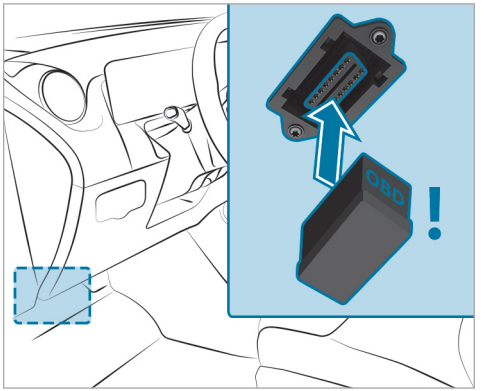

Connecting and using another device with the diagnostics connection can have the following effects:

- malfunctions in the vehicle system
- permanent damage to vehicle components

Please refer to the warranty terms and conditions for this matter.

Moreover, connecting equipment to the diagnostics connection can lead to emissions monitoring information being reset, for example. This may lead to the vehicle failing to meet the requirements of the next emissions inspection during the main inspection.

Qualified specialist workshop

A qualified specialist workshop has the necessary special skills, tools and qualifications to correctly carry out any necessary work on your vehicle. This particularly applies to safety-relevant works.

Always have the following work carried out on your vehicle at a qualified specialist workshop:

- safety-relevant works
- service and maintenance work
- repair work
- modifications as well as installations and conversions
- work on electronic components
- **vehicles with 48 V on-board electrical system (EQ boost technology):** work on high voltage components of the 48 V on-board electrical system

Mercedes-Benz recommends a Mercedes-Benz service centre.

Vehicle registration

Mercedes-Benz may ask its service centres to carry out technical inspections on certain vehicles. The quality or safety of the vehicle is improved as a result of the inspection.

Mercedes-Benz can only inform you about vehicle checks if Mercedes-Benz has your registration data.

It is possible that your vehicle has not yet been registered in your name in the following cases:

- if your vehicle was not purchased at an authorised specialist dealer.
- if your vehicle has not yet been examined at a Mercedes-Benz service centre.

It is advisable to register your vehicle with a Mercedes-Benz service centre.

Inform Mercedes-Benz as soon as possible about any change in address or vehicle ownership. You can do this at a Mercedes-Benz service centre, for example.

Correct use of the vehicle

If you remove any warning stickers, you or others could fail to recognise certain dangers. Leave warning stickers in position.

Observe the following information in particular when driving your vehicle:

- the safety notes in this manual
- technical data for the vehicle
- traffic rules and regulations
- laws and safety standards pertaining to motor vehicles

Information on the REACH regulation

EU and EFTA countries only:

the REACH regulation (Regulation (EC) No. 1907/2006, Article 33) stipulates a duty to sup-

ply information about substances of very high concern (SVHCs).

Mercedes-Benz AG acts to the best of its knowledge to prevent these SVHCs from being used and to enable customers to safely handle these substances. There are SVHCs known to Mercedes-Benz AG, according to supplier information and internal product information, found in individual components of this vehicle in quantities of over 0.1 percent by weight.

Further information can be obtained at the following addresses:

- https://reach.daimler.com/de/home/
- https://reach.daimler.com/en/home/

Notes for persons with electronic medical aids

Mercedes-Benz AG cannot, despite carefully developing vehicle systems, completely rule out the interaction of vehicle systems with electronic medical aids such as cardiac pacemakers.

In addition, there are components installed in the vehicle that, regardless of the operating status of the vehicle, can generate magnetic fields on a par with permanent magnets. These fields can be found, for example, in the area around the multimedia and sound system or also in the area of the seats, depending on the vehicle equipment.

For this reason, the following can occur in isolated cases, depending on the aids used:

- Medical aids malfunctioning
- Adverse health effects

Observe the notes and warnings of the manufacturer of the medical aids; if in doubt, contact the device manufacturer and/or your doctor. If there is continuing uncertainty concerning the possibility of medical aids malfunctioning, Mercedes-Benz AG recommends using only few electrical vehicle systems and/or maintaining a distance from the components.

Only have repairs and maintenance work in the area of the following components carried out by a qualified specialist workshop:

- vehicle components carrying live voltage
- transmission aerials
- multimedia system and sound system

If you have any queries or suggestions, consult a qualified specialist workshop.

Implied warranty

! **NOTE** Damage to the vehicle arising from violation of these operating instructions.

Damage to the vehicle can arise from violation of these operating instructions.

This damage is not covered either by the Mercedes-Benz implied warranty or by the New- or Used-Vehicle Warranty.

▶ Follow the instructions in these operating instructions on proper operation of your vehicle as well as on possible vehicle damage.

QR code for rescue card

QR codes are attached in the fuel filler flap and on the opposite side on the B-pillar. In the event of an accident, rescue services can use the QR code to quickly find the appropriate rescue card for

your vehicle. The current rescue card contains the most important information about your vehicle in a compact form, e.g. the routing of the electric lines.

Further information can be obtained at https://www.mercedes-benz.de/qr-code.

Data storage

Data processing in the vehicle

Electronic control units

Electronic control units are fitted in your vehicle. Control units process data which, for example, they receive from vehicle sensors, generate themselves or exchange between themselves. Some control units are required for the safe operation of your vehicle, some assist you when driving, such as driver assistance systems, while others enable convenience or infotainment functions.

The following provides you with general information regarding data processing in the vehicle. Additional information regarding exactly which data in your vehicle are collected, saved and transmitted to third parties and for what purpose, can be found in the information directly related to the functional characteristics in question in their respective operating instructions. This information is also available online and, depending on the vehicle equipment, digitally.

Personal data

Every vehicle is identified by a unique vehicle identification number. Depending on the country, this vehicle identification number can be used by, for example, governmental authorities to determine the identity of the owner. There are other possibilities to use data collected from the vehicle to identify the owner or driver, such as the licence plate number.

Therefore, data generated or processed by control units may be attributable to a person or, under certain conditions, become attributable to a person. Depending on which vehicle data are available, it may be possible to make inferences about, for example, your driving behaviour, your location, your route or your use patterns.

Legal requirements regarding the disclosure of data

If legally required to do so, manufacturers are, in individual cases, legally obliged to provide governmental entities, upon request and to the extent required, data stored by the manufacturer. For example, this may be the case during the investigation of a criminal offence.

Governmental entities are themselves, in individual cases and within the applicable legal framework, authorised to read out data from the vehicle. In the case of an accident, information that can help with an investigation can, therefore, be taken from the airbag control unit, for example.

Operational data in the vehicle

This is data regarding the operation of the vehicle, which have been processed by control units.

This includes the following data, for example:

- vehicle status information such as the speed, longitudinal acceleration, lateral acceleration, number of wheel revolutions or the fastened seat belts display
- ambient conditions, such as temperature, rain sensor or distance sensor

Generally, the use of these data is temporary; they will not be stored beyond the period of operation and will only be processed within the vehicle itself. Control units often contain data memories for vehicle keys, for example. Their use permits the temporary or permanent documentation of technical information about the vehicle's operating state, component loads, maintenance requirements and technical events or faults.

Depending on the vehicle equipment, the following data are stored:

- operating status of system components, such as fill levels, tyre pressure or battery status
- malfunctions or faults in important system components, such as lights or brakes
- system reactions in special driving situations, such as airbag deployment or the intervention of stability control systems
- information on events leading to vehicle damage

In certain cases, it may be required to store data that would have otherwise been used only temporarily. This may be the case if the vehicle has detected a malfunction, for example.

If you use services, such as repair services and maintenance work, stored operational data as well as the vehicle identification number can be read out and used. They can be read out by service network employees, such as workshops and manufacturers or third parties, such as breakdown services. The same is true in the case of warranty claims and quality assurance measures.

In general, the readout is performed via the legally prescribed port for the diagnostics connection in the vehicle. The operational data that are read out document technical states of the vehicle or of individual components and assist in the diagnosis of malfunctions, compliance with warranty obligations and quality improvement. To that end, these data, in particular information about component loads, technical events, malfunctions and other faults may be transmitted along with the vehicle identification number to the manufacturer. Furthermore, the manufacturer is subject to product liability. For this reason the manufacturer also uses operational data from the vehicle, for example, for recalls. These data can also be used to examine the customer's warranty and guarantee claims.

Fault memories in the vehicle can be reset by a service outlet or at your request as part of repair or maintenance work.

Convenience and infotainment functions

You can store convenience settings and individual settings in the vehicle and change or reset them at any time.

Depending on the vehicle equipment, this includes the following settings, for example:

- seat and steering wheel positions
- suspension and climate control settings
- individual settings, such as interior lighting

Depending on the selected equipment, you can import data into vehicle infotainment functions yourself.

Depending on the vehicle equipment, this includes the following data, for example:

- multimedia data, such as music, films or photos for playback in an integrated multimedia system

- address book data for use in connection with an integrated hands-free system or an integrated navigation system
- entered navigation destinations
- data about the use of Internet services

These data for convenience and infotainment functions may be saved locally in the vehicle or they may be located on a device which you have connected to the vehicle, such as a smartphone, USB flash drive or MP3 player. If you have entered these data yourself, you can delete them at any time.

This data is transmitted from the vehicle to third parties only at your request. This applies, in particular, when you use online services in accordance with the settings that you have selected.

Smartphone integration (e.g. Android Auto or Apple CarPlay®)

If your vehicle is accordingly equipped, you can connect your smartphone or another mobile end device to the vehicle. You can then control them by means of the control elements integrated in the vehicle. Images and audio from the smartphone can be output via the multimedia system. Certain information is simultaneously transferred to your smartphone. Depending on the type and integration, this includes position data, day/night mode and other general vehicle statuses. For more information please consult the Owner's Manual of the vehicle/infotainment system.

This integration allows the use of selected smartphone apps, such as navigation or music player apps. There is no further interaction between the smartphone and the vehicle; in particular, vehicle data is not directly accessible. The type of additional data processing is determined by the provider of the app being used. Which settings you can make, if any, depends on the specific app and the operating system of your smartphone.

Online services

Wireless network connection

If your vehicle has a wireless network connection, it enables data to be exchanged between your vehicle and additional systems. The wireless network connection is made possible by the vehicle's own transmitter and receiver or by a mobile end device that you have brought into the vehicle, for example, a smartphone. Online functions can be used via the wireless network connection. This includes online services and applications/apps provided to you by the manufacturer or by other providers.

Manufacturer's services

Regarding the manufacturer's online services, the individual functions are described by the manufacturer in a suitable place, for example, in the Owner's Manual or on the manufacturer's website, where the relevant data protection information is also given. Personal data may be used for the provision of online services. Data are exchanged via a secure connection, such as the manufacturer's designated IT systems. Any personal data which are collected, processed and used, other than for the provision of services, is done so exclusively on the basis of legal permission. This is the case, for example, for a legally prescribed emergency call system, a contractual agreement or when consent has been given.

You can have services and functions, some of which are subject to a fee, activated or deactiva-

ted. This excludes legally prescribed functions and services, such as an emergency call system.

Third party services

If you use online services from other providers (third parties), these services are the responsibility of the provider in question and subject to that provider's data protection conditions and terms of use. As a general rule, the manufacturer has no influence on the content exchanged.

For this reason, when services are provided by third parties, please ask the service provider in question for information about the type, extent and purpose of the collection and use of personal data.

Data protection rights

Depending on your country or the equipment and range of functions of your vehicle as well as the services you use and the services on offer, you are entitled to different data protection rights. Further information on data protection and your data protection rights can either be found on the manufacturer's website or you will receive this information as part of the various services and service offers. There you will also find the contact information for the manufacturer and its data protection officers.

At a workshop, for example, with the support of a specialist and possibly for a fee, you can have data read out which is stored only locally in the vehicle.

Copyright

Information on licences for free and open-source software used in your vehicle can be found on the data carrier in your vehicle document wallet and with updates on the following website:

https://www.mercedes-benz.com/opensource

Restraint system

Protection provided by the restraint system

The restraint system includes the following components:

- Seat belt system
- Airbags
- Child restraint system
- Child seat securing systems

The restraint system can help prevent the vehicle occupants from coming into contact with parts of the vehicle interior in the event of an accident. In the event of an accident, the restraint system can also reduce the forces to which the vehicle occupants are subjected.

A seat belt can only provide the best level of protection if it is worn correctly. Depending on the detected accident situation, seat belt tensioners and/or airbags supplement the protection offered by a correctly worn seat belt. Seat belt tensioners and/or airbags are not deployed in every accident.

In order for the restraint system to provide the intended level of protection, each vehicle occupant must observe the following information:

- Fasten seat belts correctly.
- Sit in an almost upright seat position with their back against the seat backrest.
- Sit with their feet resting on the floor, if possible.
- Always secure persons under 1.50 m tall in an additional restraint system suitable for Mercedes-Benz vehicles.

However, no system available today can completely eliminate injuries and fatalities in every accident situation. In particular, the seat belt and airbag generally do not protect against objects penetrating the vehicle from the outside. It is also not possible to completely rule out the risk of injury caused by the airbag deploying.

Reduced restraint system protection

WARNING Risk of injury or death due to modifications to the restraint system

Vehicle occupants may no longer be protected as intended if alterations are made to the restraint system.

- Never alter the parts of the restraint system.
- Never tamper with the wiring or any electronic component parts or their software.

If it is necessary to modify the vehicle to accommodate a person with disabilities, contact a qualified specialist workshop.

Mercedes-Benz recommends that you use driving aids which have been approved for your vehicle by Mercedes-Benz.

Restraint system functionality

When the ignition is switched on, a self-test is performed, during which the restraint system

warning lamp lights up. It goes out no later than a few seconds after the vehicle is started. The components of the restraint system are then functional.

Malfunctioning restraint system

A malfunction has occurred in the restraint system if:

- the restraint system warning lamp does not light up when the ignition is switched on
- the restraint system warning lamp lights up continuously or repeatedly during a journey

WARNING Risk of injury due to malfunctions in the restraint system

Components in the restraint system may be activated unintentionally or not deploy as intended in an accident.

- Have the restraint system checked and repaired immediately at a qualified specialist workshop.

Function of the restraint system in an accident

How the restraint system works depends on the severity of the impact detected and the apparent type of accident:

- Frontal impact
- Rear impact
- Side impact
- Rollover

The activation thresholds for the components of the restraint system are determined based on the evaluation of the sensor values measured at various points in the vehicle. This process is pre-emptive in nature. The triggering/deployment of the components of the restraint system must take place in good time at the start of the collision.

Factors which can only be seen and measured after a collision has occurred cannot play a decisive role in airbag deployment. Nor do they provide an indication of airbag deployment.

The vehicle may be deformed significantly without an airbag being deployed. This is the case if only parts which are relatively easily deformed are affected and the rate of vehicle deceleration is not high. Conversely, an airbag may be deployed even though the vehicle suffers only minor deformation. If very rigid vehicle parts such as longitudinal members are hit, this may result in sufficiently high levels of vehicle deceleration.

Depending on the detected deployment situation, the components of the restraint system can be activated or deployed independently of each other:

- Seat belt tensioner: frontal impact, rear impact, side impact, rollover
- Driver's airbag, front passenger airbag: frontal impact
- Knee airbag: frontal impact
- Side airbag: side impact
- Centre airbag: side impact, rollover
- Window airbag: side impact, rollover, frontal impact
- Rear airbag: frontal impact
- Belt airbag: frontal impact
- Cushionbag: frontal impact
- PRE-SAFE® Impulse Side: side impact

The front passenger airbag can only be deployed in an accident if the PASSENGER AIR BAG OFF indicator lamp is off. If the front passenger seat is occupied, make sure, both before and during the journey, that the status of the front passenger airbag is correct (⟶ page 52).

⚠ WARNING Risk of burns from hot airbag components

The airbag parts are hot after an airbag has been deployed.

- ▶ Do not touch the airbag parts.
- ▶ Have a deployed airbag replaced at a qualified specialist workshop as soon as possible.

Mercedes-Benz recommends that you have the vehicle towed to a qualified specialist workshop after an accident. Take this into account, particularly if a seat belt tensioner is triggered or an airbag deployed.

If the seat belt tensioners are triggered or an airbag is deployed, you will hear a bang, and a small amount of powder may also be released:

- The bang will not generally affect your hearing.
- In general, the powder released is not hazardous to health but may cause short-term breathing difficulties to persons suffering from asthma or other pulmonary conditions.

  Provided it is safe to do so, leave the vehicle immediately or open the window in order to prevent breathing difficulties.

Seat belts

Protection provided by the seat belt

Always fasten your seat belt correctly before starting a journey. A seat belt can only provide the best level of protection if it is worn correctly.

⚠ WARNING Risk of injury or death due to incorrectly fastened seat belt

If the seat belt is not worn correctly, it cannot perform its intended protective function.

In addition, an incorrectly fastened seat belt can also cause injuries, for example, in the event of an accident or when braking or changing direction suddenly.

- ▶ Always ensure that all vehicle occupants have their seat belts fastened correctly and are sitting properly.

Always observe the instructions about the correct driver's seat position and adjusting the seat (⟶ page 113).

In order for the correctly worn seat belt to provide the intended level of protection, each vehicle occupant must observe the following information:

- The seat belt must not be twisted and must fit tightly and snugly across the body.
- The seat belt must be routed across the centre of the shoulder and as low down across the hips as possible.
- The shoulder section of the seat belt should not touch your neck nor be routed under your arm or behind your back.
- Avoid wearing bulky clothing, e.g. a winter coat.

- Push the lap belt down as far as possible across your hips and pull tight with the shoulder section of the belt. Never route the lap belt across your abdomen.

  Pregnant women must also take particular care with this.
- Never route the seat belt across sharp, pointed, abrasive or fragile objects.
- Only one person should use each seat belt at any one time. Never allow babies and children to travel sitting on the lap of another vehicle occupant.
- Never secure objects with a seat belt if the seat belt is also being used by one of the vehicle's occupants. Always observe the instructions for loading the vehicle when securing objects, luggage or loads (→ page 139).

  Also ensure that no objects, e.g. a cushion, are ever placed between a person and the seat.

If children are travelling in the vehicle, be sure to observe the instructions and safety notes on "Children in the vehicle" (→ page 59).

Limitations of the protection provided by the seat belt

⚠ WARNING Risk of injury or death due to incorrect seat position

The seat belt will not offer the intended level of protection if you have not moved the seat backrest to an almost vertical position.

In particular, you may slip under the seatbelt and injure yourself.

- ▶ Adjust the seat properly before beginning your journey.
- ▶ Always ensure that the seat backrest is in an almost vertical position and that the shoulder section of your seat belt is routed across the centre of your shoulder.

⚠ WARNING Risk of injury or death when additional restraint systems are not used for persons with a smaller stature

Persons under 1.50 m tall cannot wear the seat belt correctly without a suitable additional restraint system.

- ▶ Always secure persons under 1.50 m tall in a suitable restraint system.

⚠ WARNING Risk of injury or death due to blocked seat belt buckle or seat belt anchorage

Objects next to the front seat that block the seat belt buckle or the moving seat belt anchorage on the front seat impair the function of the seat belt tensioners.

- ▶ Before starting the journey, make sure that there are no objects around the seat belt buckle or between the front seat and door.

WARNING Risk of injury or death due to damaged or modified seat belts

Seat belts cannot provide protection in the following situations:

- the seat belt is damaged, has been modified, is extremely dirty, bleached or dyed
- the seat belt buckle is damaged or extremely dirty
- modifications have been made to the seat belt tensioner, seat belt anchorage or seat belt retractor

Seat belts may sustain non-visible damage in an accident, e.g. due to glass splinters.

Modified or damaged seat belts could tear or fail in the event of an accident, for example.

Modified seat belt tensioners could accidentally trigger or fail to function as intended.

- Never modify the seat belt system, for example the seat belt, seat belt buckle, seat belt tensioner, seat belt anchorage and seat belt retractor.
- Make sure that the seat belts are undamaged, not worn and clean.
- Always have the seat belts checked immediately after an accident at a qualified specialist workshop.

Mercedes-Benz recommends that you use seat belts which have been approved for your vehicle by Mercedes-Benz.

WARNING Risk of injury or death from deployed pyrotechnic seat belt tensioners

Pyrotechnic seat belt tensioners that have been deployed are no longer operational and are unable to perform their intended protective function.

- Therefore, have deployed pyrotechnic seat belt tensioners immediately replaced at a qualified specialist workshop.

Mercedes-Benz recommends that you have the vehicle towed to a qualified specialist workshop after an accident.

NOTE Damage caused by trapping the seat belt

If an unused seat belt is not fully retracted, it may become trapped in the door or in the seat mechanism.

- Always ensure that an unused seat belt is fully retracted.

Information on the belt airbag in the rear seat belt

The BELTBAG identification indicates that a rear seat belt is equipped with a belt airbag.

When activated, the belt airbag increases the protected area of the vehicle occupant's ribcage.

WARNING Risk of injury or death due to use of a non-approved child restraint system

In an accident, the belt airbag may damage a non-approved child restraint system or a child restraint system which has not been approved for use in conjunction with the belt airbag.

For safety reasons, Mercedes-Benz recommends that you only use a child restraint system which has been tested and approved by Mercedes-Benz in combination with a belt airbag.

Information on child restraint systems (→ page 62).

Extending/retracting the seat belt extender in the rear

The seat belt extender for the rear seat helps you fasten your seat belt.

▶ Close the door.
The seat belt extender extends.

ⓘ If the vehicle is equipped with the MBUX Interior Assistant, the seat belt extender extends when you reach for the seat belt tongue .

The seat belt extender retracts again in the following cases:

- the seat belt tongue is engaged in the seat belt buckle
- the seat belt tongue is not engaged in the seat belt buckle within a certain time
- the respective door is opened
- a certain speed is exceeded after pulling away

⚠ **WARNING** Risk of injury or death due to an extended seat belt extender while the vehicle is in motion

If the seat belt does not sit correctly on the body, it cannot perform its intended protective function.

▶ Always ensure that the seat belt extender is retracted while the vehicle is in motion.

If the seat belt extender does not retract automatically, it can be retracted manually. To do so, press the seat belt extender back as far as it will go before starting the vehicle. Pressing the seat belt extender back into place requires force.

ⓘ You can deactivate the seat belt extender. Activate the child safety lock for the rear side windows (→ page 79).


When fitting a child restraint system to the rear seat, observe the vehicle-specific information (→ page 63).

Fastening and adjusting seat belts

If the seat belt is pulled quickly or sharply, the seat belt retractor locks. The seat belt strap cannot be pulled out any further.

Vehicles with illuminated design seat belt buckles: the illuminated seat belt buckle makes fastening your seat belt easier in certain situations, for example, when light conditions are poor.

ⓘ The illumination on the seat belt buckle does not indicate that the seat belt buckle is functioning correctly.

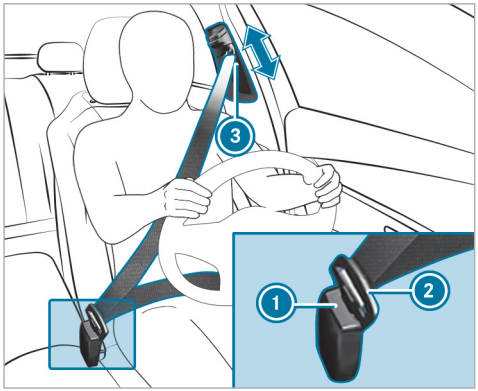

- Always engage seat belt tongue (2) of the seat belt into seat belt buckle (1) of the corresponding seat.
- Press and hold the seat belt outlet release and slide seat belt outlet (3) into the desired position.
- Let go of the seat belt outlet release and ensure that seat belt outlet (3) locks into position.

ⓘ A seat belt can only provide the best level of protection if it is worn correctly. Observe the notes on fastening the seat belt (→ page 41).

! **NOTE** Deployment of the seat belt tensioner and side impact airbag when the front passenger seat is unoccupied

If the seat belt tongue is engaged in the seat belt buckle of the unoccupied front passenger seat, the seat belt tensioner and the side impact airbag may also deploy in the event of an accident along with other systems.

- Only one person should use each seat belt at any one time.

Seat belt adjustment function

Vehicles with PRE-SAFE®: after a front seat belt has been fastened, the automatic seat belt adjustment may apply a certain tightening force. Do not hold the seat belt tightly while it is adjusting.

You can activate and deactivate the seat belt adjustment function using the multimedia system (→ page 45).

Activating/deactivating seat belt adjustment via the multimedia system

Multimedia system:

↳ ⌂ ▸▸ Settings ▸▸ Vehicle ▸▸ Occupant protection

- Activate or deactivate Belt adjustment.

Releasing seat belts

- Press the release button in the seat belt buckle and guide the seat belt back with the seat belt tongue.

Seat belt warning function for the driver and front passenger


The [🚸] seat belt warning lamp in the driver's display is a reminder that all vehicle occupants must wear their seat belts correctly.

In addition, a warning tone may sound.

As soon as the driver and front passenger fasten their seat belts, the seat belt warning goes out.

Function of the rear seat belt status display

The rear seat belt status display is only available for certain countries.

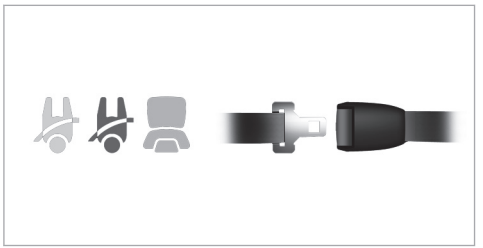

When the ignition is switched on, the rear seat belt status display informs you for a certain amount of time which rear seat belt is not fastened.

The status of the rear seat belt can be recognised by the colour of the symbol in the driver display:

- Grey: the seat belt tongue of a rear seat belt is not engaged in the seat belt buckle of the corresponding seat.
- Green: the seat belt tongue of a rear seat belt is engaged in the seat belt buckle of the corresponding seat.


  Every vehicle occupant must always fasten their seat belt correctly before starting a journey.
- Red: a vehicle occupant in the rear passenger compartment has released the seat belt buckle using the release button and may not be properly secured.

If a vehicle occupant unfastens a seat belt in the rear, the rear seat belt status display appears again.

In addition, a warning tone may sound.

Airbags


Overview of airbags

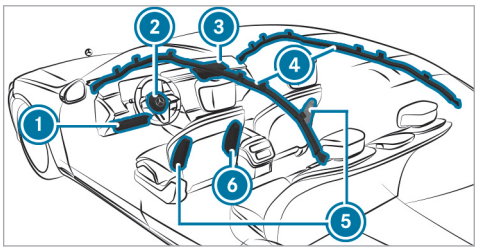

Driver's/front passenger seat

1. Knee airbag
2. Driver's airbag
3. Front passenger airbag
4. Window airbag
5. Side airbag
6. Centre airbag[1]

[1] Only for certain countries.

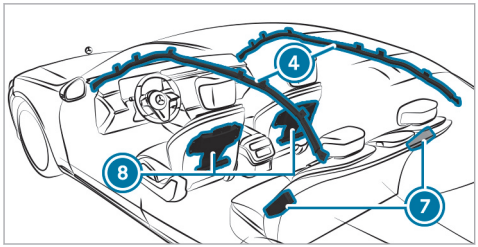

Rear seats

④ Window airbag
⑦ Side airbag
⑧ Rear airbag

The installation location of an airbag is identified by the AIRBAG symbol. An additional arrow symbol ▶ indicates the installation location for certain airbags.

When enabled, an airbag can provide additional protection for the respective vehicle occupant.

Potential protection provided by each airbag:

- Knee airbag: thigh, knee and lower leg
- Driver's airbag, front passenger airbag: head and ribcage
- Window airbag: head
- Side airbag: ribcage, also pelvis for front seat occupants
- Centre airbag: head and ribcage
- Rear airbag: head

Information on child restraint systems on the front passenger seat

⚠ **WARNING** Risk of injury or death if the co-driver airbag is enabled

If the co-driver airbag is enabled, a child on the co-driver seat may be struck by the co-driver airbag during an accident.

NEVER use a rearward-facing child restraint system on a seat with an ENABLED FRONT AIRBAG; DEATH or SERIOUS INJURY to the CHILD can occur.

When fitting a child restraint system to the front passenger seat, observe the vehicle-specific information (→ page 76). Also, always observe the notes on rearward-facing or forward-facing child restraint systems on the front passenger seat.

Information on automatic front passenger airbag shutoff

The front passenger airbag can only be deployed in an accident if the PASSENGER AIR BAG OFF indicator lamp is off. If the front passenger seat is occupied, make sure, both before and during the journey, that the status of the front passenger airbag is correct (→ page 52).

! **NOTE** Important points to remember if the front passenger seat is unoccupied

In an accident, the components of the restraint system may deploy unnecessarily on the front passenger side if:

- There are heavy objects on the front passenger seat.
- The seat belt tongue is engaged in the seat belt buckle of the front passenger seat and the front passenger seat is unoccupied.

▶ Stow objects in a suitable place.

▶ Only one person should use each seat belt at any one time.

Depending on the detected accident situation, the window airbag on the front passenger side may deploy. The airbag is deployed regardless of whether the front passenger seat is occupied.

Information on the rear airbag

Always observe the information on the rear airbag, especially in the following situations:

- A person is sitting on the outer rear seat.
- You install a child restraint system on the outer rear seat.
- You stow objects behind the front seats.

Before beginning the journey, observe the information on the rear airbag (→ page 54). Be aware of the status of the respective rear airbag depending on the situation both before and during the journey (→ page 56).

Information on the cushionbag in the reclining rear seat

The cushionbag offers additional occupant protection in the event of frontal impacts. When enabled, the cushionbag deploys under the seat cushion. This helps prevent the vehicle occupant from slipping off the seat cushion.

If you install a child restraint system on the reclining rear seat, always observe the additional notes (→ page 63).

Protective capacity of the airbags

Depending on the accident situation, an airbag may supplement the protection offered by a correctly fastened seat belt.

⚠ **WARNING** Risk of injury or death due to an incorrect seat position

If you deviate from the correct seat position, the airbag cannot perform its intended protective function.

Each vehicle occupant must make sure of the following:

- Fasten seat belts correctly. Pregnant women must take particular care to ensure that the lap belt never lies across the abdomen.
- Adopt the correct seat position and keep as far away as possible from the airbags.
- Observe the following information.

▶ Always make sure that there are no objects between the airbag and vehicle occupant.

To avoid the risks resulting from the deployment of an airbag, each vehicle occupant must observe the following information in particular:

- Before starting your journey, adjust your seat correctly; the driver's seat and front passenger seat should be moved as far back as possible.

  When doing so, always observe the information on the correct driver's seat position (→ page 113).

Vehicles with rear airbag: always observe the information on the rear airbag when the rear seat is occupied (→ page 54). The vehicle occupants should sit as far back from the airbags as possible and keep an equal distance to them.

- Only hold the steering wheel by the steering wheel rim. This allows the airbag to be fully deployed.
- Always lean against the seat backrest when the vehicle is in motion. Do not lean forwards or against the door or side window. You may otherwise be in the deployment area of the airbags.
- The occupants must always keep their feet on the floor. Do not put your feet on the cockpit, for example. Your feet may otherwise be in the deployment area of the airbag.

  Vehicles with rear airbag: always observe the information on the rear airbag when the rear seat is occupied (→ page 54).
- If children are travelling in the vehicle, observe the additional notes (→ page 59).
- Always stow and secure objects correctly.

Objects in the vehicle interior may prevent an airbag from functioning correctly. Each vehicle occupant must always make sure of the following in particular:

- There are no people, animals or objects between the vehicle occupants and an airbag.

  Vehicles with rear airbag: also observe the information on the rear airbag (→ page 54).
- There are no objects between the seat, door and door pillar (B-pillar).
- There are no hard objects, e.g. coat hangers, hanging on the grab handles or coat hooks.
- There are no accessory parts, such as mobile navigation devices, mobile phones or cup holders, within the deployment area of an airbag, e.g. on the cockpit, on the door, on the side window or on the side trim.

  In addition, no connecting cables, tensioning straps or retaining straps must be routed or attached to the vehicle within the deployment area of an airbag. Always comply with the accessory manufacturer's installation instructions and, in particular, the notes on suitable places for installation.
- There are no heavy, sharp-edged or fragile objects in the pockets of your clothing. Store such objects in a suitable place.

P223 0210 02

Limited protection provided by airbags

WARNING Risk of injury due to modifications to the cover of an airbag

If you modify the cover of an airbag or affix objects such as stickers to it, the airbag may no longer function correctly.

- Never modify the cover of an airbag and do not affix objects to it.

The installation location of an airbag is identified by the AIRBAG symbol (→ page 46).

WARNING Risk of injury or death due to the use of unsuitable seat covers

Due to unsuitable seat covers, the airbags cannot protect vehicle occupants as intended.

In addition, the operation of the automatic front passenger airbag shutoff could be restricted.

- You should only use seat covers that have been approved for the corresponding seats by Mercedes-Benz.

WARNING Risk of injury due to malfunctioning sensors in the door

The function of the airbags can be impaired due to modifications or incorrect work performed on the doors or door trim, or if the doors are damaged.

- Never modify the doors or parts of the doors.
- Always have work on the doors or door trim carried out at a qualified specialist workshop.

WARNING Risk of injury due to deployed airbag

A deployed airbag no longer offers any protection.

- Have the vehicle towed to a qualified specialist workshop in order to have the deployed airbag replaced.

Have deployed airbags replaced immediately.

Status of the front passenger front airbag

Function of the automatic front passenger airbag shutoff

The automatic front passenger airbag shutoff is able to detect whether the front passenger seat is occupied by a person or a child restraint system. The front passenger airbag is enabled or disabled accordingly.

WARNING Risk of injury or death due to objects under the co-driver seat

Objects trapped under the co-driver seat can interfere with the function of the automatic co-driver airbag shutoff or damage the system.

- Do not store any objects under the co-driver seat.
- When the co-driver seat is occupied, make sure that no objects are trapped under the co-driver seat.

When fitting a child restraint system to the front passenger seat, always make sure of the following:

- Ensure that the child restraint system is positioned correctly (→ page 63).
- Always comply with the child restraint system manufacturer's installation instructions.
- Never place objects (e.g. cushions) under or behind the child restraint system.
- Fully retract the seat cushion length adjustment.
- The entire base of the child restraint system must always rest on the sitting surface of the front passenger seat.
- The backrest of the forward-facing child restraint system must, as far as possible, be resting on the seat backrest of the front passenger seat.

- The child restraint system must not touch the roof or be put under strain by the head restraints. Adjust the seat backrest inclination and the head restraint setting accordingly.

⚠ WARNING Risk of injury or death due to objects between the seat surface and the child restraint system

Objects between the sitting surface and the child restraint system could affect the function of the automatic co-driver airbag shutoff.

- ▶ Do not place any objects between the sitting surface and the child restraint system.
- ▶ The entire base of the child restraint system must always rest on the sitting surface of the co-driver seat.
- ▶ The backrest of the forward-facing child restraint system must, as far as possible, be resting on the seat backrest of the co-driver seat.
- ▶ Always comply with the child restraint system manufacturer's installation instructions.

A person on the front passenger seat must observe the following information:

- Fasten seat belts correctly (→ page 41).
- Sit in an almost upright seat position with their back against the seat backrest.
- Sit with their feet resting on the floor, if possible.

The front passenger airbag may otherwise be disabled by mistake, for example, in the following situations:

- The front passenger transfers their weight by supporting themselves on a vehicle armrest.
- The front passenger sits in such a way that their weight is raised from the sitting surface.

⚠ WARNING Risk of injury or death due to a disabled front passenger airbag

The front passenger airbag is disabled when the PASSENGER AIR BAG OFF indicator lamp is lit.

A person in the front passenger seat could then, for example, come into contact with the vehicle interior, especially if the person is sitting too close to the cockpit.

If the front passenger seat is occupied, always ensure that:

- the classification of the person in the front passenger seat is correct and the front passenger airbag is enabled or disabled in accordance with the person in the front passenger seat.
- the front passenger seat has been moved as far back as possible.
- the person is seated correctly.

- ▶ Both before and during the journey, ensure that the status of the front passenger airbag is correct.

If the front passenger seat is occupied, the classification of the person or child restraint system on the front passenger seat takes place after the front passenger airbag shutoff self-test. The PASSENGER AIR BAG indicator lamps display the status of the front passenger airbag.

Always observe the notes on the function of the PASSENGER AIR BAG indicator lamps (→ page 52).

Function of the PASSENGER AIR BAG indicator lamps



Self-test of automatic front passenger airbag shut-off
When the ignition is switched on, a self-test is performed during which the two PASSENGER AIR BAG ON and OFF indicator lamps light up simultaneously.

The status of the front passenger airbag is displayed via the PASSENGER AIR BAG indicator lamps after the self-test:

- **ON is lit:** the front passenger airbag may deploy during an accident.

  The indicator lamp goes out after approximately 60 seconds.
- **ON and OFF are not lit:** the front passenger airbag may deploy during an accident.
- **OFF is lit:** the front passenger airbag is disabled. It will then not be deployed in the event of an accident.

If the PASSENGER AIR BAG ON indicator lamp is off, only the PASSENGER AIR BAG OFF indicator lamp shows the status of the front passenger airbag. The PASSENGER AIR BAG OFF indicator lamp may be lit continuously or be off.

If the PASSENGER AIR BAG OFF indicator lamp and the restraint system warning lamp light up simultaneously, the front passenger seat may not be used. Also in this case, do not fit a child restraint system to the front passenger seat. Have the automatic front passenger airbag shutoff checked and repaired immediately at a qualified specialist workshop.

Status display
If the front passenger seat is occupied, ensure, both before and during the journey, that the status of the front passenger airbag is correct for the current situation.

After fitting a rearward-facing child restraint system to the front passenger seat: PASSENGER AIR BAG OFF must be lit continuously.

WARNING Risk of injury or death when using a rearward-facing child restraint system while the front passenger airbag is enabled

If you secure a child in a rearward-facing child restraint system on the front passenger seat and the PASSENGER AIR BAG OFF indicator

lamp is off, the front passenger airbag can deploy in the event of an accident.

The child could be struck by the airbag.

Always ensure that the front passenger airbag is disabled. The PASSENGER AIR BAG OFF indicator lamp must be lit.

NEVER use a rearward-facing child restraint system on a seat with an ENABLED FRONT AIRBAG. This can result in the DEATH of or SERIOUS INJURY to the CHILD.

When fitting a child restraint system to the front passenger seat, observe the vehicle-specific information (⟶ page 76).

Depending on the child restraint system and the stature of the child, the PASSENGER AIR BAG OFF indicator lamp may be off. In this case, do not fit the rearward-facing child restraint system to the front passenger seat.

Instead, fit the rearward-facing child restraint system to a suitable rear seat.

After fitting a forward-facing child restraint system to the front passenger seat: depending on the child restraint system and the stature of the child, PASSENGER AIR BAG OFF may be lit continuously or be off. Always observe the following information.

⚠ **WARNING** Risk of injury or death due to incorrect positioning of the forward-facing child restraint system

If you secure a child in a forward-facing child restraint system on the front passenger seat that is positioned too close to the cockpit, in the event of an accident, the child could:

- come into contact with the vehicle interior if the PASSENGER AIR BAG OFF indicator lamp is lit, for example
- be struck by the airbag if the PASSENGER AIR BAG OFF indicator lamp is off.

▶ Always move the front passenger seat as far back as possible and fully retract the seat cushion length adjustment. While doing so, always make sure that the shoulder belt strap is correctly routed from the seat belt outlet of the vehicle to the shoulder belt guide on the child restraint system. The shoulder belt strap must be routed forwards and downwards from the seat belt outlet. If necessary, adjust the seat belt outlet and the front passenger seat accordingly.

▶ Always comply with the child restraint system manufacturer's installation instructions.

When fitting a child restraint system to the front passenger seat, observe the vehicle-specific information (⟶ page 76).

If a person is sitting on the front passenger seat: PASSENGER AIR BAG OFF may be lit continuously or be off, depending on the person's stature.

A person on the front passenger seat must always observe the following information:

- If the front passenger seat is occupied by an adult or a person with a stature corresponding to that of an adult, the PASSENGER AIR BAG OFF indicator lamp must be off. This indicates that the front passenger airbag is enabled.

  If the PASSENGER AIR BAG OFF indicator lamp is lit continuously, an adult or person

with a build corresponding to that of an adult must not use the front passenger seat.

Instead, they should use a rear seat.

- If the front passenger seat is occupied by a person of smaller stature (e.g. a teenager or small adult), the PASSENGER AIR BAG OFF indicator lamp is either lit continuously or remains off, depending on the classification.
  - If the PASSENGER AIR BAG OFF indicator lamp is off: move the front passenger seat as far back as possible, or the person of smaller stature should use a rear seat.
  - If the PASSENGER AIR BAG OFF indicator lamp is lit continuously: the person of smaller stature should not use the front passenger seat.

⚠ **WARNING** Risk of injury or death when the PASSENGER AIR BAG OFF indicator lamp is lit

If the PASSENGER AIR BAG OFF indicator lamp remains lit after the self-test, the front passenger airbag is disabled.

If the front passenger seat is occupied, always ensure that:

- The classification of the person in the front passenger seat is correct and the front passenger airbag is enabled or disabled in accordance with the person in the front passenger seat.
- The person is seated properly with a correctly fastened seat belt.
- The front passenger seat has been moved as far back as possible.

Be sure to also observe the following further related subjects:

- Child restraint system on the front passenger seat (→ page 76)
- Suitable positioning of the child restraint system (→ page 63)

Information on the rear airbag

Points to remember when the rear seat is occupied

The rear airbag offers the occupants on the outer rear seats additional occupant protection in the event of certain types frontal impacts. When triggered, the rear airbag deploys between the rear seat occupant and the front seat. The rear airbag can help prevent the occupants on the rear seats from coming into contact with parts of the vehicle interior in the event of an accident.

To avoid the risks resulting from the deployment of an airbag, observe the following information:

- Inform persons on the rear seats about the rear airbag in the front seat.
- A person sitting on the rear seat must adopt the correct seat position and sit as far back from the rear airbag as possible. Adjust the front seats when necessary so that vehicle occupants are sitting as far back from the airbag as possible and at an equal distance to them.
- Observe the notes on airbag protection (→ page 48).

To avoid risks resulting from the deployment of the airbag, vehicle occupants on the outer rear seats must observe the following information in particular:

- The occupants must always keep their feet on the floor. Otherwise, feet and legs of occupants may be in the deployment area of the rear airbag.

  If an occupant's feet cannot reach the floor, they must adopt the correct seat position and let their legs hang down the front of the seat.
- The feet or legs of the person on the rear seat must not rest against the seat backrest of the front seat, for example. Otherwise, their feet and legs are in the deployment area of the rear airbag. This should be taken into consideration especially if you are travelling with a child on the rear seat.

  If you are travelling with a child in the left or right rear seat, observe the vehicle-specific information: (→ page 70). Also, always observe the notes on rearward-facing or forward-facing child restraint systems on the left and right rear seats.
- Make sure that the covers for the rear airbags are not damaged.
- Observe the notes on limitations to the protection provided by airbags (→ page 49).

⚠ WARNING Risk of injury due to a damaged rear airbag cover

If a rear airbag cover is damaged, the rear airbag can no longer function correctly and can even cause additional injuries when deployed.

▶ Before starting a journey, make sure the covers for the rear airbags are not damaged. If a rear airbag cover is damaged, disable the rear airbag. Have a damaged rear airbag cover replaced at a qualified specialist workshop as soon as possible.

You can disable or enable the rear airbag via the multimedia system (→ page 57).

Objects behind the front seat

Objects in the deployment area of the rear airbags may prevent the rear airbags from functioning correctly.

⚠ WARNING Risk of injury due to objects placed in front of the rear airbag cover

Objects in front of the rear airbag cover can hinder or prevent the correct deployment of the rear airbag which is integrated into the front seat.

The rear airbag can potentially deploy in an uncontrolled manner and can cause additional injury to the person on the front seat.

▶ Always stow and secure objects correctly.

Observe the notes on loading the vehicle (→ page 139).

Disabling/enabling the rear airbag


If, after consideration of the notes and instructions in this Owner's Manual, you deem the additional occupant protection provided by the rear airbag unnecessary, the rear airbag can be disabled.

The rear airbags should be disabled in the following situations in particular:

- A rearward-facing child restraint system is secured on the left or right rear seat.
- The person in the rear seat, for example a child, cannot sit in the correct seat position. Their feet and legs are potentially in the deployment area of the rear airbag.
- Due to the position of the front seats, an occupant's legs, for example, are in the deployment area of the rear airbag.
- Objects are stored behind the front seat which are in the deployment area of the rear airbags.

You can disable or enable the rear airbag via the multimedia system (→ page 57).

Function of the REAR SEAT AIR BAG indicator lamps

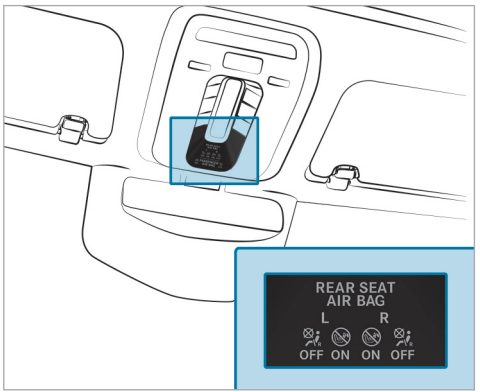

L Left rear seat
R Right rear seat

When the ignition is switched on, a self-test is performed during which the REAR SEAT AIR BAG ON and OFF indicator lamps light up simultaneously.

After the self-test, the status of the rear airbag for the left and right rear seat is displayed via the REAR SEAT AIR BAG indicator lamps:

- **ON is lit:** the rear airbag may deploy during an accident.

  The indicator lamp goes out after approximately 60 seconds.
- **ON and OFF are off:** the rear airbag may deploy during an accident.
- **OFF is lit:** the rear airbag is disabled. It will then not be deployed in the event of an accident.

If the REAR SEAT AIR BAG ON indicator lamp is off, only the REAR SEAT AIR BAG OFF indicator lamp shows the status of the rear airbag. The REAR SEAT AIR BAG OFF indicator lamp may be lit continuously or be off.

Enabling/disabling the rear airbag via the multimedia system

Multimedia system:

→ ⌂ ▸▸ Settings ▸▸ Vehicle ▸▸ Occupant protection

▶ Enable or disable the desired rear airbag under Rear airbags.

PRE-SAFE® system

PRE-SAFE® (anticipatory occupant protection)

PRE-SAFE® is able to detect certain critical driving situations and implement pre-emptive measures to protect the vehicle occupants.

PRE-SAFE® can implement the following measures independently of each other:

- Tightening the seat belts on the driver's seat and front passenger seat.
- Closing the side windows.
- **Vehicles with sliding sunroof:** close the sliding sunroof.
- **Vehicles with memory function:** move the front passenger seat to a more favourable seat position.
- **Vehicles with memory function in the rear compartment:** move the outer rear seats to a more favourable seat position.
- **Vehicles with multicontour seat:** increase the air pressure in the seat side bolsters of the seat backrest.
- PRE-SAFE® Sound: provided that the multimedia system is switched on, generates a brief noise signal to stimulate the innate protective mechanism of a person's hearing.

! **NOTE** Damage caused by objects in the footwell or behind the seat

The automatic adjustment of the seat position may result in damage to the seat and/or the object.

▶ Stow objects in a suitable place.

Reversing the PRE-SAFE® system measures

If an accident did not occur, the pre-emptive measures that were taken are reversed.

You will need to perform certain settings yourself.

▶ If the seat belt pre-tensioning is not reduced, move the seat backrest back slightly. The locking mechanism releases.

Function of PRE-SAFE® PLUS (anticipatory occupant protection plus)

PRE-SAFE® PLUS can detect certain impacts, particularly an imminent rear impact, and take pre-emptive measures to protect the vehicle occupants. These measures cannot necessarily prevent an imminent impact.

PRE-SAFE® PLUS can implement the following measures independently of each other:

- Tightening the seat belts on the driver's seat and front passenger seat.
- Activating the rear hazard warning lights at a higher flashing frequency.

- Increasing brake pressure when the vehicle is stationary. This brake application is cancelled automatically when the vehicle pulls away.

If an accident did not occur, the pre-emptive measures that were taken are reversed.

System limits

The system will not initiate any action in the following situations:

- when reversing

The system will not initiate any braking application in the following situations:

- whilst driving

  or

- when entering or exiting a parking space while using Active Parking Assist

Function of PRE-SAFE® Impulse Side

If an imminent side impact is detected, PRE-SAFE® Impulse Side can pre-emptively move the front seat vehicle occupant's upper body towards the centre of the vehicle. It does this by rapidly inflating an air cushion in the outer seat side bolster of the seat backrest on the side on which the impact is anticipated. This increases the distance between the door and the vehicle occupant.

If PRE-SAFE® Impulse Side has been deployed or is faulty, the PRE-SAFE impulse side inoperative See Owner's Manual(→ page 472) display message appears.

Automatic measures after an accident

Depending on the type and severity of the accident, and depending on the vehicle's equipment, the following measures can be implemented, for example:

- automatic braking (post-collision brake)
- activating the hazard warning lights
- triggering an automatic emergency call (→ page 322)
- switching off the engine

  To restart the vehicle, switch the ignition off and switch it back on (→ page 193). Depending on the type and severity of the accident, it is possible that the vehicle can no longer be started.
- switching off the fuel supply
- unlocking the vehicle doors
- lowering the side windows
- displaying the emergency guide in the central display
- switching on the interior lighting

Function of the post-collision brake

Depending on the accident situation, the post-collision brake can minimise the severity of a further collision or even avoid it.

If an accident is detected, the post-collision brake can implement automatic braking. When the vehicle has come to a standstill, the electric parking brake is automatically applied.

The driver can cancel automatic braking by taking the following actions:

- braking more strongly than automatic braking
- fully depressing the accelerator pedal with force

Safely transporting children in the vehicle

Always observe when children are travelling in the vehicle

ⓘ Also strictly observe the safety notes for the specific situation. In this way you can recognise potential risks and avoid dangers if children are travelling in the vehicle (→ page 59).

Be diligent

Bear in mind that negligence when securing a child in the child restraint system may have serious consequences. Always be diligent in securing a child carefully before every journey.

To improve protection for children younger than 12 years old or under 1.50 m in height, Mercedes-Benz recommends you observe the following information:

- Always secure the child in a child restraint system suitable for this Mercedes-Benz vehicle.
- The child restraint system must be appropriate to the age, weight and size of the child.
- The vehicle seat must be suitable for fitting a child restraint system (→ page 63).

Accident statistics show that children secured on the rear seats are generally safer than children secured on the front seats. For this reason, Mercedes-Benz strongly advises that you fit a child restraint system to a rear seat.

The generic term child restraint system

The generic term child restraint system is used in this Owner's Manual. A child restraint system is, for example:

- a baby car seat
- a rearward-facing child seat
- a forward-facing child seat
- a child booster seat with a backrest and seat belt guide

  Mercedes-Benz recommends using a child booster seat with a backrest.

The child restraint system must be appropriate to the age, weight and size of the child.

Observe laws and legal requirements

Always observe the legal requirements when using a child restraint system in the vehicle.

Make sure that the child restraint system is approved in accordance with the valid test specifications and guidelines. Further information can be obtained at a qualified specialist workshop. Mercedes-Benz recommends that you use a Mercedes-Benz Service Centre for this purpose.

Only use approved child restraint systems

Only child restraint systems that meet the following UNECE standards are permitted for use in the vehicle:

- UN-R44
- UN-R129 (i-Size child restraint systems)

Information on child restraint system approval categories and details on the approval label on the child restraint system (→ page 64).

Detecting risks, avoiding danger

Securing systems for child restraint systems in the vehicle

Only use the following securing systems for child restraint systems:

- the ISOFIX or i-Size securing rings

- the vehicle's seat belt system
- the Top Tether anchorages

Fitting an ISOFIX or an i-Size child restraint system is preferred.

Simply attaching to the securing rings on the vehicle can reduce the risk of fitting the child restraint system incorrectly.

When securing a child with the integrated seat belt of the ISOFIX or i-Size child restraint system, always comply with the permissible gross weight for the child and child restraint system (→ page 67).

Advantage of a rearward-facing child restraint system

It is preferable to transport a baby or a small child in a suitable rearward-facing child restraint system. In this case, the child sits in the opposite direction to the direction of travel and faces backwards.

Babies and small children have comparatively weak neck muscles in relation to the size and weight of their head. The risk of injury to the cervical spine during an accident can be reduced in a rearward-facing child restraint system.

Always secure a child restraint system correctly

⚠ **WARNING** Risk of injury or death due to incorrect installation of the child restraint system

The child can then not be protected or restrained as intended.

- ▶ Be sure to comply with the manufacturer's installation instructions for the child restraint system and its correct use.
- ▶ Make sure that the entire base of the child restraint system always rests on the sitting surface of the seat.
- ▶ Never place objects (e.g. cushions) under or behind the child restraint system.
- ▶ Use child restraint systems only with the original cover designed for them.
- ▶ Always replace damaged covers with genuine covers.

⚠ **WARNING** Risk of injury or death due to unsecured child restraint systems in the vehicle

If the child restraint system is incorrectly fitted or not secured, it can come loose.

The child restraint system could be flung around and hit vehicle occupants.

- ▶ Always install child restraint systems correctly, even when not in use.
- ▶ Always comply with the child restraint system manufacturer's installation instructions.

- Always observe the child restraint system manufacturer's installation and operating instructions as well as the vehicle-specific information:
  - Fitting the ISOFIX or i-Size child restraint system to the rear seat (→ page 67).
  - Securing the child restraint system with the seat belt on the rear seat (→ page 74).

- Securing the child restraint system with the seat belt on the front passenger seat (→ page 77). Observe the specific instructions for the rearward-facing and forward-facing child restraint systems (→ page 76).

  If the front passenger seat is occupied, ensure, both before and during the journey, that the status of the front passenger airbag is correct for the current situation (→ page 52).

- Observe the warning labels in the vehicle interior and on the child restraint system.
- Also secure Top Tether if present.

Do not modify the child restraint system

⚠ **WARNING** Risk of injury due to modifications to the child restraint system

The child restraint system can no longer function properly. This poses an increased risk of injury.

▶ Never modify a child restraint system.

▶ Only affix accessories which have been specially approved for this child restraint system by the child restraint system's manufacturer.

Mercedes-Benz recommends Mercedes-Benz care products for cleaning child restraint systems recommended by Mercedes-Benz.

Only use child restraint systems which are in proper working condition

⚠ **WARNING** Risk of injury or death caused by the use of damaged child restraint systems

Child restraint systems or their retaining systems that have been subjected to stress in an accident may not be able to perform their intended protective function.

It may be the case that the child cannot be properly restrained.

▶ Always immediately replace child restraint systems that have been damaged or involved in an accident.

▶ Have the securing systems for the child restraint systems checked at a qualified specialist workshop before installing a child restraint system again.

Avoid direct sunlight

⚠ **WARNING** Risk of burns when the child seat is exposed to direct sunlight

If the child restraint system is exposed to direct sunlight or heat, parts could heat up.

Children could suffer burns from these parts, particularly on the metallic parts of the child restraint system.

▶ Always make sure that the child restraint system is not exposed to direct sunlight.

▶ Protect the child restraint system, e.g. with a blanket.

▶ If the child restraint system has been exposed to direct sunlight, allow it to cool before securing a child in it.

▶ Never leave children unattended in the vehicle.

Observe when stopping or parking

WARNING Risk of accident and injury due to leaving children unattended in the vehicle

If children are left unattended in the vehicle, they could, in particular:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

In addition, the children could also set the vehicle in motion by, for example:

- releasing the parking brake.
- changing the transmission position.
- starting the vehicle.

- Never leave children unattended in the vehicle.
- When leaving the vehicle, always take the key with you and lock the vehicle.
- Keep the vehicle key out of the reach of children.

WARNING Danger to life due to exposure to extreme heat or cold in the vehicle

If people, particularly children, are exposed to extreme temperatures over an extended period of time, there is a risk of serious injury or danger to life.

- Never leave persons, children in particular, unattended in the vehicle.

Overview of recommended child restraint systems

ⓘ Further information on the correct child restraint system can be obtained at a qualified specialist workshop. Mercedes-Benz recommends that you use a Mercedes-Benz Service Centre for this purpose.

Vehicles with belt airbags:

When securing a child in a child restraint system on an outer rear seat, it is essential to observe the following instructions:

- Only use a child restraint system approved by Mercedes-Benz.
  - Weight category 0, 0+ or I: the child restraint system must be installed on the ISOFIX or i-Size child seat securing system.
  - Weight category II/III: only use the approved KIDFIX XP and AMG KIDFIX XP child seats.
- Secure a rearward-facing child restraint system with the ISOFIX or the i-Size child restraint system.
- Secure a forward-facing child restraint system with the ISOFIX or the i-Size child restraint system and, if present, the Top Tether anchorage.
- Observe the notes in "Belt airbag in rear seat belt" (→ page 43).

Securing with ISOFIX

Weight group 0+ (up to 13 kg and up to approx. 15 months)

Type[1]	BABY SAFE plus
Size category	E
Approval	E1 04 301 146
Order number[2]	B6 6 86 8224
1 Manufacturer: Britax Römer.	2 With colour code 9H95.

Weight category I (9 to 18 kg and from approximately 9 months to 4 years)

Type[1]	DUO plus
Size category	B1
Approval	E1 04 301 133
Order number[2]	A 000 970 43 02
1 Manufacturer: Britax Römer.	2 With colour code 9H95.

Securing with the vehicle seat belt

Weight category 0 (up to 10 kg and approximately 6 months) and weight category 0+ (up to 13 kg and approximately 15 months)

Type[1]	BABY SAFE plus II
Approval	E1 04 301 146
Order number[2]	A 000 970 38 02
1 Manufacturer: Britax Römer.	2 With colour code 9H95.

Weight category I (9 to 18 kg and from approximately 9 months to 4 years)

Type[1]	DUO plus
Approval	E1 04 301 133
Order number[2]	A 000 970 43 02
1 Manufacturer: Britax Römer.	2 With colour code 9H95.

Weight category II/III (15 to 36 kg and from approximately 4 to 12 years)

Type[1]	KIDFIX XP
Approval	E1 04 301 304
Order number[2]	A 000 970 49 02
Type[1]	**AMG KIDFIX XP**
Approval	E1 04 301 304
Order number[2]	A 000 970 33 02
1 Manufacturer: Britax Römer.	2 With colour code 9H95.

Overview of suitable seats in the vehicle for fitting a child restraint system

Left/right rear seat

Preferred securing system:

ISOFIX child seat anchor (⟶ page 66)

or

i-Size child seat anchor (⟶ page 67)

Also secure Top Tether if present (⟶ page 69).

Alternative securing system:

Vehicle seat belt (⟶ page 72)

Be sure to observe:

- If the rear seat is occupied, ensure, both before and during the journey, that the status of the rear airbag is correct for the current situation (⟶ page 56).

Front passenger seat

Securing system:

Vehicle seat belt (⟶ page 72)

Be sure to observe:

- If the front passenger seat is occupied, ensure, both before and during the journey, that the status of the front passenger airbag is correct for the current situation (⟶ page 52).
- Observe the notes on automatic front passenger airbag shutoff (⟶ page 50)

Centre rear seat

Securing system:

Vehicle seat belt (⟶ page 72)

Approval categories for child restraint systems

Only use approved child restraint systems

Only child restraint systems that meet the following UNECE standards are permitted for use in the vehicle:


- UN-R44
- UN-R129 (i-Size child restraint systems)

Identification on the child restraint system

Information about the approval category, weight category and approval number, for example, is on the approval label on the child restraint system.

There may be further information such as the ISO-FIX size categories, depending on the approval category of the child restraint system.

Approval categories in accordance with UN-R44

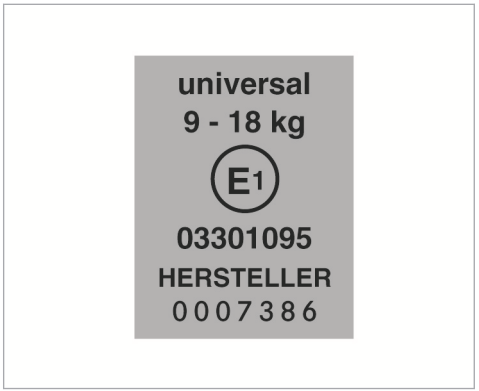


Example of an approval label

- **Universal:** child restraint systems in the "Universal" category are approved for installation in vehicles. They can be used, in accordance with overviews of the suitability of seats for securing child restraint systems, on seats labelled U, UF or IUF.

The identification IUF refers to ISOFIX child restraint systems in the "Universal" category. These child restraint systems must also be secured using Top Tether or support points.

- **Semi-Universal:** child restraint systems in the "Semi-Universal" category may only be used if the vehicle and vehicle seat are listed in the child restraint system manufacturer's vehicle model list.
- **Vehicle-specific:** child restraint systems in the "vehicle-specific" category may only be used if the vehicle and vehicle seat are listed in the child restraint system manufacturer's vehicle model list.

Approval categories in accordance with UN-R129

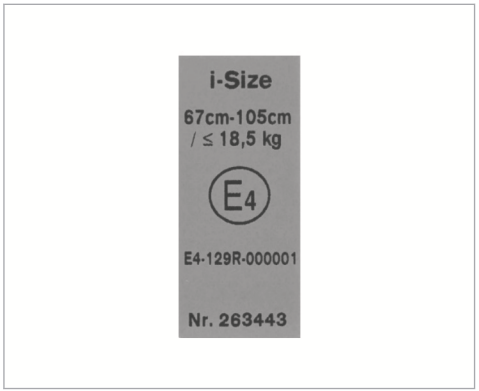

Example of an approval label

- **i-Size:** child restraint systems in the "i-Size" category are approved for installation in vehicles with i-Size mounting brackets. They can be used, in accordance with overviews of the suitability of seats for securing child restraint systems, on seats labelled i-U.

P223 0210 02

The identification i-U refers to i-Size child restraint systems in the "Universal" category. These child restraint systems must also be secured using Top Tether or support points.

Observe the suitability of vehicle seats

Depending on the approval category, there are forward-facing and rearward-facing child restraint systems. Their use can be restricted for certain vehicle seats:

- Suitability of the seats for attaching ISOFIX child restraint systems (→ page 66)
- Suitability of seats for securing i-Size child restraint systems (→ page 67).
- Suitability of seats for attaching belt-secured child restraint systems (→ page 72)

Fitting an ISOFIX or i-Size child restraint system on the rear seat

Overview of suitability of the seats for attaching ISOFIX child restraint systems

ISOFIX is a standardised securing system for specially designed child restraint systems.

The symbol indicates seats suitable for attaching an ISOFIX child restraint system in accordance with UN R44 (→ page 64).

Attach only child restraint systems that are approved in accordance with UN R44 as per the following ISOFIX tables.

Carry cot

Size class – Equipment	Left/right rear seat
F – ISO/L1	X
G – ISO/L2	X

X Not suitable for an ISOFIX child restraint system in this weight group and/or size class.

Weight group 0 (up to 10 kg and up to approx. 6 months)

Size class – Equipment	Left/right rear seat
E – ISO/R1	IL

IL Suitable for ISOFIX child restraint systems according to the table in "Overview of the recommended child restraint systems", or if the vehicle and the seat are listed on the child restraint system manufacturer's vehicle model list.

Weight group 0+ (up to 13 kg and up to approx. 15 months)

Size class – Equipment	Left/right rear seat
E – ISO/R1	IL
D – ISO/R2, ISO/R2X	IL
C – ISO/R3	IL (1)

IL Suitable for ISOFIX child restraint systems according to the table in "Overview of the recommended child restraint systems", or if the vehicle and the seat are listed on the child restraint system manufacturer's vehicle model list.

(1) When using a child restraint system of size class (ISO/R3), move the front seat into the highest position. Make sure that the seat backrest of the front seat does not rest against the child restraint system.

Weight group 1 (9–18 kg and approx. 9 months to 4 years)

Size class – Equipment	Left/right rear seat
D – ISO/R2, ISO/R2X	IL
C – ISO/R3	IL (1)
B – ISO/F2	IUF

Size class – Equipment	Left/right rear seat
B1 – ISO/F2X	IUF
A – ISO/F3	IUF

IL Suitable for ISOFIX child restraint systems according to the table in "Overview of the recommended child restraint systems", or if the vehicle and the seat are listed on the child restraint system manufacturer's vehicle model list.

IUF Suitable for forward-facing ISOFIX child restraint systems of the "Universal" category in this weight group.

(1) When using a child restraint system of size class (ISO/R3), move the front seat into the highest position. Make sure that the seat backrest of the front seat does not rest against the child restraint system.

Overview of suitability of the seats for attaching i-Size child restraint systems

i-Size is a standardised securing system for specially designed restraint systems.

The symbol indicates seats suitable for attaching an i-Size child restraint system in accordance with UN R129 (→ page 64).

Child restraint systems that are permitted in accordance with UN R44 as per the ISOFIX tables (→ page 66) or UN R129 as per the following i-Size tables may be attached.

i-Size child restraint systems (ISO/R2, ISO/F2X, ISO/B2, ISO/B3)

Front passenger seat	Left/right rear seat
X	i-U
X Not suitable for an i-Size child restraint system in the "Universal" category.	i-U Suitable for forward-facing and rearward-facing i-Size child restraint systems in the "Universal" category.

Fitting an ISOFIX or i-Size child restraint system on the rear seat

WARNING Risk of injury or death if the permissible gross mass of the child and child restraint system together is exceeded.

Too much load may be placed on the ISOFIX or i-Size child restraint systems and the child may not be restrained correctly in the event of an accident, for example.

- If the child and the child restraint system together weigh more than 33 kg, only use an ISOFIX or i-Size child restraint system with which the child is secured with the vehicle seat belt.
- Also secure the child restraint system with the Top Tether belt, if available.

Always comply with the information about the mass of the child restraint system:

- in the manufacturer's installation and operating instructions for the child restraint system used

- on a label on the child restraint system, if present

Regularly check that the permissible gross mass of the child and child restraint system is still complied with.

When fitting a child restraint system, observe the following:

☑ Always observe the correct use of the seats and consider their suitability for attaching a child restraint system.

ISOFIX child seat securing system (→ page 66)

or

i-Size child seat securing system (→ page 67)

☑ Always comply with the manufacturer's installation and operating instructions for the child restraint system used.

☑ Make sure that the child's feet do not touch the front seat. If necessary, move the front seat slightly forwards.

When fitting an ISOFIX child restraint system, also observe the following:

☑ **When using a baby car seat in weight group 0/0+ and a rearward-facing child restraint system in weight group 1 on a rear seat:** adjust the front seat so that the seat does not touch the child restraint system.

☑ **When using a forward-facing child restraint system in weight group 1:** remove the head restraint from the respective seat, if possible. In addition, the backrest of the child restraint system must lie as flat as possible against the backrest of the vehicle seat.

After the child restraint system has been removed, replace the head restraints again immediately and adjust them correctly.

☑ If the head restraint of the child seat cannot be fully extended when it is installed in the vehicle, this will result in restrictions on the maximum size setting for child restraint systems in weight group 2 or 3.

Contact with the roof when the head restraint is fully extended and locked in place will not result in any restrictions on use.

☑ The child restraint system must not be put under strain between the roof and the seat cushion and/or be fitted facing the wrong direction. Where possible, adjust the seat cushion inclination accordingly.


☑ The child restraint system must not be put under strain by the head restraint. Adjust the head restraints as appropriate.

When fitting an i-Size child restraint system, also observe the following:

☑ **When using a rearward-facing child restraint system:** adjust the front seat so that it does not touch the child restraint system.

☑ **When using a forward-facing child restraint system:** remove the head restraint from the respective seat, if possible. In addition, the backrest of the child restraint system must lie as flat as possible against the backrest of the vehicle seat.

After the child restraint system has been removed, replace the head restraints again immediately and adjust them correctly.

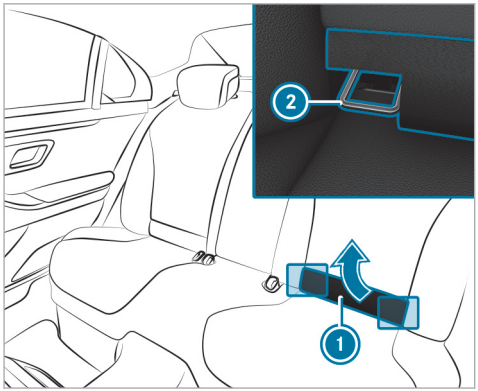

Before every journey, make sure that the ISOFIX child restraint system or the i-Size child restraint system is engaged correctly in both ISOFIX or i-Size mounting brackets.

! **NOTE** Damage to the seat belt for the centre seat during installation of the child restraint system

- Make sure that the seat belt is not trapped.

- **Vehicles with reclining rear seats:** before an ISOFIX or i-Size child restraint system is installed, tilt the backrest of the reclining rear seat back slightly.
- Fold upholstered lining (1) upwards.
- Pull the tab on upholstered lining (1) upwards and position it on the supporting surface. Upholstered lining (1) will remain folded upwards.
- Attach the ISOFIX or i-Size child restraint system to both mounting brackets (2) in the vehicle.
- To close, fold upholstered lining (1) upwards.
- Lift the tab from the support surface and slide it back into the upholstery slot between the seat backrest and seat cushion. Close the upholstery flap.

P223 0210 02

- **Vehicles with reclining rear seats:** return the reclining rear seat backrest to an upright position.
  The reclining rear seat backrest must be in contact with the child restraint system.

Securing Top Tether

⚠ **WARNING** Risk of injury or death from adjusting the seat after fitting a child restraint system

Vehicles with electrically adjustable rear bench seats:


The following may occur:

- The Top Tether belt may sit either too loose or too tight
- The child restraint system may be loose, incorrectly positioned or damaged and then not perform its intended protective function.


- Never adjust the seat after the child restraint system has been installed.

If the child restraint system is equipped with a Top Tether belt:

The risk of injury may be reduced by Top Tether. The Top Tether belt enables an additional connection between the child restraint system attached with ISOFIX or i-Size and the vehicle.

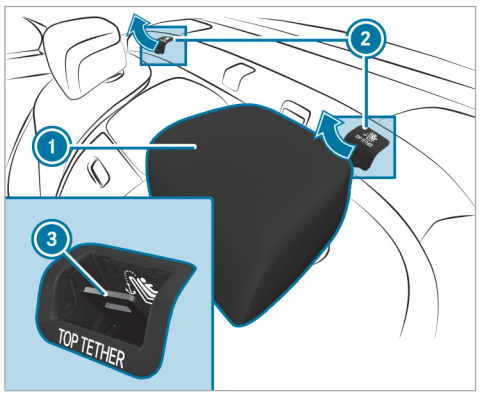

- If necessary, slide head restraint (1) upwards .
- Remove cover (2) of Top Tether anchorage (3).
- Fit the ISOFIX or i-Size child restraint system with Top Tether. In doing so, comply with the child restraint system manufacturer's installation instructions.

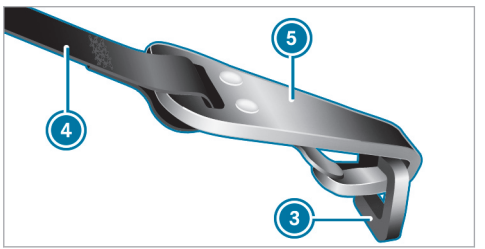

- Guide Top Tether belt (4) under head restraint (1) between the two head restraint bars.
- Hook Top Tether hook (5) of Top Tether belt (4) into Top Tether anchorage (3) without twisting.
- Tension Top Tether belt (4). In doing so, comply with the child restraint system manufacturer's installation instructions.
- If necessary, slide head restraint (1) downwards . Make sure that you do not interfere with the correct routing of Top Tether belt (4).

Vehicles with rear airbag

Notes on the suitability of seats for attaching belt-secured, ISOFIX and i-Size child restraint systems

Left and right rear seat

Weight category 0: up to 10 kg	
Rear airbag enabled	X
Rear airbag disabled[1]	U, L
Weight category 0+: up to 13 kg	
Rear airbag enabled	X
Rear airbag disabled[1]	U, L
Weight category I: 9 to 18 kg	

Rear airbag enabled	UF, L
Rear airbag disabled[1]	U, L
Weight category II: 15 to 25 kg	
Rear airbag enabled	UF, L
Rear airbag disabled[1]	U, L
Weight category III: 22 to 36 kg	
Rear airbag disabled[1]	U, L
Rear airbag enabled	UF, L
i-Size child restraint systems (ISO/R2)	
Rear airbag disabled[1]	i-U
Rear airbag enabled	X
i-Size child restraint systems (ISO/F2X, ISO/B2, ISO/B3)	
Rear airbag disabled[1]	i-U
Rear airbag enabled	i-U

1 The REAR SEAT AIR BAG OFF indicator lamp must be lit.	
X Not suitable for children in this weight category.	
U Suitable for child restraint systems of the "Universal" category in this weight category.	
L Suitable for semi-universal child restraint systems according to the table in "Recommended child restraint systems", or if the vehicle and the seat are listed in the child restraint system manufacturer's vehicle model list.	
UF Suitable for forward-facing child restraint systems of the "Universal" category in this weight category.	
i-U Suitable for forward-facing and rearward-facing i-Size child restraint systems in the "Universal" category.	

Vehicles with rear airbag: when securing a child in a child restraint system on an outer rear seat, it is essential to observe the following instructions:

- Only use a child restraint system approved by Mercedes-Benz.
- Observe the notes in "Overview of recommended child restraint systems" (→ page 62).
- Observe the information on the rear airbag when the rear seat is occupied. (→ page 54).
- Secure a rearward-facing child restraint system with the ISOFIX or the i-Size child seat anchor.
- Secure a forward-facing child restraint system with the ISOFIX or the i-Size child seat anchor and, if present, the Top Tether anchorage.

Notes on rearward-facing and forward-facing child restraint systems on the left and right rear seat



Sticker visible when the rear door is open

When fitting a child restraint system, the rear airbag can be disabled.

If using a forward-facing child restraint system with enabled rear airbag: make sure that the child's feet are not placed in front of the rear airbag cover or on the seat backrest. The child's legs can otherwise be flung upward if the rear airbag is deployed.

Enabling/disabling the rear airbag
The rear airbag can be enabled or disabled via the multimedia display (→ page 57).

Securing the child restraint system with the seat belt

Notes on the suitability of seats for attaching belt-secured child restraint systems

Rear seats without belt airbag and without rear airbag

Weight category 0: up to 10 kg	
Left/right rear seat	U
Centre rear seat[1]	U
Weight category 0+: up to 13 kg	
Left/right rear seat	U
Centre rear seat[1]	U
Weight category I: 9 to 18 kg	
Left/right rear seat	U
Centre rear seat[1]	U
Weight category II: 15 to 25 kg	
Left/right rear seat	U
Centre rear seat[1]	U
Weight category III: 22 to 36 kg	
Left/right rear seat	U
Centre rear seat[1]	U
1 Child restraint systems with a supporting bracket are not suitable for this seat.	
U Suitable for child restraint systems of the "Universal" category in this weight category.	

Rear seats with a belt airbag

Weight category 0: up to 10 kg	
Left/right rear seat	X
Weight category 0+: up to 13 kg	
Left/right rear seat	X
Weight category I: 9 to 18 kg	
Left/right rear seat	X
Weight category II: 15 to 25 kg	
Left/right rear seat	L[1]
Weight category III: 22 to 36 kg	
Left/right rear seat	L[1]
1 Only use the approved child seats KIDFIX XP and AMG KIDFIX XP.	

X Not suitable for children in this weight category.	
L Suitable for semi-universal child restraint systems according to the table in "Recommended child restraint systems", or if the vehicle and the seat are listed in the child restraint system manufacturer's vehicle model list.	

Vehicles with belt airbags: when securing a child in a child restraint system on an outer rear seat, it is essential to observe the following instructions:

- Only use a child restraint system approved by Mercedes-Benz.
- Observe the notes in "Overview of recommended child restraint systems" (→ page 62).
- Secure a rearward-facing child restraint system with the ISOFIX or the i-Size child restraint system.
- Secure a forward-facing child restraint system with the ISOFIX or the i-Size child restraint system and, if present, the Top Tether anchorage.

Vehicles with a reclining rear seat: the bottom and back of a forward-facing child restraint system must make full contact with the reclining rear seat sitting surface and seat backrest. The child restraint system must not touch the roof. Adjust the seat backrest inclination accordingly. Also observe the child restraint system manufacturer's installation instructions.

Notes on child restraint systems on the front passenger seat

- If it is absolutely necessary for you to fit a child restraint system to the front passenger seat, be sure to observe the information on child restraint systems on the front passenger seat (→ page 77).
- Observe the specific instructions for the rearward-facing and forward-facing child restraint systems. If the front passenger seat is occupied, ensure, both before and during the journey, that the status of the front passenger airbag is correct for the current situation (→ page 52).

Front passenger seat

Weight category 0: up to 10 kg	
Front passenger airbag enabled[1]	X

Front passenger airbag disabled[1, 2]	U, L
Weight category 0+: up to 13 kg	
Front passenger airbag enabled [1]	X
Front passenger airbag disabled[1, 2]	U, L
Weight category I: 9 to 18 kg	
Front passenger airbag enabled [1]	UF, L
Front passenger airbag disabled[1, 2]	U, L
Weight category II: 15 to 25 kg	
Front passenger airbag enabled [1]	UF, L
Front passenger airbag disabled[1, 2]	U, L
Weight category III: 22 to 36 kg	
Front passenger airbag enabled[1]	UF, L
Front passenger airbag disabled[1, 2]	U, L

1 Adjust the seat cushion inclination so that the front edge of the seat cushion is in the highest position and the rear edge of the seat cushion is in the lowest position.	
2 The vehicle is equipped with automatic front passenger airbag shutoff. The PASSENGER AIR BAG OFF indicator lamp must be lit.	
X Not suitable for children in this weight category.	
U Suitable for child restraint systems of the "Universal" category in this weight category.	
L Suitable for semi-universal child restraint systems according to the table in "Recommended child restraint systems", or if the vehicle and the seat are listed in the child restraint system manufacturer's vehicle model list.	
UF Suitable for forward-facing child restraint systems of the "Universal" category in this weight category.	

Securing the child restraint system with the seat belt on the rear seat

When fitting a belt-secured child restraint system, observe the following:

- ☑ Always comply with the manufacturer's installation and operating instructions for the child restraint system used.
- ☑ For a child restraint system in the "Universal" or "Semi-Universal" category, make sure that the system has been approved for the vehicle seat.

  Observe the notes under "Suitability of seats for attaching belt-secured child restraint systems" (→ page 72).
- ☑ **When using a weight category 0/0+ baby car seat and a weight category I rearward-facing child restraint system on a rear seat:** adjust the front seat so that the seat does not touch the child restraint system.
- ☑ **When using a weight category I forward-facing child restraint system:** remove the head restraint from the respective seat, if possible.

After the child restraint system has been removed, replace the head restraints again immediately and adjust them correctly.

☑ The backrest of the forward-facing child restraint system must, as far as possible, be resting on the seat backrest of the rear seat.

☑ If the head restraint of the child seat cannot be fully extended when it is installed in the vehicle, this will result in restrictions on the maximum size setting for child restraint systems in weight category 2 or 3.

Contact with the roof when the head restraint is fully extended and locked in place will not result in any restrictions on use.

☑ The child restraint system must not be put under strain between the roof and the seat cushion and/or be fitted facing the wrong direction. Where possible, adjust the seat cushion inclination accordingly.

☑ The child restraint system must not be put under strain by the head restraint. Adjust the head restraints as appropriate.

☑ Make sure that the child's feet do not touch the front seat. If necessary, move the front seat slightly forwards.

▶ Install the child restraint system.
The entire base of the child restraint system must always rest on the sitting surface of the rear seat.

▶ Always make sure that the shoulder belt strap is correctly routed from the seat belt outlet of the vehicle to the shoulder belt guide on the child restraint system.
The shoulder belt strap must be routed forward from the seat belt outlet.

Notes on vehicles without automatic front passenger airbag shutoff



Sticker visible when the front passenger door is open

Vehicles without automatic front passenger airbag shutoff have a special sticker affixed to the side of the cockpit on the front passenger side.

Make sure you observe the following information:

- Never fit a rearward-facing child restraint system to the front passenger seat
- Always fit a rearward-facing child restraint system to a suitable rear seat
  - Suitability of seats for attaching belt-secured child restraint systems (→ page 72)
  - Secure the child restraint system with the seat belt on the rear seat (→ page 74).
- Notes on rearward-facing and forward-facing child restraint systems on the front passenger seat (→ page 76)

Notes on rearward-facing and forward-facing child restraint systems on the front passenger seat

WARNING Risk of injury or death when using a rearward-facing child restraint system while the front passenger airbag is enabled


If you secure a child in a rearward-facing child restraint system on the front passenger seat and the PASSENGER AIR BAG OFF indicator lamp is off, the front passenger airbag can deploy in the event of an accident.

The child could be struck by the airbag.

Always ensure that the front passenger airbag is disabled. The PASSENGER AIR BAG OFF indicator lamp must be lit.

NEVER use a rearward-facing child restraint system on a seat with an ENABLED FRONT AIRBAG. This can result in the DEATH of or SERIOUS INJURY to the CHILD.

Observe the specific instructions for the rearward-facing and forward-facing child restraint systems (→ page 77).

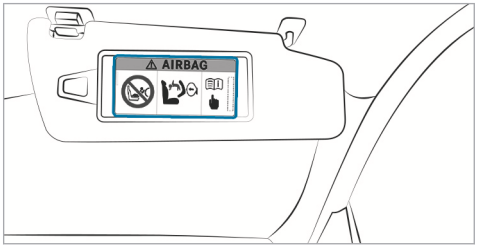

Warning notice on the front passenger sun visor

Always observe the status of the front passenger airbag on the PASSENGER AIR BAG OFF indicator lamp:

- If it is absolutely necessary to fit a child restraint system to the front passenger seat, always observe the information on automatic front passenger airbag shutoff (→ page 50).
- When using a rearward-facing child restraint system on the front passenger seat, the front

passenger airbag must always be disabled. This is only the case if the PASSENGER AIR BAG OFF indicator lamp is lit continuously (→ page 52).

- If the PASSENGER AIR BAG OFF indicator lamp is off, the front passenger airbag is enabled. The front passenger airbag may deploy during an accident.

Securing the child restraint system with the seat belt on the front passenger seat

When fitting a belt-secured child restraint system on the front passenger seat, always observe the following:

☑ Observe the notes on rearward-facing and forward-facing child restraint systems on the front passenger seat (→ page 76).

☑ Observe the child restraint system manufacturer's installation and operating instructions.

☑ For a child restraint system in the "Universal" or "Semi-Universal" category, make sure that the system has been approved for the vehicle seat.

Observe the notes under "Suitability of seats for attaching belt-secured child restraint systems" (→ page 72).

☑ When using a forward-facing child restraint system in weight category I: remove the head restraint from the respective seat, if possible.

After the child restraint system has been removed, replace the head restraints again immediately and adjust them correctly.

☑ The backrest of the forward-facing child restraint system must, as far as possible, be resting on the seat backrest of the front passenger seat.

☑ If the head restraint of the child seat cannot be fully extended when it is installed in the vehicle, this will result in restrictions on the maximum size setting for child restraint systems in weight category II or III.

Contact with the roof when the head restraint is fully extended and locked in place will not result in any restrictions on use.

☑ The child restraint system must not be put under strain between the roof and the seat cushion and/or be fitted facing the wrong direction.

☑ The child restraint system must not be put under strain by the head restraint. Adjust the head restraints as appropriate.

☑ Never place objects (e.g. cushions) under or behind the child restraint system.

▶ Set the front passenger seat as far back as possible and move the seat into the highest position if possible.

▶ Fully retract the seat cushion length adjustment.

▶ Adjust the seat cushion inclination so that the front edge of the seat cushion is in the highest position and the rear edge of the seat cushion is in the lowest position.

▶ Set the seat backrest to the most vertical position possible.

▶ Install the child restraint system.
The entire base of the child restraint system must always rest on the sitting surface of the front passenger seat.

- Always make sure that the shoulder belt strap is correctly routed from the seat belt outlet of the vehicle to the shoulder belt guide on the child restraint system.
  The shoulder belt strap must be routed forwards and downwards from the seat belt outlet.
- If necessary, adjust the seat belt outlet and the front passenger seat accordingly.

Child safety locks

Activating/deactivating the child safety lock for the rear doors

WARNING Risk of accident and injury due to children left unattended in the vehicle

If children are left unsupervised in the vehicle, they could, in particular:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

In addition, the children could also set the vehicle in motion, for example by:

- releasing the parking brake.
- changing the transmission position.
- starting the vehicle.

- Never leave children unattended in the vehicle.
- When leaving the vehicle, always take the key with you and lock the vehicle.
- Keep the vehicle key out of reach of children.

WARNING Danger to life due to exposure to extreme heat or cold in the vehicle

If people, particularly children, are exposed to extreme temperatures over an extended period of time, there is a risk of serious injury or danger to life.

- Never leave persons, children in particular, unattended in the vehicle.

WARNING Risk of accident and injury due to children left unattended in the vehicle


If children are travelling in the vehicle, they could, in particular:

- open doors, thereby endangering other persons or road users
- get out and be struck by oncoming traffic
- operate vehicle equipment and become trapped, for example

- Always activate the child safety locks installed if children are travelling in the vehicle.
- Never leave children unattended in the vehicle.
- When leaving the vehicle, always take the key with you and lock the vehicle.

There are child safety locks for the rear doors and the rear side windows.


Vehicles for the United Kingdom: observe the important safety notes in the "Notes on the additional door lock" section.
The child safety lock on the rear doors secures each door separately. The doors can no longer be opened from the inside.

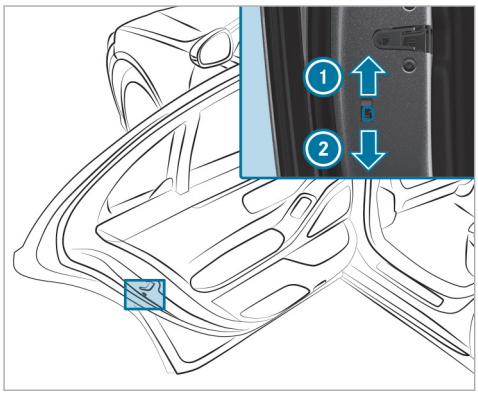

▶ Press the lever in direction 1 (activate) or 2 (deactivate).

▶ Make sure that the child safety locks are working properly.

Activating/deactivating the child safety lock for the rear side windows

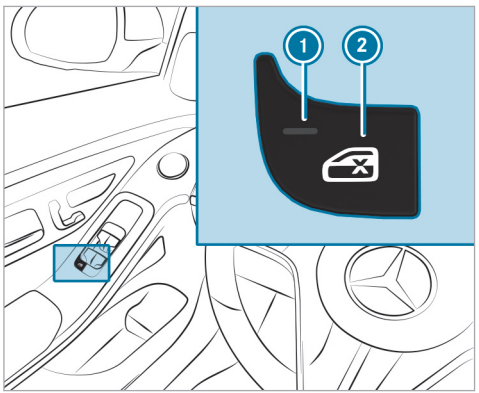

▶ **To activate/deactivate:** press button 2.

The rear side window can be opened or closed as follows:

- indicator lamp 1 is lit: via the switch on the driver's door
- indicator lamp 1 is off: via the switch on the corresponding rear door or driver's door

When the child safety lock is activated, the controls in the rear compartment are disabled for:

- the rear side windows
- the adjustment of the front passenger seat from the rear compartment
- the rear seat belt extender
- the roller sunblinds:
  - of the rear side windows
  - of the rear window
  - in the roof

Notes on pets in the vehicle

⚠ **WARNING** Risk of accident and injury due to animals left unsecured or unattended in the vehicle

If you leave animals in the vehicle unattended or unsecured, they could press buttons or switches, for instance.

An animal may:

- activate vehicle equipment and become trapped, for example
- switch systems on or off and endanger other road users

Unsecured animals may be thrown about the vehicle in the event of an accident, or sudden steering and braking manoeuvres, and injure vehicle occupants.

- ▶ Never leave animals unattended in the vehicle.
- ▶ Always correctly secure animals while driving, e.g. using a suitable animal carrier.

Key

Overview of key functions

WARNING Risk of accident and injury due to leaving children unattended in the vehicle

If children are left unattended in the vehicle, they could, in particular:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

In addition, the children could also set the vehicle in motion by, for example:

- releasing the parking brake.
- changing the transmission position.
- starting the vehicle.


▶ Never leave children unattended in the vehicle.

▶ When leaving the vehicle, always take the key with you and lock the vehicle.

▶ Keep the vehicle key out of the reach of children.

NOTE Damage to the key caused by magnetic fields

▶ Keep the key away from strong magnetic fields.

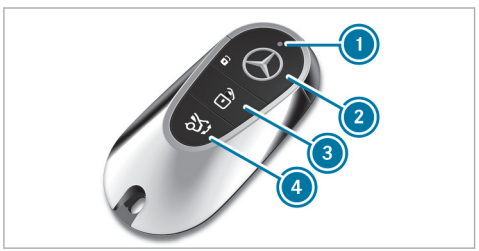

Vehicle key

① Indicator lamp
② Locks
③ Unlocks (with embossed surface)
④ Opens/closes the boot lid

ⓘ If indicator lamp ① does not light up after pressing the or button, the battery is weak or possibly discharged. Replace the battery as soon as possible.

Replace the key battery (→ page 83).


The key locks and unlocks the following components:

- doors
- fuel filler flap
- boot lid

If the vehicle is not opened within approximately 40 seconds after unlocking, it locks again. Anti-theft protection is primed again.

Do not keep the key together with electronic devices or metal objects. This can affect the key's functionality.

Indicator lamp of the vehicle locking system

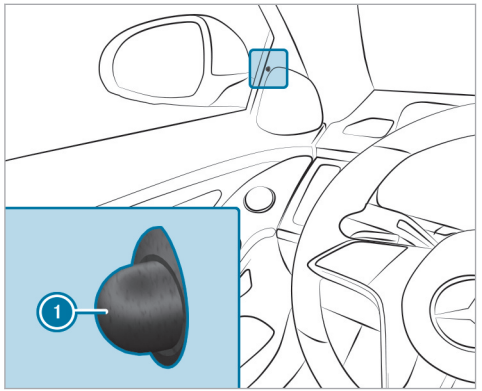

Indicator lamp (1) in the trim on the driver's side flashes when the vehicle is locked from outside. Indicator lamp (1) remains off if the vehicle is locked from inside or while the vehicle is in motion.

Activating/deactivating the acoustic locking verification signal

Multimedia system:

→ ⌂ ▸▸ Settings ▸▸ Vehicle ▸▸ Opening/closing

▶ Activate or deactivate Acoustic lock.

ⓘ **Please note:**
The selected setting for the acoustic locking verification signal must comply with the relevant national road and traffic regulations. In some countries, including Germany, using the acoustic locking verification signal is forbidden by traffic laws (in accordance with §16 Para. 1 and §30 Para. 1 of the German national road traffic regulations). The driver of the vehicle must comply with these regulations. In countries where the use of this function is forbidden, this function is not activated in the vehicle and must not be activated.

Changing the unlocking settings

Possible unlocking functions of the key:

- Central unlocking
- Unlocking the driver's door and fuel filler flap

▶ **To switch between settings:** press the [🔓] and [🚗] buttons simultaneously for approximately six seconds until the indicator lamp flashes twice.

Options if the unlocking function for the driver's door and fuel filler flap has been selected:

- **To unlock the vehicle centrally:** press the [🔓] button twice.
- **Vehicles with KEYLESS-GO:** if you touch the inner surface of the door handle on the driver's door, only the driver's door and fuel filler flap are unlocked.

Deactivating the function of the key

Vehicles with KEYLESS-GO: if you deactivate the function of the key, the KEYLESS-GO functions are also deactivated. Access or drive authorization by KEYLESS-GO is then no longer possible with that particular key. Activate the function of the key so that all its functions will again be available.

You can also deactivate the function of the key to reduce the energy consumption of the key if you


do not use the vehicle or a key for an extended period of time.

- **To deactivate:** press the button on the key twice in quick succession.
  The key indicator lamp flashes twice briefly and lights up once.
- **To activate:** press any button on the key.

ⓘ When the vehicle is started with the key in the stowage compartment of the centre console, the function of the key is automatically activated (→ page 193).


Removing/inserting the emergency key

Removing the emergency key

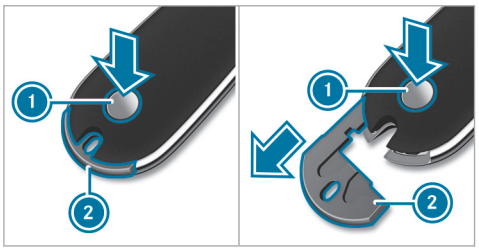

- Press release button ①.
  Emergency key ② is pushed out slightly.
- Fully remove emergency key ②.

Inserting the emergency key

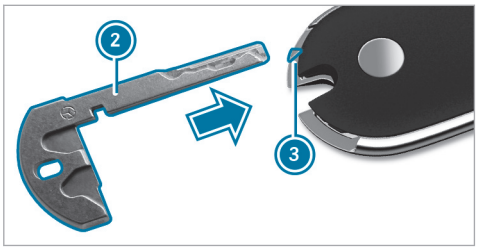

- Insert emergency key ② at marking ③ until it engages.

ⓘ You can use emergency key ② to attach the key to a key ring.

Replacing the key battery

⚠ **DANGER** Risk of fatal injuries if batteries are swallowed

Batteries contain toxic and corrosive substances. Swallowing batteries may cause severe internal burns within two hours.

There is a risk of fatal injury.

- Keep batteries out of the reach of children.
- If the cover and/or lid of the battery compartment does not close securely, do not use the key and keep it away from children.
- If batteries are swallowed, seek medical attention immediately.

ENVIRONMENTAL NOTE Environmental damage due to improper disposal of batteries

Batteries contain pollutants. It is illegal to dispose of them with the household rubbish.


- Dispose of batteries in an environmentally responsible manner. Take discharged batteries to a qualified specialist workshop or to a collection point for used batteries.

Requirements:


- You require a CR 2032 3 V cell battery.

Mercedes-Benz recommends that you have the battery replaced at a qualified specialist workshop.

- Remove the emergency key (→ page 83).

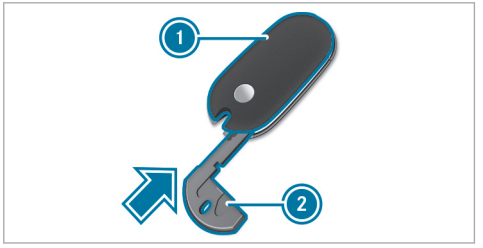

- Press emergency key 2 into the opening in the key in the direction of the arrow until cover 1 opens. When doing so, do not hold cover 1 closed.

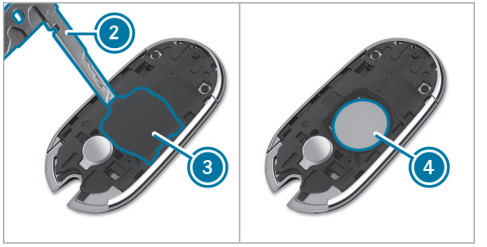

- Insert emergency key 2 into the opening and lift up covering 3 and remove it.
- Repeatedly tap the key against your palm until battery 4 falls out of the key.
- Insert the new battery with the positive pole facing upwards. Use a lint-free cloth to do so.
- Make sure that the surface of the battery is free of lint, grease and other impurities.
- Insert the front tabs of covering 3 into the housing and then press on both sides to close it.
- Make sure that covering 3 is completely closed.

- Insert the front tabs of cover (1) into the housing and then press until it is completely closed.
- Insert the emergency key again (→ page 83).

Problems with the key, troubleshooting

You can no longer lock or unlock the vehicle

Possible causes:

- The key battery is weak or discharged.

- Check the battery using the indicator lamp (→ page 81).
- Replace the key battery, if necessary (→ page 83).
- Use the replacement key.
- Use the emergency key to lock or unlock (→ page 92).
- Have the key checked at a qualified specialist workshop.

There is interference from a powerful radio signal source

The key function is impaired by, for example:

- high voltage power lines
- mobile phones
- electronic devices (notebooks, tablets)
- shielding due to metal objects or induction loops for electrical gate systems or automatic barriers

- Make sure that there is sufficient distance between the key and the potential source of interference.

You have lost a key

- Have the key deactivated at a qualified specialist workshop.
- If necessary, have the mechanical lock replaced as well.

Doors

Notes on the additional door lock

The additional door lock is only available for vehicles for the United Kingdom.

WARNING Risk of injury to persons inside the vehicle when the additional door lock is activated

If the additional door lock is activated, the doors can no longer be opened from the inside.

- Never leave persons, in particular children, unattended in the vehicle.
- If there are persons in the vehicle, do not activate the additional door lock.

The additional door lock is automatically activated in the following situations:

- The vehicle is locked using the key.
- The vehicle is locked using KEYLESS-GO.

If the vehicle has been locked via Mercedes me connect, the additional door lock is not activated.


If the additional door lock is activated, the doors cannot be opened from the inside.

ⓘ After locking you can issue a signal with the horn.

You can prevent the additional door lock from being activated by deactivating interior protection before locking the vehicle (→ page 112).


Unlocking/opening the doors from the inside

► **United Kingdom only:** observe the notes on the additional door lock (→ page 85).

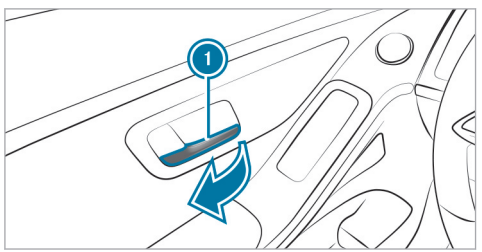

► Pull door handle ①.

Centrally locking and unlocking the vehicle from the inside

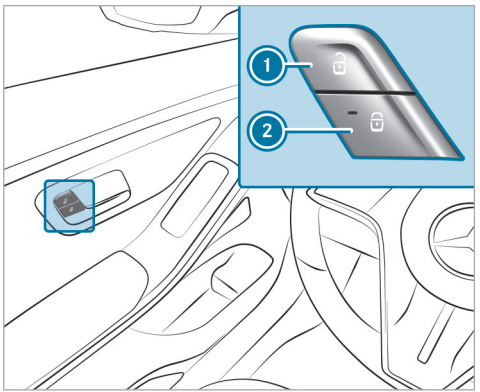

► **To unlock:** press button ①.

► **To lock:** press button ②.
The red indicator lamp on button ② lights up once the vehicle is locked.

ⓘ The buttons are also on the rear doors.

This does not lock or unlock the fuel filler flap.

P223 0210 02

The vehicle is not unlocked:

- If you have locked the vehicle using the key.
- If you have locked the vehicle using KEYLESS-GO.

Locking/unlocking the vehicle with KEYLESS-GO

Requirements:

- The key is outside the vehicle.
- The distance between the key and the vehicle does not exceed 1 m.
- The driver's door and the door at which the door handle is used are closed.

In the following cases, the door handles are extended:

- when the vehicle is unlocked
- when the vehicle key is detected
- when a door is opened

In the following cases, the door handles are retracted:

- when the vehicle is locked
- when pulling away

- after waiting for a time

! **NOTE** Damage to the vehicle caused by unintentionally opening the boot lid or a door

- when using an automatic car wash
- when using a high pressure cleaner


▶ Deactivate the key functions in these situations.

or


▶ Make sure that the key is at a minimum distance of 3 m (high-pressure cleaner) or 6 m (automatic car wash) away from the vehicle.

Observe the following information:

- Information on washing the vehicle in a car wash (→ page 341)
- Information on using a high-pressure cleaner (→ page 342)

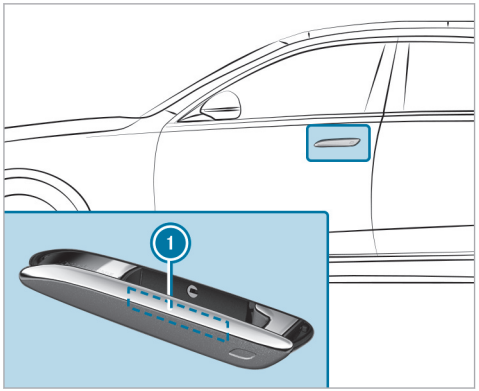

▶ **To unlock the vehicle:** touch the inner surface of door handle (1).

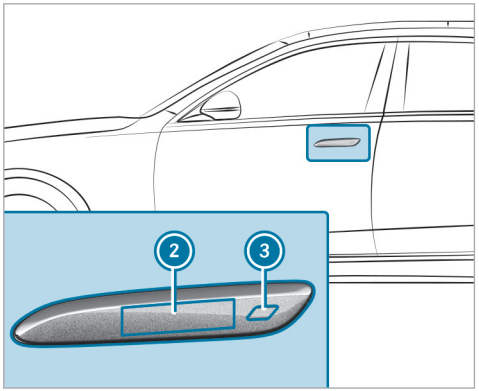

ⓘ If the door handle is not extended, touch sensor surface (2) to unlock.

▶ **To lock the vehicle:** touch recessed sensor surface (3).

▶ **Convenience closing:** touch recessed sensor surface (3) for an extended period.

ⓘ Further information on convenience closing (→ page 102).

Problems with KEYLESS-GO, troubleshooting

You can no longer lock or unlock the vehicle using KEYLESS-GO

Possible causes:

- The key functions have been deactivated.
- The key battery is weak or discharged.

▶ Activate the key functions (→ page 82).
▶ Check the battery using the indicator lamp (→ page 81).
▶ Replace the key battery, if necessary (→ page 83).
▶ Use the replacement key.
▶ Use the emergency key to lock or unlock (→ page 92).
▶ Have the vehicle and key checked at a qualified specialist workshop.

There is interference from a powerful radio signal source.

The KEYLESS-GO function is impaired by, for example:

- high voltage power lines
- mobile phones
- electronic devices (notebooks, tablets)
- shielding due to metal objects or induction loops for electrical gate systems or automatic barriers

▶ Make sure that there is sufficient distance between the key and the potential source of interference.

Activating or deactivating the automatic locking feature

Multimedia system:

→ ⌂ ▸▸ Settings ▸▸ Vehicle ▸▸ Locking function

ⓘ The vehicle is locked automatically when the ignition is switched on and the wheels are turning faster than walking pace.

▶ Activate or deactivate Automatic locking.

In the following situations, there is a danger of being locked out when the function is activated:

- while the vehicle is being tow-started or pushed
- if the vehicle is being tested on a roller dynamometer

Opening and closing the convenience doors in the rear

⚠ **WARNING** Risk of becoming trapped during automatic closing of the rear doors

Parts of the body could become trapped. There may be people in the closing area.

▶ Make sure that nobody is in the vicinity of the closing area.
▶ Use one of the following options to stop the closing process:
  - Press the [🔓] or [🚗] button on the key.
  - Pull or push the pushbutton switch in the roof lining.
  - Push against or pull the door.
  - Touch the touch screen in the convenience menu in the multimedia system.

NOTE When automatically opening and closing the rear doors, please note

Your view of your surroundings may be restricted.

- Make sure that there are no persons, animals or objects in the area of the doors when opening and closing.
- When opening, pay particular attention to low objects and obstacles in the area around the side windows.

Opening or closing the rear doors

The following functions are required to automatically open and close the convenience doors in the rear passenger compartment:

- KEYLESS-GO (→ page 86)
- Power closing function (→ page 92)
- Active Blind Spot Assist (→ page 250)

The rear doors can then be opened and closed automatically.

ⓘ If Active Blind Spot Assist is deactivated or unavailable, the function of the convenience doors in the rear is still available.

The following options are available for opening or closing the convenience doors in the rear:

- the key
- the pushbutton switch in the roof lining
- the outer door handles in the rear (only to close)
- by pushing a rear door (only to close)
- the multimedia system (→ page 91)

ⓘ You cannot open a rear door from inside the vehicle if it is secured by the child safety lock. Further information on the child safety lock for the rear doors (→ page 78).

Special features of the convenience doors in the rear:


- If, when closing, the rear door has reached the first detent position, the power closing function (→ page 92) will automatically draw the rear door into the lock.
- If the rear doors are closed using the convenience function, they are not automatically locked.

▶ **To open with the key:** press and hold the button on the key.


ⓘ In the multimedia system you can set whether the left rear door, the right rear door or no rear door opens when you press the button on the key (→ page 91).
If no rear door opens, the convenience opening function is carried out when the button is pressed. Further information on convenience opening (→ page 101).

▶ **To close with the key:** press the button on the key.
All open rear doors close.

▶ **Convenience closing with the key:** press and hold the button on the key.
All open rear doors, side windows, and the panoramic sliding sunroof close.

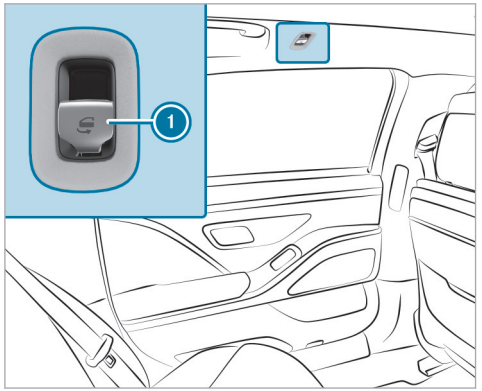

- **To open with the pushbutton switch in the roof lining:** press and hold button (1).
- **To manually close with the pushbutton switch in the roof lining:** pull button (1) to the pressure point.
- **To automatically close with the pushbutton switch in the roof lining:** pull button (1) past the pressure point.

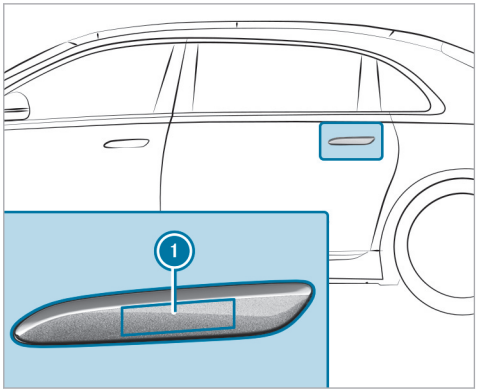

- **To close from outside with the door handle:** touch sensor surface (1) on the door handle.

(i) You can also easily close a rear door by pushing with your hand. The rear door then closes automatically.

Blockage detection when opening the rear doors
If an obstacle obstructs a rear door during the automatic opening process, blockage detection will stop the rear door. The automatic blockage detection function is only an aid and is not a substitute for your attentiveness.

When opening the rear doors from the inside: the exit warning of Active Blind Spot Assist is used as an additional safeguard. If an obstacle is detected, the convenience function is deactivated and the moving rear door will be stopped.

- Manually open a rear door stopped in an intermediate position.

⚠ **WARNING** Risk of accident despite exit warning

The exit warning neither reacts to stationary objects nor to vehicles approaching you at a greatly differing speed.

The exit warning cannot warn drivers in these situations.

- Always pay particular attention to the traffic situation when opening the doors and make sure there is sufficient clearance.

The exit warning is only an aid and not a substitute for the attention of vehicle occupants. The

responsibility for opening and closing the doors and for leaving the vehicle remains with the vehicle occupants.

ⓘ Further information on Active Blind Spot Assist with exit warning (→ page 250).

Automatic reversing function when closing the rear doors

The rear doors are equipped with automatic blockage detection with a reversing function. If an obstacle stops a rear door during the automatic closing procedure, it will automatically open again. The automatic reversing function is only an aid and is not a substitute for your attentiveness.

- During the closing process, make sure that no body parts are in the closing area.

⚠ WARNING Risk of becoming trapped despite reversing function

The reversing function will not react:

- to soft, light and thin objects, e.g. fingers
- towards the end of the closing procedure.

In these situations in particular, the reversing function cannot prevent someone being trapped.

- Make sure that no body parts are in the closing area.
- If someone is trapped, use one of the following options:
  - Press the [ ] or [ ] button on the key.
  - Pull or push the pushbutton switch in the roof lining.
  - Push against or pull the door.
  - Touch the touch screen in the convenience menu in the multimedia system.

Setting convenience doors

Multimedia system:

→ [ ] ▸▸ Settings ▸▸ Vehicle ▸▸ Comfort

- Activate or deactivate Comfort doors.

Operating convenience doors

- Select [ ].
- Select Open door control.
  The window for operating the rear doors opens. The doors can be opened or closed by operating the slider.
- Select Cancel process.
  The procedure is interrupted and the door remains in the position it has reached.
- Select Close all.
  All doors are closed simultaneously.

Setting the key function for the convenience doors

- Select [ ].
- Select Key assignment.
  Convenience opening, windows, opening Rear door, right and opening Rear door, left can be set separately for operation with the key.

Power closing function

WARNING Risk of becoming trapped when the doors close automatically

Body parts or objects can become trapped, causing injuries.

- Ensure that no body parts or objects are in the closing area.
- Automatic closing of the doors can be cancelled by pulling the outer or inner door handle.


If you push the door into the lock to the first detent position, the power closing function will automatically pull the door into the lock.

ⓘ If the vehicle is locked from the outside, or while pulling away, an automatic closing of the doors can be triggered.


Locking/unlocking the vehicle with the emergency key

Unlocking a left-hand vehicle door with the emergency key element

- Remove the emergency key (→ page 83).

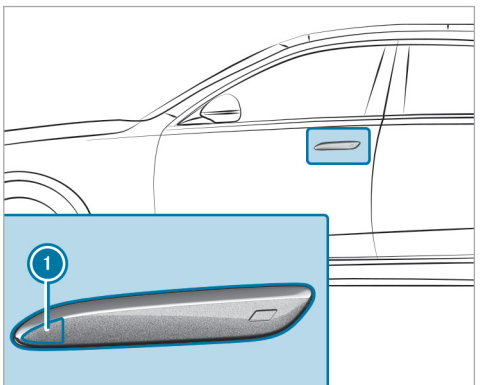


- **If the door handle is retracted:** press the front area of door handle ①.
  The door handle folds slightly outward.
- Pull and hold the door handle.

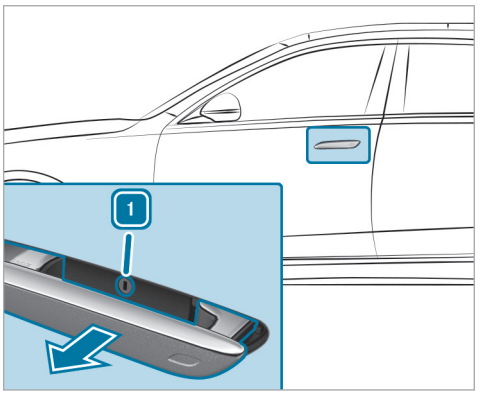

- **If the door handle is extended:** slightly pull and hold the door handle.
- **To unlock:** insert the emergency key into the lock cylinder.

- Turn the emergency key anti-clockwise to position 1.
- Remove the emergency key and release the door handle.

Locking the doors

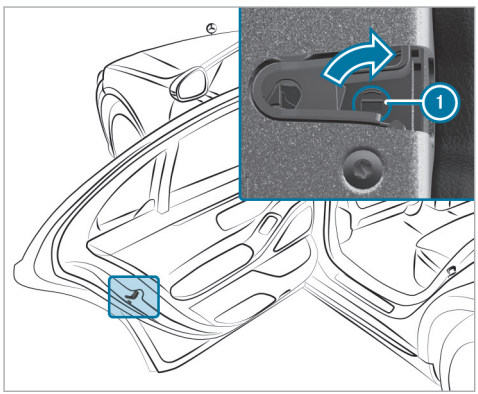

- Insert a suitable object, e.g. the emergency key, into opening (1) on the door lock.
- **To lock the left-hand side of the vehicle:** turn the emergency key clockwise as far as it will go.
- **To lock the right-hand side of the vehicle:** turn the emergency key anti-clockwise as far as it will go.

If the locked door is then closed, it can no longer be opened from the outside.

Boot

Opening the boot lid

⚠ **DANGER** Risk of exhaust gas poisoning

Combustion engines emit poisonous exhaust gases such as carbon monoxide. Exhaust gases can enter the vehicle interior if the boot lid is open when the engine is running, especially if the vehicle is in motion.

- Always switch off the engine before opening the boot lid.
- Never drive with the boot lid open.


! **NOTE** Damage to the boot lid by obstacles above the vehicle

The boot lid swings upwards when it is opened.

- Therefore, make sure that there is sufficient clearance above the boot lid.

- Pull the boot lid handle.
- **Vehicles with HANDS-FREE ACCESS:** make a kicking movement with your foot below the bumper (→ page 96).

Vehicles with boot lid convenience closing

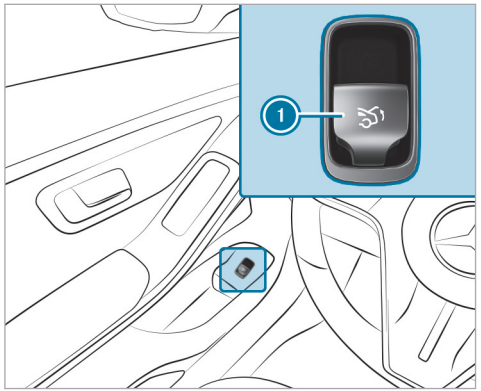

- Pull boot lid remote operating switch (1).
- Press and hold the button on the key.
- If the boot lid is stopped in an intermediate position, pull it upwards. Release it as soon as it begins to open.
  With the boot lid opening limiter activated, manually pull the stopped boot lid upwards.

If an obstacle obstructs the boot lid during the automatic opening process, blockage detection will stop the boot lid. The automatic blockage detection function is only an aid and is not a substitute for your attentiveness.

Closing the boot lid

WARNING Risk of injury from unsecured items in the vehicle

If objects, luggage or loads are not secured or not secured sufficiently, they could slip, tip over or be thrown around and thereby hit vehicle occupants.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- Always stow objects in such a way that they cannot be thrown around.
- Before the journey, secure objects, luggage or loads against slipping or tipping over.

Observe the notes on loading the vehicle.

Note on closing the boot lid: your vehicle is equipped with automatic key recognition. If a key belonging to the vehicle is detected in the vehicle, the boot lid will not be locked.

This depends on the following conditions:

- You have closed the boot lid and the vehicle was locked beforehand.
- A second key belonging to the vehicle is not detected outside the vehicle.

The boot lid will then not be locked and will pop open again.

Automatic key recognition is only an aid and is not a substitute for your attentiveness.

- Before locking, ensure that at least one key belonging to the vehicle is outside the vehicle.
- Pull the boot lid downwards using the handle recess and push it closed.

ⓘ If you lightly push the boot lid closed, the power closing function will automatically pull the boot lid into the lock.


Vehicles with boot lid convenience closing

WARNING Risk of becoming trapped during automatic closing of the boot lid


Parts of the body could become trapped. There may be people in the closing area.

- Make sure that nobody is in the vicinity of the closing area.
- Use one of the following options to stop the closing process:
  - Press the button on the key.
  - Press or pull the remote operating switch on the driver's door.
  - Press the closing or locking button on the boot lid.
  - Pull the boot lid handle.

- **Vehicles with HANDS-FREE ACCESS:** it is also possible to stop the closing process by making a kicking movement below the rear bumper.
- Pull the boot lid handle. Release it as soon as it begins to close.
- If the boot lid is stopped in an intermediate position, push it downwards. The boot lid will continue to close.

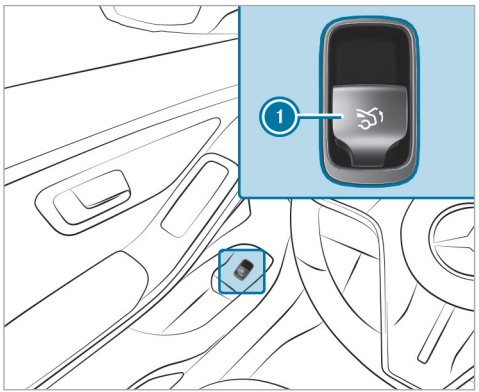

- Press boot lid remote operating switch 1.

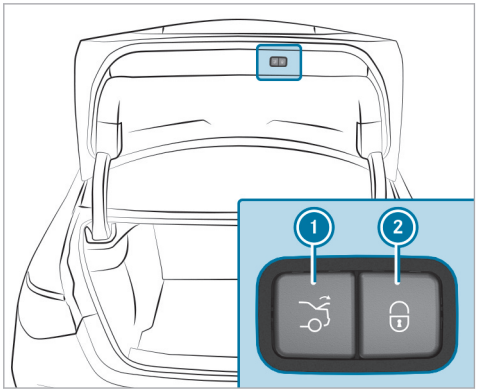

- Press closing button 1 on the boot lid.

Vehicles with KEYLESS-GO

- Press locking button 2 on the boot lid. If a key is detected outside the vehicle, the boot lid will close and the vehicle will be locked.

- With the boot lid completely open, press and hold the button on the key. The key must be in the vicinity of the vehicle.

Vehicles with HANDS-FREE ACCESS

- With the boot lid completely open, make a kicking movement with your foot below the bumper (→ page 96).

Boot lid automatic reversing function

The boot lid is fitted with automatic blockage detection with a reversing function. If an obstacle obstructs the boot lid during the automatic closing process, it will automatically open again. The automatic reversing function is only an aid and is not a substitute for your attentiveness.

- During the closing process, make sure that no body parts are in the closing area.

WARNING Risk of becoming trapped despite reversing function


The reversing function will not react:

- to soft, light and thin objects, e.g. fingers
- towards the end of the closing procedure

In these situations in particular, the reversing function cannot prevent someone being trapped.

- Ensure that no body parts are in the closing area.
- If someone is trapped, use one of the following options:
  - Press the button on the key.
  - Press the remote operating switch on the driver's door.
  - Press the closing or locking button on the boot lid.
  - Pull the boot lid handle.

HANDS-FREE ACCESS function

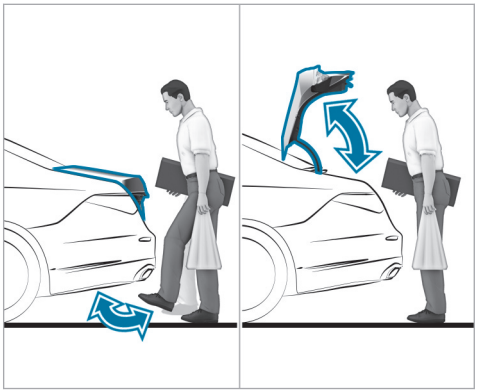

With HANDS-FREE ACCESS you can open, close or interrupt boot lid movement by performing a kicking movement under the rear bumper.

The kicking movement triggers the opening or closing process alternately.

Observe the notes when opening (→ page 93) and closing (→ page 94) the boot lid.

ⓘ A warning tone sounds while the boot lid is opening or closing.

⚠ WARNING Risk of burns caused by a hot exhaust system

The vehicle exhaust system can become very hot. If you use HANDS-FREE ACCESS, you could burn yourself by touching the exhaust system.

▶ Always ensure that you only make a kicking movement within the detection range of the sensors.

! NOTE Damage to the vehicle caused by unintentionally opening the boot lid or a door

- when using an automatic car wash
- when using a high pressure cleaner

▶ Deactivate the key functions in these situations.


or

▶ Make sure that the key is at a minimum distance of 3 m (high-pressure cleaner) or 6 m (automatic car wash) away from the vehicle.

When making the kicking movement, make sure that you are standing firmly on the ground. You could otherwise lose your balance, e.g. on ice.

Observe the following notes:

- The key is behind the vehicle.
- Stand at least 30 cm away from the vehicle while performing the kicking movement.
- Do not come into contact with the bumper while making the kicking movement.
- Do not carry out the kicking movement too slowly.
- The kicking movement must be towards the vehicle and back again.

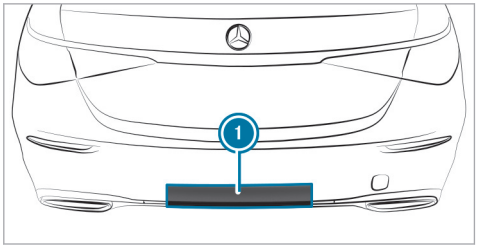

① Detection range of the sensors

If several consecutive kicking movements are not successful, wait ten seconds.

System limits

The system may be impaired or may not function in the following cases:

- The sensors are dirty, e.g. due to road salt or snow.
- The kicking movement is made using a prosthetic leg.

The boot lid could be opened or closed unintentionally, in the following situations:

- A person's arms or legs are moving in the sensor detection range, e.g. when polishing the vehicle or picking up objects.
- Objects are moved or placed behind the vehicle, e.g. tensioning straps or luggage.
- Clamping straps, tarpaulins or other coverings are pulled over the bumper.
- A protective mat with a length reaching over the boot sill down into the detection range of the sensors is used.
- The protective mat is not secured correctly.

Deactivate the key functions (→ page 82) or do not carry the key about your person in such situations.

Switching separate boot locking on and off

Multimedia system:

↳ ⌂ ▸▸ Settings ▸▸ Vehicle ▸▸ Opening/closing

Switching separate boot locking on

- ▶ Select Block boot.
- ▶ Create a PIN.
- ▶ Press OK to confirm the PIN.
- ▶ Enter the PIN again and confirm it.
  The boot will remain locked if you unlock the vehicle centrally.

ⓘ If an accident has been detected, the boot will unlock even if separate locking is switched on.

ⓘ You can open the boot with the emergency key even while boot locking is active. Separate boot locking will remain active.

Switching separate boot locking off

- ▶ Select Block boot.
- ▶ Enter the PIN.
  If the PIN is correct, separate boot locking will be switched off and the PIN deleted.


Resetting the PIN

If you have forgotten the PIN, you can switch off separate boot locking with the emergency key.

- ▶ Select Block boot.
- ▶ Confirm Forgotten PIN?.
- ▶ Unlock the boot within 3 minutes with the emergency key.
  Separate boot locking will be switched off and the PIN deleted.

Unlocking the boot lid using the emergency key

- ▶ Take the emergency key element out of the key (→ page 83).
- ▶ Insert the emergency key into the boot lock as far as it will go.

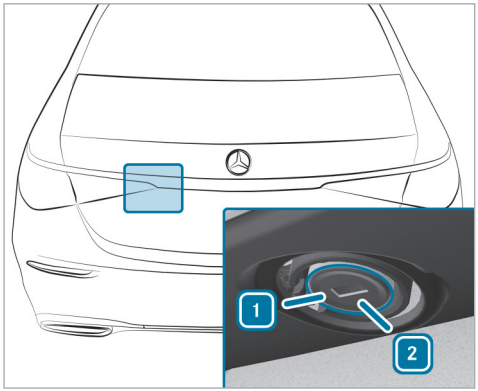

- Turn the emergency key anti-clockwise from position 1 to position 2.
- Turn the emergency key back to position 1 and remove it.

ⓘ If you use the emergency key to unlock and open the boot lid, the anti-theft alarm system will be triggered.

Activating/deactivating the boot lid opening limiter

Multimedia system:

→ ⌂ ▸▸ Settings ▸▸ Vehicle ▸▸ Opening/closing

- Activate or deactivate the Opening height limiter.

This function prevents the boot lid from hitting a low garage ceiling, for example.

Side windows

Opening and closing the side windows

⚠ WARNING Risk of becoming trapped when opening a side window

When you open a side window, parts of the body could be drawn in or become trapped between the side window and window frame.

- When opening, make sure that nobody is touching the side window.
- If someone is trapped, release the button immediately or pull it in order to close the side window again.

⚠ WARNING Risk of becoming trapped when closing a side window

When closing a side window, body parts could be trapped in the closing area in the process.

- When closing, make sure that no body parts are in the closing area.
- If someone is trapped, release the button immediately or press the button in order to reopen the side window.

⚠ WARNING Risk of becoming trapped when children operate the side windows


Children could become trapped if they operate the side windows, particularly when unattended.

- Activate the child safety lock for the rear side windows.

- When leaving the vehicle, always take the key with you and lock the vehicle.
- Never leave children unattended in the vehicle.

Requirements:

- The power supply or the ignition is switched on.

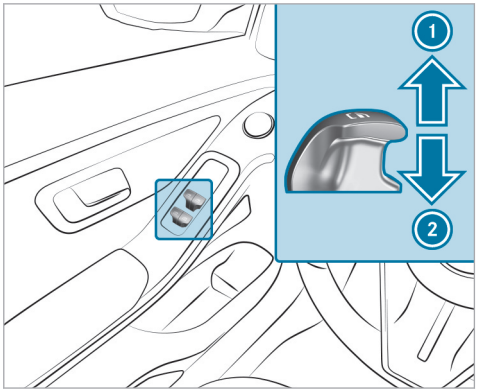

1 Closing
2 Opening

The buttons on the driver's door take precedence.

- **To start automatic operation:** press the button beyond the point of resistance or pull and release it.
- **To interrupt automatic operation:** press or pull the button again.

P223 0210 02

When the vehicle is switched off, you can continue to operate the side windows.

This function is available for around four minutes or until a front door is opened.

ⓘ **Vehicles with electric roller sunblinds on rear doors on the left and right:** the buttons for the rear side windows also open and close the roller sunblinds (→ page 108).

Automatic reversing function of the side windows

If an obstacle impedes a side window during the closing process, the side window will open again automatically. The automatic reversing function is only an aid and is not a substitute for your attentiveness.

- During the closing process, make sure that no body parts are in the closing area.

⚠ **WARNING** Risk of becoming trapped despite there being reversing protection on the side window

The reversing function does not react:

- to soft, light and thin objects, e.g. fingers.

- during resetting.

The reversing function cannot prevent someone from becoming trapped in these situations.

▶ During the closing process, make sure that no body parts are in the closing area.

▶ If someone becomes trapped, press the button to open the side window again.

Automatic function of the side windows

In the following cases, the side windows will be closed automatically when the vehicle is switched off:

- if it starts to rain

  Rain is detected by a rain sensor on the windscreen.
- in extreme temperatures
- after a certain time (depending on the onboard electrical system voltage)
- if there is a malfunction in the power supply

The side windows will be closed as far as the ventilation position.

Vehicles with a panorama sliding sunroof: the side windows will be closed completely if the sliding sunroof is open.

If the side windows are obstructed during automatic closing, the side window concerned will open again slightly. The automatic function for the sliding sunroof and the side windows will then be deactivated.

Convenience opening (ventilating the vehicle before starting a journey)

⚠ **WARNING** Risk of entrapment when opening a side window

When opening a side window, parts of the body could be drawn in or become trapped between the side window and window frame.

▶ When opening, make sure that nobody is touching the side window.

▶ Release the button immediately if somebody becomes trapped.

▶ Press and hold the button on the key.

The following functions are performed:

- The vehicle is unlocked.
- The side windows are opened.
- The panoramic sliding roof is opened.
- The seat ventilation of the driver's seat is switched on.

ⓘ If the roller sunblinds of the panoramic sliding sunroof are closed, the roller sunblinds are opened first.

ⓘ If the roller sunblinds of the rear doors are closed, the roller sunblinds are opened first.

▶ **To interrupt convenience opening:** release the button.

▶ **To continue convenience opening:** press and hold the button again.

Convenience closing (closing the vehicle from outside)

WARNING Risk of entrapment due to not paying attention during convenience closing

When the convenience closing feature is operating, parts of the body could become trapped in the closing area of the side window and the sliding sunroof.

- When the convenience closing feature is operating, monitor the entire closing process and make sure that no body parts are in the closing area.

- Press and hold the button on the key.

The following functions are performed:

- The vehicle is locked.
- The side windows are closed.
- The panoramic sliding roof is closed.

- **To interrupt convenience closing:** release the button.
- **To continue convenience closing:** press and hold the button again.

Convenience closing also functions with KEYLESS-GO (→ page 86).

Resolving problems with the side windows

WARNING Risk of becoming trapped or fatally injured if reversing protection is not activated

If you close a side window again immediately after it has been blocked, the side window will close with increased or maximum force. The reversing function is then not active and body parts may become trapped.

- Make sure that no parts of the body are in the closing area.
- To stop the closing process, release the button or press the button again to reopen the side window.

A side window cannot be closed and you cannot see the cause.

- Check to see whether any objects are in the window guide.
- Adjust the side windows.

Adjusting the side windows

If a side window is obstructed during closing and reopens again immediately:

- Immediately after this, pull and hold the corresponding button again until the side window has closed and hold the button for at least one more second (re-adjustment).
The side window will be closed without the automatic reversing function.

If the side window is obstructed again and reopens again immediately:

- Immediately after this, pull and hold the corresponding button again until the side window has closed and hold the button for at least one more second (follow-up adjustment).
The side window will be closed without the automatic reversing function.

The side windows cannot be opened or closed using the convenience opening feature.

Possible cause:

- The key battery is weak or discharged.

▶ Check the battery using the indicator lamp (→ page 81).

▶ Replace the key battery, if necessary (→ page 83).

Sliding sunroof

Opening and closing the sliding sunroof

ⓘ The term "sliding sunroof" refers to the panorama sliding sunroof.

⚠ **WARNING** Risk of becoming trapped when the sliding sunroof is being opened and closed

Body parts may become trapped in the range of movement.

▶ During the opening and closing process, make sure that no body parts are in the sweep of the sliding sunroof.

▶ If someone is trapped, release the control panel immediately.

or

▶ Touch the control panel during automatic operation.
The opening/closing process will be stopped.

⚠ **WARNING** Risk of entrapment if the sliding sunroof is operated by children

Children operating the sliding sunroof could get caught in the moving parts, particularly if unattended.

▶ Never leave children unattended in the vehicle.

▶ When leaving the vehicle, always take the key with you and lock the vehicle.

⚠ **WARNING** Risk of becoming trapped when the roller sunblind is being opened and closed

Body parts may become trapped between the roller sunblind and frame or sliding roof.

▶ During the opening or closing process, make sure that no body parts are in the roller sunblind's range of movement.

▶ If someone is trapped, release the control panel immediately.

or

▶ Touch the control panel during automatic operation.
The opening/closing process will be stopped.

! **NOTE** Malfunction due to snow and ice


Snow and ice may cause the sliding sunroof to malfunction.

▶ Open the sliding sunroof only if it is free of snow and ice.

NOTE Damage caused by protruding objects

Objects that protrude from the sliding sunroof may damage the sealing strips.

- Do not allow anything to protrude from the sliding sunroof.

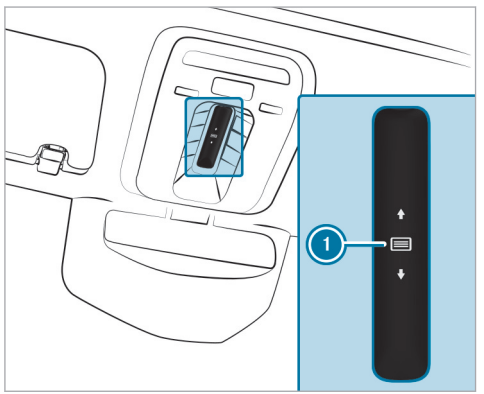


The sliding sunroof and the front roller sunblind are operated using control panel 1.

The panorama sliding sunroof can be operated only when the roller sunblind is open.

- **To open:** swipe backwards across control panel 1 and hold.
- **To close:** swipe forwards across control panel 1 and hold.
- **To raise or lower:** press control panel 1 briefly.
- **To start automatic operation:** swipe forwards or backwards across control panel 1.
- **To cancel automatic operation:** press control panel 1 again.
  The opening/closing process will be stopped.


Operating the rear roller sunblind from the front

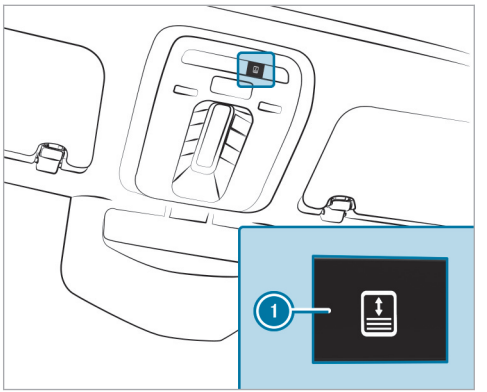

- **To open or close:** press button 1.
- **To stop:** press button 1 again.

If you stop the opening or closing process, the roller sunblind will first be closed again when the process is resumed.

Operating the rear roller sunblind from the rear

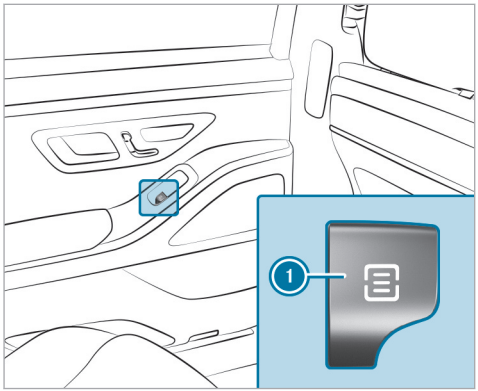

- **To open/close manually:** push or pull button 1 to the point of resistance and hold it until the roller sunblind has reached the desired position.
- **To open/close fully:** push or pull button 1 beyond the point of resistance and release it.

Automatic reversing function of the sliding sunroof

If an obstacle obstructs the sliding sunroof during the closing process, the sliding sunroof will open again automatically. The automatic reversing function is only an aid and is not a substitute for your attentiveness.

- During the closing process, make sure that no body parts are in the closing area.

WARNING Risk of becoming trapped despite reversing function

The reversing function will not react:

- to soft, light and thin objects, e.g. fingers.
- towards the end of the closing procedure.
- during resetting.
- when you close the sliding sunroof again manually immediately after automatic reversing.

- During the closing process, make sure that no body parts are in the closing area.
- If someone is trapped, release the control panel immediately.

or

- Touch the control panel during automatic closing.
  The closing process will be stopped.

Automatic reversing function of the roller sunblinds

If an obstacle obstructs a roller sunblind during the closing process, the roller sunblind will open again automatically. The automatic reversing function is only an aid and is not a substitute for your attentiveness.

- When closing the roller sunblinds, make sure that no body parts are in the range of movement.

WARNING Risk of becoming trapped despite reversing function

In particular, the reversing function does not react to soft, light and thin objects, e.g. fingers.

- When closing the roller sunblind, make sure that no body parts are in the range of movement.
- If someone is trapped, release the control panel immediately.

or

- Touch the control panel during automatic closing.
  The closing process will be stopped.

Automatic functions of the sliding sunroof

ⓘ The term "sliding sunroof" refers to the panorama sliding sunroof.

The sliding sunroof will be closed automatically when the vehicle has been switched off in the following situations:

- if it starts to rain

  Rain is detected by a rain sensor on the windscreen.
- in extreme temperatures
- after a certain time (depending on the onboard electrical system voltage)
- if there is a malfunction in the power supply

The sliding sunroof will rise at the rear in order to continue ventilating the vehicle interior.

If the sliding sunroof is obstructed during an automatic closing procedure, the roof will be opened again slightly. The automatic function for the sliding sunroof and the side windows will then be deactivated.

Rain closing function when driving
Vehicles with a panorama sliding sunroof: if it starts to rain, the raised sliding sunroof will automatically be lowered while the vehicle is in motion.

Automatic lowering function
Vehicles with a panorama sliding sunroof: if the sliding sunroof is raised at the rear, it will automatically be lowered slightly at higher speeds. At low speeds, it will be raised again automatically.

⚠ **WARNING** Risk of becoming trapped by automatic lowering of the sliding sunroof

At higher speeds, the raised sliding sunroof will automatically be lowered slightly at the rear.

- Make sure that nobody reaches into the sliding sunroof's range of movement while the vehicle is in motion.
- If someone becomes trapped, touch the control panel.

Rectifying problems with the sliding sunroof

⚠ **WARNING** Risk of becoming trapped or fatal injuries when the sliding sunroof is closed again

If you close the sliding sunroof again immediately after it has been blocked or reset, the sliding sunroof closes with increased or maximum force.

- Make sure that no parts of the body are in the closing area.

- If someone is trapped, release the control panel immediately.

or

- Touch the control panel during automatic closing.
  The closing process will be stopped.

The sliding sunroof cannot be closed and you cannot see the cause.

ⓘ The term "sliding sunroof" refers to the panorama sliding sunroof.

If the sliding sunroof is obstructed during closing and reopens again slightly:

- Immediately after automatic reversing, swipe forwards across the control panel (→ page 103) and hold until the sliding sunroof is closed.
  The sliding sunroof will be closed with increased force.

If the sliding sunroof is obstructed again and opens again slightly:

- Repeat the previous step.
  The sliding sunroof will be closed again with increased force.

The sliding sunroof or the front roller sunblind is not operating smoothly.

- Reset the sliding sunroof and the roller sunblind.


Resetting the sliding sunroof and the roller sunblind

- Repeatedly swipe forwards across the control panel (→ page 103) and hold until the sliding sunroof is completely closed.
- Press and hold the control panel for another second.
- Press and hold the control panel until the front roller sunblind is completely closed.
- Press and hold the control panel for another second.
- Use automatic operation to fully open and then close the sliding sunroof.

The rear roller sunblind is not operating smoothly.

- Reset the rear roller sunblind.

Resetting the rear roller sunblind

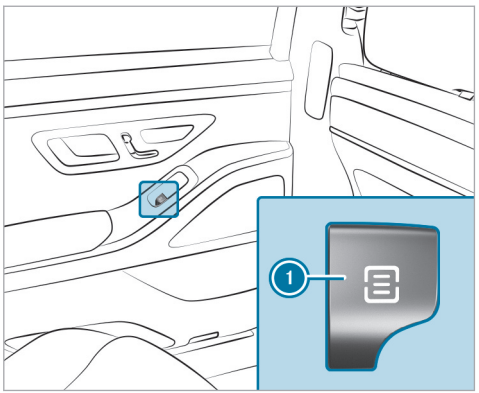


- Pull and hold button (1) repeatedly until the rear roller sunblind is fully closed.
- Pull button (1) for another second.

- Use automatic operation to fully open and then close the rear roller sunblind.

Roller sunblinds

Extending or retracting the roller sunblinds on the rear side windows

The roller sunblinds for the rear side windows can be operated with the buttons for the side windows.

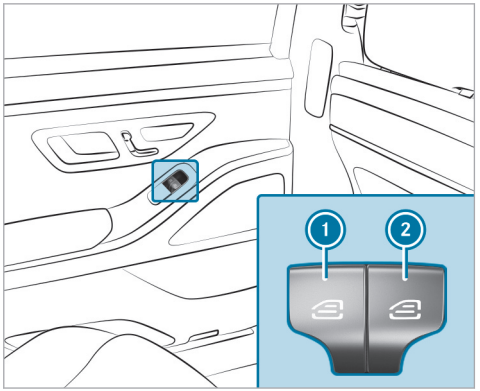

1. Rear left side window / roller sunblind
2. Rear right side window / roller sunblind

- **To close fully:** pull the corresponding button when the side window is closed or is in the process of closing.
- **To open fully:** press the corresponding button.

Extending or retracting the rear-window roller sunblind

WARNING Risk of becoming trapped when extending or retracting the roller sunblind

Body parts may become trapped in the roller sunblind's range of movement.


- Ensure there are no body parts in the range of movement.
- If someone becomes trapped, briefly press the button again.
  The opening or closing process will briefly be stopped. The roller sunblind will then return to its starting position.

Extending or retracting from the driver's seat

NOTE Damage caused by objects

Objects can cause the roller sunblind to malfunction.

- Do not store objects on the rear shelf.
- Ensure that the roller sunblind can move freely.

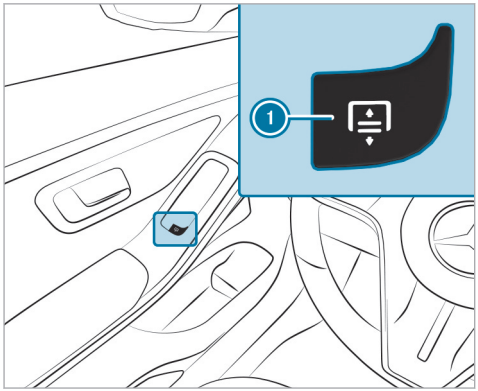

▶ Press button 1.

ⓘ Depending on the model, button 1 is located on the door control panel on the driver's side.


Extending or retracting from the rear compartment

! NOTE Damage caused by objects

Objects can cause the roller sunblind to malfunction.

▶ Do not store objects on the rear shelf.

▶ Ensure that the roller sunblind can move freely.

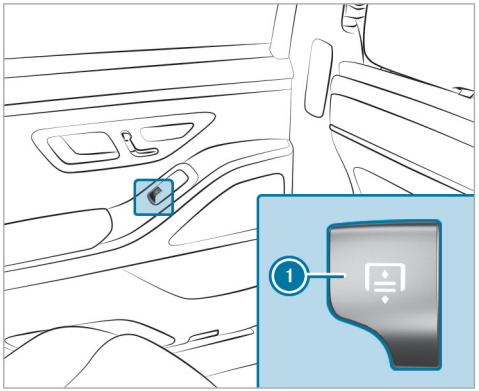

▶ **To extend:** pull switch 1.

▶ **To retract:** press switch 1.

When the child safety lock for the rear side windows is activated, switch 1 cannot be operated.

Anti-theft protection

Function of the immobiliser

The immobiliser prevents your vehicle from being started without the correct key.

The immobiliser is automatically activated when the ignition is switched off and deactivated when the ignition is switched on.

ATA (Anti-Theft Alarm system)


Function of the ATA system

If the ATA system is primed, a visual and audible alarm is triggered in the following situations:

- when a door is opened
- when the boot lid is opened
- when the bonnet is opened
- when interior protection is triggered (→ page 111)
- when tow-away protection is triggered (→ page 111)

The ATA system is primed automatically after approximately ten seconds in the following situations:

- after locking the vehicle with the key
- after locking the vehicle using KEYLESS-GO

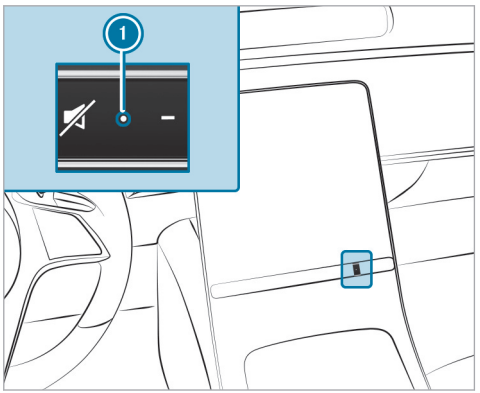

Indicator lamp (1) flashes when the ATA system is primed.

The ATA system is deactivated automatically in the following situations:

- after unlocking the vehicle with the key
- after unlocking the vehicle using KEYLESS-GO
- after pressing the start/stop button with the key in the stowage compartment (→ page 193)

ⓘ When the Mercedes-Benz emergency call system is active and the alarm stays on for more than 30 seconds, a message is automatically sent to the Customer Assistance Centre (→ page 323).

Deactivating the ATA

▶ Press the [ ], [ ] or [ ] button on the key.

or

▶ Press the start/stop button with the key in the stowage compartment (→ page 193)

Deactivating the alarm using KEYLESS-GO

▶ With the key outside the vehicle, touch the inner surface of the door handle.

Function of tow-away protection

An audible and visual alarm is triggered if an alteration to your vehicle's angle of inclination is detected while tow-away protection is primed.

Tow-away protection is automatically primed after approximately 60 seconds:

- after locking the vehicle with the key
- after locking the vehicle using KEYLESS-GO

Tow-away protection is only primed when the following components are closed:

- doors
- boot lid

Tow-away protection is automatically deactivated:

- after pressing the button or button on the key
- after pressing the start/stop button with the key in the stowage compartment (→ page 193)
- after unlocking the vehicle using KEYLESS-GO
- when using HANDS-FREE ACCESS

Information on collision detection on a parked vehicle (→ page 217).

Priming/deactivating tow-away protection

Multimedia system:

Settings Vehicle Opening/closing Vehicle protection

▶ Prime or deactivate Tow-away protection.

Tow-away protection is primed again in the following cases:

- The vehicle is unlocked again.
- A door is opened.
- The vehicle is locked again.

Function of interior protection

When interior protection is primed, a visual and audible alarm is triggered if movement is detected in the vehicle interior.

Interior protection is primed automatically after approximately ten seconds:

- after locking the vehicle with the key
- after locking the vehicle using KEYLESS-GO

Interior protection is only primed when the following components are closed:

- doors
- boot lid

Interior protection is automatically deactivated:

- after pressing the button or button on the key
- after pressing the start/stop button with the key in the stowage compartment (→ page 193)
- after unlocking the vehicle using KEYLESS-GO
- when using HANDS-FREE ACCESS

The following situations can lead to a false alarm:

- moving objects such as mascots in the vehicle interior
- when a side window is open
- when a panoramic sliding sunroof is open

Priming/deactivating interior protection

Multimedia system:

↳ ⌂ ▸▸ Settings ▸▸ Vehicle ▸▸ Opening/closing ▸▸ Vehicle protection

▶ Prime or deactivate Interior motion sensor.

Interior protection is primed again in the following cases:

- The vehicle is unlocked again.
- A door is opened.
- The vehicle is locked again.

Notes on the correct driver's seat position

⚠ **WARNING** Risk of injury if vehicle settings are adjusted while the vehicle is in motion

You could lose control of the vehicle in particular in the following situations:

- If you adjust the driver's seat, the head restraints, the steering wheel or the mirror while the vehicle is in motion.
- If you fasten your seat belt while the vehicle is in motion.

▶ Before starting the engine: adjust the driver's seat, head restraints, steering wheel and mirror in particular and fasten your seat belt.



Ensure the following when adjusting steering wheel (1), seat belt (2) and driver's seat (3):

- You are sitting as far away from the driver's airbag as possible, taking the following points into consideration:
- You are sitting in an upright position
- Your thighs are slightly supported by the seat cushion
- Your legs are not fully extended and you can depress the pedals properly
- The back of your head is supported at eye level by the centre of the head restraint
- You can hold the steering wheel with your arms slightly bent
- You can move your legs freely
- You can see all the displays on the instrument cluster clearly
- You have a good overview of the traffic conditions
- Your seat belt sits snugly against your body and passes across the centre of your shoulder and across your hips in the pelvic area

Seats

Adjusting the front seat electrically

⚠ **WARNING** Risk of becoming trapped if the seats are adjusted by children

Children could become trapped if they adjust the seats, particularly when unattended.

▶ When leaving the vehicle, always take the key with you and lock the vehicle.

▶ Never leave children unattended in the vehicle.

You can adjust the seats when the ignition is switched off.

⚠ WARNING Risk of becoming trapped during seat adjustment

When you adjust a seat, you or other vehicle occupants could become trapped, e.g. on the seat guide rail.

- Make sure when adjusting a seat that no one has any body parts in the sweep of the seat.

Observe the safety notes on "Airbags" and "Children in the vehicle".

⚠ WARNING Risk of injury if vehicle settings are adjusted while the vehicle is in motion

You could lose control of the vehicle in particular in the following situations:

- If you adjust the driver's seat, the head restraints, the steering wheel or the mirror while the vehicle is in motion.
- If you fasten your seat belt while the vehicle is in motion.

- Before starting the engine: adjust the driver's seat, head restraints, steering wheel and mirror in particular and fasten your seat belt.

⚠ WARNING Risk of becoming trapped if the seat height is adjusted carelessly

If you adjust the seat height carelessly, you or other vehicle occupants could be trapped and thereby injured.

Children in particular could accidentally press the electrical seat adjustment buttons and become trapped.

- While moving the seats, make sure that hands or other body parts do not get under the lever assembly of the seat adjustment system.

⚠ WARNING Risk of injury due to incorrectly adjusted head restraints

If head restraints have not been adjusted correctly, there is an increased risk of injury in the head and neck area, e.g. in the event of an accident or sudden braking.

- Before driving off, make sure for every vehicle occupant that the centre of the head restraint supports the back of the head at about eye level.

Adjust the head restraint fore-and-aft position so that it is as close as possible to the back of your head.

⚠ WARNING Risk of injury or death due to incorrect seat position

The seat belt will not offer the intended level of protection if you have not moved the seat backrest to an almost vertical position.

In particular, you may slip under the seatbelt and injure yourself.

- Adjust the seat properly before beginning your journey.
- Always ensure that the seat backrest is in an almost vertical position and that the shoulder section of your seat belt is

routed across the centre of your shoulder.

WARNING Risk of injury due to excessive strain on the grab handle

If you apply your full body weight to the grab handle or pull it abruptly, the grab handle may be damaged or become loose from its anchorage.

- Use the grab handles only to stabilise the seating position or to assist in getting in and out of the seat.

WARNING Risk of injury or death due to objects under the co-driver seat

Objects trapped under the co-driver seat can interfere with the function of the automatic co-driver airbag shutoff or damage the system.


- Do not store any objects under the co-driver seat.
- When the co-driver seat is occupied, make sure that no objects are trapped under the co-driver seat.

NOTE Damage to the seats when moving the seats back

The seats may be damaged by objects when moving the seats back.

- When moving the seats back, make sure that there are no objects in the footwell, under or behind the seats.

The switches for adjusting the seats do not move. You will therefore receive no direct feedback on the switch while pressing the switch. Feedback is provided only by the movement of the seat.

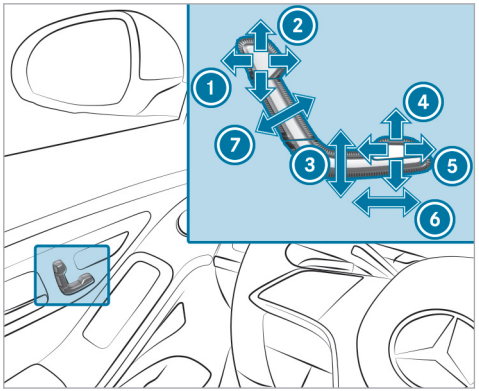


1. Head restraint fore-and-aft position (vehicles with an EASY ADJUST luxury head restraint)
2. Head restraint height
3. Seat height
4. Seat cushion inclination
5. Seat cushion length
6. Seat fore-and-aft position
7. Seat backrest inclination

▶ Save the settings with the memory function (→ page 136).

ⓘ The head restraint height will be adjusted automatically when you adjust the seat height or the seat fore-and-aft position.

ⓘ **Vehicles with EASY ADJUST luxury head restraints:** the fore-and-aft position of the head restraint will be adjusted automatically when you adjust the backrest angle.

Adjusting the front passenger seat electrically from the driver's seat

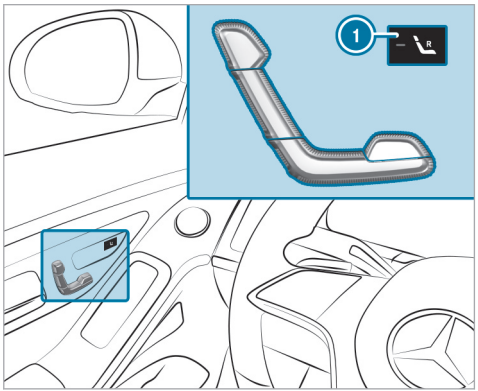

You can call up the following functions for the front passenger seat:


- Seat adjustment
- Seat heating
- Seat ventilation
- Memory function

P223 0210 02

▶ **To select the front passenger seat:** press button 1.
When the indicator lamp lights up, the front passenger seat is selected.

▶ Adjust the front passenger seat using the buttons on the driver's side door control panel.

Adjusting the front passenger seat electrically from the rear

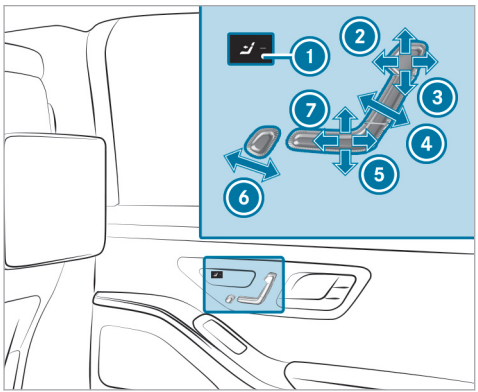

1. Selects the front passenger seat
2. Head restraint fore-and-aft position
3. Head restraint height
4. Seat backrest inclination
5. Seat height
6. Front passenger seat footrest
7. Seat fore-and-aft position

The footrest can be adjusted only when one of the following conditions has been fulfilled:

- The front passenger seat has moved to the front range.
- The front passenger seat is in the position for chauffeur mode.


▶ Adjust the reclining rear seat (→ page 117).
▶ **To select the front passenger seat:** press button 1.
When the indicator lamp lights up, the front passenger seat is selected.
▶ Adjust the front passenger seat using the buttons on the door operating unit in the rear passenger compartment.

ⓘ You can use the rear-compartment child safety lock to disable this function (→ page 79).

Adjusting the reclining rear seats electrically

The switches for adjusting the seats do not move. You will therefore receive no direct feedback on the switch while pressing the switch. Feedback is provided only by the movement of the seat.

The reclining rear seats are on the driver's and front passenger sides.

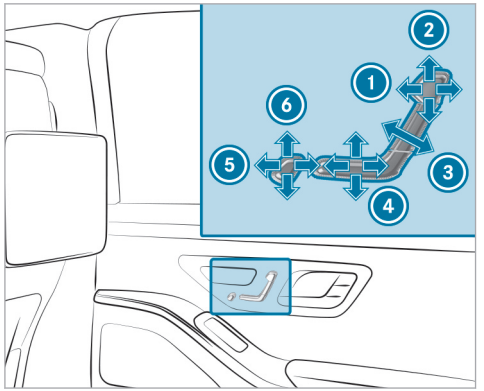


1. Fore-and-aft position of the head restraint (vehicles with active multicontour seat)
2. Head restraint height
3. Seat backrest inclination
4. Combined seat cushion inclination and length
5. Fore-and-aft position of the leg rest
6. Angle of the leg rest

▶ Save the settings with the memory function (→ page 137).

ⓘ The leg rest will fold down if overloaded. If this is the case, fold up the leg rest and engage it.

ⓘ The vehicle also has a footrest. This is located on the lower part of the front passenger seat backrest (→ page 121).


Setting the fully reclined position

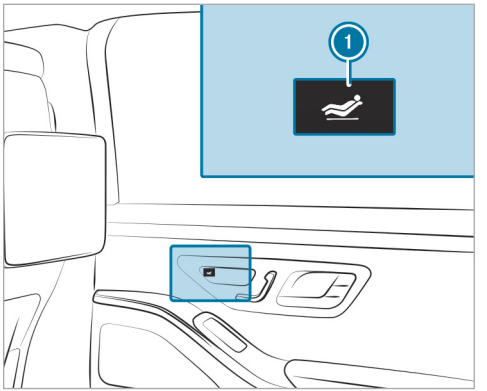

▶ **To set the fully reclined position:** press button 1.

- The rear seat will move into the fully reclined position.
- The front passenger seat will move into the position for chauffeur mode.

- The footrest will move out from under the front passenger seat.
- If available, the leg rest will rise.

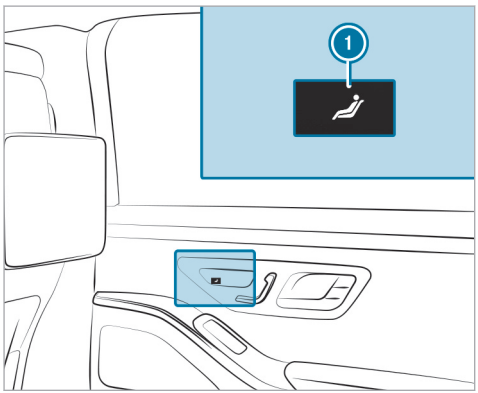

▶ **To restore the standard seat settings:** press button (1).

ⓘ You can use the rear-compartment child safety lock to disable this function (→ page 79).

ⓘ The leg rest will fold down if overloaded. If this is the case, fold up the leg rest and engage it.

Chauffeur mode

Information on chauffeur mode

⚠ **WARNING** Risk of injury due to incorrectly adjusted head restraints

If head restraints have not been adjusted correctly, there is an increased risk of injury in the head and neck area, e.g. in the event of an accident or sudden braking.

▶ Before driving off, make sure for every vehicle occupant that the centre of the head restraint supports the back of the head at about eye level.

Adjust the head restraint fore-and-aft position so that it is as close as possible to the back of your head.

⚠ **WARNING** Risk of injury or death due to objects under the co-driver seat

Objects trapped under the co-driver seat can interfere with the function of the automatic co-driver airbag shutoff or damage the system.

▶ Do not store any objects under the co-driver seat.

▶ When the co-driver seat is occupied, make sure that no objects are trapped under the co-driver seat.

! **NOTE** Damage to objects in the luggage net of the front passenger footwell when adjusting the front passenger seat to the chauffeur position

Objects in the luggage net in the front passenger footwell can become damaged when the front passenger seat is adjusted to the chauffeur position.

▶ Remove the objects from the luggage net.

NOTE Damage to the seats when moving the seats back

The seats may be damaged by objects when moving the seats back.

- When moving the seats back, make sure that there are no objects in the footwell, under or behind the seats.

The switches for adjusting the seats do not move. You will therefore receive no direct feedback on the switch while pressing the switch. Feedback is provided only by the movement of the seat.

Observe the following:

- Adjust the front passenger seat for chauffeur mode before the journey

For chauffeur mode, the following settings are made for the front passenger seat:

- The seat is moved forwards
- The backrest is tilted forwards
- The head restraint is folded forwards


The front passenger seat will automatically move from the chauffeur position back into the normal position in the following situations:


- The front passenger seat is adjusted using the buttons in the door operating unit on the front passenger side
- The front passenger seat belt is fastened
- An occupant is detected on the front passenger seat
- The front passenger head restraint is folded back from the rear seat or driver's seat.

Positioning the front passenger seat for chauffeur mode

Requirements:

- The front passenger seat is not occupied.
- The front passenger seat belt is not inserted in the buckle.

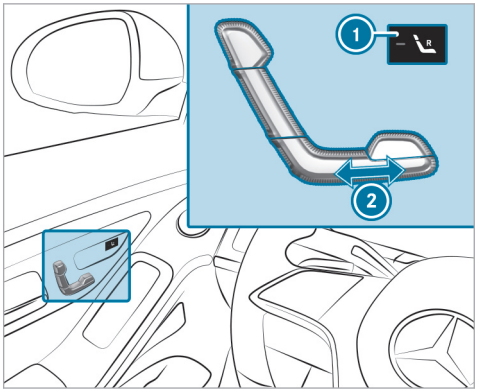

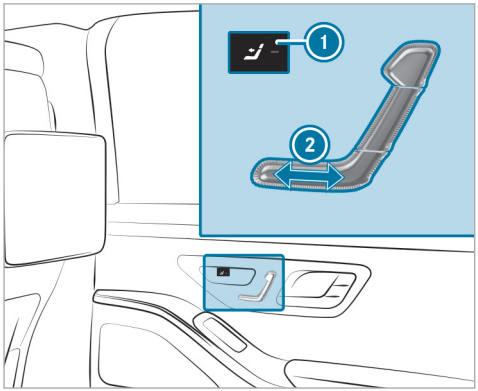

1 Selects the front passenger seat
2 Sets the seat fore-and-aft position

▶ **To select the front passenger seat:** press button 1.
When the indicator lamp lights up, the front passenger seat is selected.

Setting the chauffeur position

▶ Push button 2 forwards and hold it in this position.
The front passenger seat will move forward and stop at the threshold of the area for chauffeur mode.
▶ Release button 2.
▶ Push button 2 forward and hold it again until the front passenger seat is in the position for chauffeur mode.
The front passenger seat head restraint will fold forwards. The front passenger seat will move forward.

ⓘ If the front passenger seat is already at the threshold to the area for chauffeur mode, the position for chauffeur mode will be set immediately.

▶ Save the settings with the memory function (→ page 137).


ⓘ You can use the rear-compartment child safety lock to disable this function (→ page 79).

Using the footrest on the front passenger seat

Requirements:
- The front passenger seat has moved to the front range.
- The front passenger seat is in the position for chauffeur mode.


Using the footrest

The footrest is located on the lower part of the front passenger seat backrest.

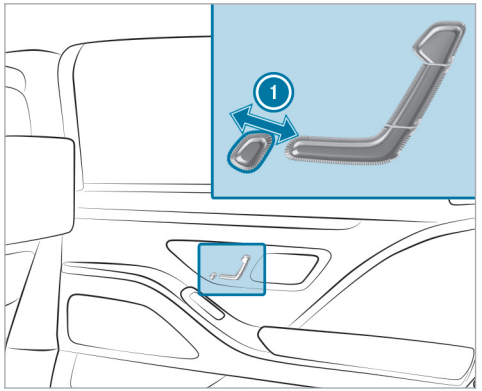

- Push button (1) towards the rear.
  The footrest will move out from under the front passenger seat.
- Push the extended footrest upwards with your foot until it releases.
- Allow the footrest to lower.
  The footrest will position itself on the floor.

Storing the footrest

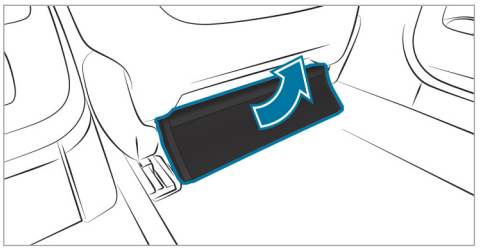


- Push the footrest upwards with your foot until it engages.
- Push button (1) forwards.
  The footrest will retract underneath the front passenger seat.


Folding the head restraint on the front passenger side down or folding it into position (chauffeur mode)

Requirements:

- The front passenger seat is not occupied.
- The front passenger seat belt is not inserted into the buckle.

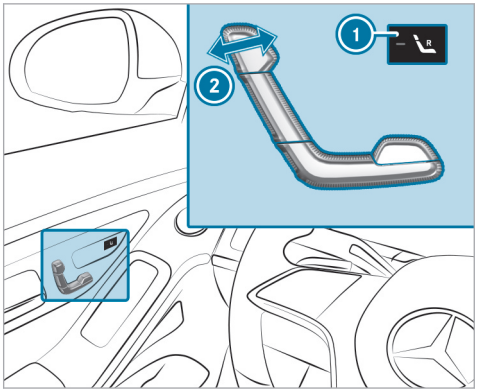

P223 0210 02

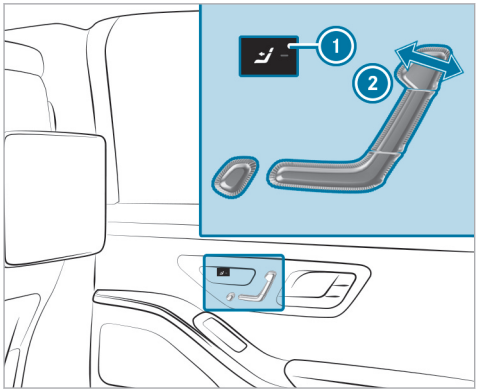

- **To select the front passenger seat:** press button (1).
  When the indicator lamp lights up, the front passenger seat is selected.

Folding the head restraint down


- Push button (2) forwards and hold it in this position.
  The head restraint will move forwards slightly and stop.
- Release button (2).
- Push button (2) forwards again.
  The head restraint will fold forwards.
- **To fold the head restraint into position:** push button (2) back.
  The head restraint will fold into position.


ⓘ You can also fold the front passenger head restraint into position from the front passenger seat. To do so, press any button on the door operating unit on the front passenger side.

ⓘ If the head restraint is already in the foremost position, it will fold forward immediately.

ⓘ You can use the rear-compartment child safety lock to disable this function (→ page 79).

Moving the front passenger seat into the normal position (chauffeur mode)

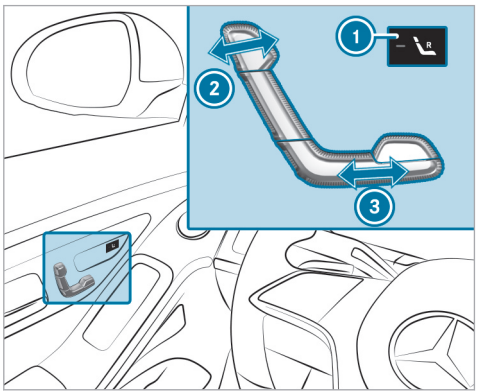

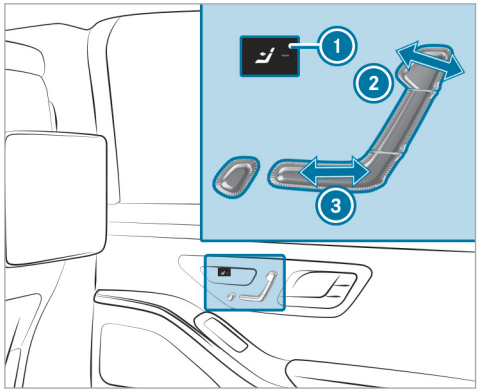

▶ **To select the front passenger seat:** press button 1.
When the indicator lamp lights up, the front passenger seat is selected.

Setting the normal position

▶ Push button 3 towards the rear and hold it in this position.
The front passenger seat will move to the threshold of the area for chauffeur mode. The head restraint on the front passenger side will be moved into the upright position.
The front passenger seat will then move further towards the rear.

or

▶ Briefly push button 2 towards the rear.
The front passenger seat will move automatically to the threshold of the area for chauffeur mode. The head restraint on the front passenger side will be moved into the upright position.

ⓘ You can also set the normal position from the front passenger seat. To do so, press any button on the door operating unit on the front passenger side.

▶ Call up the settings with the memory function (→ page 137).

ⓘ You can use the rear-compartment child safety lock to disable this function (→ page 79).

Head restraints

Adjusting the front seat luxury head restraints mechanically

⚠ WARNING Risk of injury if vehicle settings are adjusted while the vehicle is in motion

You could lose control of the vehicle in particular in the following situations:

- If you adjust the driver's seat, the head restraints, the steering wheel or the mirror while the vehicle is in motion.
- If you fasten your seat belt while the vehicle is in motion.

▶ Before starting the engine: adjust the driver's seat, head restraints, steering wheel and mirror in particular and fasten your seat belt.


⚠ WARNING Risk of injury due to incorrectly adjusted head restraints

If head restraints have not been adjusted correctly, there is an increased risk of injury in

the head and neck area, e.g. in the event of an accident or sudden braking.


- Before driving off, make sure for every vehicle occupant that the centre of the head restraint supports the back of the head at about eye level.

Adjust the head restraint fore-and-aft position so that it is as close as possible to the back of your head.

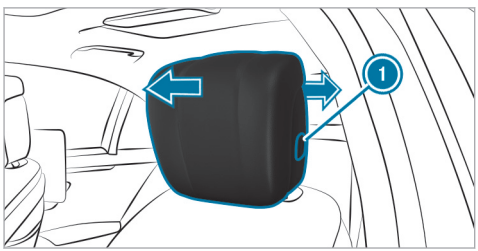

- **To move forwards:** pull the head restraint forwards.
- **To move backwards:** press release knob (1) and push the head restraint backwards.

Attaching and removing the additional cushion of the front-seat luxury head restraint

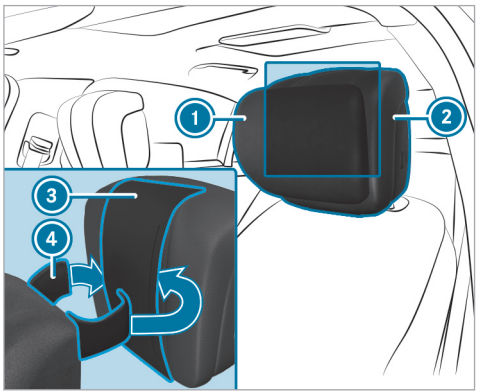

- Position head restraint (2) as far forwards as possible.
- **To attach the additional cushion:** open Velcro strip (4) on the rear of additional cushion (1).
- Guide Velcro strip (4) between head restraint (2) and strip (3).
- Close Velcro strip (4).
- **Change the position of the additional cushion:** move additional cushion (1) up or down.
- **To remove additional cushion:** open Velcro strip (4) of additional cushion (1).
- Remove additional cushion (1).

Lowering the rear seat head restraints electrically from the front compartment


Multimedia system:

→ ⌂ » ★ » 🚗

- Press [🪑].


P223 0210 02

Adjusting the outer luxury head restraints of the rear seats mechanically

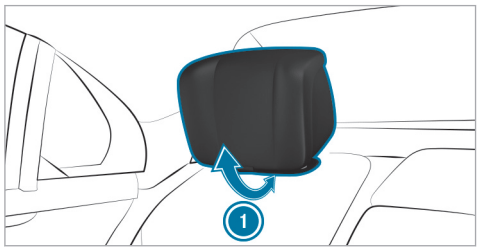

- **To adjust the angle of the head restraint:** pull or push the head restraint in the direction of arrow 1.

Attaching and removing the additional cushion of the head restraint in the rear compartment (individual seats)

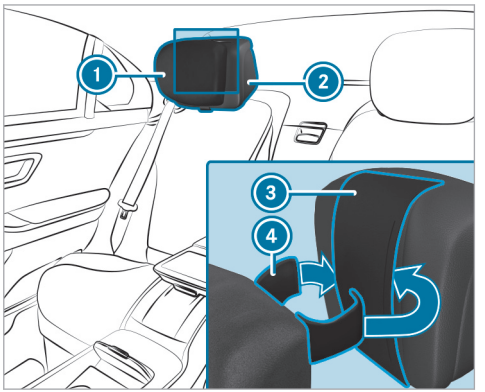


- Position head restraint 2 as far forwards as possible.
- **To attach the additional cushion:** open Velcro strip 4 on the rear of additional cushion 1.
- Guide Velcro strip 4 between head restraint 2 and strip 3.
- Close Velcro strip 4.
- **Change the position of the additional cushion:** move additional cushion 1 up or down.
- **To remove additional cushion:** open Velcro strip 4 of additional cushion 1.
- Remove additional cushion 1.

Attaching heated additional cushion


In vehicles with electrically adjustable head restraints, you can heat the additional cushion.

- Attach the additional cushion to the head restraint as described.
- Move the head restraint to the very top.

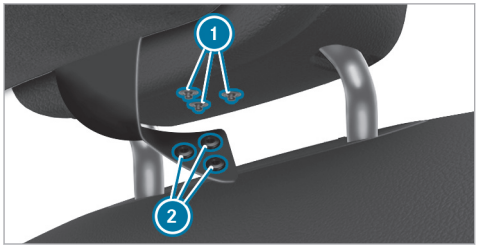


- Push press-studs (2) on the additional strip into counterpieces (1) on the head restraint.
- Move the head restraint to the desired height.
- **To switch neck heating from the additional cushion on/off:** make sure that press-studs (2) on the additional strip are correctly pushed into counterpieces (1) on the head restraint.
- Ensure that the "Couple neck heat to seat heating" function is active (→ page 128).
- Activate or deactivate the seat heating (→ page 130).

Folding the centre head restraint into position and folding it back mechanically

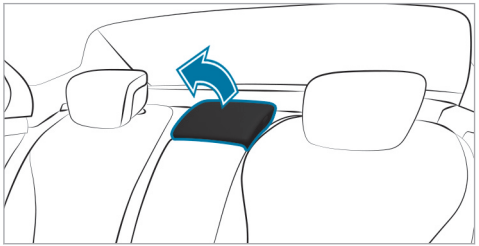

- **To fold into position:** pull the head restraint upwards until it engages.

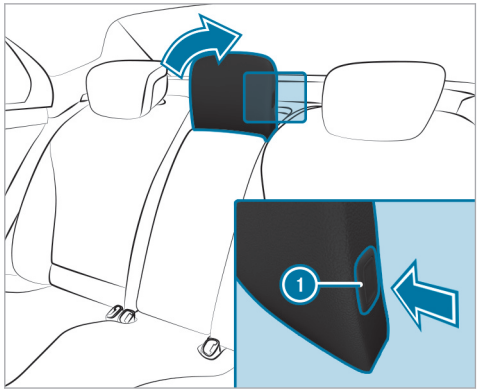

- **To fold back:** press button (1).
- Fold down the head restraint completely.

The centre head restraint has a usage position and a non-usage position. The usage position is the upright position in which the head restraint is locked; the non-usage position is the position in which the head restraint is folded downwards. When the centre seat is used, the head restraint must be in the upright, locked usage position.

Configuring the seat settings

Multimedia system:

→ ⌂ ›› Comfort ›› Seat

Adjusting the air cushions.

- On the corresponding menu, adjust the air cushions for Lumbar, Shoulders or Side bolsters.

Setting the seat heating balance

- Select Heating settings.
- Select Seat heating balance.
- Adjust the heat distribution for the desired seat.

ⓘ The seat heating balance can be set in the Seat climate control menu in the rear.

Coupling neck heat to seat heating

- Select Additional neck warmer.
- Switch the function for the desired seat on or off.
  If the function is active, the neck heat of the additional cushion has been coupled to the seat heating.

Setting automatic seat adjustment

⚠ **WARNING** Risk of becoming trapped during adjustment of the driver's seat after calling up a driver profile

Selecting a user profile may trigger an adjustment of the driver's seat to the position saved under the user profile. You or other vehicle occupants could be injured in the process.

- Make sure that when the position of driver's seat is being adjusted using the multimedia system, no people or body parts are in the seat's range of movement.

If there is a risk of someone becoming trapped, stop the adjustment process immediately:

- a) Tap the warning message on the central display.

or

- b) Press a memory position button or a seat adjustment switch on the driver's door.
  The adjustment process will be stopped.

Multimedia system:

→ ⌂ ›› Comfort ›› Seat ›› Position seat automatically

Adjusting driver's seat and steering wheel position to body size

The vehicle calculates a suitable driver's seat and steering wheel position on the basis of the driver's body size and sets this directly.

- **To set the unit of measurement:** select cm or ft/in.
- Set the size using the scale.
- Select Start positioning.
  The driver's seat and steering wheel position is adjusted to the body size that has been set.

ⓘ If the driver's seat and steering wheel position calculated by the vehicle is not practical or comfortable, it can be manually changed at any time via the control buttons.
The exterior mirrors are not set via this function. Instead, they have to be set manually via the operating switches.

ⓘ You can also configure these settings via the Mercedes me user account for your user profile. By synchronising the profiles in the vehicle and the Mercedes me connect profiles, you can carry over these settings for your vehicle. Further information about synchronising user profiles .

Setting automatic adjustment of the lateral support (active multicontour seat)

Multimedia system:

↝ ⌂ ›› Comfort ›› Seat

▶ Select Dynamic multicontour seat.

With this function, the lateral support of the active multicontour seat is automatically adjusted to the driving and cornering dynamics of the vehicle.

▶ Select the desired setting.

Overview of massage programmes

- Hot Relaxing back: Based on hot stone massage, the programme combines heat and massage. It starts by massaging the back. In addition, warm pressure points become noticeable, starting in the pelvic area.
- Hot Relaxing shoulders Combination of heat and massage. It starts by massaging the shoulders. In addition, warm pressure points become noticeable, starting in the pelvic area.
- Activating Massage Activating massage with upward-moving massage waves.
- Classic Massage Relaxing back massage.
- Wave Massage Regenerating massage via massage waves across the back and in the seat cushion.
- Mobilizing Massage Mobilising massage with upward-moving massage waves. Can promote slower, deeper respiration. This can improve the supply of oxygen to cells and the brain.
- Workout, backrest and Workout, cushion These programs require your cooperation. Alternating between tensing and releasing helps to improve blood flow to your muscles. Press against a pressure point as soon as you feel it to activate back, abdominal and leg muscles.
- Depth waves: Wave-like movements in the cushion can promote blood flow and metabolic processes in the lower back and legs.
- Deep workout: Connect the Workout, backrest to the Workout, cushion. The vibrating massage in the cushion intensifies the effectiveness of tensing and releasing muscles when you tense against the pressure point. This supports metabolic processes and blood flow in the seat area and legs.
- Calf massage (rear): calf massage using vibration. Can support metabolic processes and the reverse flow of blood.
- Wave Massage (rear): Combines the vibration of the calf massage with the Classic Massage from the backrest in the rear passenger compartment.

Selecting the massage programme for the front seats

Multimedia system:

↝ ⌂ ›› Comfort ›› Massage

▶ Select a massage programme (→ page 129).

- ▶ Start the programme for the desired seat ▶.
- ▶ **To set the massage intensity: switch** High intensity on or off .

ⓘ For the rear seats, the massage programmes can be selected on the following devices (if available):

- On the rear displays
- On the MBUX rear tablet

  The selection is made in the same way as on the rear displays for the rear seats on the second row of seats.

Resetting seat settings

Multimedia system:

↳ ⌂ ▸▸ Comfort ▸▸ Seat

- ▶ Select Reset.
- ▶ Select ↺ for the desired seat.

Switching the seat heating on/off

⚠ **WARNING** Risk of burns due to repeatedly switching on the seat heating

Repeatedly switching on the seat heating can cause the seat cushion and seat backrest padding to become very hot.

In particular, the health of persons with limited temperature sensitivity or a limited ability to react to high temperatures may be affected or they may even suffer burn-like injuries.

▶ Do not repeatedly switch on the seat heating.

To protect against overheating, the seat heating may be temporarily deactivated after it is switched on repeatedly.


! **NOTE** Damage to the seats caused by objects or documents when the seat heater is switched on


When the seat heater is switched on, overheating may occur due to objects or documents placed on the seats e.g. seat cushions or child seats. This could cause damage to the seat surface.

▶ Make sure that no objects or documents are on the seats when the seat heater is switched on.

Requirements:

- The power supply is switched on.

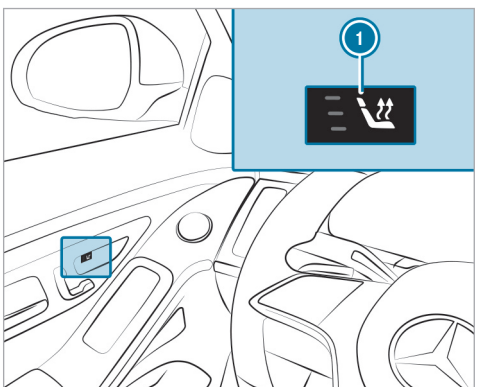

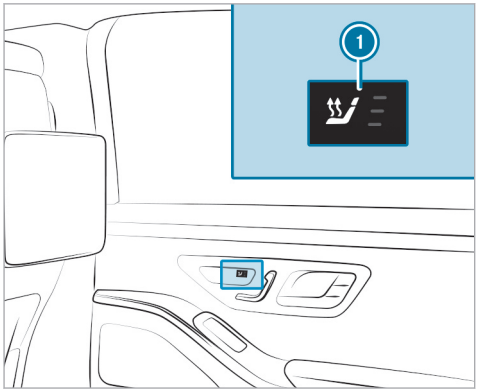

▶ Press button (1) repeatedly until the desired heating level is set.
Depending on the heating level, up to three indicator lamps will light up. If all indicator lamps are off, the seat heating is switched off.

ⓘ The seat heating will automatically switch down from the three heating levels after 8, 10 and 20 minutes until the seat heating switches off.

ⓘ If you switch the power supply off and on again within 20 minutes, the previous setting of the seat heating for the driver's seat will remain active.

ⓘ You can set the distribution of the heated sections among the seat cushions and seat backrests on the front and rear seats using the multimedia system (→ page 131).

ⓘ Vehicles with the Warmth Comfort Package: you can adjust the heating of the centre console and door armrests using the multimedia system (→ page 131).

Setting the panel heating

Multimedia system:

↳ ⌂ ▸▸ Comfort ▸▸ Seat ▸▸ Heating settings ▸▸ Panel heating


When the seat heating is switched on, the armrests, the centre panels of the doors and the centre console can be heated.


▶ Switch the function for the desired seats on or off.

Switching the seat ventilation on/off

Requirements:

- The power supply is switched on.

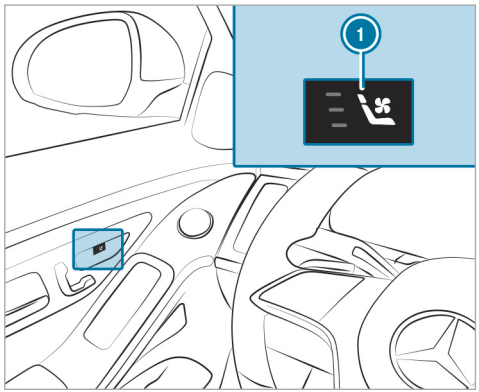

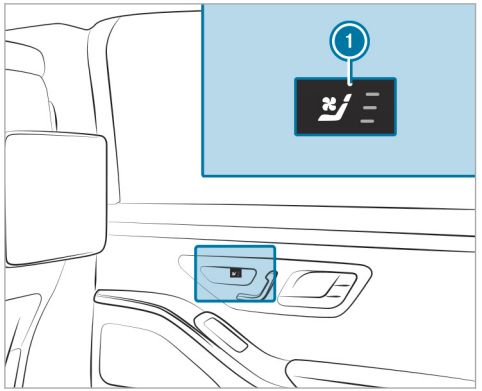

▶ Press button (1) repeatedly until the desired blower setting has been reached. Depending on the blower setting, up to three indicator lamps will light up. If all indicator lamps are off, the seat ventilation is switched off.

ⓘ If you switch the power supply off and on again within 20 minutes, the previous seat ventilation setting for the driver's seat will remain active.

Steering wheel

Adjusting the steering wheel electrically

⚠ **WARNING** Risk of injury if vehicle settings are adjusted while the vehicle is in motion

You could lose control of the vehicle in particular in the following situations:

- If you adjust the driver's seat, the head restraints, the steering wheel or the mirror while the vehicle is in motion.
- If you fasten your seat belt while the vehicle is in motion.

▶ Before starting the engine: adjust the driver's seat, head restraints, steering wheel and mirror in particular and fasten your seat belt.


⚠ **WARNING** Risk of entrapment for children when adjusting the steering wheel

Children could injure themselves if they adjust the steering wheel.

▶ Never leave children unattended in the vehicle.

▶ When leaving the vehicle, always take the key with you and lock the vehicle.

The steering wheel can be adjusted when the power supply is disconnected.

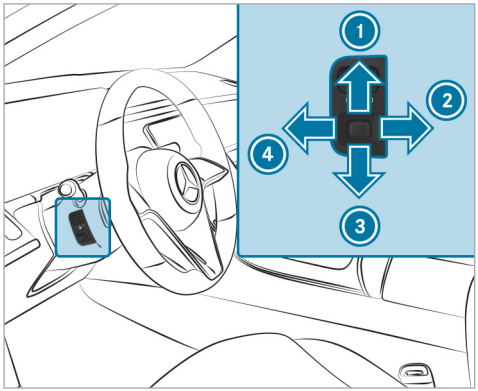


1 To move up
2 To move back
3 To move down
4 To move forward

▶ Save the settings with the memory function (→ page 136).

Switching the steering wheel heater on/off

Requirements:

- The power supply or the ignition is switched on.

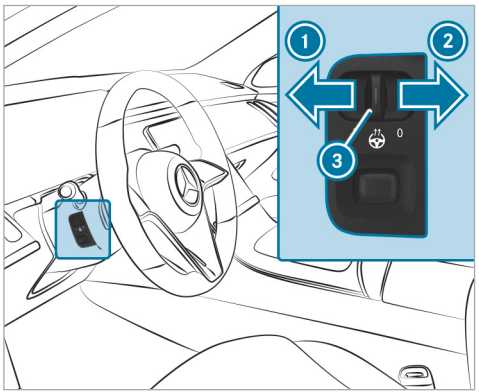

▶ Push the switch into position 1 or 2. If indicator lamp 3 lights up, the steering wheel heater is switched on.

When you switch the ignition off, the steering wheel heater will switch off.

Coupling the steering wheel heater to the seat heating

Requirements:

- The power supply or the ignition is switched on.

Multimedia system:

→ ⌂ ▸▸ Comfort ▸▸ Seat ▸▸ Heating settings

▶ Tap on Additional steering wheel heater. The steering wheel heater will be coupled to the seat heating.

When the function has been activated, the steering wheel heater is automatically activated and deactivated when you switch the switch the seat heating on and off.

Easy entry and exit feature

Using the easy entry and exit feature

WARNING Risk of accident when pulling away during the adjustment process for the easy exit feature

You could lose control of the vehicle.

- Always wait until the adjustment process is complete before pulling away.

WARNING Risk of becoming trapped during adjustment of the easy entry and exit feature

You and other vehicle occupants could become trapped.

- Ensure that no one has a body part in the sweep of the seat or steering wheel.
- Move the adjustment lever of the steering wheel if there is a risk of becoming trapped by the steering wheel.
  The adjustment process is stopped.
- If there is a risk of becoming trapped by the driver's seat, press the seat adjustment switches.
  The adjustment process is stopped.

You can stop the adjustment process by pressing one of the memory function position switches.

WARNING Risk of becoming trapped if children activate the easy entry and exit feature-

Children could become trapped if they activate the easy entry- and exit feature, particularly when unattended.

- Never leave children unattended in the vehicle.
- When leaving the vehicle, always take the key with you and lock the vehicle.

In order to use the easy entry and exit feature, the automatic seat adjustment function must have been switched on (→ page 128).

If the easy entry and exit feature is active, the steering wheel will move upwards and the driver's seat will move back in the following situations:

- you switch the ignition off with the driver's door open
- you open the driver's door with the ignition switched off

ⓘ The steering wheel will then move upwards only if it is not already as high as it will go. The driver's seat will then move backwards only if it is not already at the rear of the seat adjustment range.

The steering wheel and the driver's seat will move back to the last drive position in the following cases:

- you switch the power supply or the ignition on when the driver's door is closed
- you close the driver's door with the ignition switched on

The last drive position will be saved when:

- you switch the ignition off.

- you call up the seat settings via the memory function.
- you save the seat settings via the memory function.

If you press one of the memory function memory position switches, the adjustment process will be stopped.

Setting the easy entry and exit feature

Requirements:
- The automatic seat adjustment has been activated (⟶ page 128).

Multimedia system:

↳ ⌂ ▸▸ Settings ▸▸ Vehicle ▸▸ Comfort ▸▸ Easy entry and exit feature

▶ Select Steering wheel and seat, Steering wheel only or Off.

ⓘ If you are using an individual user profile, this information is used for the easy entry and exit feature. This will cause the driver's seat and steering wheel to move into the correct position automatically .

Memory function

Function of the memory function

⚠ **WARNING** Risk of an accident if the memory function is used while driving

If you use the memory function on the driver's side while driving, you could lose control of the vehicle as a result of the adjustments being made.

▶ Only use the memory function on the driver's side when the vehicle is stationary.

⚠ **WARNING** Risk of entrapment when adjusting the seat with the memory function

When the memory function adjusts the seat, you and other vehicle occupants – particularly children – could become trapped.

▶ During the adjusting process of the memory function, ensure that no body parts are in the area of movement of the seat or the steering wheel.

▶ If someone becomes trapped, press a preset position button or seat adjustment switch immediately.
The adjustment process is stopped.

⚠ **WARNING** Risk of entrapment if the memory function is activated by children

Children could become trapped if they activate the memory function, particularly when unattended.

▶ Never leave children unattended in the vehicle.

▶ When leaving the vehicle, always take the key with you and lock the vehicle.


You can use the memory function when the ignition is switched off.
Seat adjustments for up to three people can be stored and called up using the memory function.

You can save the following settings for the front seat:

- Seat, backrest, head restraint position and contour of the seat backrest in the lumbar region
- **Vehicles with an active multicontour seat:**
  - Side bolsters of the seat backrest
  - Shoulder of the seat backrest
  - Contour of the seat backrest
  - Dynamic function level
- Seat heating: distribution of the heated sections of the seat cushion and seat backrest
- Driver's side: steering wheel position and position of the outside mirrors on the driver's and front passenger sides
- Head-up display (depending on vehicle equipment)

Operating the memory function

Storing

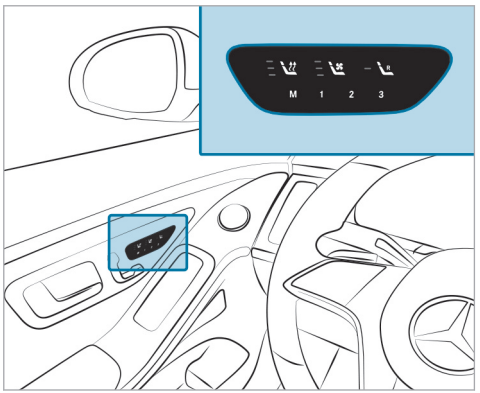

▶ Set the seat, the steering wheel, the head-up display and the outside mirror to the desired position.

▶ Press the M button and then release it.

▶ Press one of the preset position buttons 1, 2 or 3 within three seconds.
An acoustic signal sounds. The settings are stored.

▶ **To call up:** press the preset position button 1, 2 or 3.
The seat is moved to the stored position. After releasing the button, the front seat, outside mirror, head-up display and steering column continue to move into the stored position automatically.

ⓘ **Driver's seat:** to call up a stored position while driving, you must press and hold the preset position button.

Memory function in the rear compartment

Function of the memory function in the rear passenger compartment

Operating the rear seat

Rear seat settings for up to three people can be stored and called up using the memory function in the rear compartment.

You can save the following settings for the rear seat:

- Position of the seat, backrest and head restraint
- **Vehicles with active multicontour seats:** the seat side bolsters of the seat backrest as well as the contour of the seat backrest in the lumbar region
- Seat heating: distribution of the heated sections of the seat cushion and seat backrest

Operating the front passenger seat and rear seat
Front passenger seat adjustments and rear seat adjustments for up to three people can be stored and called up using the memory function in the rear compartment.

You can save the following settings for the front passenger seat:

- Position of the seat, backrest and head restraint

You can save the following settings for the rear seat:

- Position of the seat, backrest and head restraint
- **Vehicles with active multicontour seats:** the seat side bolsters of the seat backrest as well as the contour of the seat backrest in the lumbar region
- Seat heating: distribution of the heated sections of the seat cushion and seat backrest


The following settings are also stored to a memory position, if the indicator lamp in the button lights up:

- Position of the footrest of the front passenger seat, if available
- Position of the screen, if available


Using the preset position buttons, you always store the current setting of each seat.

Operating the rear seat via the memory function in the rear passenger compartment

Storing

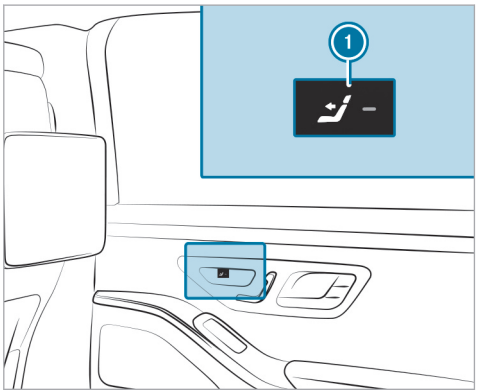

- Press button 1.
  The rear seat is selected if the indicator lamp in the button does not light up.
- Adjust the rear seat using the buttons in the door control panel (→ page 117).

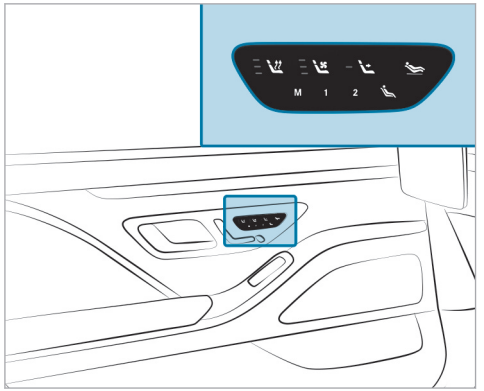

- Press the M button and then release it.
- Press one of the preset position buttons 1 or 2 within three seconds.
  The settings are stored.


ⓘ You cannot store any settings on the and buttons for adjusting the reclined and standard positions.

Calling up

- Press button ①.
  The rear seat is selected if the indicator lamp in the button does not light up.
- Press one of preset position buttons 1 or 2.
  The seat is moved to the stored position. After releasing the button, the rear seat is automatically moved into the stored position.


Operating the front passenger seat and rear seats via the memory function in the rear compartment

Storing

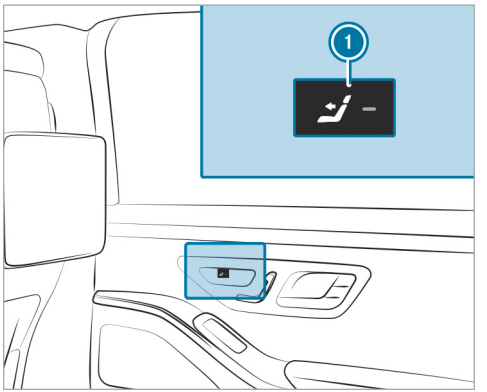

- Press button ①.
  The rear seat is selected if the indicator lamp in the button does not light up.
- Adjust the rear seat using the buttons in the door control panel (→ page 117).

- Press button ①.
  When the indicator lamp lights up, the front passenger seat is selected.
- Adjust the front passenger seat using the buttons on the door control panel in the rear passenger compartment (→ page 113).
- Ensure that the indicator lamp in button ① lights up.

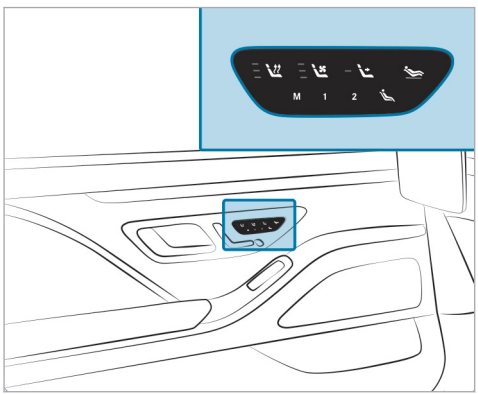

- Press the M button and then release it.
- Press one of the preset position buttons 1 or 2 within three seconds.
  The settings for the front passenger seat and the rear seat are stored in the selected preset position.

ⓘ You cannot store any settings on the and buttons for adjusting the reclined and standard positions.

Calling up

- Press button ①.
  When the indicator lamp lights up, the front passenger seat is selected.
- Press one of preset position buttons 1 or 2.
  The seat is moved to the stored position. After releasing the button, the front seat and rear seat are moved automatically into the stored position.

ⓘ The preset positions in the area for chauffeur mode can only be set when the conditions for chauffeur mode are fulfilled (→ page 119).

ⓘ You can use the rear-compartment child safety lock to disable this function (→ page 79).

Stowage areas

Notes on loading the vehicle

⚠ DANGER Risk of exhaust gas poisoning

Combustion engines emit poisonous exhaust gases such as carbon monoxide. Exhaust gases can enter the vehicle interior if the boot lid is open when the engine is running, especially if the vehicle is in motion.

- Always switch off the engine before opening the boot lid.
- Never drive with the boot lid open.

Objects in the deployment area of an airbag may prevent the airbag from functioning correctly.

Observe the notes on protection provided by the airbag (→ page 48).

Vehicles with rear airbag: also observe the notes on the rear airbag (→ page 54).

WARNING Risk of injury from unsecured items in the vehicle

If objects, luggage or loads are not secured or not secured sufficiently, they could slip, tip over or be thrown around and thereby hit vehicle occupants.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- Always stow objects in such a way that they cannot be thrown around.
- Before the journey, secure objects, luggage or loads against slipping or tipping over.

WARNING Risk of injury due to objects being stowed incorrectly

If objects in the vehicle interior are stowed incorrectly, they can slide or be thrown around and hit vehicle occupants. In addition, cup holders, open stowage spaces and mobile phone brackets cannot always retain all objects they contain.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- Always stow objects in such a way that they cannot be thrown around in such situations.
- Always make sure that objects do not protrude from stowage spaces, luggage nets or stowage nets.
- Close the lockable stowage spaces before starting a journey.
- Always stow and secure heavy, hard, pointed, sharp-edged, fragile or bulky objects in the boot.

Observe the notes on the cup holders.

Vehicles with automatic front passenger airbag shutoff: objects trapped under the front passenger seat may interfere with the function of the automatic front passenger airbag shutoff or damage the system. Please observe the notes on the function of the automatic front passenger airbag shutoff (→ page 50).

NOTE Damage to the rear armrest due to body weight

When folded out, the rear armrest can be damaged by body weight.

- Do not sit or support yourself on the rear seat armrest.

WARNING - Risk of accident or injury when using the cup holder while the vehicle is in motion

The cup holder cannot hold a container secure while the vehicle is in motion.

If you use a cup holder while the vehicle is in motion, the container may be flung around and liquids could be spilled. The vehicle occupants may come into contact with the liquid and if it is hot, they could be scalded. You could be distracted from traffic conditions and you may lose control of the vehicle.

- Only use the cup holder when the vehicle is stationary.

- ▶ Only use the cup holder for containers of the right size.
- ▶ Always close the container, particularly if the liquid is hot.

! NOTE Damage to the cup holder

When the rear armrest is folded back the cup holder could become damaged.

- ▶ Only fold the rear armrest back when the cup holder is closed.

! NOTE Damage to the stowage compartment under the ashtray due to intense heat

The stowage compartment under the ashtray is not heat resistant and could be damaged if you rest a lit cigarette on it.

- ▶ Make sure that the ashtray is fully engaged.

⚠ WARNING - Risk of fire and injury from the hot cigarette lighter

You can burn yourself if you touch the hot heating element or the socket of the cigarette lighter.

In addition, flammable materials may ignite if:

- you drop the hot cigarette lighter
- a child holds the hot cigarette lighter to objects, for example

- ▶ Always hold the cigarette lighter by the knob.
- ▶ Always make sure that the cigarette lighter is out of reach of children.
- ▶ Never leave children unattended in the vehicle.

⚠ WARNING Risk of burns from the tailpipe and tailpipe trims

The exhaust tailpipe and tailpipe trims can become very hot. If you come into contact with these parts of the vehicle, you could burn yourself.

- ▶ Always be particularly careful around the tailpipe and the tailpipe trims and supervise children especially closely in this area.
- ▶ Allow vehicle parts to cool down before touching them.


The driving characteristics of your vehicle are dependent on the distribution of the load within the vehicle. You should bear the following in mind when loading the vehicle:

- never exceed the permissible gross mass or the permissible axle loads for the vehicle (including occupants).

  Information can be found on the vehicle identification plate (→ page 459).
- the load must not protrude above the upper edge of the seat backrests.
- always place the load behind unoccupied seats if possible.
- secure the load using the luggage net hooks. Distribute the load on the luggage net hooks evenly.

Stowage spaces in the vehicle interior

Overview of the front stowage compartments

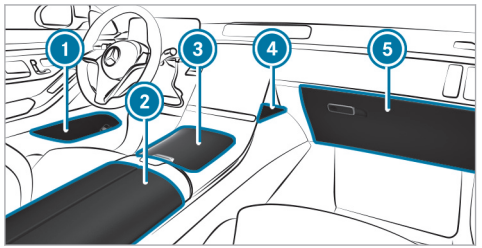

1. Stowage spaces in the doors
2. Stowage and telephone compartment beneath the armrest with a charging module for wireless charging of mobile phones, multimedia and USB ports as well as stowage space, e.g. for an MP3 player
3. Stowage compartment in the front centre console with cup holders, USB ports and charging module for wireless charging of mobile phones
4. Stowage compartment in front of the central display of the multimedia system
5. Glove compartment

ⓘ The rubber mat in the stowage compartment in front centre console (3) can be removed for cleaning with clear, lukewarm water. Please comply with the notes on caring for the interior (→ page 346).

Folding the folding table out or in

⚠ WARNING Risk of injury from an open folding table

Vehicle occupants may bump into the folding table and injure themselves.

- Close the folding table before each journey.

! NOTE Damage to the folding tables when moving the seats back

Open folding tables may be damaged when the seats are moved back.


- Make sure that the folding tables are folded in when moving the front seats back.

! NOTE Damage to objects when the folding tables are expanded or collapsed

Objects such as tablets and displays can be damaged when the folding tables are expanded or collapsed.

- Make sure that the folding tables are expanded and collapsed properly.

Folding out

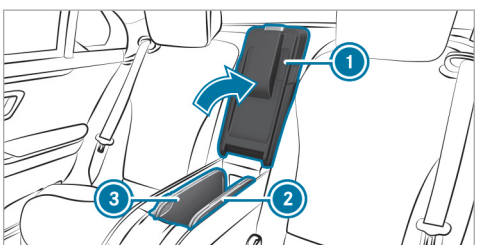


- Opening the stowage compartment (1) in the centre console of the rear compartment
- Pull folding table (2) up and forwards by handle recess (3) and swing it outwards.
- Fold the table panels apart.

ⓘ The table panels can be rotated forwards or backwards to bring them into a comfortable position for the vehicle occupants in the rear.


- **To fold in:** fold the table panels together and swing in the folding table.

Removing the handset from the rear stowage compartment

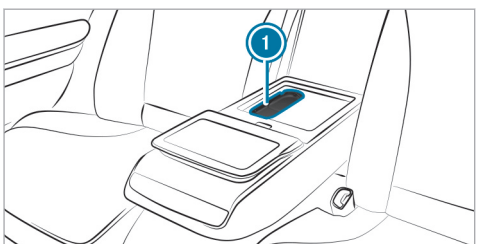

Vehicles with electrically adjustable rear outer seats

- Fold down the rear armrest.
- Open the stowage compartment in the rear armrest .
- Tap handset (1).
  Handset (1) will rise.
- Remove handset (1).

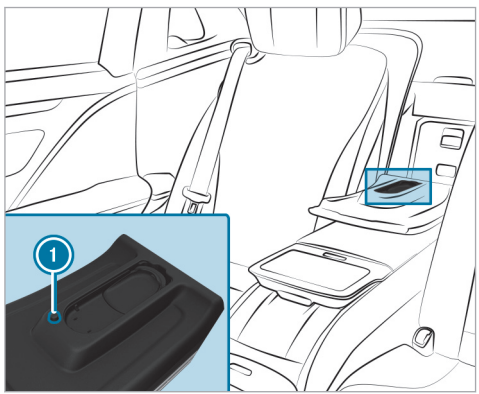

Vehicles with individual rear seats


- Open the stowage box in the rear-compartment backrest .
- Press button (1).
- Remove the handset.

Overview of the luggage net hooks


Observe the following notes:

- secure the load using the luggage net hooks.
- Do not use elastic straps or nets to secure a load. These are intended only as anti-slip protection for light loads.
- Do not route lashing materials across sharp edges or corners.
- pad sharp edges for protection.


Depending on the equipment installed, the boot contains up to four luggage net hooks.

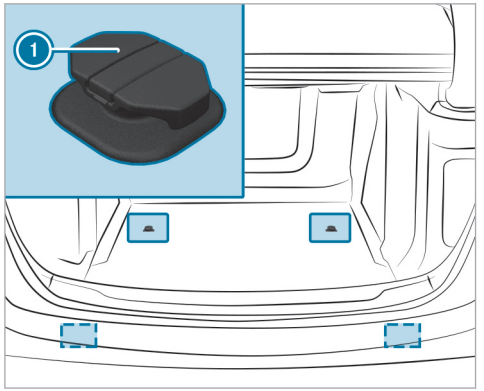

1 Luggage net hooks

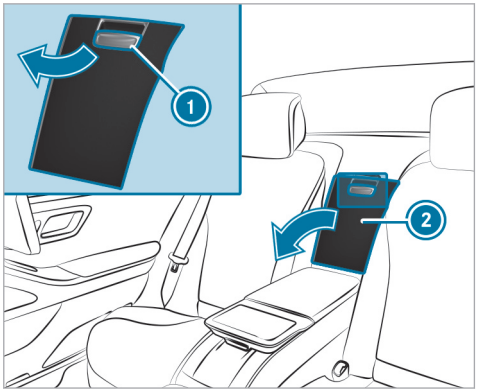

Vehicles with individual rear seats

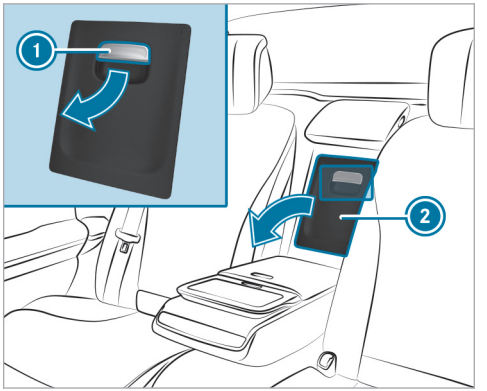


Vehicles with electrically adjustable rear outer seats

Opening the through-loading feature in the rear compartment


Requirements:

- The loading flap is unlocked (→ page 145).

- ▶ **Vehicles with electrically adjustable outer seats:** fold down the rear armrest.
- ▶ Pull handle 1 and fold down cover 2. The stowage box in the rear-compartment backrest will be opened.

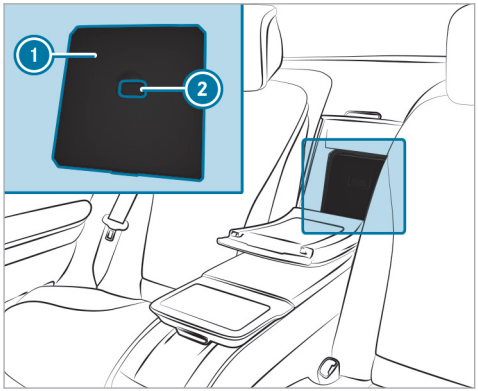

Vehicles with individual rear seats

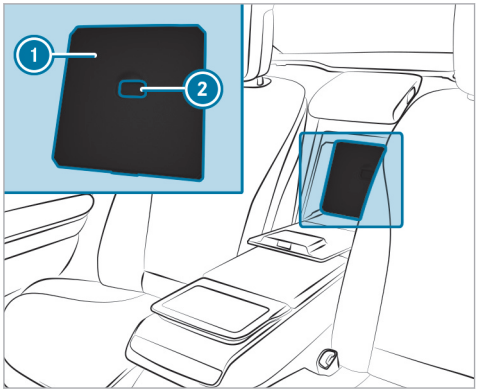

Vehicles with electrically adjustable rear outer seats

- Slide release catch (2) in the handle recess of loading flap (1) upwards.
  Loading flap (1) will be unlocked.
- Push loading flap (1) with release catch (2) up as far back as possible until the flap locks in the highest position.
  The through-loading feature in the rear compartment will be opened.

P223 0210 02


If the through-loading feature is to be used as a stowage compartment again:

- Fold down loading flap (1) and lock it in the boot (→ page 145).

Locking the through-loading feature in the boot

Requirements:

- The refrigerator box is removed.

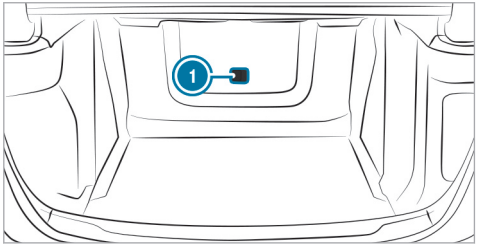

- Slide the release catch on loading flap (1) in the boot to the right.
  The loading flap is locked.


Using the bag hooks

WARNING Risk of injury when using bag hooks with heavy objects

The bag hooks cannot restrain heavy objects or items of luggage.

Objects or items of luggage may be flung around and hit vehicle occupants.

- Only hang light objects on the bag hooks.
- Never hang hard, sharp-edged or fragile objects on the bag hooks.

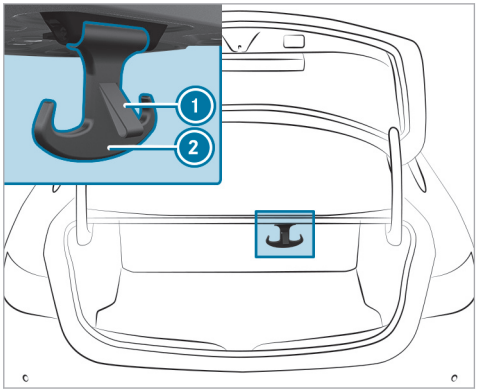

- Pull the bag hook (2) down by the tab (1).

Observe the notes on loading the vehicle (→ page 139).

EASY-PACK boot box

Adjusting the height of the EASY-PACK boot box to any position

WARNING Risk of becoming trapped and injured when raising the floor

Your hands may become trapped on the frame of the EASY-PACK boot box and objects may be thrown upwards.

- Ensure that your hands are not in the range of movement of the floor.
- If someone becomes trapped, carefully push the centre of the floor downward.
- Remove all objects from the floor before raising it.

WARNING Risk of becoming trapped when pressing the EASY-PACK boot box in

Your hands may become trapped when you are pressing the boot box into the retracted position. Children, in particular, may injure themselves when doing so.

- Ensure that your hands are not in the range of movement of the EASY-PACK boot box.
- When leaving the vehicle, always take the key with you and lock the vehicle.
- Never leave children unattended in the vehicle.

! **NOTE** Damage to the extended EASY-PACK boot box

The EASY-PACK boot box may be damaged when it is extended.


- Do not place any objects on or press down on the EASY-PACK boot box frame.
- Do not close the boot lid when the EASY-PACK boot box is extended.

! **NOTE** Damage to the EASY-PACK boot box by objects

Objects that are sharp-edged, pointed, fragile, rounded or heavy and objects that roll can damage the EASY-PACK boot box and be thrown out.

- Do not transport objects that are sharp-edged, pointed, rounded or fragile and objects that roll in the EASY-PACK boot box.
- Always stow and secure such objects outside of the box in the boot.
- Always observe the maximum permitted load of the EASY-PACK boot box.
- Do not use the EASY-PACK boot box when the rear seats are folded forwards.

The maximum permitted load of the EASY-PACK boot box is 10 kg. To prevent the box from being overloaded, the box floor will lower onto the boot floor when the load reaches approximately 5 kg.

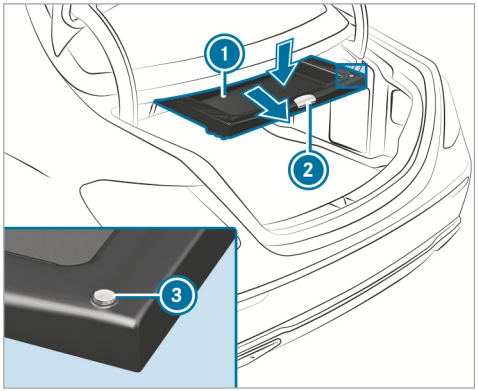



- **To remove:** pull handle (2) on the box.
- **To increase the load capacity:** push the centre of floor (1) downwards to the desired position and box size.
- **To reduce the load capacity:** press button (3).
- **To stow:** push the box in completely using handle (2) until it locks in place.

ⓘ Observe the notes on cleaning the EASY-PACK boot box (→ page 346).

Installing and removing the EASY-PACK boot box


Installing

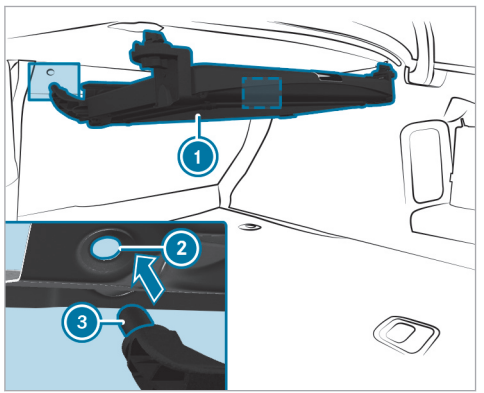

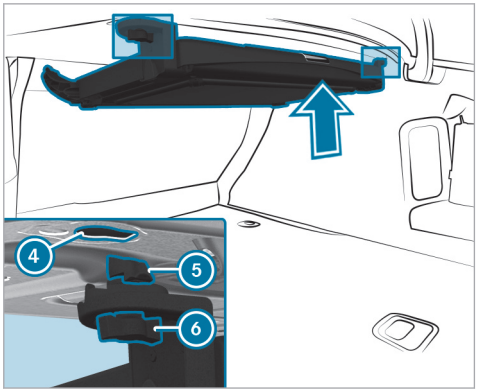

- Turn rotating catches (6) outward.
- Insert retainers (3) of box (1) into holes (2).
- Raise box (1) in the direction of the arrow and press hooks (5) into the anchorages of rear shelf (4).
- Turn rotating catches (6) inward.

Removing

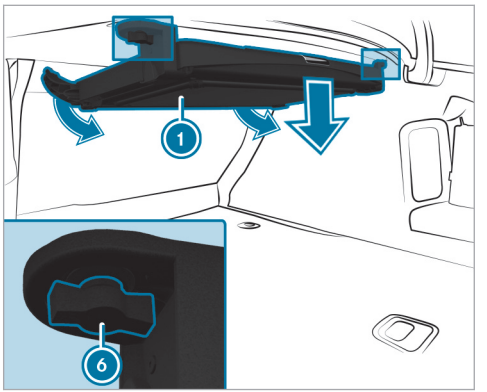

- Turn rotating catches (6) outward.
- Lower box (1) in the direction of the arrow and pull it out of the anchorages on the rear shelf.
- Pull box (1) back out of the openings in the direction of the arrow.


Cup holders

Switching the cooling or heating function for the temperature-controlled cup holder on or off

When the heating function is used, the metal insert of the cup holder is heated. For this reason, you must not reach into the cup holder insert.

When placing champagne flutes in the holders in the front stowage compartments of the rear centre console, do not close the cover of the front stowage compartment because the champagne flutes may tip over.

When placing glasses in the temperature-controlled cup holder, do not close the cover of the front stowage compartment in the rear centre console because the glasses may tip over.

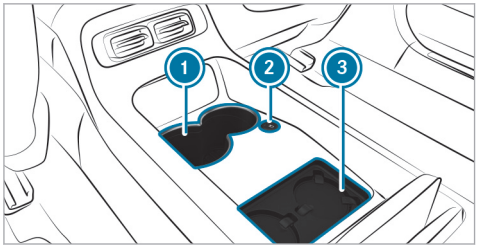

Front stowage compartments in the rear centre console with temperature-controlled cup holders and holder for champagne flutes (example)

1 Temperature-controlled cup holder
2 Button to switch the temperature-controlled cup holder on or off
3 Holder for champagne flutes

- **To switch on:** press button 2 until the blue (keep cool) or red (keep warm) indicator lamp on the button lights up.
- **To switch off:** press button 2 until the indicator lamp on the button goes out.

ⓘ Clean the removable rubber mat only with clean, lukewarm water and the temperature-controlled cup holder 1 only with a soft cloth.

Placing champagne flutes in the holders in the front storage compartments of the rear centre console

- **To place:** put the champagne flutes into holders 3 until they slot into place.
- **To remove:** pull the champagne flutes upwards out of holders 3.

Sockets

Using the 12 V socket


Requirements:

- Only connect devices up to a maximum of 180 W (15 A).

Depending on the vehicle equipment, the vehicle has the following 12 V sockets:

- In the front passenger footwell

- On vehicles with electrically adjustable outer seats: in the electronics compartment of the rear centre console
- On vehicles with individual rear seats: in the stowage compartment of the rear centre console
- In the boot

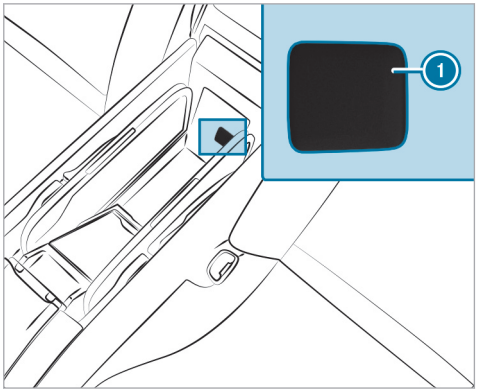

Example: 12 V socket in the rear centre console

▶ Fold up socket cap 1.
▶ Insert the plug of the device.

If you have connected a device to the 12 V socket, leave the cover of the stowage compartment open.

Using the 230 V socket in the rear passenger compartment

DANGER Risk of fatal injury due to damaged connecting cable or socket

You could receive an electric shock when pulling the connecting cable or the 230 V power socket out of the trim, or if it is damaged or wet.

▶ Use only connecting cables that are dry and free of damage.
▶ When the ignition is switched off, make sure that the 230 V power socket is dry.
▶ Immediately have the 230 V power socket checked or replaced at a qualified specialised workshop if it is damaged or has been pulled out of the trim.
▶ Never plug the connecting cable into a 230 V power socket that is damaged or has been pulled out of the trim.

DANGER Risk of fatal injury due to incorrect handling of the socket

You could receive an electric shock in particular:

- if you reach into the socket.
- if you insert unsuitable devices or objects into the socket.


▶ Do not reach into the socket.

▶ Only connect suitable devices to the socket.


Requirements:

- Only connect devices with a suitable plug which conforms to the standards specific to the country you are in.
- Do not use multiple socket outlets.

ⓘ Only devices up to a maximum of 150 watts (0.65 A) can be connected.

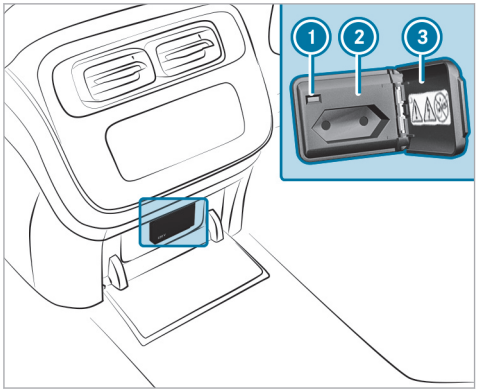

Vehicles with electrically adjustable outer seats in the rear

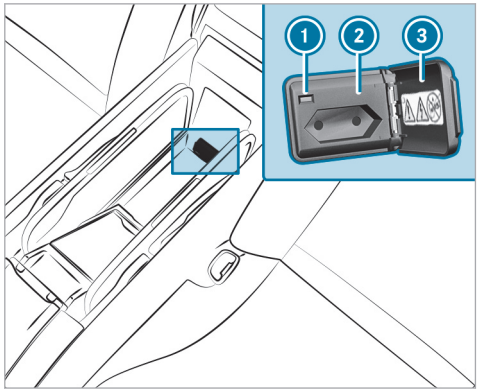

Vehicles with individual rear seats

▶ **Vehicles with electrically adjustable outer seats:** open the electronics compartment in the rear centre console.

▶ **Vehicles with individual rear seats:** open the stowage compartment in the rear centre console.

▶ Open flap (3).

▶ Insert the plug of the device into 230 V socket (2).
When the on-board electrical system voltage is sufficient, indicator lamp (1) lights up.

USB port in the rear passenger compartment

Depending on the vehicle equipment, the vehicle has the following USB ports in the rear passenger compartment:

- On vehicles with individual rear seats: in the stowage compartment of the rear centre console .
- On vehicles with electrically adjustable rear outer seats: in the electronics compartment in the rear centre console .
- On vehicles with electrically adjustable rear outer seats: in the stowage compartment in the rear seat armrest .

ⓘ These USB ports in the rear passenger compartment can be used to charge a mobile end device.

You can charge a USB device, such as a mobile phone, at the USB ports using a suitable charging cable. Depending on the vehicle equipment, the devices can be charged with up to 20 V (5 A) when the ignition is switched on.

Coolbox

Using the refrigerator box

⚠ **WARNING** Risk of fire due to a covered ventilation grille on the coolbox

If you cover the ventilation grille for the coolbox, it may overheat.

▶ Always make sure that the ventilation grille is not covered.

The vent grille for the refrigerator box is in the boot.
The refrigerator box can bear a maximum load of 3.5 kg.


The upper compartment of the refrigerator box can accommodate, for example, plastic bottles with a maximum capacity of 0.5 litres and cans with a capacity of up to 0.33 litres

If you do not need to use the refrigerator box for an extended period, you should switch it off, defrost it and clean it. After doing so, leave the lid open for a time.

The refrigerator box will reduce its cooling capacity or switch off in the following cases:


- Too many electrical consumers are turned on.
- The starter battery is not sufficiently charged.

If this is the case, the indicator lamps will flash on the button for switching the refrigerator box on and off. The cooling function will automatically switch back on as soon as there is sufficient voltage.

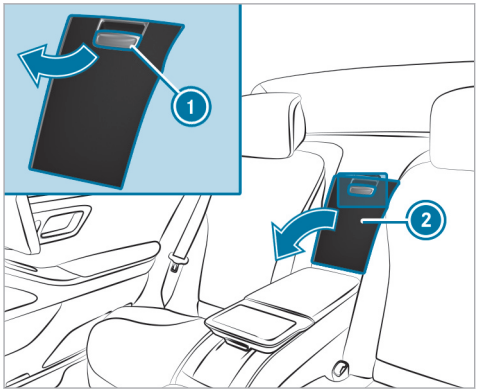

Example: vehicles with individual rear seats

- Vehicles with electrically adjustable outer seats: fold down the rear armrest.
- Pull handle (1) on the stowage box and fold down cover (2) of the stowage box.

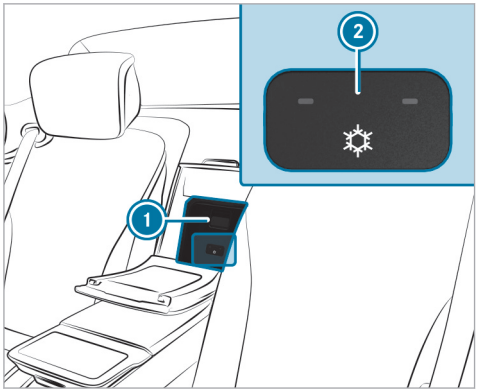


Example: vehicles with individual rear seats


- **To open:** pull the handle on refrigerator box (1) and fold down the cover of the refrigerator box.
- **To switch on:** press button (2) repeatedly until an indicator lamp (low cooling) lights up or two indicator lamps (high cooling) light up.
- **To switch off:** press button (2) repeatedly until both indicator lamps go out.

Removing or fitting the refrigerator box

Installing

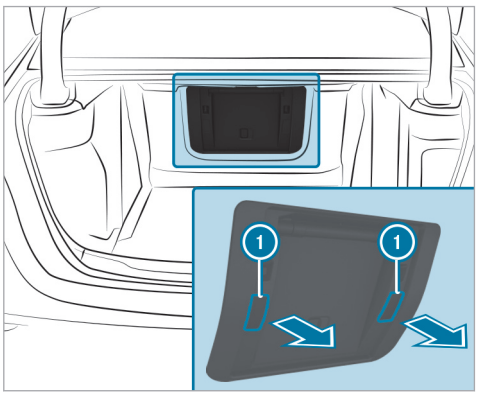

- Remove cover cap (1).

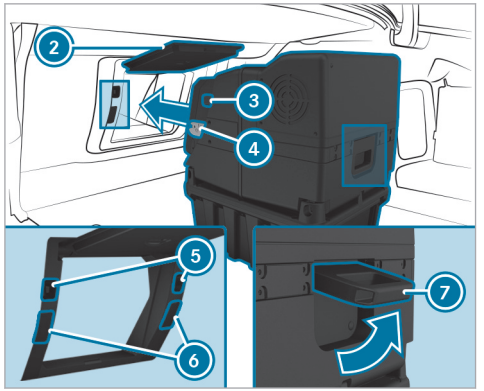


- Open loading flap (2) in the rear compartment until the loading flap locks in the highest position (→ page 144).
- Pull upwards and hold handle (7).
  The connection to refrigerator box (4) is unlocked.
- Slide the refrigerator box with handle (7) up into the open through-loading feature.
  Connection (4) and the electrical contacts of refrigerator box (3) are inserted into sockets (5) and (6) of the through-loading feature.
- Once the refrigerator box has been connected in the vehicle, push down handle (7).
  The refrigerator box is locked.

Removing

- Pull up and hold handle (7).
- Pull the refrigerator box with handle (7) up out of sockets (5) and (6) of the though-loading compartment.
  Connection (4) and the electrical contacts of refrigerator box (3) are separated from sockets (5) and (6) of the through-loading feature.

Opening and closing the stowage compartment of the refrigerator box in the boot

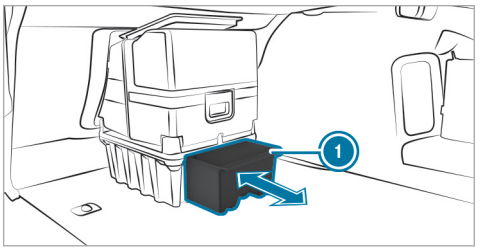

- **To open:** pull the stowage compartment in the refrigerator box (1) out by the handle backwards in the direction of the arrow.
  The stowage compartment (1) is open.
- **To close:** slide the stowage compartment in the refrigerator box (1) forwards in the direction of the arrow.
  The stowage compartment (1) is closed.

Wireless charging of the mobile phone and connection with the exterior aerial

Notes on wirelessly charging the mobile phone

WARNING Risk of injury due to objects being stowed incorrectly

If objects in the vehicle interior are stowed incorrectly, they can slide or be thrown around and hit vehicle occupants. In addition, cup holders, open stowage spaces and mobile phone receptacles cannot always retain all objects within.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- Always stow objects so that they cannot be thrown around in such situations.
- Always make sure that objects do not protrude from stowage spaces, luggage nets or stowage nets.
- Close the lockable stowage spaces before starting a journey.
- Always stow and secure heavy, hard, pointed, sharp-edged, fragile or bulky objects in the boot/load compartment.

Observe the notes on loading the vehicle.

WARNING Risk of fire from placing objects in the mobile phone stowage compartment

Placing other objects in the mobile phone stowage compartment could constitute a fire hazard.

- Apart from a mobile phone, do not place any other objects in the mobile phone stowage compartment, especially those made of metal.

NOTE Damage to objects caused by placing them in the mobile phone stowage compartment

If objects are placed in the mobile phone stowage compartment, they may be damaged by electromagnetic fields.

- Do not place credit cards, data storage devices, ski passes or other objects sensitive to electromagnetic fields in the mobile phone stowage compartment.

NOTE Damage to the mobile phone stowage compartment caused by liquids

If liquids enter the mobile phone stowage compartment, the compartment may be damaged.

- Ensure that no liquids enter the mobile phone stowage compartment.

Always observe the notes for persons with electronic medical aids (→ page 34).

- Depending on the vehicle equipment, the mobile phone is connected to the vehicle's exterior aerial via the charging module.
- The charging function and wireless connection of the mobile phone to the vehicle's exterior aerial are only available if the ignition is switched on.


- Small mobile phones may not be able to be charged in every position of the mobile phone stowage compartment.
- Large mobile phones which do not rest flat in the mobile phone stowage compartment may not be able to be charged or connected with the vehicle's exterior aerial.
- The mobile phone may heat up during the charging process. This may also depend on the applications (apps) currently open in the background.
- To ensure more efficient charging and connection with the vehicle's exterior aerial, remove the protective cover from the mobile phone. Protective covers which are necessary for wireless charging are an exception.

Wirelessly charging a mobile phone in the front

Requirements:
- The mobile phone is suitable for wireless charging.

A list of compatible mobile phones can be found at: https://www.mercedes-benz-mobile.com/

Depending on the vehicle's equipment, the vehicle has the following options for wirelessly charging the mobile phone in the cockpit:
- In the front stowage compartment
- In the stowage compartment of the cockpit armrest

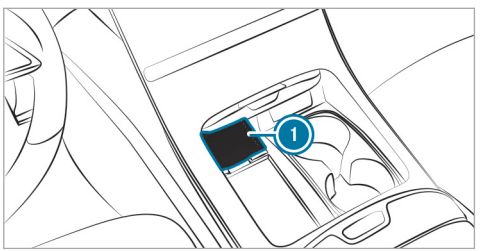

Example: wirelessly charging the mobile phone in the front stowage compartment

▶ Place the mobile phone as close to the centre of mat (1) as possible with the display facing upwards.

Wirelessly charging a mobile phone in the front stowage compartment: when a message is shown in the multimedia system, the mobile phone is being charged. In addition, malfunctions during the mobile phone's charging process are shown in the multimedia system display.

Wirelessly charging the mobile phone in the centre console below the armrest: the mobile phone is charging when the indicator lamp is lit up. In addition, malfunctions during the mobile phone's charging process are shown by the indicator lamp flashing three times.

ⓘ The mat can be removed for cleaning, e.g. using clean, lukewarm water.

Radio equipment approval numbers for Brazil
This device operates on a secondary basis, that is to say it has no protection against harmful interference, not even from the same type of stations, and must not cause interference with systems operating on a primary basis.

This product is permitted in accordance with the procedure defined in Directive 242/2000 by the Brazilian telecommunications agency ANATEL and meets the applicable technical requirements.

Further information is available on the ANATEL website. www.anatel.gov.br

▶ Further information on the declaration of conformity for vehicle components which receive and/or transmit radio waves.

Wirelessly charging a mobile phone in the rear passenger compartment

Requirements:

- The mobile phone is suitable for wireless charging.

  A list of compatible mobile phones can be found at: https://www.mercedes-benz-mobile.com/



Example: vehicles with individual rear seats

▶ Open the stowage compartment in the rear centre console.

▶ Place the mobile phone as close to the centre of mat (1) as possible with the display facing upwards.
When the indicator lamp at the front of the mobile phone system lights up, the mobile phone is being charged. In addition, malfunctions during the mobile phone's charging process are shown by the indicator lamp flashing three times.

ⓘ The mat can be removed for cleaning, e.g. using clean, lukewarm water.

ⓘ Observe the notes on loading the vehicle (→ page 139).

Fitting and removing the floor mats

⚠ **WARNING** Risk of accident due to objects in the driver's footwell


Objects in the driver's footwell may impede pedal travel or block a depressed pedal.

This jeopardises the operating and road safety of the vehicle.

▶ Stow all objects in the vehicle securely so that they cannot get into the driver's footwell.

▶ Always fit the floor mats securely and as prescribed in order to ensure that there is always sufficient room for the pedals.

▶ Do not use loose floor mats and do not place floor mats on top of one another.

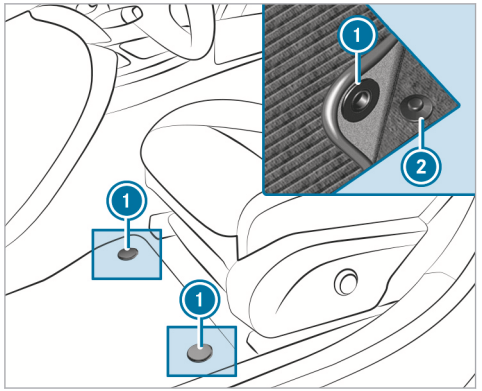

- **To fit:** slide the corresponding seat backwards and lay the floor mat in the footwell such that it fits.
- Press studs (1) onto holders (2).
- Adjust the corresponding seat.
- **To remove:** slide the corresponding seat backwards and pull the floor mat off holders (2).
- Adjust the corresponding seat.

Exterior lighting

Notes on adjusting the lights when driving abroad

The headlamps will automatically be adjusted when the vehicle crosses the border into countries in which traffic drives on the other side of the road and will retain their full range of functions. If necessary, the headlamps can also be adjusted manually in the Low beam menu (→ page 168).

In the following cases, check the setting of the headlamps and change it manually if necessary:

- If the Dipped-beam setting (left/right-side traffic) Manual adjustment only display message is displayed.
- If the Check dipped-beam setting (left/right-side traffic) display message is displayed.

Following manual adjustment:


- Oncoming traffic will not be dazzled.
- The edge of the road will not be illuminated as far or as high.
- The "motorway mode" and "enhanced fog light" functions will not be available.

Information about lighting systems and your responsibility

The various lighting systems of the vehicle are only aids. The driver of the vehicle is responsible for correct vehicle illumination in accordance with the prevailing light and visibility conditions, legal requirements and traffic situation.

Light switch

Operating light switches

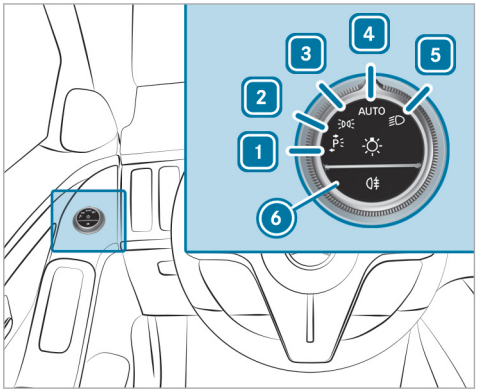

1 ⟵P Left-hand parking lights
2 P⟶ Right-hand parking lights
3 Standing lights and licence plate lighting
4 AUTO Automatic driving lights (preferred light switch position)

P223 0210 02

5 Low beam/high beam

6 Switches the rear fog lamp on/off

When low beam is activated, the indicator lamp for the standing lights will be deactivated and replaced by the low-beam indicator lamp.

▶ Always park your vehicle safely using sufficient lighting, in accordance with the relevant legal stipulations.

! NOTE Battery discharging by operating the standing lights

Operating the standing lights over a period of hours puts a strain on the battery.

▶ Where possible, switch on the right or left parking light.

If the battery is insufficiently charged, the standing lights or parking lights will be switched off automatically to facilitate the next engine start.

The exterior lighting (except standing and parking lights) will switch off automatically when the driver's door is opened.

- Observe the notes on surround lighting (→ page 168).

Automatic driving lights function

The standing lights, low beam and daytime running lights are switched on automatically depending on the ignition status and the light conditions.

⚠ WARNING Risk of accident when the dipped beam is switched off in poor visibility

When the light switch is set to AUTO, the dipped beam may not be switched on automatically if there is fog, snow or other causes of poor visibility such as spray.

▶ In such cases, turn the light switch to .

The automatic driving lights are only an aid. You are responsible for vehicle lighting.

Switching the rear fog lights on or off


Requirements:

- The light switch is in the or AUTO position.

▶ Press the button.

Please observe the country-specific laws on the use of rear fog lamps.

Operating the combination switch for the lights

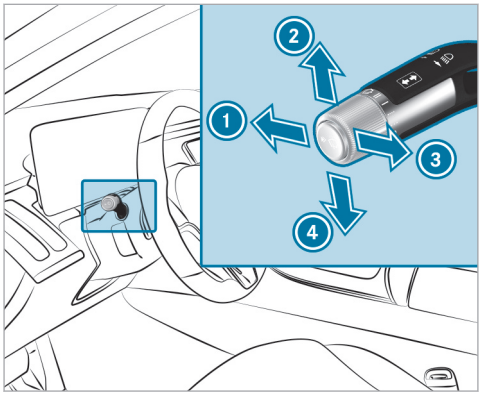

1 High beam
2 Turn signal light, right
3 Headlamp flashing
4 Turn signal light, left

▶ Use the combination switch to activate the desired function.

Switching on high beam

▶ Turn the light switch to the ≡D or AUTO position.

▶ Push the combination switch in the direction of arrow 1.
When the high beam is activated, the indicator lamp for low beam ≡D will be deactivated and replaced by the indicator lamp for high beam ≡D.

Switching off high beam

▶ Push the combination switch in the direction of arrow 1 or pull it in the direction of arrow 3.

Headlamp flashing

▶ Pull the combination switch in the direction of arrow 3.

Turn signal light

▶ **To indicate briefly:** push the combination switch briefly to the point of resistance in the direction of arrow 2 or 4.
The corresponding turn signal light will flash three times.


▶ **To indicate permanently:** push the combination switch beyond the point of resistance in the direction of arrow 2 or 4.

Vehicles with Active Lane Change Assist:

- A turn signal indicator activated by the driver may continue to operate for the duration of the lane change.
- If the driver indicated directly beforehand but a lane change was not immediately possible, the turn signal indicator may activate automatically.

P223 0210 02

Activating/deactivating the hazard warning lights

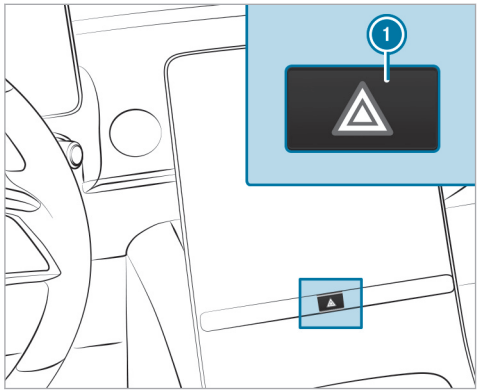

▶ Press button 1.

The hazard warning lights will switch on automatically if:

- the airbag has been deployed.
- the vehicle is heavily braked from a speed of more than 70 km/h to a standstill.

When you pull away again, the hazard warning light system will switch off automatically at approximately 10 km/h. You can also switch off the hazard warning light system using the warning lamp button.

Adaptive functions MULTIBEAM LED and DIGITAL LIGHT

Intelligent Light System function


In this system, the headlamps adapt to the driving and weather situation. It also provides extended functions for improved illumination of the road.

The system comprises the following functions:

- Active headlamps (→ page 162)
- Cornering light (→ page 163)
- Motorway mode (→ page 163)
- Enhanced fog light function (→ page 163)
- Bad weather light (→ page 164)
- City lighting (→ page 164)
- Topographical compensation (vehicles with DIGITAL LIGHT) (→ page 164)

The system is active only when it is dark.

Active headlamps function

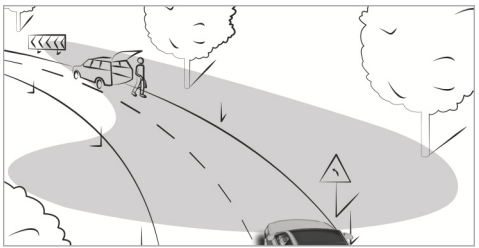

Functions of the active headlamps:


- The headlamps follow the steering movements.
- Relevant areas are better illuminated during a journey.

The functions are active when the low beam is switched on.

Depending on the vehicle's equipment, the course of the lane in which you are driving will also be

evaluated and the active headlamps function will adjust the light in advance.

Cornering light function

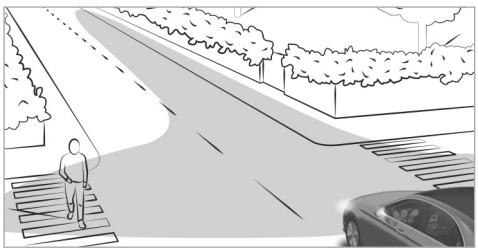

The cornering light improves the illumination of the carriageway over a wide angle in the turning direction, enabling better visibility on tight bends, for example. It can be activated only when the low beam is switched on.


The function is active in the following cases:

- At speeds below 40 km/h when the turn signal light is switched on or the steering wheel is turned
- At speeds between 40 km/h and 70 km/h and when the steering wheel is turned

Roundabout and junction function: the cornering light will be activated on both sides based on an evaluation of the vehicle's current navigation position. It will remain active until after the vehicle has left the roundabout or the junction.

Motorway mode function

Motorway mode increases the range and brightness of the cone of light, enabling better visibility.

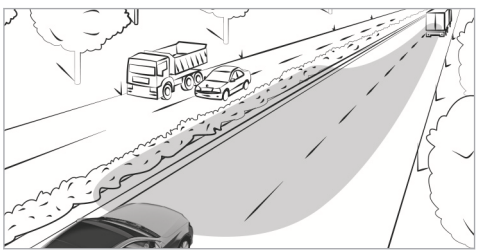

The function is active if a motorway journey is detected by means of:


- the vehicle's speed
- the multifunction camera
- or the navigation system

The function is not active in the following cases:

- At speeds below 80 km/h

Enhanced fog light function

The enhanced fog light function reduces self-dazzling and improves the illumination of the edge of the carriageway.

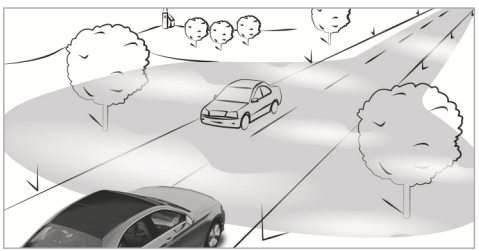

The function is automatically activated under the following conditions:

- At speeds below 70 km/h and when the rear fog light is switched on.

P223 0210 02

The function is automatically deactivated under the following conditions:

- At speeds above 100 km/h after activation.
- When the rear fog light is switched off.

Function of the bad weather light

The bad weather light reduces reflections in rainy conditions by dimming individual LEDs in the headlamps. The driver and other road users are dazzled less as a result.

The city lighting function

City lighting improves the illumination of roadsides in urban areas using a broad distribution of light.

The function is active in the following cases:

- At low speeds
- In illuminated parts of urban areas

Function of the topographical compensation

Based on map data, the lighting system responds pre-emptively to different road heights. This means that the headlamp range remains virtually constant when you are driving on uphill or downhill gradients.

ⓘ The availability of the function is dependent on the country.

Assistance functions of the DIGITAL LIGHT

DIGITAL LIGHT visually expands on the driver assistance systems by projecting the assistant displays in front of the vehicle while it is in motion. DIGITAL LIGHT can therefore help the driver in critical situations.

ⓘ The availability of the functions is dependent on the country.


The system is active in the following cases:

- The light switch is in the AUTO position.
- The high beam is switched on.

ⓘ If you activate the head-up display with augmented reality, the projections can be deactivated depending on the situation.

ⓘ Depending on the country in which you are currently driving, certain functions may be disabled due to different legal requirements, even if they are enabled in the multimedia system. When a border is crossed, the vehicle will automatically adapt to the valid requirements.

Spotlight

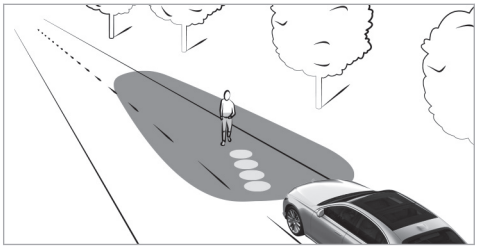


The spotlight function runs in the background and flashes the headlamps at detected persons within the lane markings in four short bursts. The driver is made aware of the position of oncoming pedestrians by a projected symbol.

The function is active under the following conditions:

- You are driving outside illuminated areas.
- The system detects a lane marking.

Warnings

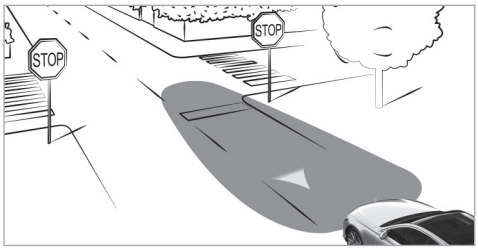


If Traffic Sign Assist detects a corresponding situation, a triangle will be projected onto the road in the following situations at speeds of at least 30 km/h:

- You are driving in the opposite direction to the permissible direction of travel, e.g. on a motorway slip road.
- You are driving towards a stop sign without reducing your speed.
- You are driving towards a red traffic light without reducing your speed.


Observe the system limits of Traffic Sign Assist (→ page 246).

Notes

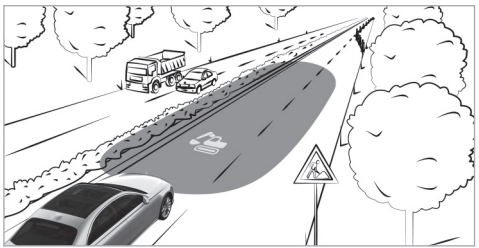

If Traffic Sign Assist detects a roadworks zone, the system will provide support as follows:

- A corresponding symbol will be projected onto the road when you enter a roadworks zone.
- When you drive through a roadworks zone, guide lines will be projected onto the road that roughly match the width of the vehicle. The guide lines will be suppressed for a while on tight bends.

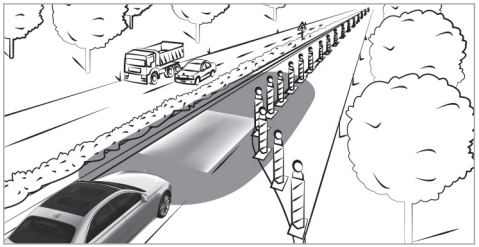

Observe the system limits of Traffic Sign Assist (→ page 246).

Switching the Intelligent Light System on/off

Requirements:

- The ignition is switched on.

Multimedia system:

→ ⌂ ▸▸ Settings ▸▸ Lights ▸▸ MULTIBEAM LED

▶ Activate or deactivate Dynamic dipped beam.

ⓘ In vehicles with DIGITAL LIGHT headlamps, the Intelligent Light System can be switched on and off on the DIGITAL LIGHT menu.

Activating or deactivating enhanced assistance functions

ⓘ The availability of the functions is dependent on the country.

▶ Select Supporting projections.

▶ Activate or deactivate the desired projection.

▶ Activate or deactivate Projection when opening/closing.
If the locator lighting or the exterior switch-off delay time is activated, a high-resolution greeting or farewell scene will be played back for a short period of time when the vehicle is opened or locked.

ⓘ More information on locator lighting (→ page 168)
More information on the exterior switch-off delay time (→ page 168)

Adaptive Highbeam Assist Plus

Adaptive Highbeam Assist Plus function

⚠ **WARNING** Risk of accident despite Adaptive Highbeam Assist Plus

Adaptive Highbeam Assist Plus does not react to:

- road users without lights, e.g. pedestrians
- road users with poor lighting, e.g. cyclists
- road users whose lighting is obstructed, e.g. by a barrier

On very rare occasions, Adaptive Highbeam Assist Plus may fail to recognise other road users with their own lighting, or may recognise them too late.

In these, or in similar situations, the automatic high beam will not be deactivated or will be activated despite the presence of other road users.


▶ Always observe the road and traffic conditions carefully and switch off the high beam in good time.

Adaptive Highbeam Assist Plus cannot take into account road, weather or traffic conditions.

Detection may be restricted in the following cases:

- in poor visibility, e.g. fog, heavy rain or snow
- if there is dirt on the sensors or the sensors are obscured

Adaptive Highbeam Assist Plus is only an aid. You are responsible for adjusting the vehicle's lighting to the prevailing light, visibility and traffic conditions.

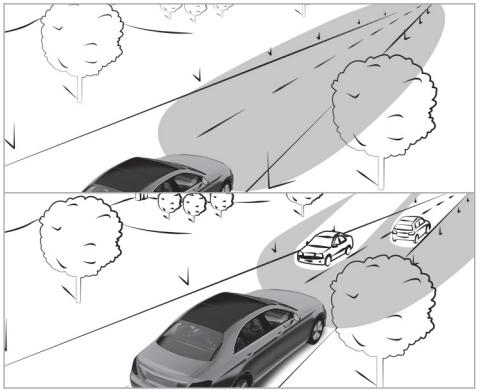

Adaptive Highbeam Assist Plus automatically switches between the following types of light:

- Low beam
- Partial high beam
- High beam
- ULTRA RANGE Highbeam (only vehicles with DIGITAL LIGHT)

ULTRA RANGE Highbeam increases the brightness of the cone of light to the legally permitted maximum.

Partial high beam does not include other road users in the high beam area. It does not dazzle them but enables full high beam illumination for the driver apart from the excluded vehicles.

At speeds below 25 km/h or when there is sufficient street lighting:

- The partial high beam and the high beam will be switched off automatically.

At speeds greater than 30 km/h:

- If no other road users are detected, the high beam will switch on automatically.
- If other road users are detected, the partial high beam will switch on automatically.

At speeds above 40 km/h:

- If no other road users are detected on a straight road, ULTRA RANGE Highbeam will be switched on automatically.
- If other road users are detected, the partial high beam will switch on automatically.
- If highly reflective signs are detected, ULTRA RANGE Highbeam will be switched off automatically.

ⓘ The system's optical sensor is located behind the windscreen near the overhead control panel.

Switching Adaptive Highbeam Assist Plus on/off

Switching on

▶ Turn the light switch to the AUTO position.

▶ Switch on the high beam using the combination switch.
If Adaptive Highbeam Assist Plus is activated, the indicator lamp will light up on the driver's display. When partial high beam or high beam is active, the corresponding blue indicator lamp will also light up.

Switching off

▶ Switch off the high beam using the combination switch.

Setting dipped beam

Multimedia system:

→ ⌂ ▸▸ Settings ▸▸ Lights ▸▸ MULTIBEAM LED ▸▸ Dipped beam

▶ Select Right-side traffic, Left-side traffic or Automatic.

ⓘ In vehicles with DIGITAL LIGHT headlamps, the Intelligent Light System can be adjusted on the DIGITAL LIGHT menu.

Setting the exterior lighting switch-off delay time

Requirements:

- The light switch is in the AUTO position.

Multimedia system:

→ ⌂ ▸▸ Settings ▸▸ Lights ▸▸ Interior/exterior lighting ▸▸ Exterior lighting delayed switch off

▶ Set the switch-off delay time.
When the vehicle's engine is switched off, the exterior lighting will be activated for the set time.

Activating/deactivating the locator lighting

Requirements:

- The light switch is in the AUTO position.

Multimedia system:


→ ⌂ ▸▸ Settings ▸▸ Lights ▸▸ Interior/exterior lighting

▶ Activate or deactivate Locator lighting.

When the function is activated, the exterior lighting will light up for 40 seconds after the vehicle is unlocked. When you start the vehicle, the locator lighting is switched off and automatic driving lights are activated.

Interior lighting


Adjusting the interior lighting

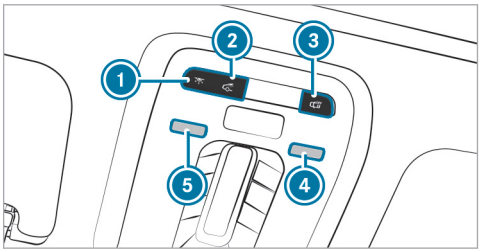

1 Switches the front interior lighting on/off
2 Switches the rear interior lighting on/off
3 Switches automatic interior lighting control on/off

▶ **To switch reading lamps on/off:** hold your hand under the respective reading lamp 4 or 5.

Control panel inside the grab handle (rear)

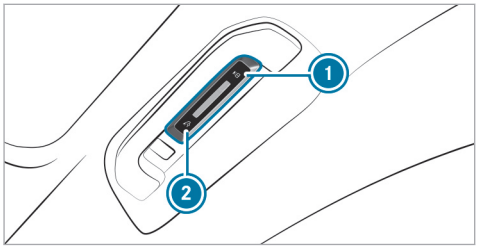

1 Reading lamp on the respective side of the vehicle
2 Rear interior lighting

- **To switch reading lamps on:** press button 1. The reading lamp, the interior lighting in the grab handle and the dome lamp on the respective side of the vehicle will light up.
- **To switch reading lamps off:** press button 1 once or twice.
  After pressing it once, the interior lighting in the grab handle and the dome lamp on the respective side of the vehicle will go out.
  After pressing it twice, the reading lamp on the respective side of the vehicle will go out.
- **To switch the rear interior lighting on/off:** press button 2.
  The reading lamps, the interior lighting in the grab handle and the dome lamps on both sides of the vehicle will light up or go out.

Adjusting the ambient lighting

Multimedia system:

Settings ▸▸ Comfort ▸▸ Ambient lighting

Setting the colour

- Select Colour.
- Select Monochrome or Multi-colour.
- Set the desired colour or colour combination.

Adjusting the brightness

- Select Brightness.
- Adjust the brightness.

ⓘ Depending on the ambient light conditions, the ambient lighting will automatically switch between day and night modes.

Activating the brightness for zones

- Select Brightness.
- Switch off Link zones .
  The Direct, Indirect and Accent zones can be set separately.

ⓘ The Light band zone can also be set for vehicles with active ambient lighting.

Activating effects

⚠ WARNING Risk of an accident despite activated effects of ambient lighting and active ambient lighting

To use the Warning Assistance effects, the respective functions must be activated in the driver assist menu.

- Make sure that the functions and assists are switched on.

ⓘ The exit warning system is only an aid.

Further notes on driving systems and your responsibility: (→ page 219)

▶ Select Effects.

▶ Activate the desired effect.

ⓘ Depending on the vehicle equipment, different effects are available:

Operating feedback effects:

- Climate: If changes are made to the temperature setting in the vehicle, the colour of the ambient lighting will change briefly.
- Voice assistant: For vehicles with active ambient lighting, the voice assistant is visually animated.

Warning assistance effects:

- Warning when exiting: If an object is detected in the blind spot while you are getting out of the vehicle, the ambient lighting in the affected door will flash red.

  Further information on the exit warning (→ page 250).
- Active Lane Keeping Assist: If there is a warning from Active Lane Keeping Assist, the active ambient lighting will flash red.

  Further information on Active Lane Keeping Assist: (→ page 254).
- Active Brake Assist: If there is an Active Brake Assist warning, the active ambient lighting in the centre of the dashboard will flash bright red.

  Further information on Active Brake Assist (→ page 242).
- Active Blind Spot Assist: In vehicles with active ambient lighting, the ambient lighting on the affected side will flash red if there is a warning from Active Blind Spot Assist.

  Further information on Active Blind Spot Assist (→ page 250).

Greeting

- When you get into the vehicle, a special colour animation will play.

Multi-colour animat.

- The chosen colour combination will change at predefined intervals.

ⓘ In vehicles with active ambient lighting, an animation will be played.

ⓘ The desired operating feedback and warning assistance can be activated or deactivated via the symbol. Depending on the equipment, different operating feedback and warning assistance effects are available.

ⓘ If the brightness is set to a low level, warning animations will be displayed at a higher basic brightness.

Switching the interior lighting switch-off delay time on/off


Multimedia system:

→ ⌂ ▸▸ Settings ▸▸ Lights ▸▸ Interior/exterior lighting ▸▸ Interior lighting delayed switch off

▶ Switch Interior lighting delayed switch off on or off.
When this function is active, the interior lighting will light up for a short time after the vehicle is locked.

Windscreen wipers and windscreen washer system

Switching the windscreen wipers on/off

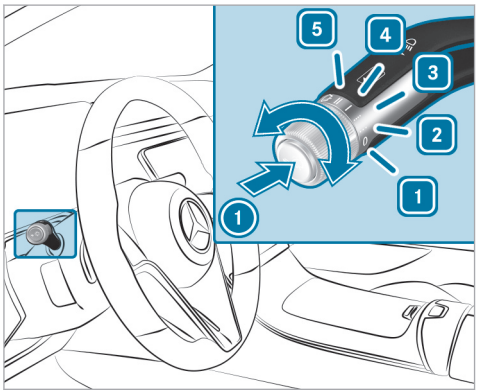

1 0 Windscreen wipers off
2 ••• Automatic wiping, normal
3 •••• Automatic wiping, frequent
4 — Continuous wiping, slow
5 = Continuous wiping, fast

▶ Turn the combination switch to the corresponding position 1 - 5.

▶ **Single wipe/washing:** push the button on the combination switch in the direction of arrow 1.
- Single wipe
- Wiping with washer fluid

In position 2 or 3 , the windscreen washing process is automatically triggered if dirt is detected on the windscreen unless the Top up washer fluid message is displayed.

Cleaning the windscreen intensively

For heavy soiling, you can clean the windscreen intensively from an outside temperature of 5°C.

▶ In a stationary vehicle, turn the combination switch to position 1, 2 or 3.


- Press the button on the combination switch in the direction of arrow (1) and hold it for approximately two seconds.
  The wiper arms will move into the replacement position and washer fluid will be distributed on the windscreen.
  After approximately 30 seconds, the wiper arms will move back again and wipe the windscreen several times. Intensive cleaning has now finished.

Replacing the windscreen wiper blades (MAGIC VISION CONTROL)

Moving the wiper arms into the replacement position


- Switch the ignition off.
- Within around 15 seconds, press the button on the combination switch (→ page 171).
  The wiper arms will move into the replacement position.

Removing the wiper blades

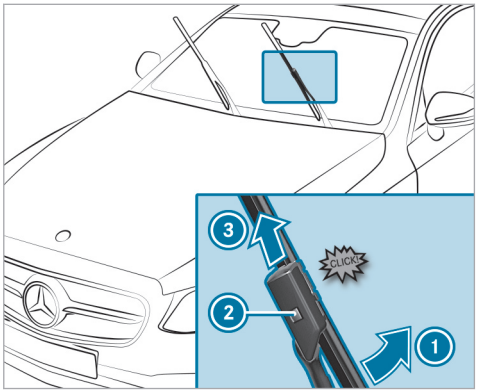

- **To bring the wiper blade into position to be removed:** hold the wiper arm firmly in one hand. With the other hand, turn the wiper blade in the direction of arrow (1) beyond the point of resistance.
  The wiper blade will engage in the removal position with a click.
- **To remove the wiper blade:** press release knob (2), pull the wiper blade in the direction of arrow (3) and remove.

Fitting the wiper blades

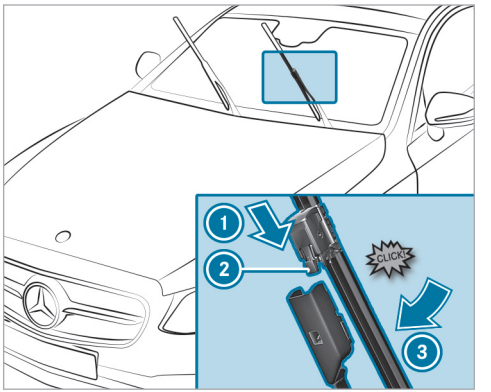

- Push the new wiper blade onto the wiper arm in the direction of arrow (1) until release knob (2) engages.

- Press the wiper blade onto the wiper arm in the direction of arrow ③ beyond the point of resistance.
  The wiper blade will engage with a noticeable click and move freely again.
- Fold the wiper arm back onto the windscreen.

Mirrors

Operating the outside mirrors

⚠ WARNING Risk of injury if vehicle settings are adjusted while the vehicle is in motion

You could lose control of the vehicle in particular in the following situations:

- If you adjust the driver's seat, the head restraints, the steering wheel or the mirror while the vehicle is in motion.
- If you fasten your seat belt while the vehicle is in motion.


- Before starting the engine: adjust the driver's seat, head restraints, steering wheel and mirror in particular and fasten your seat belt.

⚠ WARNING Risk of accident due to misjudgement of distance when using the outside mirror

The outside mirrors reflect objects on a smaller scale. The objects in view are in fact closer than they appear.

- Therefore, always look over your shoulder in order to ensure that you are aware of the actual distance between you and the road users driving behind you.

Adjusting the outside mirrors

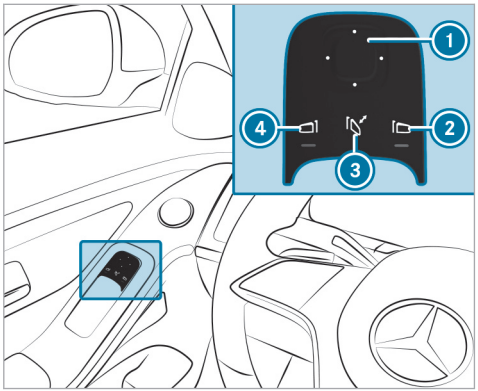

- Use button ② or ④ to select the desired mirror.

ⓘ In vehicles with MBUX Interior Assistant and driver camera, the required outside mirror can also be preselected automatically via a natural head movement to the left or right (→ page 293).

▶ Use button ① to adjust the position of the selected mirror.

Folding the outside mirrors in/out

▶ Briefly press button ③.

ⓘ If the battery has been disconnected or has discharged, the outside mirrors must be moved briefly using button ③. Only then will the automatic mirror folding function work properly.

Engaging the outside mirrors

If an outside mirror has been forcibly disengaged, proceed as follows.

▶ Press and hold button ③.
You will hear a click and the mirror will audibly click into place. The outside mirror will now be set to the correct position.

Automatic anti-dazzle mirrors function

⚠ **WARNING** Risk of acid burns and poisoning due to the anti-dazzle mirror electrolyte

Electrolyte may escape if the glass in an automatic anti-dazzle mirror breaks.

The electrolyte is hazardous to health and causes irritation. It must not come into contact with your skin, eyes, respiratory organs or clothing or be swallowed.

▶ If you come into contact with electrolyte, observe the following:
- Immediately rinse the electrolyte from your skin with water and seek medical attention.
- If electrolyte comes into contact with your eyes, immediately rinse them thoroughly with clean water and seek medical attention.
- If the electrolyte is swallowed, immediately rinse your mouth out thoroughly. Do not induce vomiting. Seek medical attention immediately.
- Immediately change out of clothing which has been contaminated with electrolyte.
- If an allergic reaction occurs, seek medical attention immediately.

The inside rear-view mirror and the outside mirror on the driver's side will automatically go into anti-dazzle mode if light from a headlamp hits the sensor on the inside rear-view mirror.

System limits

The system will not go into anti-dazzle mode if:
- The engine is switched off.
- Reverse gear is engaged.
- The interior lighting is switched on.

Front-passenger outside mirror parking position function

The parking position makes parking easier.

The front-passenger outside mirror will swivel downwards in the direction of the rear wheel on the front passenger's side when:


- the parking position is stored (→ page 175).
- the front-passenger mirror is selected.
- reverse gear is engaged.

The front-passenger outside mirror will move back to its original position when:

- you shift the transmission to another transmission position.
- you are travelling at a speed greater than 15 km/h.
- you press the button for the outside mirror on the driver's side.

Storing the parking position of the front-passenger outside mirror using reverse gear

Storing

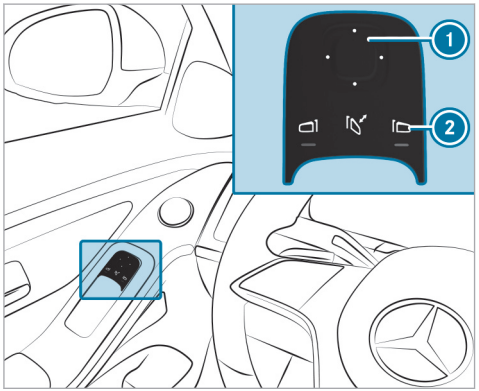

P223 0210 02

- Select the front-passenger outside mirror using button 2.
- Engage reverse gear.
- Move the front-passenger outside mirror into the desired parking position using button 1.

Calling up

- Select the front-passenger outside mirror using button 2.
- Engage reverse gear.
  The front-passenger outside mirror will move into the stored parking position.


Activating/deactivating the automatic mirror folding function

Multimedia system:

→ ⌂ ▸▸ Settings ▸▸ Vehicle ▸▸ Opening/closing

- Activate or deactivate Automatic mirror fold-in.

Area permeable to radio waves on the windscreen

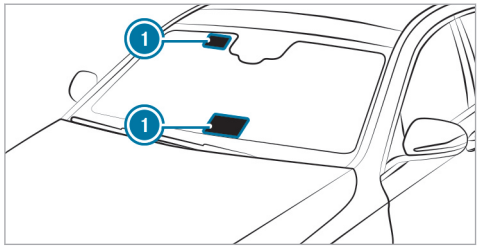

Radio-controlled equipment, such as toll systems, can be mounted only on areas (1) of the windscreen that are permeable to radio waves.

Areas permeable to radio waves (1) are best visible from outside the vehicle when the windscreen is illuminated with an external light source.

Note this position for vehicles with:

- Windscreen heating
- Infrared reflective windscreen

Infrared-reflective windscreen function

The infrared-reflective windscreen is coated and reduces the build-up of heat in the vehicle interior.


The coating shields the vehicle interior from radio waves.

Overview of climate control systems

Notes on climate control

An interior air filter in combination with the prefilter in the engine compartment must always be used so that the air conditioning system, pollution level monitoring and the air filtration work correctly. Make sure that the filter is installed correctly and the filter housing in the engine compartment is closed correctly using the cap and always tightly sealed when in operation. Use filters recommended and approved by Mercedes-Benz. Always have service work carried out at a qualified specialist workshop.


Overview of the THERMOTRONIC air conditioning control panel

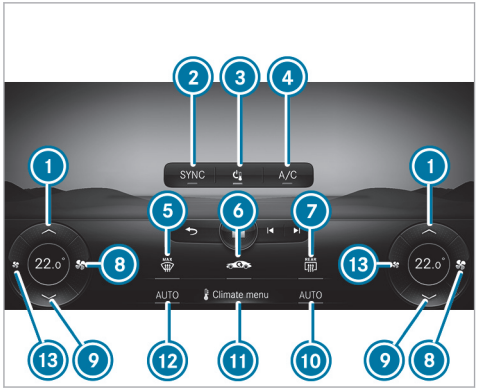

1. ▲ Increases the temperature
2. SYNC Switches the synchronisation function on/off (→ page 180)
3. Switches climate control on/off (→ page 178)
4. A/C Switches the A/C function on/off (→ page 179)
5. MAX Demists the windscreen
6. Switches air-recirculation mode on/off (→ page 180)
7. REAR Switches the rear window heater on/off
8. Increases the airflow or switches on climate control (→ page 178)
9. ▼ Reduces the temperature
10. AUTO Sets climate control to automatic mode, right (→ page 179)
11. MENU Calls up the air conditioning menu (→ page 179)
12. AUTO Sets climate control to automatic mode, left (→ page 179)
13. Reduces the airflow or switches off climate control(→ page 178)

P223 0210 02

Overview of the rear operating unit

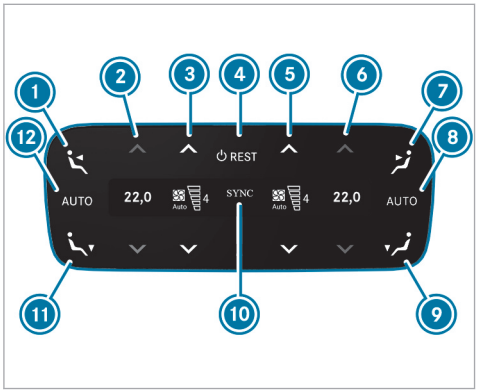

1. Sets air distribution to the centre and side air vents in the rear passenger compartment, left
2. Sets the temperature in the rear passenger compartment, left
3. Sets the airflow in the rear passenger compartment, left, or switches climate control on/off (→ page 179)
4. Switches climate control on/off (→ page 179)
   Switches residual heat on/off (→ page 181)
5. Sets the airflow in the rear passenger compartment, right, or switches climate control on/off (→ page 179)
6. Sets the temperature in the rear passenger compartment, right
7. Sets air distribution to the centre and side air vents in the rear passenger compartment, right
8. Sets rear climate control to automatic mode, right
9. Sets the air distribution to the right rear footwell vents
10. Synchronisation is activated (→ page 180)
11. Sets the air distribution to the rear left footwell vents
12. Sets rear climate control to automatic mode, left

The settings for the second row of seats can be configured via the rear operating unit, the multimedia system (→ page 180) or the MBUX rear tablet depending on the vehicle's equipment.

Operating the climate control system

Switching climate control on/off

Switching on climate control

- Set the airflow to level 1 or higher via [fan] on the climate bar on the central display

or

- Press [AUTO], [▲], [▼] or [MENU].

Switching off climate control

- Set the airflow to level 0 via [fan] on the climate bar on the central display

or

- Press [power].

If climate control is switched off, the windows may mist up more quickly. Switch climate control off only briefly.

Switching climate control on/off via the rear operating unit

▶ **To switch on:** press button (4).

or

▶ Set the airflow to level 1 or higher using buttons (3) and (5).

or

▶ Press buttons (2), (6), (8) or (12).

▶ **To switch off:** press button (4).

or

▶ Set the airflow to level 0 using buttons (3) and (5).

ⓘ If rear climate control is switched off via button (4), **OFF** will be shown on the rear display.

Calling up the air conditioning menu

The air conditioning menu can be called up via the air conditioning line. The air conditioning line is always shown on the lower edge of the central display.

▶ Select the Climate menu entry in the air conditioning line.
The First row of seats menu is opened.

Activating/deactivating the A/C function via the multimedia system

Multimedia system:

↳ Climate menu ⏩ First row of seats

Depending on the external conditions, improved cooling and dehumidification of the interior air are supported when the A/C function is activated.

▶ Select A/C (A/C).

Setting climate control to automatic mode

In automatic mode, the set vehicle interior temperature is controlled automatically and maintained at a constant level by the air supply.

▶ Press AUTO on the climate bar on the central display.

ⓘ You can increase or reduce the airflow by pressing [fan] on the climate bar on the multimedia system.

▶ **To switch to manual operation:** switch off automatic mode or adjust an aspect of air distribution, e.g. [air].

Setting the air distribution

Multimedia system:

↳ Climate menu

▶ Select First row of seats or Second row of seats.

▶ To set the air distribution: select [windscreen], [air] or [footwell].

▶ Set the airflow.

ⓘ Several air distribution options can be selected at the same time, for example to set the climate control for the windscreen and the footwells simultaneously. However, at least one zone is always active.
The [windscreen] climate control for the windscreen can only be selected for the first seat row.

P223 0210 02

Setting the footwell temperature

Multimedia system:

→ Climate menu

▶ Set the footwell temperature.

Setting rear climate control (multimedia system)

Multimedia system:

→ Climate menu

Setting the temperature

▶ Select Second row of seats.

▶ Set the temperature.

Setting the airflow

▶ Select Second row of seats.

▶ Set the airflow.

Controlling the rear climate control automatically

▶ Select AUTO.

Deactivating rear climate control

▶ Select REAR OFF.

Activating/deactivating the climate control synchronisation function via the multimedia system

Multimedia system:

→ Climate menu

Climate control can be set centrally using the synchronisation function. The driver's settings for temperature, airflow and air distribution will be adopted automatically for all climate zones.

▶ Select First row of seats.

▶ Select SYNC (SYNC).

Demisting the windows

Windows misted up on the inside

▶ Press AUTO on the climate bar of the central display.

▶ If the windows remain misted up: press MAX on the climate bar of the central display.

Windows misted up on the outside

▶ Switch on the windscreen wipers.

▶ Press the AUTO button.

Switching air-recirculation mode on/off

▶ Press on the climate bar on the central display.
The interior air will be recirculated.

Air-recirculation mode automatically switches to fresh air mode after a while.

ⓘ If air-recirculation mode is switched on, the windows may mist up more quickly. Switch on air-recirculation mode only briefly.

Switching residual heat on/off

Requirements:

- The residual heat function is available.
- The vehicle is parked.
- The coolant temperature must be sufficiently high.

It is possible to make use of the residual heat from the engine to continue heating or ventilating the front compartment of the vehicle for approximately 30 minutes, depending on the temperature set.

▶ **To switch on:** select Residual heat on the climate bar on the central display.

Residual heat will be switched off automatically.

Switching residual heat on/off via the rear operating unit

Requirements:
- The residual heat function is available.
- The vehicle is parked.
- The coolant temperature must be sufficiently high.

When the residual heat of the engine is activated in the rear compartment, you can heat or ventilate the front and rear compartments for approximately 15 minutes.

▶ Press button (4).

Activating/deactivating ionisation

Multimedia system:

↳ Climate menu ›› Air quality

Ionisation improves the quality of the vehicle's interior air. Ionisation of the interior air is odourless.

▶ Select Ionisation.

ⓘ The function can only be performed if the AUTO mode is activated or the air distribution is set to the side air vent. The function is restricted if the side air vents on the driver's side are closed.

Fragrance system

Setting the fragrance system

Requirements:
- The climate control system is switched on.
- The glove box is closed.
- A flacon is inserted.

Multimedia system:

↳ Climate menu ›› Air quality

The fragrance system distributes a pleasant fragrance throughout the vehicle interior from a flacon located in the glove box.

▶ Select Air freshener.

▶ Keep pressing until the desired intensity is reached.

Inserting or removing the flacon of the fragrance system

⚠ **WARNING** Risk of injury from liquid perfume

If children open the flacon, they could drink the liquid perfume or it could come into contact with their eyes.

▶ Do not leave children unattended in the vehicle.

▶ Consult a doctor immediately if liquid perfume has been drunk.

- If liquid perfume comes into contact with your eyes or skin, rinse your eyes with clean water.
- If symptoms continue, consult a doctor.


ENVIRONMENTAL NOTE Environmental damage due to improper disposal of full flacons



Full flacons must not be disposed of with household waste.

- 

Full flacons must be taken to a harmful substance collection point.

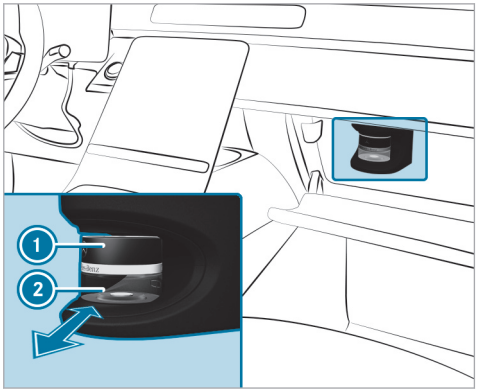

1. Cap
2. Flacon

- **To insert:** slide the flacon into the holder as far as it will go.
- **To remove:** after opening the glove box, wait for approximately seven seconds and pull out the flacon.

If you do not use genuine Mercedes-Benz interior perfumes, observe the manufacturers' safety notices on the perfume packaging.

Dispose of the genuine Mercedes-Benz interior perfume flacon when it is empty and do not refill it.

Refillable flacon

- Unscrew the cap of the empty flacon.
- Fill the flacon with a maximum of 15 ml.
- Screw the cap back on to the flacon.

Always refill the empty refillable flacon with the same perfume. Observe the separate information sheet with the flacon.

Information on the windscreen heater

WARNING Risk of burns from touching the windscreen when the windscreen heater is switched on

The windscreen can become very hot when the windscreen heater is switched on.

The health of persons with limited temperature sensitivity or a limited ability to react to high temperatures may be affected or they may even suffer burn-like injuries.

- ▶ Do not touch the windscreen while the windscreen heater is switched on.
- ▶ Allow the windscreen to cool down before touching it.

The windscreen heater will be enabled automatically if  is activated on the climate bar on the central display.

After the vehicle is started, the windscreen heater is switched on automatically as required.

Pre-entry climate control for departure time

Pre-entry climate control for departure time function

⚠ WARNING Danger to life due to exposure to extreme heat or cold in the vehicle

If people, particularly children, are exposed to extreme temperatures over an extended period of time, there is a risk of serious injury or danger to life.

- ▶ Never leave persons, children in particular, unattended in the vehicle.

⚠ WARNING Risk of burns due to repeatedly switching on the seat heating

Repeatedly switching on the seat heating can cause the seat cushion and seat backrest padding to become very hot.

In particular, the health of persons with limited temperature sensitivity or a limited ability to react to high temperatures may be affected or they may even suffer burn-like injuries.

- ▶ Do not repeatedly switch on the seat heating.

To protect against overheating, the seat heating may be temporarily deactivated after it is switched on repeatedly.

ⓘ This function is available only in vehicles with a 48 V on-board electrical system (EQ Boost technology).

The air inside the vehicle can be heated, ventilated or cooled to the set temperature when the vehicle is parked.

When the vehicle is connected to power supply equipment, priority is given to charging the 48 V battery to a specified minimum charge.

The running time of pre-entry climate control may be reduced under the following conditions:

- The vehicle is not connected to power supply equipment.
- The 48 V battery is not fully charged.

With active pre-entry climate control, the charge level of the 48 V battery may be reduced, even if the charging cable connector is connected.

If present, seat ventilation is activated in cooling and ventilation mode.

If present, the following functions are activated in heating mode:

- Seat heating
- Steering wheel heater
- Panel heating
- Mirror heater
- Rear window heater
- Windscreen heater

When the set temperature is changed, climate control mode will automatically be updated and switched from heating mode to ventilation or cooling mode, from cooling mode to ventilation or heating mode or from ventilation mode to heating or cooling mode.

Setting pre-entry climate control for departure time

Multimedia system:

→ Climate menu ▸▸ Pre-entry climate ctrl

Setting a single departure time

- ▶ Select the pen icon next to Departure time.
- ▶ Select or set a departure time and press OK to confirm.

Setting the week profile

- ▶ Select the pen icon next to Departure time.
- ▶ Set the desired departure time, e.g. every day at 08:00, and mark as Weekly profile.
- ▶ Press OK to confirm.

Selecting seats

- ▶ Select Driver, Passenger, Rear left or Rear right.
  Pre-entry climate control will take place for the selected seats.

Activating/deactivating pre-entry climate control for departure time

Requirements:

- The 48 V battery is charged sufficiently.
- The function has been activated via the multimedia system.

- ▶ **To activate:** set the departure time (→ page 184).
  Pre-entry climate control for departure time switches on a maximum of 55 minutes before the selected departure time. It will remain active for another five minutes if the departure is delayed.
- ▶ **To deactivate:** push the button up or down.

If present, the following functions will remain active once the vehicle has been started:

- Seat heating
- Seat ventilation
- Panel heating

Activating/deactivating immediate pre-entry climate control

WARNING Danger to life due to exposure to extreme heat or cold in the vehicle

If people, particularly children, are exposed to extreme temperatures over an extended period of time, there is a risk of serious injury or danger to life.

- Never leave persons, children in particular, unattended in the vehicle.

WARNING Risk of burns due to repeatedly switching on the seat heating

Repeatedly switching on the seat heating can cause the seat cushion and seat backrest padding to become very hot.


In particular, the health of persons with limited temperature sensitivity or a limited ability to react to high temperatures may be affected or they may even suffer burn-like injuries.

- Do not repeatedly switch on the seat heating.

To protect against overheating, the seat heating may be temporarily deactivated after it is switched on repeatedly.

ⓘ Immediate pre-entry climate control is available only in vehicles with a 48 V on-board electrical system (EQ Boost technology).

Air conditioning of the vehicle interior can continue for up to 50 minutes, e.g. if the journey is interrupted.

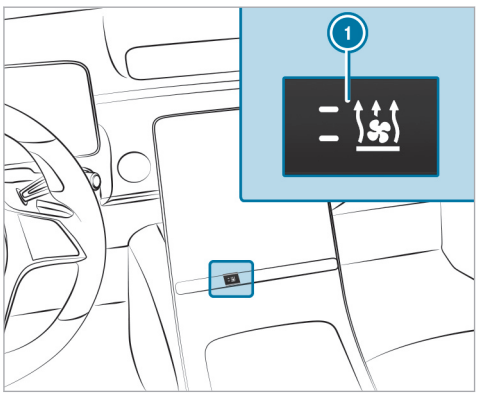

P223 0210 02

- Set the temperature using the ▼▲ arrows on the climate bar on the central display.
- Press button 1.
  The red or blue indicator lamp on button 1 will light up or go out.

The colours of the indicator lamp have the following meanings:

- **Blue:** stationary ventilation is switched on.
- **Red:** the stationary heater is switched on.
- **Yellow:** the departure time is preselected.

Stationary heater/ventilation

Stationary heater/ventilation function

- The air inside the vehicle is heated or ventilated to the set temperature.
- The air inside the vehicle cannot be cooled down to temperatures below the outside temperature.
- If the outside temperature changes, ventilation mode automatically switches to heating mode or heating mode automatically switches to ventilation mode.

The stationary heater and the exhaust gas outlet are situated behind the right-hand front wheel.

Switching the stationary heater/ventilation on/off via the operating unit

DANGER Risk of fatal injury due to poisonous exhaust gases

If the tailpipe is blocked or sufficient ventilation is not possible, poisonous exhaust gases such as carbon monoxide may enter the vehicle. This is the case in enclosed spaces or if the vehicle gets stuck in snow, for example.

- Always switch the stationary heater off in enclosed spaces without an air extraction systems, e.g. in garages.
- Keep the tailpipe and the area around the vehicle free from snow when the engine or the stationary heater are running.
- Open a window on the windward side of the vehicle to ensure an adequate supply of fresh air.

WARNING Risk of fire due to hot stationary heater components and exhaust gases

Flammable materials such as leaves, grass or twigs may ignite.

- When the stationary heater is switched on, make sure that:
  - hot vehicle parts do not come into contact with flammable materials.
  - the exhaust gas can flow out of the stationary heater exhaust pipe unhindered.
  - the exhaust gas does not come into contact with flammable materials.

NOTE Battery discharge caused by stationary heater or stationary ventilation operation

Operating the stationary heater or stationary ventilation drains the battery.

- After heating or ventilating the vehicle twice, drive for a longer period of time.

Requirements:

- The outside temperature is below 15 °C.
- The fuel tank is sufficiently full.

If the fill level of the fuel tank is too low, the auxiliary heating mode may be restricted.

- Set the temperature using the arrows ▼▲ on the climate bar on the central display.
- Press the button.
  The red or blue indicator lamp on button will light up or go out.

The colours of the indicator lamp have the following meanings:

- **Blue:** stationary ventilation is switched on.
- **Red:** the stationary heater is switched on.
- **Yellow:** the departure time is preselected.

The stationary heater/ventilation will switch off automatically after 50 minutes.

Operation using the app: the stationary heater/ventilation can also be operated via the Mercedes me connect app. You can find further information in the separate Owner's Manual at https://moba.i.daimler.com/markets/ece-row/baix/

cars/connectme/en_GB/#emotions/Startseite.html.

Setting the stationary heater/ventilation via the multimedia system

Multimedia system:

→ Climate menu ▸▸ Stationary heater

Selecting the departure time

- Select the time Time A, Time B or Time C.

Setting the departure time

- Select the time Time A, Time B or Time C.
- Select the pen beside the time.
- Set a time.

Setting the stationary heater/ventilation via remote control

Requirements:

- The outside temperature is below 15 °C.
- The fuel tank is sufficiently full.

Switching on immediately



- Press and hold the ON button.

Setting the departure time

- Briefly press the ON button.
- Press the ◁ or ▷ button repeatedly until the time to be changed appears on the display.
- Press the ON and OFF buttons simultaneously.
  The ⏲ symbol on the remote control display will flash.
- Press the ◁ and ▷ buttons to set the desired departure time.
- Press the ON and OFF buttons simultaneously.
  The new departure time will be stored.


Up to three departure times can be stored.

- **To activate the departure time:** select the desired departure time and press and hold the ON button.
  The ⏲ symbol, the departure time and, depending on the selected departure time, the letter **A**, **B** or **C** will appear on the display.
- **To deactivate the departure time:** select the desired departure time and press and hold the OFF button.
  OFF will appear on the display.
- **To check the status of the active stationary heater:** briefly press the ON button.

Switching off immediately

▶ Press and hold the OFF button.

Overview of the remote control displays (stationary heater/ventilation)

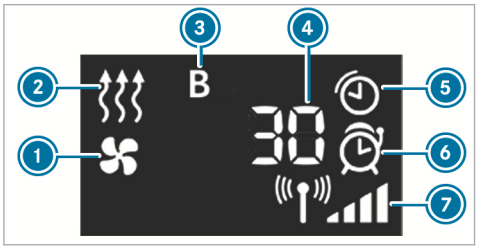

1. Stationary ventilation switched on
2. Stationary heater switched on
3. Selected departure time
4. Remaining time for the stationary heater/ventilation (in minutes)
5. Stationary heater/ventilation active
6. Departure time activated
7. Signal strength

Further possible displays:

- **Time:** the activated departure time.
- **Zero minutes:** the running time for the stationary heater is extended because the engine has not yet reached operating temperature when it is started.
- **OFF:** the stationary heater/ventilation is switched off.

Replacing the remote control battery (stationary heater)

⚠ **DANGER** Risk of fatal injuries if batteries are swallowed

Batteries contain toxic and corrosive substances. Swallowing batteries may cause severe internal burns within two hours.

There is a risk of fatal injury.

▶ Keep batteries out of the reach of children.

▶ If the cover and/or lid of the battery compartment does not close securely, do not use the key and keep it away from children.

▶ If batteries are swallowed, seek medical attention immediately.


ENVIRONMENTAL NOTE Environmental damage due to improper disposal of batteries

Batteries contain toxic and corrosive substances.

▶ Take discharged batteries to a qualified specialist workshop or to a collection point for used batteries.

Requirements:

- One CR2450 lithium battery

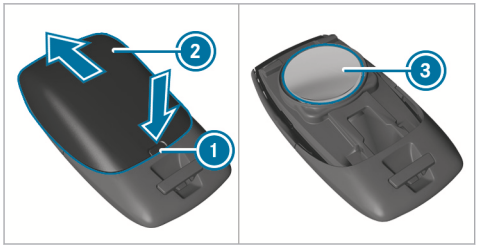

- ▶ Push a pointed object into recess (1).
- ▶ Slide battery cover (2) backwards in the direction of the arrow.
- ▶ Insert new battery (3) with the lettering facing upwards.
- ▶ Slide battery cover (2) in the opposite direction to the arrow onto the remote control until the battery cover engages.

Problems with the remote control for the stationary heater/ventilation

FAIL appears on the remote control display

Possible cause:

- The signal transmission between the transmitter and the receiver is malfunctioning.

▶ Change your position in relation to the vehicle, moving closer if necessary.

FAIL appears on the remote control display

Possible cause:

- The starter battery is not sufficiently charged.

▶ Charge the starter battery.

Possible cause:

- The outside temperature is higher than 15 °C.

▶ Use the stationary heater only if the outside temperature is below 15 °C.

Possible cause:

- The fuel tank is not sufficiently filled.

▶ Refuel at the nearest filling station.

FAIL appears on the remote control display

Possible cause:

- There is a malfunction in the stationary heater.

▶ Have the stationary heater checked at a qualified specialist workshop.

Air vents

Adjusting the front air vents


WARNING Risk of burns and frostbite due to being too close to the air vents

Very hot or very cold air can flow from the air vents.

- ▶ Make sure that all vehicle occupants always maintain a sufficient distance from the air vents.
- ▶ If necessary, direct the airflow to another area of the vehicle interior.

To guarantee the flow of fresh air through the air vents into the vehicle interior, comply with the following:

- Always keep the vents and vent grilles in the vehicle interior free.
- Keep the air inlet free of residue build-up (→ page 341).

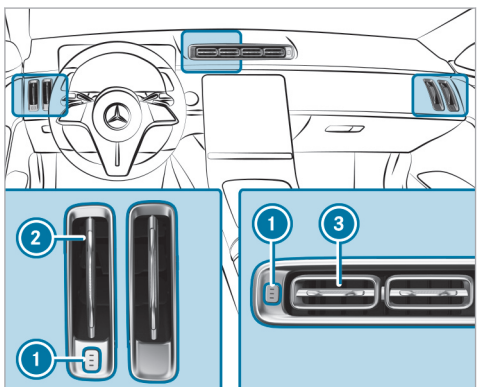

- **To open the centre and side air vents:** press button (1). The three indicator lamps on the button will light up. The air vents will be opened completely.
- **To close the centre and side air vents:** press button (1) again. The three indicator lamps on the button will go out one by one. The air vents will be closed completely.
- **To adjust the airflow direction of the side air vents:** hold outer side air vent (2) in the centre and move it up or down or to the left or right.
- **To adjust the airflow direction of the centre air vents:** hold air vent (3) in the centre and move it up or down or to the left or right.


Adjusting the rear air vents

WARNING Risk of burns and frostbite due to being too close to the air vents

Very hot or very cold air can flow from the air vents.

- Make sure that all vehicle occupants always maintain a sufficient distance from the air vents.
- If necessary, direct the airflow to another area of the vehicle interior.


Adjusting the rear air vents in the centre console

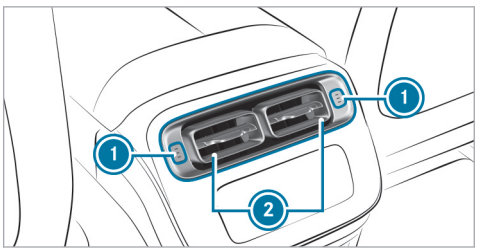

- **To open the rear air vents:** press button (1). The air vents will be opened completely and the three indicator lamps on the button will light up.

- **To close the rear air vents:** press button (1) again.
  The three indicator lamps on the button will go out one by one. The air vents will be closed completely.
- **To adjust the airflow direction of the rear air vents:** hold air vent (2) in the centre and move it up or down or to the left or right.

Adjusting the side air vents in the rear

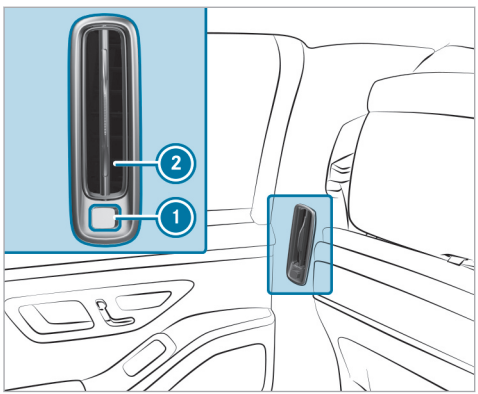

- **To open the side air vents in the rear:** press button (1).
  If the button is flush with the side trim, the side air vent is open.
- **To close the side air vents in the rear:** press button (1) again.
  If the button protrudes from the side trim, the side air vent is closed.
- **To adjust the airflow direction of the side air vents:** hold air vent (2) in the centre and move it up or down or to the left or right.


Opening or closing the air vent in the glove box

NOTE Damage to temperature-sensitive objects in the glove box

Temperature-sensitive objects stored in the glove box may be damaged by the air vent located inside the glove compartment.

- Close the air vent when you heat the vehicle.
- At high outside temperatures, open the air vent and switch on the A/C function.

The automatic climate control must be switched on to cool the glove box.

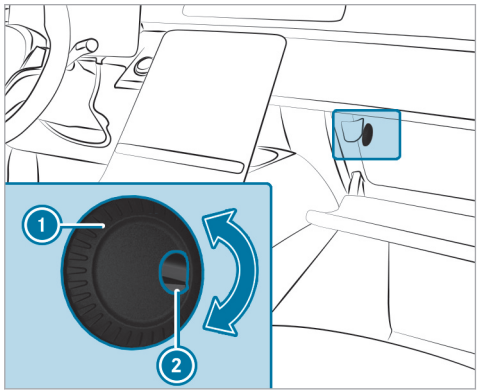

(1) Air vent controller
(2) Air vent

- **To open or close:** turn controller (1) to the right or left.

Driving

Switching on the power supply or ignition

WARNING Risk of accident and injury due to leaving children unattended in the vehicle

If children are left unattended in the vehicle, they could, in particular:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

In addition, the children could also set the vehicle in motion by, for example:

- releasing the parking brake.
- changing the transmission position.
- starting the vehicle.


▶ Never leave children unattended in the vehicle.

▶ When leaving the vehicle, always take the key with you and lock the vehicle.

▶ Keep the vehicle key out of the reach of children.

Requirements:

- the key is in the vehicle and is recognised.
- the brake pedal is not depressed.

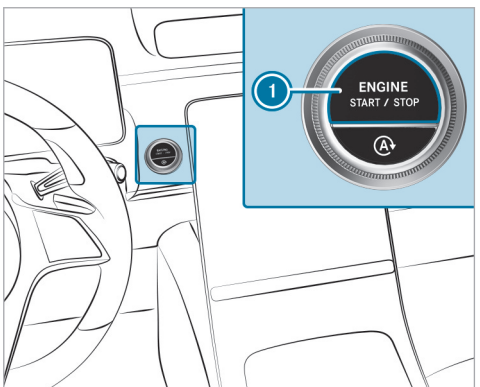

P223 0210 02

▶ **To switch on the power supply:** press button (1) once.
You can activate the windscreen wiper, for example.

The power supply is switched off again if the following conditions are met:

- You open the driver's door.
- You press button (1) twice more.

▶ **To switch on the ignition:** press button (1) twice.
The indicator lamps appear on the driver display.

The ignition is switched off again if one of the following conditions is met:

- You do not start the vehicle within 15 minutes and the transmission is in position P or the electric parking brake is applied.
- You press button (1) once.

Starting the vehicle

Starting the vehicle with the start/stop button

⚠ DANGER Risk of death caused by exhaust gases

Combustion engines emit poisonous exhaust gases such as carbon monoxide. Inhaling these exhaust gases is hazardous to health and leads to poisoning.

- Never leave the engine or, if present, the auxiliary heating running in an enclosed space without sufficient ventilation.

⚠ WARNING Risk of fire due to flammable material in the engine compartment or the exhaust system

Flammable materials may ignite.

- Therefore, check regularly that there are no flammable materials in the engine compartment or on the exhaust system.

Requirements:

- the key is in the vehicle and is recognised.


- Shift the transmission to position P or N.
- Depress the brake pedal and press button 1 once.
- If the vehicle does not start: switch off non-essential consumers and press button 1 once.
- If the vehicle still does not start and the display message Place the key in the marked space See Owner's Manual also appears in the driver display: start the vehicle with the key in the marked space (emergency operation mode) (→ page 193).

ⓘ You can switch off the engine while driving. By pressing button 1 for about three seconds or by pressing button 1 three times within three seconds. Be sure to observe the safety notes under "Driving tips" (→ page 196).

Observe any information regarding display messages that can be displayed in the driver display.

Starting the vehicle with the key in the marked space (emergency operation mode)

If the vehicle does not start and the display message Place the key in the marked space See Owner's Manual appears in the driver display, you can start the vehicle in emergency operation mode.

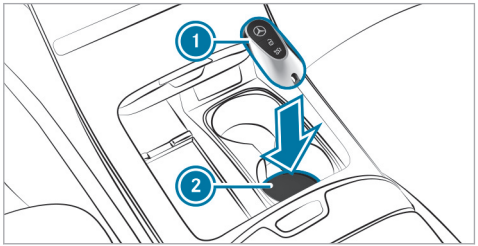

- Make sure that the cup holder 2 is empty.
- Remove the key 1 from the key ring.
- Place the key 1 in the cup holder 2.
  The vehicle will start after a short time.

  If the key 1 is removed from the cup holder 2, the engine continues running. For further engine starts, however, the key 1 must be located in the cup holder 2 during the entire journey.

▶ Have the key ① checked at a qualified specialist workshop.

If the vehicle does not start:

▶ Leave the key ① in the cup holder ②.

▶ Depress the brake pedal and start the vehicle using the start/stop button.

ⓘ You can also switch on the power supply or the ignition with the start/stop button.

Observe any information regarding display messages that can be displayed in the driver display.

Starting the vehicle via Remote Online Services

Cooling or heating the vehicle interior before starting the journey

Ensure the following before starting the engine:

- the legal stipulations in the area where your vehicle is parked allow engine starting via smartphone.
- it is safe to start and run the engine where your vehicle is parked.
- the fuel tank is sufficiently full.
- the starter battery is sufficiently charged.

Charging the starter battery before starting the journey

If the vehicle battery is discharged, you can receive a message on your smartphone. You can then start the vehicle with the smartphone to charge the battery. The vehicle is automatically switched off after ten minutes.

Ensure the following before starting the engine:

- the legal stipulations in the area where your vehicle is parked allow engine starting via smartphone.
- it is safe to start and run the engine where your vehicle is parked.
- the fuel tank is sufficiently full.

Starting the vehicle (Remote Online)

⚠ **WARNING** Risk of crushing or entrapment due to unintentional starting of the engine

Limbs could be crushed or trapped if the engine is started unintentionally during service or maintenance work.

▶ Always secure the engine against unintentional starting before carrying out maintenance or repair work.

Requirements:

- park position P is selected.
- the anti-theft alarm system is not activated.
- the panic alarm is not activated.
- the hazard warning light system is switched off.
- the bonnet is closed.
- the doors are closed and locked.
- the windows and sliding sunroof are closed.

▶ Start the vehicle using the smartphone. After every engine start, the engine runs for ten minutes.

You can carry out a maximum of two consecutive starting attempts. You must start the vehicle once with the key before trying to start the engine again with the smartphone. you can stop the vehicle again at any time.

ⓘ Further information can be found in the smartphone app.

Securing the engine against starting before carrying out maintenance or repair work:

▶ switch on the hazard warning light system.

or

▶ unlock the doors.

or

▶ open a side window or the sliding sunroof.

Running-in notes

To preserve the engine during the first 1500 km:

- drive at varying road speeds and engine speeds.
- do not drive at speeds greater than 140 km/h.
- drive the vehicle in drive program C or E.
- shift to the next highest gear at the very latest when the needle reaches the last third before the red area in the rev counter.
- do not shift down a gear manually in order to brake.
- avoid overstraining the vehicle, e.g. driving at full throttle.
- do not depress the accelerator pedal past the pressure point (kickdown).
- only increase the engine speed gradually and accelerate the vehicle to full speed after 1500 km.

This also applies when the engine or parts of the drivetrain have been replaced.

Please also observe the following running-in notes:

- in certain driving and driving safety systems, the sensors adjust automatically while a certain distance is being driven after the vehicle has been delivered or after repairs. Full system effectiveness is not reached until the end of this teach-in process.
- brakepads, brake discs and tyres that are either new or have been replaced only achieve optimum braking effect and grip after several hundred kilometres of driving. Compensate for the reduced braking effect by applying greater force to the brake pedal.

Notes on optimised acceleration

If all necessary requirements and activation conditions are fulfilled, the best possible acceleration can be achieved from a standstill.

Do not use the optimised acceleration on public roads. Individual wheels could spin and you could lose control of the vehicle. There is an increased risk of skidding and/or accident.

Be sure to observe the safety notes and information on ESP® (→ page 222).

Moving away with optimised acceleration

⚠ **WARNING** Risk of skidding and having an accident from wheels spinning

When you use optimised acceleration, individual wheels could spin and you could lose control of the vehicle.

If ESP® is deactivated, there is a risk of skidding and accident!

- Make sure that no persons or obstacles are in the close vicinity of your vehicle.

Requirements:

- the vehicle is run in (→ page 195).
- the vehicle and tyres are in good condition.
- you are on a high-grip roadway.
- the engine and transmission are at normal operating temperature.

! NOTE Increased wear due to optimised acceleration

When pulling away with optimised acceleration, all components of the drivetrain are subjected to a very high load.

This can lead to increased component wear.

- Do not always pull away with optimised acceleration.

- Engage the D drive position (→ page 207).
- Move the steering wheel to the straight-ahead position.
- Select the sportiest available drive program S+ or S (→ page 204).
- Deactivating ESP® (→ page 223).
- Depress and hold the brake pedal firmly with your left foot.
- With your right foot, fully depress the accelerator pedal.
- After no more than five seconds, take your left foot quickly off the brake, but keep the accelerator pedal depressed.
  The vehicle pulls away at maximum acceleration.
- Switch on ESP® once the acceleration procedure is complete.

Ending optimised acceleration

- Remove your foot from the accelerator pedal.
- Reactivate the ESP®.

ⓘ After you pull away with optimised acceleration, components of the drivetrain can become very hot, which means that optimised acceleration values may be reached again only after a few minutes.

Notes on driving

⚠ WARNING Risk of accident due to objects in the driver's footwell

Objects in the driver's footwell may impede pedal travel or block a depressed pedal.

This jeopardises the operating and road safety of the vehicle.

- Stow all objects in the vehicle securely so that they cannot get into the driver's footwell.
- Always fit the floor mats securely and as prescribed in order to ensure that there is always sufficient room for the pedals.
- Do not use loose floor mats and do not place floor mats on top of one another.

WARNING Risk of accident due to incorrect footwear

Incorrect footwear includes, for example:

- shoes with platform soles
- shoes with high heels
- slippers

▶ Always wear suitable footwear so that you can operate the pedals safely.

WARNING Risk of accident if the ignition is switched off while driving

If you switch off the ignition while driving, safety functions are restricted or no longer available.

You will then need, for example, to use considerably more force to steer and brake.

▶ Do not switch off the ignition while driving.

DANGER Risk of death caused by exhaust gases

Combustion engines emit poisonous exhaust gases such as carbon monoxide. Inhaling these exhaust gases is hazardous to health and leads to poisoning.

▶ Never leave the engine or, if present, the auxiliary heating running in an enclosed space without sufficient ventilation.

WARNING Risk of skidding and of an accident due to shifting down on slippery road surfaces

If you shift down on slippery road surfaces to increase the engine braking effect, the drive wheels may lose traction.

▶ Do not shift down on slippery road surfaces to increase the engine braking effect.

DANGER Risk of fatal injury due to poisonous exhaust gases

If the tailpipe is blocked or sufficient ventilation is not possible, poisonous exhaust gases such as carbon monoxide may enter the vehicle. This is the case when the vehicle becomes stuck in snow, for example.

▶ Keep the tailpipe and the area around the vehicle free from snow when the engine or the stationary heater are running.

▶ Open a window on the side of the vehicle facing away from the wind to ensure an adequate supply of fresh air.

WARNING Risk of accident due to the brake system overheating

If you leave your foot on the brake pedal when driving, the brake system may overheat.

This increases the braking distance and the brake system may even fail.

▶ Never use the brake pedal as a footrest.

- Do not depress the brake pedal and the accelerator pedal at the same time while driving.

! **NOTE** Engine damage due to excessively high engine speeds

The engine will be damaged if you drive with the engine in the overrevving range.

- Do not drive with the engine in the overrevving range.

! **NOTE** Causing wear to the brake linings by permanently depressing the brake pedal

- Do not permanently depress the brake pedal while driving.
- To use braking effect of the engine, shift to a lower gear in good time.

! **NOTE** Damage to the drivetrain and engine when pulling away

- Do not warm up the engine while the vehicle is stationary. Pull away immediately.
- Avoid high engine speeds and driving at full throttle until the engine has reached its operating temperature.

! **NOTE** Damage to the catalytic converter due to non-combusted fuel

The engine is not running smoothly and is misfiring.

Non-combusted fuel may get into the catalytic converter.

- Only depress the accelerator pedal slightly.
- Have the cause rectified immediately at a qualified specialist workshop.

Notes on driving with a roof load, trailer or fully laden vehicle

When driving with a loaded roof luggage rack or trailer as well as with a fully laden or fully occupied vehicle, the vehicle's driving and steering characteristics change.

You should bear the following in mind:

- Do not exceed the permissible roof load and towing capacity. Also observe the technical data in the printed Owner's Manual.
- Evenly distribute the roof load, and place heavy objects at the bottom. Also comply with the notes on loading the vehicle (→ page 139).
- Drive attentively, and avoid suddenly pulling away, braking and steering as well as rapid cornering.

Notes on driving on salt-treated roads

The braking effect is limited on salt-treated roads.

Therefore, observe the following notes:

- due to salt build-up on the brake disks and brakepads, the braking distance can increase

considerably or result in braking only on one side
- maintain a much greater safe distance to the vehicle in front

To remove salt build-up:
- brake occasionally while paying attention to the traffic conditions
- carefully depress the brake pedal at the end of the journey and when starting the next journey

Notes on aquaplaning

Aquaplaning can take place once a certain amount of water has accumulated on the road surface.

Observe the following notes during heavy precipitation or in conditions in which aquaplaning may occur:
- reduce speed
- avoid tyre ruts
- avoid sudden steering movements
- brake carefully

ⓘ Also observe the notes on regularly checking wheels and tyres (→ page 369).

Notes on driving through water on the road surface

Water which has entered into the vehicle can damage the engine, electrics and transmission.

Water can also enter the air intake of the engine and cause engine damage.

Observe the following if you must drive through water:
- The water, when calm, may only reach the lower edge of the vehicle body.
- Drive at a maximum speed of 10 km/h; water can otherwise enter the vehicle interior or engine compartment.
- Vehicles travelling in front, or oncoming vehicles, can create waves which may exceed the maximum permissible depth of the water.

The braking effect of the brakes is reduced after fording. Brake carefully while paying attention to the traffic conditions until braking power has been fully restored.

Function of rear axle steering

The rear axle steering is an electromechanical auxiliary steering on the rear axle which adjusts the steering of the rear wheels according to the position of the front wheels, depending on the speed. This results in greater manoeuvrability and improved driving stability, e.g. when cornering.

Rear axle steering has the following characteristics:
- reduced steering effort and turning circle resulting in reduced parking effort
- improved driving stability, e.g. when cornering
- more direct steering resulting in improved handling of the vehicle

Observe the notes on snow chains (→ page 369) and on activating snow chain mode.

ECO start/stop function

Operation of the ECO start/stop function

ⓘ The ECO start/stop function is not available in all drive programs, depending on the engine. Observe the status display in the driver display for this.

The engine is switched off automatically in the following situations if all vehicle conditions for an automatic engine stop are met:

- You brake the vehicle to a standstill in transmission position D or N.
- **Vehicles with a 48 V on-board electrical system:** You depress the brake pedal when travelling at a low speed.

If the system has detected one of the following situations, the engine will not stop:

- You stop at a stop sign and there is no vehicle in front of you.
- The vehicle that stopped in front of you starts up again.
- You manoeuvre, turn the steering wheel sharply or engage reverse gear.

ⓘ If the system detects an intelligent stop inhibitor, for example, a stop sign, the engine will not stop.
If you activate the HOLD function or engage the park position P, the engine can be switched off in spite of an intelligent stop inhibitor.

The engine is restarted automatically if:

- You engage transmission position D or R.
- You depress the accelerator pedal.
- An automatic engine start is required by the vehicle.
- You release the brake pedal.
- **Vehicles with a 48 V on-board electrical system:**
  - You release the brake pedal on a downhill gradient and the vehicle does not roll.
  - The vehicle rolls on a downhill gradient and does not automatically enter glide mode at 20 km/h.

ECO start/stop function symbols in the driver display:


- The symbol Ⓐ (green) appears when the vehicle is at a standstill: the engine was switched off by the ECO start/stop function.
- The symbol Ⓐ (yellow) appears when the vehicle is at a standstill: not all vehicle conditions for an engine stop have been met.
- Neither the symbol Ⓐ nor Ⓐ appears when the vehicle is at a standstill: an intelligent stop inhibitor was detected, for example, a stop sign.
- The symbol Ⓐ OFF appears: the ECO start/stop function is deactivated or there is a malfunction.

If the engine was switched off by the ECO start/stop function and you leave the vehicle, a warning tone sounds and the engine is not restarted. In addition, the following display message appears in the driver display:

Vehicle is operational Switch off ignition before exiting

If you do not switch off the ignition, it is automatically switched off after three minutes.


Deactivating or activating the ECO start/stop function

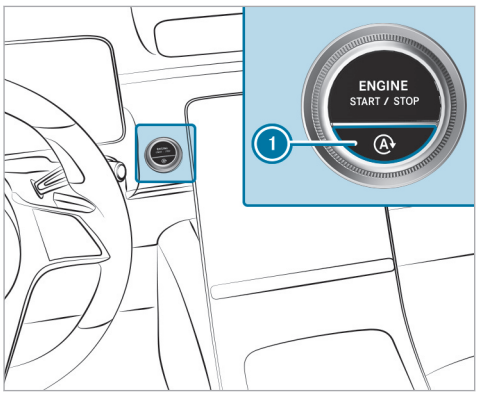

▶ Press button (1).
A display appears in the driver display when switching the ECO start/stop function off/on.

ⓘ A continuous (A)OFF display appears in the driver display while the ECO start/stop function is deactivated.

ECO display function

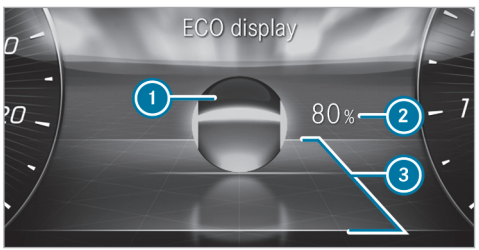

The ECO display shows an evaluation of your driving style on the driver display depending on the situation. This enables you to check the efficiency of your driving style and adjust it if necessary. The ECO display menu shows a ball (1) that will roll forwards or backwards on a stylised road in the direction of travel according to the driving characteristics.

Above and below the road, lines mark the area for an efficient driving style (3). Ball (1) will light up in green if it is rolling within these lines. Outside the lines, the ball will light up in orange.

The ECO display assesses the following criteria for an economical driving style:

- coasting at the right time
- consistent speed
- moderate acceleration

ⓘ The overall assessment of your driving style "from start" is given as a percentage (2) and displayed next to the ECO display. The assessment starts at 0% and can reach a maximum of 100%.


ⓘ You can call up the ECO display function via the Classic and Maybach menus (→ page 279).

ECO Assist function

Vehicles with a 48 V on-board electrical system (EQ Boost technology)

ⓘ ECO Assist is active only in drive programs E and C.

ECO Assist analyses data for the vehicle's expected route. This allows the system to optimally adjust the driving style for the route ahead, save fuel and recuperate. If the system detects an event ahead and the vehicle nears the event, ECO Assist will calculate the optimum speed for maximum fuel economy and recuperative energy based on the distance, speed and downhill gradient.

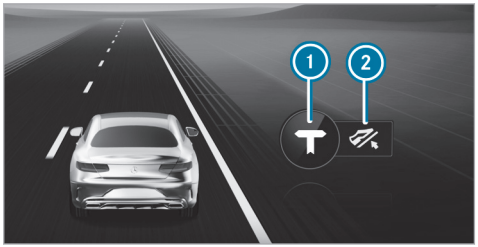


ECO Assist display on the driver's display on the Assistance menu

1. Route event ahead
2. "Foot off the accelerator" recommendation

If a route event that can be dealt with more efficiently by adjusting your driving style is detected ahead, corresponding symbol 1 will be displayed.

In addition, the symbol will be displayed until you take your foot off the accelerator or until you have passed the route event.

Symbol 1 will disappear as soon as ECO Assist cannot identify any further recommendations from the route ahead.

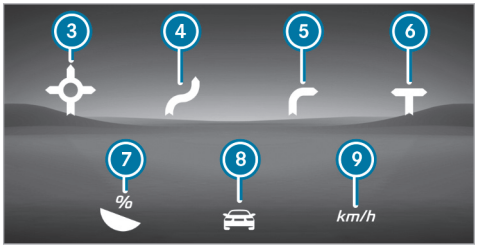

The following route events can be detected by ECO Assist:

3. Roundabout
4. S-bend
5. Sharp bend
6. T-junction
7. Downhill gradient
8. Vehicle in front
9. Speed limit

ⓘ Only route event 8 "vehicle in front" will be displayed in drive program C.

P223 0210 02

System limits

If the calculated route is adhered to when route guidance is active, ECO Assist will operate with greater accuracy. The basic function is also available without active route guidance. Not all information and traffic situations can be foreseen. The quality depends on the map data.

ECO Assist is only an aid. The driver is responsible for keeping a safe distance from the vehicle in front, for vehicle speed and for braking in good time.

The system may be impaired or may not function in the following situations:

- If there is poor visibility, e.g. due to insufficient illumination of the road, highly variable shade conditions, rain, snow, fog or heavy spray.
- If there is glare, e.g. from oncoming traffic, direct sunlight or reflections.
- If the windscreen is dirty in the area of the multifunction camera, or if the camera is misted up, damaged or covered.
- If the traffic signs are hard to detect, e.g. due to dirt, snow or insufficient lighting, or because they are covered.
- If the information in the navigation system's digital map is incorrect or out-of-date.
- If the signs are ambiguous, e.g. road signs in roadworks or in adjacent lanes.

DYNAMIC SELECT switch

Function of the DYNAMIC SELECT button

ⓘ Depending on the engine and equipment, the vehicle has different drive programs.

Use the DYNAMIC SELECT switch to change between the following drive programs.

The chosen drive program appears in the driver display.

I* Individual

- individual settings

S+ Sport+

- very sporty driving style with lowered suspension
- emphasises the vehicle's own oversteering and understeering characteristics for a more active driving style
- only suitable for good road conditions, a dry road surface and a clear stretch of road

S Sport

- sporty driving style with lowered suspension
- still sporty, but with an emphasis on stability
- allows the sporty driver a more active driving style
- only suitable for good road conditions, a dry road surface and a clear stretch of road

C Comfort

- comfortable and economical driving
- balance between traction and stability
- recommended for all road conditions

C Maybach

- highest driving comfort for comfortable and luxurious travel
- balance between traction and stability
- recommended for all road conditions

E Eco


- particularly economical driving

- balance between traction and stability
- recommended for all road conditions

Depending on the drive program, the following systems change their characteristics:

- drive
  - engine and transmission management
  - Active Distance Assist DISTRONIC
  - availability of Glide mode
- ESP®
- suspension
  - suspension and damping
  - vehicle level
- steering

Selecting the drive program

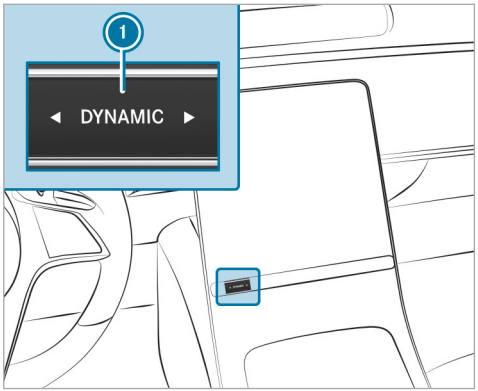

▶ Press the DYNAMIC SELECT button (1) on the left or right.
The chosen drive program appears in the display of the button.

Configuring DYNAMIC SELECT (multimedia system)

Multimedia system:

→ ⌂ ▸▸ Settings ▸▸ Vehicle ▸▸ DYNAMIC SELECT

Setting drive program I

▶ Select Individual.

▶ Select and set a category.

Switching the reset display on/off

▶ Switch Ask when starting on or off.

Function on: the next time the vehicle is started a prompt appears asking whether the last active drive program should be restored. If the ECO start/stop function was deactivated, an additional prompt appears asking if the function should remain deactivated.

ⓘ The prompt appears only if the previously active settings deviate from the standard settings.

Function off: the next time the vehicle is started the C drive program is set automatically. The

ECO start/stop function is activated automatically.

Displaying vehicle data

Multimedia system:

→ ⌂ » Info

▶ Select Vehicle.
The vehicle data is displayed.

Displaying engine data

Multimedia system:

→ ⌂ » Info

▶ Select Engine.
The engine data is displayed.

ⓘ The actual (maximum) values that can be achieved for engine output and engine torque may deviate from the certified values within the country-specific guidelines for permissible tolerances (basis: UN-ECE No. 85 or country-specific guidelines).

Variables that can influence this are, for example:

- Sea level
- Fuel grade
- Outside temperature
- Operating temperature of the engine

ⓘ The values displayed serve only as orientation. The values for engine output and engine torque shown in the central display may deviate from the actual values.

Calling up the fuel consumption indicator

Multimedia system:

→ ⌂ » Info

▶ Select Consumption.
The current and average consumption is displayed.

Automatic transmission

DIRECT SELECT lever

Function of the DIRECT SELECT lever

⚠ **WARNING** Risk of accident due to incorrect gearshifting

If the engine speed is higher than the idle speed and you engage the transmission position D or R, the vehicle may accelerate sharply.

▶ If you engage the transmission position D or R when the vehicle is at a standstill, always depress the brake pedal firmly and do not accelerate at the same time.

WARNING Risk of accident and injury due to leaving children unattended in the vehicle

If children are left unattended in the vehicle, they could, in particular:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

In addition, the children could also set the vehicle in motion by, for example:


- releasing the parking brake.
- changing the transmission position.
- starting the vehicle.

▶ Never leave children unattended in the vehicle.

▶ When leaving the vehicle, always take the key with you and lock the vehicle.

▶ Keep the vehicle key out of the reach of children.

Use the DIRECT SELECT lever to switch the transmission position. The current transmission position is shown in the driver display.

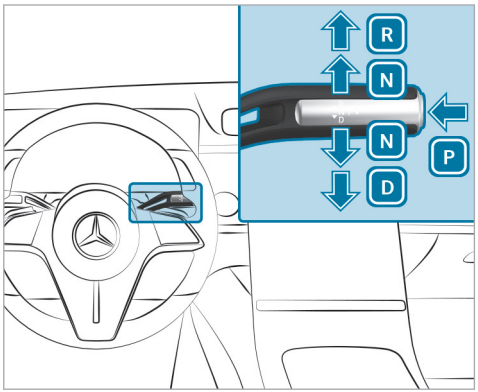

P223 0210 02

P Park position
R Reverse gear
N Neutral
D Drive position

Engaging reverse gear R

▶ Depress the brake pedal and push the DIRECT SELECT lever upwards past the first point of resistance.

Engaging neutral N

▶ Depress the brake pedal and push the DIRECT SELECT lever up or down to the first point of resistance.

ⓘ To shift into neutral N with the ignition on, push the selector lever up or down for several seconds to the first point of resistance.

Subsequently releasing the brake pedal will allow you to move the vehicle freely, e.g. to push it or tow it away.

Proceed as follows if you want the automatic transmission to remain in neutral N, even if the ignition is switched off or the driver's door is opened:

▶ depress the brake pedal and engage neutral N when the vehicle is at a standstill.

▶ release the brake pedal.

▶ Switch the ignition off.

The Risk of vehicle rolling away N activated manually No automatic switch to P message appears on the driver's display.

ⓘ If you then exit the vehicle leaving the key in the vehicle, the automatic transmission remains in neutral N.

The park position P is automatically re-engaged as soon as one of the following conditions is met:

- you switch to transmission position D or R.
- you press the button P.

Engaging park position P

▶ Observe the notes on parking the vehicle (→ page 212).

▶ Depress the brake pedal until the vehicle comes to a standstill.

▶ When the vehicle is at a standstill, press button P.
When the transmission position display shows P, the park position is engaged. If no transmission position display P appears, secure the vehicle to prevent it from rolling away.

ⓘ Depending on the situation, it may take a short time until P is engaged. Therefore, always pay attention to the transmission position display.

Park position P is engaged automatically if one of the following conditions is met:

- you switch off the ignition when the vehicle is stationary and the transmission position is D or R.
- you open the driver's door when the vehicle is at a standstill or when driving at a very low speed and the transmission position is D or R.
- you switch off the engine and bring the vehicle to a standstill when the vehicle is rolling and the transmission position is D or R.
- you switch off the engine, bring the vehicle to a standstill and open the driver's door when the vehicle is stationary or when the vehicle is rolling and the transmission position is N.
- engaging park position P automatically is required by the vehicle.

ⓘ To manoeuvre with an open driver's door, open the driver's door while at a standstill and engage transmission position D or R again.


Engaging drive position D

▶ Depress the brake pedal and push the DIRECT SELECT lever down past the first point of resistance.

When the automatic transmission is in transmission position D, it shifts the gears automatically. This depends, among other things, on the following factors:

- the selected drive program
- the position of the accelerator pedal
- the driving speed

Manual gearshifting

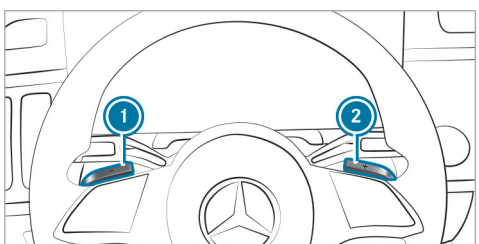

When the automatic transmission is shifted to position D, you can manually shift it with the steering wheel gearshift paddle. If permitted, the automatic transmission shifts to a higher or lower gear depending on the steering wheel gearshift paddle being pulled.

You have two options to manually shift the automatic transmission:

- temporary setting
- permanent setting

The gears shift automatically when manual gearshifting is deactivated.

Temporary setting:

- **to activate:** pull steering wheel gearshift paddle (1) or (2).
  Manual gearshifting is activated for a short time. The transmission position display shows M and the current gear.

ⓘ How long the manual gearshifting stays activated is dependant on various factors.

Manual gearshifting can be automatically deactivated in the following cases:

- changing the drive program
- restarting the vehicle
- when the transmission position D is engaged again
- driving style

- **To shift up:** pull steering wheel gearshift paddle (2).
- **To shift down:** pull steering wheel gearshift paddle (1).
- **To deactivate:** pull steering wheel gearshift paddle (2) and hold it in place.
  The transmission position display shows D.

Permanent setting:

- change to drive program I* (→ page 204).
- select drive setting M (→ page 204).

Gearshift recommendation

The gearshift recommendation assists you in adopting an economical driving style.

P223 0210 02



- If the gearshift recommendation (1) appears next to the transmission position display, shift to the recommended gear.

Using kickdown

- **Maximum acceleration:** depress the accelerator pedal beyond the pressure point.

To protect against engine overrev, the automatic transmission shifts up to the next gear when maximum engine speed has been reached.

Glide mode function

With an anticipatory driving style, Glide mode helps you to reduce fuel consumption.

Glide mode is characterised by the following:

- The combustion engine is disconnected from the drivetrain and continues to run in neutral.
- The transmission position display D is shown in green.
- **Vehicles with 48 V on-board electrical system (EQ Boost technology):** The combustion engine can be switched off. All of the vehicle functions remain active.

Glide mode is activated if the following conditions are met:

- Drive program C is selected.
- The speed is within a suitable range.
- The road's course is suitable, e.g. no steep uphill or downhill inclines or tight bends.
- You do not depress the accelerator or brake pedal (except for light brake applications).

ⓘ Glide mode can also be activated if you have selected the "Eco" setting for the drive in the drive program I*.

Glide mode is deactivated again if one of the conditions is no longer met.

Glide mode can also be prevented by the following parameters:

- Incline
- Downhill gradient
- Temperature
- Height
- Speed
- Operating status of the engine
- Traffic situation

Function of the 4MATIC

4MATIC ensures that all four wheels are driven. Together with ESP® and 4ETS, 4MATIC improves the traction of your vehicle whenever a driven wheel spins due to insufficient traction.

If you fail to adapt your driving style, 4MATIC can neither reduce the risk of an accident nor override the laws of physics. 4MATIC cannot take account of road, weather and traffic conditions. 4MATIC is only an aid. You are responsible especially for maintaining a safe distance from the vehicle in front, for vehicle speed, for braking in good time and for staying in lane.

ⓘ In wintry road conditions, the maximum effect of 4MATIC can be achieved only if you use winter tyres (M+S tyres), with snow chains if necessary.

Refuelling

Refuelling the vehicle

⚠ **WARNING** Risk of fire or explosion from fuel

Fuels are highly flammable.

- ▶ Fire, naked flames, smoking and creation of sparks must be avoided.
- ▶ Switch off the ignition and, if available, the stationary heater, before and while refuelling the vehicle.

WARNING Risk of injury from fuels

Fuels are poisonous and hazardous to your health.

- Do not swallow fuel or let it come into contact with skin, eyes or clothing.
- Do not inhale fuel vapour.
- Keep children away from fuel.
- Keep doors and windows closed during the refuelling process.

If you or other people come into contact with fuel, observe the following:

- Immediately rinse fuel off your skin with soap and water.
- If fuel comes into contact with your eyes, immediately rinse them thoroughly with clean water. Seek medical attention immediately.
- If you swallow fuel, seek medical attention immediately. Do not induce vomiting.
- Change immediately out of clothing that has come into contact with fuel.

WARNING Risk of fire and explosion due to electrostatic charge

Electrostatic charge can ignite fuel vapour.

- Before you open the fuel filler cap or take hold of the pump nozzle, touch the metallic vehicle body.
- To avoid creating another electrostatic charge, do not get into the vehicle again during the refuelling process.

NOTE Damage caused by the wrong fuel

Vehicles with a petrol engine:

Even small amounts of the wrong fuel could result in damage to the fuel system, the engine and the emission control system.

- Only refuel using unleaded, sulphur-free petrol that conforms to European EN 228, or an equivalent specification.

Fuel of this specification may contain up to 10% ethanol. Your vehicle is suitable for use with E10 fuel.

Never refuel with one of the following fuels:

- diesel
- regular petrol with an octane number lower than 91 RON
- petrol with more than 10% ethanol by volume, e.g. E15, E20, E85, E100
- petrol with more than 3% methanol by volume, e.g. M15, M30
- petrol with additives containing metal

If you have accidentally refuelled with the wrong fuel:

- do not switch the ignition on.
- Consult a qualified specialist workshop.

! **NOTE** Do not use diesel to refuel vehicles with a petrol engine

If you have accidentally refuelled with the wrong fuel:

- do not switch the ignition on. Otherwise fuel can enter the engine.

  Even small amounts of the wrong fuel could result in damage to the fuel system and the engine. The repair costs are high.

▶ Consult a qualified specialist workshop.

▶ Have the fuel tank and fuel lines drained completely.

! **NOTE** Damage to the fuel system caused by overfilled fuel tanks

▶ Only fill the fuel tank until the pump nozzle switches off.

If you have added too much fuel because of a defective filling pump, for instance:

▶ Do not switch the ignition on.

▶ Consult a qualified specialist workshop.

! **NOTE** Fuel may spray out when you remove the fuel pump nozzle

▶ Only fill the fuel tank until the pump nozzle switches off.


Requirements:

- The vehicle is unlocked.

ⓘ Do not get into the vehicle again during the refuelling process. Otherwise, electrostatic charge could build up again.

Observe the notes on operating fluids and fuel.

The recommended octane number for your vehicle can be found on the information label in the fuel filler flap.

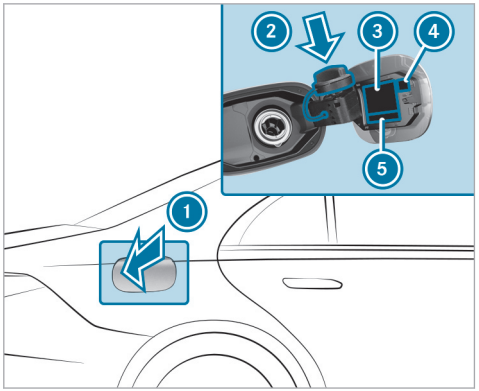

① Fuel filler flap
② Bracket for fuel filler cap
③ Tyre pressure table
④ QR code for rescue card
⑤ Fuel type

▶ Press the back area of fuel filler flap ①.

▶ Turn the fuel filler cap anti-clockwise and remove it.

- Insert the fuel filler cap from above into bracket (2).
- Completely insert the pump nozzle into the tank filler neck, hook in place and refuel.
- Only fill the fuel tank until the pump nozzle switches off.
- Replace the cap on the filler neck and turn clockwise until it engages audibly.
- Close fuel filler flap (1).

Parking

Parking the vehicle

WARNING Risk of accident and injury caused by an insufficiently secured vehicle rolling away

If the vehicle is not securely parked sufficiently, it can roll away in an uncontrolled way even at a slight downhill gradient.

- On uphill or downhill gradients, turn the front wheels so that the vehicle rolls towards the kerb if it starts moving.
- apply the parking brake.
- Switch the transmission to position P.

WARNING Risk of fire caused by hot exhaust system parts

Flammable materials such as leaves, grass or twigs may ignite.

- Park the vehicle so that no flammable material can come into contact with hot vehicle components.
- In particular, do not park on dry grassland or harvested grain fields.

WARNING Risk of accident and injury due to leaving children unattended in the vehicle

If children are left unattended in the vehicle, they could, in particular:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.


In addition, the children could also set the vehicle in motion by, for example:

- releasing the parking brake.
- changing the transmission position.
- starting the vehicle.

- Never leave children unattended in the vehicle.
- When leaving the vehicle, always take the key with you and lock the vehicle.
- Keep the vehicle key out of the reach of children.

NOTE Damage to the vehicle due to it rolling away

- Always secure the vehicle against rolling away.

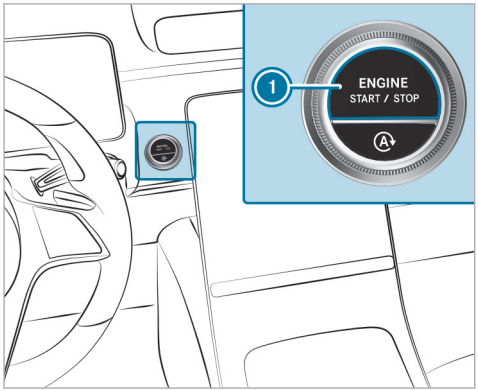

- Bring the vehicle to a standstill by pressing the brake pedal.
- On gradients, turn the front wheels so that the vehicle will roll towards the kerb if it starts moving.
- Apply the electric parking brake.
- Engage transmission position P in a stationary vehicle with the brake pedal applied (→ page 207).
- Switch off the engine and the ignition by pressing the 1 button.
- Release the service brake slowly.
- Get out of the vehicle and lock it.

ⓘ When you park the vehicle, you can still operate the side windows and the panoramic sliding sunroof for approximately four minutes if the driver's door is closed.

Garage door opener

Programming buttons for the garage door opener

⚠ **DANGER** Risk of death caused by exhaust gases

Combustion engines emit poisonous exhaust gases such as carbon monoxide. Inhaling these exhaust gases is hazardous to health and leads to poisoning.

- Never leave the engine or, if present, the auxiliary heating running in an enclosed space without sufficient ventilation.

⚠ **WARNING** Risk of injury when opening or closing a door with the garage door opener


When you operate or program the door with the integrated garage door opener, persons in the range of movement of the door may become trapped or be struck by the door.

- Always make sure that nobody is within the range of movement of the door.

Requirements:

- The vehicle has been parked outside the garage or outside the range of movement of the door.
- The engine is switched off.
- The ignition is switched on.

ⓘ The garage door opener function is always available when the ignition is switched on.

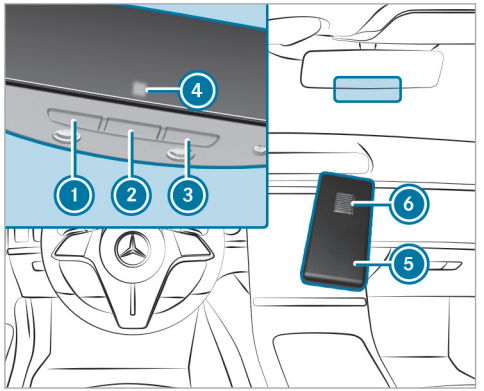

- ▶ Press and hold button 1, 2 or 3 that you wish to program.
  Indicator lamp 4 flashes yellow.

ⓘ It can take up to 20 seconds before the indicator lamp flashes yellow.

- ▶ Release the previously pressed button.
  Indicator lamp 4 continues to flash yellow.
- ▶ Point remote control 5 from a distance of 1 cm to 8 cm towards button 1, 2 or 3.
- ▶ Press and hold button 6 of remote control 5 until one of the following signals appears:
  - Indicator lamp 4 lights up green continuously. Programming is complete.
  - Indicator lamp 4 flashes green. Programming was successful. Additionally, synchronisation of the rolling code with the door system must also be carried out.
- ▶ If indicator lamp 4 does not light up or flash green: repeat the procedure.
- ▶ Release all of the buttons.

ⓘ The remote control for the door drive is not included in the scope of delivery of the garage door opener.

Synchronising the rolling code

Requirements:

- The door system uses a rolling code.
- The vehicle must be within range of the garage door or door drive.
- The vehicle as well as persons and objects are located outside the range of movement of the door.

- ▶ Press the programming button on the door drive unit.
  Initiate the next step within approximately 30 seconds.
- ▶ Press previously programmed button 1, 2 or 3 repeatedly until the door closes.
  When the door closes, programming is completed.

ⓘ Please also read the operating instructions for the door drive.

Troubleshooting when programming the remote control

- ▶ Check if the transmitter frequency of remote control 5 is supported.
- ▶ Replace the batteries in remote control 5.
- ▶ Hold remote control 5 at various angles from a distance of 1 cm to 8 cm front of the inside rearview mirror. You should test every position for at least 25 seconds before trying another position.

- ▶ Hold remote control (5) at the same angles at various distances in front of the inside rear view mirror. You should test every position for at least 25 seconds before trying another position.
- ▶ On remote controls that transmit only for a limited period, press button (6) on remote control (5) again before transmission ends.
- ▶ Align the aerial line of the door opener unit with the remote control.

ⓘ Support and additional information on programming:

- On the HomeLink® Hotline on (0) 08000 466 354 65 or +49 (0) 6838 907-277
- On the Internet at https://www.homelink.com

Opening or closing the garage door

Requirements:

- The corresponding button is programmed to operate the door.

- ▶ Press and hold buttons (1), (2) or (3) until the door opens or closes.
- ▶ If indicator lamp (4) flashes yellow after approximately 20 seconds: press and hold the previously pressed button again until the door opens or closes.

Clearing the garage door opener memory

- ▶ Press and hold buttons (1) and (3). Indicator lamp (4) lights up yellow.
- ▶ If indicator lamp (4) flashes green: release buttons (1) and (3). The entire memory has been deleted.

Electric parking brake

Function of the electric parking brake (applying automatically)

⚠ **WARNING** Risk of accident and injury due to leaving children unattended in the vehicle

If children are left unattended in the vehicle, they could, in particular:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

In addition, the children could also set the vehicle in motion by, for example:

- releasing the parking brake.
- changing the transmission position.
- starting the vehicle.

- ▶ Never leave children unattended in the vehicle.

- When leaving the vehicle, always take the key with you and lock the vehicle.
- Keep the vehicle key out of the reach of children.

The electric parking brake is applied if the transmission is in position P and one of the following conditions is fulfilled:

- The engine is switched off.
- The seat belt tongue is not inserted in the seat belt buckle of the driver's seat and the driver's door is opened.

ⓘ To prevent application: pull the handle of the electric parking brake (→ page 217).

In the following situations, the electric parking brake is also applied:

- Active Distance Assist DISTRONIC is bringing the vehicle to a standstill.
- The HOLD function is keeping the vehicle stationary.
- Active Parking Assist is keeping the vehicle stationary.

This is the case if one of the following conditions is also fulfilled:

- The engine is switched off.
- The seat belt tongue is not inserted in the seat belt buckle of the driver's seat and the driver's door is opened.
- There is a system malfunction.
- The power supply is insufficient.
- The vehicle is stationary for a lengthy period.

When the electric parking brake is applied, the red Ⓟ indicator lamp lights up in the driver's display.

The electric parking brake is not automatically applied if the engine is switched off by the ECO start/stop function.

Electric parking brake function (releasing automatically)

The electric parking brake is released when the following conditions are fulfilled:

- The driver's door is closed.
- The engine is running.
- The transmission is in position D or R and you depress the accelerator pedal or you shift from transmission position P to D or R when on level ground with the driver's door closed.
- If the transmission is in position R, the boot lid must be closed.
- The seat belt tongue is inserted into the seat belt buckle of the driver's seat.


  If the seat belt tongue is not inserted into the seat belt buckle of the driver's seat, one of the following conditions must be fulfilled:

  - You shift from transmission position P.
  - You have previously driven at speeds greater than 3 km/h.

When the electric parking brake is released, the red Ⓟ indicator lamp in the driver's display goes out.

Applying/releasing the electric parking brake manually

Applying

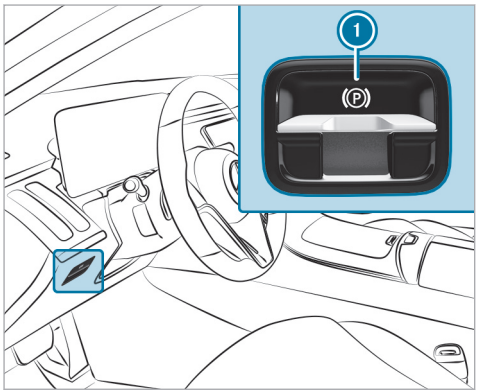

- Push handle 1.
  The red Ⓟ indicator lamp lights up in the driver's display.

ⓘ The electric parking brake is only securely applied if the indicator lamp is lit continuously.

Releasing

- Switch on the ignition.
- Pull handle 1.
  The red Ⓟ indicator lamp in the driver display goes out.

Emergency braking

- Press and hold handle 1.
  As long as the vehicle is driving, the Release parking brake message is displayed and the red Ⓟ indicator lamp flashes.

  When the vehicle has been braked to a standstill, the electric parking brake is applied. The red Ⓟ indicator lamp lights up in the driver's display.

Information on collision detection on a parked vehicle

If a collision is detected when the tow-away protection is primed on a locked vehicle, you will receive a notification in the multimedia system when you switch on the ignition.

You will receive information about the following points:

- The area of the vehicle that may have been damaged.
- The force of the impact.

The following situations can lead to inadvertent activation:

- The parked vehicle is moved, e.g. in a two-storey garage.

ⓘ Deactivate tow-away protection in order to prevent inadvertent activation. If you deactivate tow-away protection, collision detection will also be deactivated.
You can permanently deactivate collision detection via the multimedia system (→ page 218).

System limits

Detection may be restricted in the following situations:

- the vehicle is damaged without impact, e.g. if an outside mirror is torn off or the paint is damaged by a key
- an impact occurs at low speed
- the electric parking brake is not applied

Setting collision detection on a parked vehicle

Multimedia system:

→ ⌂ ▸▸ Settings ▸▸ Vehicle ▸▸ Opening/closing ▸▸ Vehicle protection

▶ Activate or deactivate the function under Collision detection.

ⓘ A maximum of three incidents can be registered. Up to 15 photos are taken for every incident. In the event of another incident, the photos of the first incident will be overwritten if they have not been deleted already.

Activating or deactivating the collision photos function

Please note possible legal restrictions in some countries regarding automatic recording of the vehicle surroundings.

▶ Activate or deactivate Collision photos.

Transferring the collision photos with the Mercedes me App

▶ Select Upload collision photos.

▶ Scan the QR code on the central display with the Mercedes me App.
The encrypted collision photos will then be uploaded to Mercedes me.

ⓘ Any device that can scan QR codes can be used to view the collision photos in the Mercedes me App.

Copying the collision photos to a USB flash drive

▶ Connect a USB flash drive .

▶ Select Manage collision photos.

▶ Select Copy (USB).
All collision photos are copied to the USB flash drive.

ⓘ To ensure secure operation, only use FAT32 or exFAT formatted USB storage devices.

Deleting collision photos

▶ Select Manage collision photos.

▶ Select Delete.
All collision photos will be deleted.

Notes on parking up the vehicle

If you leave the vehicle parked up for longer than six weeks, it may suffer damage through disuse.

The 12 V battery may also be impaired or damaged by heavy discharging.

ⓘ Further information can be obtained at a qualified specialist workshop.

Standby mode (extension of the starter battery's period out of use)

Standby mode function

ⓘ This function is not available for all models.

If standby mode is activated, energy loss will be minimised during extended periods of non-operation.

Standby mode is characterised by the following:

- The starter battery is preserved.
- The maximum non-operational time appears in the driver's display.
- The connection to online services is interrupted.

If the following conditions are fulfilled, standby mode can be activated or deactivated using the multimedia system:

- The engine is switched off.
- The ignition is switched on.

Exceeding the vehicle's displayed non-operational time may cause inconvenience; i.e. it cannot be guaranteed that the starter battery will reliably start the engine.

Charge the starter battery in the following situations:

- The vehicle's non-operational time must be extended.
- The starter battery charge level is insufficient for standby mode.

ⓘ Standby mode is automatically deactivated when the ignition is switched on.

Activating/deactivating standby mode (parking up the vehicle)

Requirements:

- The engine is switched off.

Multimedia system:

→ ⌂ ▸▸ Settings ▸▸ Vehicle ▸▸ Opening/closing

▶ Activate or deactivate Standby mode.

Driving and driving safety systems


Driving systems and your responsibility


Your vehicle is equipped with driving systems which assist you in driving, parking and manoeuvring the vehicle. The driving systems are only aids. They are not a substitute for your attention to the surroundings and do not relieve you of your responsibility pertaining to road traffic law. The driver is always responsible for maintaining a safe distance to the vehicle in front, for vehicle speed, for braking in good time and for staying in lane. Pay attention to the traffic conditions at all times and intervene when necessary. Be aware of the limitations regarding the safe use of these systems.

Driving systems can neither reduce the risk of accident if you fail to adapt your driving style nor override the laws of physics. They cannot always take into account road, weather or traffic conditions.

Information on vehicle sensors and cameras

Some driving and driving safety systems use cameras as well as radar, lidar or ultrasonic sensors to monitor the area in front of, behind or next to the vehicle.

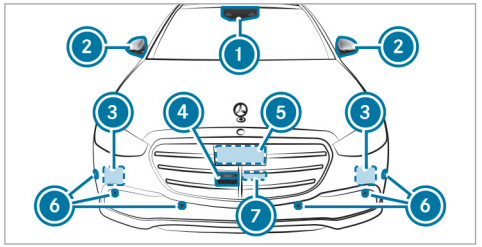

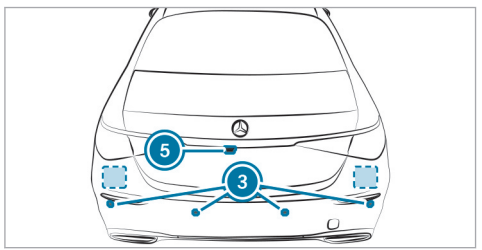

ⓘ The radar and lidar sensors are integrated behind the bumpers and/or behind the Mercedes star.

1 Multifunction camera

2 Cameras in the outside mirrors

3 Ultrasonic sensors

4 Front camera

5 Reversing camera

WARNING Risk of accident due to restricted detection performance of vehicle sensors and cameras

If the area around vehicle sensors or cameras is covered, damaged or dirty, certain driving and safety systems cannot function correctly. There is a risk of an accident.

- ▶ Keep the area around vehicle sensors or cameras clear of any obstructions and clean.
- ▶ Have damage to the bumper, radiator grille or stone chipping in the area of the front and rear windows repaired at a qualified specialist workshop.

Particularly, keep the areas around the sensors and cameras free of dirt, ice or slush (→ page 344). The sensors and cameras must not be covered and the detection ranges around them must be kept free. Do not attach additional license plate brackets, advertisements, stickers, foils or foils to protect against stone chippings in the detection range of the sensors and cameras. Make sure that there are no overhanging loads protruding into the detection range.

If there is damage to a bumper or the radiator grille, or after an impact, have the function of the sensors checked at a qualified specialist workshop. Have damage or stone chipping in the area of the cameras on the front and rear windows repaired at a qualified specialist workshop.

Overview of driving systems and driving safety systems

- ABS (**A**nti-lock **B**raking **S**ystem) (→ page 221)
- BAS (**B**rake **A**ssist **S**ystem) (→ page 221)
- ESP® (**E**lectronic **S**tability **P**rogram) (→ page 222)
- ESP® Crosswind Assist (→ page 223)
- ESP® trailer stabilisation

- EBD (**E**lectronic **B**rakeforce **D**istribution) (→ page 223)
- STEER CONTROL (→ page 223)
- HOLD function (→ page 224)
- Hill Start Assist (→ page 225)
- Adaptive Brake Lights (→ page 225)
- ATTENTION ASSIST (→ page 225)
- Limiter (→ page 227)
- Traffic Sign Assist (→ page 246)
- Traffic light view (→ page 250)
- AIRMATIC (→ page 256)

Driving Assistance package

- Active Distance Assist DISTRONIC (→ page 228)
- Active Speed Limit Assist (country-dependent) (→ page 233)
- Route-based speed adaptation (country-dependent) (→ page 234)
- Active Brake Assist (→ page 242)
- Active Steering Assist (country-dependent) (→ page 236)
- Active Emergency Stop Assist (country-dependent) (→ page 238)
- Active Lane Change Assist (country-dependent) (→ page 239)
- Active Stop-and-Go Assist (country-dependent) (→ page 236)
- Active Blind Spot Assist with exit warning (→ page 250)
- Active Lane Keeping Assist (→ page 254)
- PRE-SAFE® Impulse Side (→ page 58)

Parking Package

- 360° Camera (→ page 258)
- Parking Assist PARKTRONIC (→ page 263)
- Active Parking Assist (→ page 266)
- Remote Parking Assist (→ page 270)

Function of ABS

The Anti-lock Brake System (ABS) regulates the brake pressure in critical driving situations:

- During braking, e.g. at full brake application or insufficient tyre traction, the wheels are prevented from locking.
- Vehicle steerability while braking is ensured.

If ABS intervenes when braking, you will feel a pulsing in the brake pedal. The pulsating brake pedal can be an indication of hazardous road conditions and can serve as a reminder to take extra care while driving.

Function of BAS

The Brake Assist System (BAS) supports your emergency braking situation with additional brake force.

If you depress the brake pedal quickly, BAS is activated:

- BAS automatically boosts the brake pressure.
- BAS can shorten the braking distance.
- ABS prevents the wheels from locking.

The brakes will function as usual once you release the brake pedal. BAS is deactivated.

Function of ESP® (Electronic Stability Program)

WARNING Risk of skidding if ESP® is deactivated

If you deactivate ESP®, ESP® cannot carry out vehicle stabilisation.

▶ ESP® should only be deactivated in the following situations.

ESP® can monitor and improve driving stability and traction in the following situations, within physical limits:

- When pulling away on wet or slippery carriageways.
- When braking.

If the vehicle deviates from the direction desired by the driver, ESP® can stabilise the vehicle by intervening in the following ways:

- One or more wheels are braked.
- The engine output is adapted according to the situation.

When ESP® is deactivated, the OFF warning lamp lights up continuously:

- Driving stability will no longer be improved.
- The drive wheels could spin.
- ETS/4ETS traction control is still active.

ⓘ When ESP® is deactivated, you are still assisted by ESP® when braking.

When the warning lamp flashes, one or several wheels has reached its grip limit:

- Adapt your driving style to suit the current road and weather conditions.
- Do not deactivate ESP®.
- Only depress the accelerator pedal as far as is necessary when pulling away.

Deactivate ESP® in the following situations to improve traction:

- When using snow chains.
- In deep snow.
- On sand or gravel.

ⓘ Spinning the wheels results in a cutting action, which enhances traction.

If the ESP® warning lamp lights up continuously, ESP® is not available due to a malfunction.

Observe the following information:

- Warning and indicator lamps (→ page 523)
- Display messages (→ page 471)

ETS/4ETS (Electronic Traction System)

ETS/4ETS traction control is part of ESP® and makes it possible to pull away and accelerate on a slippery carriageway.

ETS/4ETS can improve the vehicle's traction by intervening in the following ways:

- The drive wheels are braked individually if they spin.
- More drive torque is transferred to the wheel or wheels with traction.

Influence of drive programs on ESP®

The drive programs enable ESP® to adapt to different weather and road conditions as well as the

driver's preferred driving style. Depending on the selected drive program, the appropriate ESP® mode will be activated. You can select the drive programs using the DYNAMIC SELECT switch (→ page 204).

Function of ESP® Crosswind Assist

ESP® Crosswind Assist detects sudden gusts of side wind and helps the driver to keep the vehicle in the lane:

- ESP® Crosswind Assist is active at vehicle speeds between approx. 75 km/h and 200 km/h when driving straight ahead or cornering slightly.
- The vehicle is stabilised by means of individual brake application on one side.

Activating/deactivating ESP® (Electronic Stability Program)

Multimedia system:



ⓘ ESP® can only be activated/deactivated using quick access when at least one other function is available in quick access. ESP® can otherwise be found in the Assistance menu.

▶ Select ESP.

▶ Select On or  Off.

ESP® is deactivated if the  ESP® OFF warning lamp lights up continuously in the instrument cluster.

Observe any information on warning lamps and display messages which may be shown in the instrument cluster.

Function of EBD

Electronic Breakforce Distribution (EBD) is characterised by the following:

- Monitoring and regulating the brake pressure on the rear wheels.
- Improved driving stability when braking, especially on bends.

Function of STEER CONTROL

STEER CONTROL assists you by transmitting a noticeable steering force to the steering wheel in the direction required for vehicle stabilisation.

This steering recommendation is given in the following situations:

- both right wheels or both left wheels are on a wet or slippery road surface when you brake
- the vehicle starts to skid

System limits

STEER CONTROL may be impaired or may not function in the following situations:

- ESP® is deactivated.

- ESP® is malfunctioning.
- The steering is malfunctioning.

If ESP® is malfunctioning, you will be assisted further by the electric power steering.

HOLD function

HOLD function

The HOLD function holds the vehicle at a standstill without requiring you to depress the brake pedal, e.g. while waiting in traffic.

The HOLD function is only an aid. The responsibility for the vehicle safely standing still remains with the driver.

System limits

The HOLD function is only intended to provide assistance when driving and is not a sufficient means of safeguarding the vehicle against rolling away when stationary.

- The incline must not be greater than 30%.

Activating/deactivating the HOLD function

⚠ **WARNING** Risk of an accident due to the HOLD function being active when you leave the vehicle

If the vehicle is only braked with the HOLD function it could, in the following situations, roll away:

- If there is a malfunction in the system or in the power supply.
- If the HOLD function is deactivated by depressing the accelerator pedal or brake pedal, e.g. by a vehicle occupant.

▶ Always secure the vehicle against rolling away before you leave it.

Requirements:

- The vehicle is stationary.
- The driver's door is closed or the seat belt on the driver's side is fastened.
- The engine is running or has been automatically switched off by the ECO start/stop function.
- The electric parking brake is released.
- Active Distance Assist DISTRONIC is deactivated.
- The transmission is in position D, R or N.

Activating the HOLD function

▶ Depress the brake pedal, and after a short time quickly depress further until the HOLD display appears in the driver's display.

▶ Release the brake pedal.

Deactivating the HOLD function

▶ Depress the accelerator pedal to pull away.

or

▶ Depress the brake pedal until the HOLD display disappears from the driver's display.

The HOLD function is deactivated in the following situations:

- Active Distance Assist DISTRONIC is activated.
- The transmission is shifted to position P.
- The vehicle is secured with the electric parking brake.

In the following situations, the vehicle is held by transmission position P and/or by the electric parking brake:

- The seat belt is unfastened and the driver's door is opened.
- The vehicle is switched off.
- There is a malfunction in the system or the power supply is insufficient.

In addition, the Brake immediately message may appear in the driver's display and a horn tone may sound at regular intervals.

- ▶ Immediately depress the brake pedal firmly until the warning message disappears. The HOLD function is deactivated.
- ▶ Additionally secure the vehicle against rolling away.

Function of Hill Start Assist

Hill Start Assist holds the vehicle for a short time when pulling away on a hill under the following conditions:

- The transmission is in position D or R.
- The electric parking brake is released.

This gives you enough time to move your foot from the brake pedal to the accelerator pedal and depress it before the vehicle begins to roll away.

⚠ **WARNING** Risk of accident and injury due to the vehicle rolling away

After a short time, Hill Start Assist no longer holds the vehicle.

- ▶ Swiftly move your foot from the brake pedal to the accelerator pedal. Do not leave the vehicle when it is being held by Hill Start Assist.

Function of Adaptive Brake Lights

Adaptive Brake Lights warn following traffic in an emergency braking situation with the following actions:

- By flashing the brake lamps
- By activating the hazard warning lights

If the vehicle is braked sharply from speeds above 50 km/h, the brake lamps flash rapidly. This provides traffic travelling behind you with an even more noticeable warning.

If the vehicle is travelling at speeds of more than 70 km/h at the beginning of the brake application, the hazard warning lights switch on once the vehicle is stationary. When you pull away again, the hazard warning lights will switch off automatically at approximately 10 km/h. You can also switch off the hazard warning lights using the hazard warning button.

ATTENTION ASSIST

Function of ATTENTION ASSIST with microsleep detection

ⓘ The microsleep detection subfunction is only available in combination with the driver camera.

ATTENTION ASSIST assists you on long, monotonous journeys, e.g. on motorways and trunk roads. If indicators of fatigue or increasing lapses in concentration on the part of the driver are detected, the system suggests taking a break.

ATTENTION ASSIST is only an aid. It cannot always detect fatigue or lapses in concentration in time. The system is not a substitute for a well-rested and attentive driver. On long journeys, take regular breaks in good time that allow for adequate recuperation.

You can choose between two settings:

- **Standard:** normal system sensitivity.
- **Sensitive:** increased system sensitivity: the driver is warned earlier and the attention level detected by the system is adapted accordingly.

If drowsiness or increasing lapses in concentration are detected, the ATTENTION ASSIST: Take a break! warning appears in the driver display. You can acknowledge the message and take a break where necessary. If you do not take a break and ATTENTION ASSIST continues to detect increasing lapses in concentration, you will be warned again after a minimum of 15 minutes.



The following information is displayed in the driver display:

- The length of the journey since the last break
- The attention level determined by ATTENTION ASSIST:
  - The more segments 2 of the circle displayed, the higher the detected attention level.
  - Fewer segments 2 are displayed in the circle as the attention level decreases.
- Microsleep detection 1 status:
  - Deactivated: display 1 is hidden.
  - Activated but not operational: display 1 is grey.
  - Activated and operational: display 1 is green.

If ATTENTION ASSIST is unable to calculate the attention level and cannot issue a warning, the System suspended message appears.

If the system, which uses the driver camera, detects indicators of microsleep, the ATTENTION ASSIST Microsleep Take a break! warning message appears in the driver display and a warning tone sounds simultaneously. This warning message must be confirmed by Touch Control. It is recommended that you take a break immediately.

If a warning is given in the driver display, the multimedia system offers to search for a rest area. You can select a rest area and start navigation to this rest area.

ATTENTION ASSIST with microsleep detection is activated automatically when the engine is restarted. The last selected sensitivity level remains stored.

System limits
ATTENTION ASSIST is active in the 60 km/h to 200 km/h speed range.

The microsleep detection function is available at a speed of 20 km/h and above.

Particularly in the following situations, ATTENTION ASSIST only functions in a restricted manner and warnings may be delayed or not occur:

- If you have been driving for less than approximately 30 minutes.
- If the road condition is poor (uneven road surface or potholes).
- If there is a strong side wind.
- If you adopt a sporty driving style (high cornering speeds or high rates of acceleration).
- If the Steering Assist function of Active Distance Assist DISTRONIC is active.
- If the clock is set to the incorrect time.
- If you change lanes and vary your speed frequently In active driving situations.

Microsleep detection also does not function when the driver camera cannot detect the eyes of the driver, as a result of the following factors, for example:

- The driver's eyes are covered due to the steering column position, for example.
- Poor lighting conditions.
- Some types of spectacles or sunglasses.
- The driver's line of vision is outside the driver camera's field of vision.

Also observe any information regarding display messages that can be displayed in the driver display.

The tiredness and alertness assessment of ATTENTION ASSIST with microsleep detection is reset and restarted when continuing the journey in the following situations:

- If you switch off the engine.
- If you unfasten your seat belt and open the driver's door (e.g. to change drivers or take a break).

Setting ATTENTION ASSIST

Multimedia system:
Settings » Assistance » Assistance » ATTENTION ASSIST

Setting the sensitivity

- Tap the current setting.
- Select Standard or Sensitive.

Activating/deactivating the microsleep warning

- Activate/deactivate Microsleep warning.

Limiter

Function of the limiter

The limiter restricts the speed of the vehicle. To reduce the speed to the set speed, the limiter applies the brakes automatically.

You can limit the speed as follows:

- **Variable:** for a short-term speed restriction, e.g. in built-up areas
- **Permanent:** for a longer-term speed restriction, e.g. in winter tyre mode

The variable limiter is operated using the corresponding steering wheel buttons (⟶ page 231).

You can store any speed above 20 km/h up to the maximum design speed or up to the set winter tyre limit. You can also perform settings while the vehicle is stationary if the vehicle has been started.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognise dangers (⟶ page 219).

Messages in the driver display

- LIM (grey): variable limiter is selected but not yet activated.
- LIM (flashes grey): variable limiter is temporarily passive.
- LIM (green): variable limiter is activated.

A stored speed appears under the LIM display and is indicated in the speedometer.

When the driving speed is greater than the stored speed, the LIM display flashes.

Kickdown

If you depress the accelerator pedal beyond the pressure point (kickdown), the variable limiter switches to passive mode. The LIM passive message appears on the driver display.

After completion of kickdown, the variable limiter is activated again in the following situations:

- If the vehicle speed drops below the stored speed.
- If the stored speed is called up.
- If you store a new speed.

Information on the permanent limiter

If the vehicle should never exceed a specific speed (e.g. for driving in winter tyre mode), you can set this speed with the permanent limiter.

You do this by limiting the speed between 160 km/h and 240 km/h in the multimedia system (⟶ page 228).

Shortly before the set speed is reached, it is shown in the driver display. When you confirm the message, display messages no longer appear until you switch off the vehicle. The speed will only be displayed again once the vehicle has been restarted or if the set speed is changed.

The permanent limiter does not switch to passive mode even during kickdown and the driven speed remains below the set speed.

Setting the limit speed for winter tyres

Multimedia system:

↪ ⌂ ▸▸ Settings ▸▸ Vehicle ▸▸ Driving

▶ Activate or deactivate Winter tyre limit.

Setting a speed

▶ Select ⚙ next to Winter tyre limit.

▶ Select a speed.

Active Distance Assist DISTRONIC

Function of Active Distance Assist DISTRONIC

Active Distance Assist DISTRONIC maintains the set speed on free-flowing roads. If vehicles in front are detected, the set distance is maintained, if necessary, until the vehicle comes to a halt. The vehicle accelerates or brakes depending on the distance to the vehicle in front and the set speed.

The speed and distance to the vehicle in front are set and saved using the steering wheel.

Active Distance Assist DISTRONIC is available in the 20 km/h to 210 - km/h speed range.

Other features of Active Distance Assist DISTRONIC:


- Adjusts the driving style depending on the selected drive program (fuel-saving, comfortable or dynamic) (→ page 203)
- Initiates acceleration to the stored speed if the turn signal indicator is switched on to change to the overtaking lane
- Reacts to stationary vehicles detected in urban speed ranges (except bicycles and motorcycles)
- Takes one-sided overtaking restrictions into account on motorways or on multi-lane roads with separate carriageways (country-dependent)

Additional function available in certain countries:
if Active Distance Assist DISTRONIC has braked the vehicle to a standstill, it can automatically follow the vehicle in front when driving off again within 30 seconds. If a critical situation is detected in the surrounding area when driving off, such as a person in the vehicle path, a visual and acoustic warning is given indicating that the driver must now take control of the vehicle. The vehicle is not accelerated any further.

Active Distance Assist DISTRONIC is ready to pull away when the green vehicle symbol flashes cyclically.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognise dangers (→ page 219).

Driver display in the Assistance menu

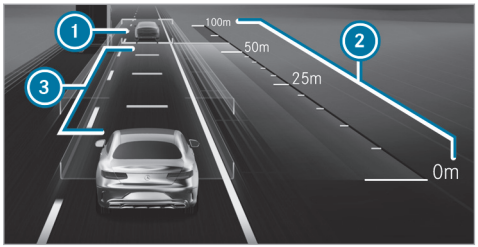

1 Vehicle in front
2 Distance indicator
3 Set specified distance

Vehicle detected in front 1 is highlighted in green. It may also be in the lane to the left of your vehicle in situations where it is not permitted to overtake on the right, for example on motorways.

Permanent status display

- (white): Active Distance Assist DISTRONIC selected, specified distance set

- (green): Active Distance Assist DISTRONIC active, specified distance set and vehicle detected

The stored speed is shown under the permanent status display and highlighted on the speedometer. When Active Distance Assist DISTRONIC is passive, the status display is greyed out.

If the speed of the vehicle in front or the speed adjustment is less than the stored speed due to the route event ahead, the segments in the speedometer light up.

When the set specified distance is increased or decreased, the display briefly appears under the vehicle in the permanent status display.

ⓘ On motorways or high-speed major roads, the green vehicle symbol is displayed cyclically when the vehicle is ready to pull away.

ⓘ If you depress the accelerator pedal beyond the setting of the Active Distance Assist DISTRONIC, the system is switched to passive mode. The suspended message appears on the driver display.

System limits

The system may be impaired or may not function in the following situations, for example:

- In snow, rain, fog, heavy spray, if there is glare, in direct sunlight or in greatly varying light conditions.
- The windscreen in the area of the camera is dirty, misted up, damaged or covered.
- If the radar sensors are dirty or covered.
- In multi-storey car parks or on roads with steep uphill or downhill gradients.
- If there are narrow vehicles in front, such as bicycles or motorcycles.

In addition, on slippery roads, braking or accelerating can cause one or several wheels to lose traction and the vehicle could then skid.

Do not use Active Distance Assist DISTRONIC in these situations.

⚠ WARNING Risk of accident from acceleration or braking by Active Distance Assist DISTRONIC

Active Distance Assist DISTRONIC may accelerate or brake in the following cases, for example:

- If the vehicle pulls away using Active Distance Assist DISTRONIC.
- If the stored speed is called up and is considerably faster or slower than the currently driven speed.
- If Active Distance Assist DISTRONIC no longer detects a vehicle in front or does not react to relevant objects.

▶ Always carefully observe the traffic conditions and be ready to brake at all times.

▶ Take into account the traffic situation before calling up the stored speed.

WARNING Risk of accident due to insufficient deceleration by Active Distance Assist DISTRONIC

Active Distance Assist DISTRONIC brakes your vehicle with up to 50% of the possible deceleration. If this deceleration is not sufficient, Active Distance Assist DISTRONIC alerts you with a visual and acoustic warning.

- ▶ Adjust your speed and maintain a suitable distance from the vehicle in front.
- ▶ Brake the vehicle yourself and/or take evasive action.

WARNING Risk of accident if detection function of Active Distance Assist DISTRONIC is impaired

Active Distance Assist DISTRONIC does not react or has a limited reaction:

- when driving on a different lane or when changing lanes
- to pedestrians, animals, bicycles or stationary vehicles, or unexpected obstacles
- to complex traffic conditions
- to oncoming vehicles and crossing traffic

As a result, Active Distance Assist DISTRONIC may neither give warnings nor intervene in such situations.

- ▶ Always observe the traffic conditions carefully and react accordingly.

Operating Active Distance Assist DISTRONIC and the variable limiter


Requirements:

Active Distance Assist DISTRONIC:

- The electric parking brake is released.
- ESP® is activated and is not intervening.
- The transmission is in position D.
- All the doors are closed.
- Check of the radar sensor system has been successfully completed.
- Snow chain mode is not active (→ page 370).

Variable limiter

- The variable limiter is selected.

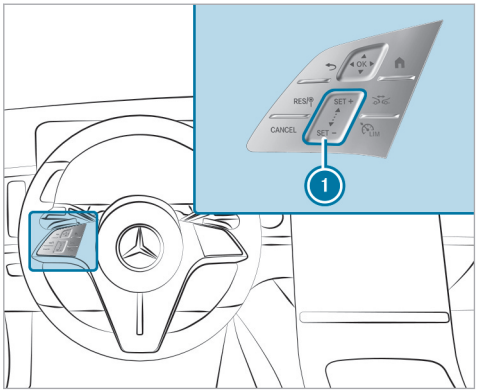

RES/ Adopts the stored/detected speed

CANCEL Deactivates the variable limiter/Active Distance Assist DISTRONIC

1 Increases/decreases the speed

Increases/decreases the specified distance

Switches between the limiter and Active Distance Assist DISTRONIC

- **To operate Active Distance Assist DISTRONIC or the variable limiter:** press the respective button with only one finger or swipe on the control panel.

Switching between the limiter and Active Distance Assist DISTRONIC

- Press .

Activating the variable limiter or Active Distance Assist DISTRONIC

- **To activate without a stored speed:** press SET/+, SET/– or RES. **Active Distance Assist DISTRONIC:** remove your foot from the accelerator pedal.
  The current vehicle speed is stored and maintained (Active Distance Assist DISTRONIC) or limited (variable limiter) by the vehicle.

or

- **To activate with a stored speed:** press RES. **Active Distance Assist DISTRONIC:** remove your foot from the accelerator pedal.
  The last stored speed is called up and the vehicle maintains this speed (Active Distance Assist DISTRONIC) or does not exceed it (variable limiter).
  If the stored speed has been deleted, the current vehicle speed is stored.

ⓘ When you switch off the vehicle, the stored speed is deleted. When you activate Active Distance Assist DISTRONIC, the last speed stored for the variable limiter is deleted.

Increasing or reducing the speed

- To increase the stored speed: swipe upwards from the bottom of control panel (1).
  - The stored speed is increased by 1 km/h.
- To decrease the stored speed: swipe downwards from the top of control panel (1).
  - The stored speed is decreased by 1 km/h.

or

- Briefly press SET/+ or SET/– on the lower section of control panel (1).
  The stored speed is increased or reduced by 10 km/h.

or

- Press and hold SET/+ on the upper section or SET/– on the lower section of control panel (1).
  The stored speed is increased or reduced in increments of 10 km/h.

or

- Accelerate the vehicle to the desired speed.
- Press SET/+ on the upper section of control panel (1).

Adopting the limit speed shown in the driver display

- Activate Active Distance Assist DISTRONIC or the variable limiter.
- Press RES.
  The limit speed displayed in the driver display is adopted as the stored speed. The vehicle adapts its speed to that of the vehicle in front,

but only up to the stored speed, or limits its speed accordingly.

Pulling away with Active Distance Assist DISTRONIC

- Activate Active Distance Assist DISTRONIC and remove your foot from the brake pedal.
- Press RES/↑.

or

- Depress the accelerator pedal briefly and firmly.
  The functions of Active Distance Assist DISTRONIC continue to be carried out.

Reducing or increasing the specified distance from the vehicle in front

- Press the distance button.
  The display appears under the status display.

  The specified distance is reduced by one level.

  If the lowest level is already selected, the selection jumps to the highest level.

Deactivating Active Distance Assist DISTRONIC or the variable limiter

WARNING Risk of an accident due to Active Distance Assist DISTRONIC being active when you leave the driver's seat

If you leave the driver's seat while the vehicle is being braked by Active Distance Assist DISTRONIC only, the vehicle can roll away.

- Always deactivate Active Distance Assist DISTRONIC and secure the vehicle to prevent it from rolling away before you leave the driver's seat.

- Press CANCEL.

ⓘ If you brake, deactivate ESP® or if ESP® intervenes, Active Distance Assist DISTRONIC is deactivated. The variable limiter is not deactivated.

Function of Active Speed Limit Assist

If speed limit change between 20 km/h and 130 km/h is detected and the automatic adoption of speed limits is active, it will be automatically adopted as the stored speed (→ page 235).

The driven speed is adjusted when the vehicle is level with the traffic sign at the latest. In the case of signs indicating entry into an urban area, the speed is adapted according to the speed permitted within the urban area. The speed limit display in the driver display is always updated when the vehicle is level with the traffic sign.

If you are driving on German motorways and there is no speed limit, the system uses the speed stored on an unlimited stretch of road as the recommended speed. If you do not alter the stored speed on an unlimited stretch of road, the recommended speed is 130 km/h.

If Active Distance Assist DISTRONIC has been put into passive mode by pressing the accelerator pedal, only speed limits which are higher than the set speed are adopted.

The maximum permissible speed does not take the road condition and current weather and traffic conditions into account. Adjust your speed accordingly, when necessary.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognise dangers (→ page 219).

System limits

The system limits of Traffic Sign Assist apply to the detection of traffic signs (→ page 246).

Speed limits below 20 km/h are not automatically adopted by the system as the stored speed. Temporary speed restrictions (e.g. for a certain time or due to weather conditions) cannot be properly detected by the system. The maximum permissible speed applying to a vehicle with a trailer is not detected by the system.

Adjust the speed in these situations.

⚠ **WARNING** Risk of accident due to Active Speed Limit Assist adapting the vehicle's speed

The speed adopted by Active Speed Limit Assist may be too high or incorrect in some individual cases, such as:

- at speed limits below 20 km/h
- in wet conditions or in fog
- when towing a trailer

▶ Ensure that the driven speed complies with traffic regulations.

▶ Adjust the driving speed to suit current traffic and weather conditions.

Function of route-based speed adaptation

When Active Distance Assist DISTRONIC is activated, the vehicle speed will be adapted accordingly to the route events ahead. Depending on the drive program selected, the vehicle negotiates a route event ahead in a fuel-saving, comfortable or dynamic manner. When the route event has been passed, the vehicle accelerates again to the stored speed. The set distance to the vehicle in front, vehicles detected ahead and speed restrictions ahead are taken into account.

Route-based speed adaptation can be activated in the multimedia system (→ page 235).

The following route events are taken into account:

- Bends
- Roundabouts
- T-junctions
- Turns and exits
- Traffic jams ahead (only with Live Traffic)

Also, the speed is reduced if the turn signal indicator to change lanes is switched on and one of the following situations is detected:

- Turning off at junctions
- Driving on slowing-down lanes
- Driving on lanes adjacent to slowing-down lanes

The driver is responsible for choosing the right speed and observing other road users. This applies in particular to junctions, roundabouts and traffic lights, as route-based speed adaptation does not brake the vehicle to a standstill.

If a corresponding route event is detected while route guidance is active, the first speed adjustment is carried out automatically. If the turn signal indicator is switched on, the selected route is confirmed and further speed adjustment is activated.

Speed adaptation is cancelled in the following cases:

- If the turn signal indicator is switched off before the route event and it is therefore

assumed that the route event is not relevant to the driver.

- If the driver depresses the accelerator or brake pedal during the process.

System limits

Route-based speed adaptation does not take right of way regulations into account. The driver is responsible for complying with road traffic regulations and driving at a suitable speed.

In difficult conditions, the speed selection made by the system may not always be suitable:

- unclear roads
- road narrowing
- varying maximum permissible speeds in individual lanes, for example at toll stations
- wet road surfaces, snow or ice

In these situations the driver must intervene accordingly.

⚠ WARNING Risk of accident in spite of route-based speed adaptation

Route-based speed adaptation can malfunction or be temporarily unavailable in the following situations:

- If the driver does not follow the calculated route
- If map data is not up-to-date or available
- In the event of roadworks
- In bad weather or road conditions
- If the accelerator pedal is depressed
- In the event of electronically displayed speed limitations

▶ Adapt the speed to the traffic situation.

Setting Active Distance Assist DISTRONIC driving styles

Requirements:

- Active Distance Assist DISTRONIC is activated.

Multimedia system:

↪ 🏠 ▸▸ Settings ▸▸ Assistance ▸▸ Driving ▸▸ Active Distance Assist

Selecting a driving style

▶ Select DYNAMIC SELECT based , Dynamic or Comfort.

Setting speed adaptation

▶ Select When cornering etc. or For limits. When these functions are active, the vehicle speed is adjusted according to a route event ahead or to speed limits detected by Traffic Sign Assist.

ⓘ When one of the following systems is active, the detected speed can be manually adopted as the speed limit:

- Active Distance Assist DISTRONIC
- Variable limiter

Further information about Active Distance Assist DISTRONIC (→ page 231).

ⓘ Further information on speed adaptation (→ page 234).

Function of Active Traffic Jam Assist

Active Traffic Jam Assist helps you when in traffic jams on multi-lane roads with separate carriageways by automatically pulling away within 60 seconds and with moderate steering manoeuvres. It orients itself using the vehicle in front and lane markings. Active Traffic Jam Assist automatically maintains a safe distance from the vehicle in front and vehicles cutting in.

Active Traffic Jam Assist requires you, as the driver, to keep your hands on the steering wheel at all times so that you are able to intervene at any time to correct the course of the vehicle and keep it in lane.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognise dangers (→ page 219).

Active Traffic Jam Assist activates automatically when all of the following conditions are met:

- You are in a traffic jam on a motorway or high-speed major road.
- Active Distance Assist DISTRONIC is activated and active (→ page 231).
- Active Steering Assist is activated and active (→ page 238).
- You are travelling no faster than 60 km/h.

When Active Traffic Jam Assist is active the  status display appears in the driver display.

System limits

The system limitations of Active Distance Assist DISTRONIC and Active Steering Assist apply to Active Traffic Jam Assist (→ page 236).

Active Steering Assist

Function of Active Steering Assist

Active Steering Assist is only available up to a speed of 210 km/h. The system helps you to stay in the centre of the lane by means of moderate steering interventions. Depending on the speed driven, Active Steering Assist uses the vehicles ahead and lane markings as a reference.

ⓘ Depending on the country, in the lower speed range Active Steering Assist can use the surrounding traffic as a reference. If necessary, Active Steering Assist can then also provide assistance when driving outside the centre of the lane.

If the detection of lane markings and vehicles ahead is impaired, Active Steering Assist switches to passive mode. The system provides no support in this case.

Permanent status display in the driver display

 **Grey:** activated and passive

 **Green:** activated and active

 **Red, flashing:** prompt to the driver to actively confirm or transition from active to passive status, system limit detected

ⓘ During the transition from active to passive status, the  symbol is shown as enlarged and flashing. Once the system is passive, the  symbol is shown as grey in the driver display.

Contact detection

The driver is required to keep their hands on the steering wheel at all times and be able to intervene at any time to correct the course of the vehicle and keep it in lane. The driver must expect a

change from active to passive mode or vice versa at any time.



If the system detects that the driver has not steered the vehicle for a considerable period of time or has removed their hands from the steering wheel, an optical warning is given first. Display message (1) appears in the driver display. If the driver still does not steer the vehicle, or gives no confirmation to the system, a warning tone sounds in addition to the visual warning message.

If the driver does not react to this warning for a considerable period, an emergency stop is initiated (→ page 238).

The warning is not issued or is stopped as soon as the system detects that the driver has touched the steering wheel.

Touch detection may be limited or inoperative in the following situations:

- The driver is wearing gloves.
- There is a steering wheel cover on the steering wheel.

If Active Steering Assist detects that a system limit has been reached, a visual warning is issued and a warning tone sounds.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognise dangers (→ page 219).

System limits

Active Steering Assist has a limited steering torque for lateral guidance. In some cases, the steering intervention is not sufficient to keep the vehicle in the lane.

The system may be impaired or may not function in the following instances:

- There is poor visibility, e.g. due to snow, rain, fog, heavy spray, greatly varying light conditions or strong shadows on the carriageway.
- There is glare, e.g. from oncoming traffic, direct sunlight or reflections.
- Insufficient road illumination.
- The windscreen is dirty, misted up, damaged or covered in the vicinity of the camera, e.g. by a sticker.
- No, or several, unclear lane markings are present for one lane, or the markings change quickly, for example, in a construction area or junctions.
- The lane markings are worn away, dark or covered up, e.g. by dirt or snow.
- If the distance to the vehicle in front is too short and thus the lane markings cannot be detected.
- The road is narrow and winding.
- There are obstacles on the lane or projecting out into the lane, such as object markers.

The system does not provide assistance in the following conditions:

- On very tight bends and when turning.
- When crossing junctions.
- At roundabouts or toll stations.
- When actively changing lane without switching on the turn signal indicator.
- When the tyre pressure is too low.

WARNING Risk of accident if Active Steering Assist unexpectedly stops functioning

If the system limits of Active Steering Assist are reached there is no guarantee that the system will remain active or will keep the vehicle in lane.

- Always keep your hands on the steering wheel and observe the traffic carefully.
- Always steer the vehicle paying attention to traffic conditions.

WARNING Risk of accident if Active Steering Assist unexpectedly intervenes

The detection of lane markings and objects may malfunction and cause unexpected steering interventions.

- Steer according to traffic conditions.

Activating/deactivating Active Steering Assist

Requirements:

- ESP® is activated, but is not intervening.
- Active Distance Assist DISTRONIC is activated.

Multimedia system:

↳ ⌂ » Settings » Assistance » Driving

- Select Act. Steering Asst.

Function of Active Emergency Stop Assist

Active Emergency Stop Assist uses touch sensors to monitor whether the driver holds the steering wheel and initiates an emergency stop if necessary.

If Active Steering Assist is deactivated, the accelerator and brake pedal are monitored as well as the steering wheel. A warning is issued when the steering wheel is not being held or when a pedal is not depressed, and the vehicle is in danger of leaving the lane.



If the system detects that the driver has not steered the vehicle for a considerable period of time or has removed their hands from the steering wheel, visual warning 1 is issued. If the driver still does not steer the vehicle, or gives no confir-

mation to the system, a warning tone sounds in addition to the visual warning message.

Also observe the instructions on the contact detection of Active Steering Assist (→ page 236).

Active Emergency Stop Assist issues the following warnings in order:

- Display message (1) appears in the driver display.
- In addition to display (1) a warning tone sounds.
- The Beginning emergency stop message appears in the driver display, a continuous warning tone sounds, the vehicle no longer accelerates, and there is a slight, repeated tensioning of the seat belt.
- The vehicle speed is reduced in increments until it is at a standstill. Sharp brake impulses are also produced.

Depending on the country, a lane change to the adjacent right-hand lane is carried out, if possible.

ⓘ It is only possible to change across one lane and only into the right-hand lane, and not onto the hard shoulder.

Depending on the country, the hazard warning lights are switched on when automatic braking is initiated.

When the vehicle is stationary, the following actions are carried out:

- The vehicle is secured with the electric parking brake.
- Active Distance Assist DISTRONIC is ended
- The vehicle is unlocked.
- If possible, an emergency call is placed to the Mercedes-Benz emergency call centre

Before automatic braking is initiated, you can cancel Active Emergency Stop Assist by steering.

You can cancel the intervention by Active Emergency Stop Assist after automatic braking is initiated by one of the following actions:

- Accelerating or braking: the emergency stop is cancelled, but the warning message, warning tone and power steering remain active
- Steering: power-assisted steering is cancelled, the warning message and warning tone remain active and the vehicle continues to be braked

ⓘ Active Emergency Stop Assist can initiate an emergency stop a maximum of three times within one ignition cycle. After this Active Steering Assist and Active Emergency Stop Assist are deactivated for that ignition cycle.

System limits

If Active Lane Keeping Assist does not detect lane markings, Active Emergency Stop Assist is not active.

For the detection of vehicles and other obstacles, observe the system limits of the following functions:

- Active Distance Assist DISTRONIC (→ page 228)
- Active Steering Assist (→ page 236)
- Active Lane Change Assist (→ page 239)

Active Lane Change Assist

Function of Active Lane Change Assist

Active Lane Change Assist supports the driver when changing lanes and is activated by indicating briefly.

For this, the following conditions must be fulfilled:

- You are on a motorway or high-speed major road.
- The vehicle speed is between approximately 80 km/h and 180 km/h.
- The neighbouring lane is separated by a broken lane marking.
- No vehicle or obstacle is detected in the adjacent lane.
- Since the last time the vehicle was started, the sensors have detected a vehicle at a suitable distance behind your vehicle.
- Active Lane Change Assist is selected in the multimedia system.
- Active Distance Assist DISTRONIC and Active Steering Assist are activated on motorways.

The system is not available and must be reactivated in the following situations:

- Active Distance Assist DISTRONIC and Active Steering Assist were already activated before entering the motorway.
- The system briefly does not detect the road you are on as a motorway or a motorway-like road, e.g. on a motorway junction.

As soon as Active Lane Change Assist detects a suitable road, you can reactivate it with RES, SET/+ or SET/–.

Driver display in the Assistance menu



1 Green arrow: lane change initiated
2 Red arrow: lane change cancelled

When Active Lane Change Assist is available, the display appears along with green arrows in the driver display. If the system has been activated but is not currently available, the display

appears along with grey arrows in the driver display.

If no vehicle or obstacle is detected in the adjacent lane and a lane change is permitted, the lane change begins after the driver has indicated briefly. The lane change is shown to the driver with a flashing green arrow next to the steering wheel symbol. Green arrow (1) is displayed in the appropriate adjacent lane in the Assistance menu in the driver display. The Lane change to the left message, for example, also appears.

Active Lange Change Assist can be cancelled in various situations, including the following:

- Change in the surrounding conditions (e.g. detected obstacle).
- The driver removes their hands from the steering wheel.
- The driver steers with too much force or in the opposite direction.
- The driver moves the turn signal indicator in the opposite direction.
- Active Distance Assist DISTRONIC or Active Steering Assist is deactivated.
- The vehicle cannot make the lane change as planned.

Cancellation of Active Lane Change Assist is displayed as follows:

- The arrow in the selected direction of travel turns red.
- A corresponding message appears on the driver display.
- In certain circumstances a warning tone sounds.

WARNING Risk of accident when changing lane to an occupied adjacent lane

Lane Change Assist cannot always clearly detect if the adjacent lane is free.

The lane change might be initiated although the adjacent lane is not free.

- Before changing lanes, make sure that the neighbouring lane is free and there is no danger to other road users.
- Monitor the lane change.

WARNING Risk of accident if Lane Change Assist unexpectedly stops functioning

If the system limitations for Lane Change Assist have been reached, there is no guarantee that the system will remain active.

Lane Change Assist cannot then assist you by applying steering torque.

- Always monitor the lane change and keep your hands on the steering wheel. Observe the traffic conditions and steer and/or brake if necessary.

System limits

The system limitations of Active Steering Assist apply to Active Lane Change Assist (→ page 236).

The system may also be impaired or may not function in the following situations:

- The sensors are damaged, covered or dirty (→ page 219).
- The exterior lighting shows a defect.

- The system does not detect a suitable road, for example, in tight bends or shortly after a slip road.
- The vehicle is on a construction site.

ⓘ The Active Lane Change Assist sensors adjust automatically while a certain distance is being driven after the vehicle has been delivered. Active Lane Change Assist is unavailable or only partially available during this teach-in process, and no arrows are displayed next to the Active Steering Assist symbol.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognise dangers (→ page 219).

Selecting Active Lane Change Assist

Multimedia system:

→ Home ▸▸ Settings ▸▸ Assistance ▸▸ Driving

▶ Select the function.

Active Brake Assist


Function of Active Brake Assist

Active Brake Assist consists of the following functions:

- Distance warning function
- Autonomous braking function
- Situation-dependent braking assistance
- Evasive Steering Assist (country-specific)

Active Brake Assist can help you to minimise the risk of a collision with vehicles, cyclists or pedestrians or to reduce the effects of such a collision.

If Active Brake Assist has detected a risk of collision, a warning tone sounds and the distance warning lamp lights up.

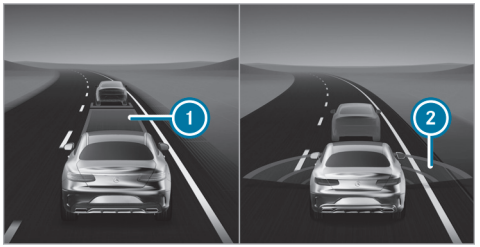

In the Assistance menu, an insufficient distance ① to the vehicle in front is displayed in red. If you further reduce the distance, the vehicle in front is also highlighted in red. When the system detects a risk of collision, red radar waves ② appear in front of the vehicle.

Vehicles with PRE-SAFE®: depending on the country, an additional haptic warning occurs in the form of slight, repeated tensioning of the seat belt.

ⓘ **Vehicles with active ambient lighting:** if Warning assistance is activated, the Active Brake Assist warning is also accompanied by ambient lighting (→ page 169).

If you do not react to the warning, autonomous braking can be initiated in critical situations.

In particularly critical situations, Active Brake Assist can also initiate autonomous braking directly. In this case, the warning lamp and warning tone occur simultaneously with the braking application.

If you apply the brake yourself in a critical situation or apply the brake during autonomous braking, situation-dependent braking assistance occurs. The brake pressure increases up to maximum full-stop braking if necessary.



If autonomous braking or situation-dependent braking assistance has occurred, pop up 1 appears in the driver display and then automatically goes out after a short time.

If the autonomous braking function or the situation-dependent braking assistance is triggered, additional preventive measures for occupant protection (PRE-SAFE®) may also be initiated.

WARNING Risk of accident due to limited detection performance of Active Brake Assist

Active Brake Assist cannot always clearly identify objects and complex traffic situations.

Active Brake Assist is only an aid. The driver is responsible for maintaining a sufficiently safe distance to the vehicle in front, vehicle speed and for braking in good time.

- Always pay careful attention to the traffic situation; do not rely on Active Brake Assist alone.
- Be prepared to brake or swerve if necessary.

ⓘ If Active Brake Assist is deactivated, OFF appears in the driver display.

If the system is unavailable or the functions are restricted, appears.

Also observe the system limits of Active Brake Assist.

The individual subfunctions are available in the following speed ranges:

The distance warning function issues a warning in the following situations:

- From approximately 30 km/h, if over several seconds the distance maintained to the vehicle travelling in front is insufficient for the driven speed, the distance warning lamp lights up in the driver's display.
- From approximately 7 km/h, if your vehicle is critically close to a vehicle, cyclist or pedestrian, you will hear an intermittent warning tone and the distance warning lamp lights up in the driver's display.

  Vehicles with PRE-SAFE®: depending on the country, an additional haptic warning occurs in the form of slight, repeated tensioning of the seat belt.

If possible, brake immediately or manoeuvre to avoid the obstacle.

Distance warning function

The distance warning function can assist you by means of an intermittent warning tone and a warning lamp:

- At speeds up to approximately 250 km/h when approaching vehicles ahead.
- At speeds up to approximately 120 km/h when approaching crossing vehicles, pedestrians and cyclists.
- At speeds up to approximately 100 km/h when approaching stationary vehicles.
- At speeds up to approximately 80 km/h when approaching cyclists ahead.
- At speeds up to approximately 70 km/h when approaching stationary pedestrians and cyclists.

Autonomous braking function

The autonomous braking function can intervene from speeds of approximately 7 km/h:

- At speeds up to approximately 250 km/h when approaching vehicles ahead.
- At speeds up to approximately 120 km/h when approaching crossing vehicles, pedestrians and cyclists.
- At speeds up to approximately 100 km/h when approaching stationary vehicles.
- At speeds up to approximately 80 km/h when approaching cyclists ahead.
- At speeds up to approximately 70 km/h when approaching stationary pedestrians and cyclists.

Situation-dependent braking assistance

Situation-dependent braking assistance can intervene from speeds of approximately 7 km/h:

- At speeds up to approximately 250 km/h when approaching vehicles ahead.
- At speeds up to approximately 120 km/h when approaching crossing vehicles, pedestrians and cyclists.
- At speeds up to approximately 100 km/h when approaching stationary vehicles.
- At speeds up to approximately 80 km/h when approaching cyclists ahead.
- At speeds up to approximately 70 km/h when approaching stationary pedestrians and cyclists.

Cancelling a brake application of Active Brake Assist

You can cancel a brake application of Active Brake Assist at any time by:

- Fully depressing the accelerator pedal or with kickdown.
- Releasing the brake pedal.

Active Brake Assist may cancel the brake application when one of the following conditions is fulfilled:

- You manoeuvre to avoid the obstacle.
- There is no longer a risk of collision.

- An obstacle is no longer detected in front of your vehicle.

Reaction to oncoming road users

Active Brake Assist can also react to detected oncoming road users:

- Reaction up to speeds of approximately 100 km/h
- Warning for oncoming road users through acoustic warning and warning lamp
- Autonomous braking application in order to reduce the severity of an accident

Evasive Steering Assist

WARNING Risk of accident despite Evasive Steering Assist

Evasive Steering Assist cannot always recognise objects or complex traffic situations clearly.

Moreover, the steering support provided by Evasive Steering Assist is not sufficient to avoid a collision.

- ▶ Always pay careful attention to the traffic situation; do not rely on Evasive Steering Assist alone.
- ▶ Be prepared to brake or swerve if necessary.
- ▶ End the support by actively steering in non-critical situations.
- ▶ Drive at an appropriate speed if there are pedestrians close to the path of your vehicle.

Evasive Steering Assist has the following characteristics:

- Detection of pedestrians, cyclists and vehicles.
- Assistance through power-assisted steering if it detects a swerving manoeuvre.
- Activation by an abrupt steering movement during a swerving manoeuvre.
- Assistance during swerving and straightening of the vehicle.
- Reaction from a speed of approximately 20 km/h up to a speed of approximately 110 km/h.

The steering support of Evasive Steering Assist can be cancelled at any time by counter steering.

System limits

Full system performance is not available for a few seconds after switching on the ignition or after driving off.

If the system is unavailable or the functions are restricted, the warning lamp appears in the driver's display.

The system may be impaired or may not function, particularly in the following situations:

- In snow, rain, fog, heavy spray, if there is glare, in direct sunlight or in greatly varying light conditions.
- If the sensors are dirty, misted up, damaged or covered. (→ page 219)
- If the sensors are impaired due to interference from other radar sources, e.g. strong radar reflections in multi-storey car parks.

- If a loss of tyre pressure or a defective tyre has been detected and displayed.
- In complex traffic situations where objects cannot always be clearly identified.
- If pedestrians, cyclists or vehicles move quickly into the sensor detection range.
- If road users are hidden by other objects or are located close to other objects.
- If the typical outline of a pedestrian or cyclist cannot be distinguished from the background.
- If a pedestrian or cyclist is not detected as such, e.g. due to special clothing or other objects.
- If the driver's seat belt is not fastened.
- On bends with a tight radius.

ⓘ The Active Brake Assist sensors adjust automatically while a certain distance is being driven after the vehicle has been delivered. Active Brake Assist is unavailable or only partially available during the teach-in process.

Setting Active Brake Assist

Requirements:
- The ignition is switched on.

Multimedia system:

→ ⌂ ▸▸ Settings ▸▸ Assistance ▸▸ Avoid collision ▸▸ Active Brake Assist

▶ Select the desired setting.
The setting is retained when the engine is next started.

Deactivating Active Brake Assist

ⓘ It is recommended that you always leave Active Brake Assist activated.

▶ Select Off.
The distance warning function, the autonomous braking function and the Evasive Steering Assist are deactivated.

When the engine is next started, the medium setting is automatically selected.

ⓘ If Active Brake Assist is deactivated, the OFF symbol appears in the status bar of the multifunction display.

Traffic Sign Assist

Function of Traffic Sign Assist

Traffic Sign Assist detects traffic signs with the multifunction camera and compares this with information in the digital navigation map. It assists you by displaying detected speed limits and overtaking restrictions in the driver display and in the head-up display. The system can issue a warning when you exceed the maximum permissible speed.

In some countries, the system can provide you with further functions and can warn you when you are approaching pedestrian crossings or when you are about to drive past stop signs or red lights unintentionally.

The camera also detects and analyses traffic signs with a restriction indicated by an additional sign (e.g. when wet).


Traffic Sign Assist only visualises selected signs in the driver display. Actual traffic signs and speed limits have priority over traffic signs and speed limits shown in the driver display.

Also observe the following information:

- select a speed adapted to the traffic, surroundings and weather conditions
- observe actual traffic signs
- observe applicable traffic rules and regulations

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognise dangers (⟶ page 219).


Messages in the driver display

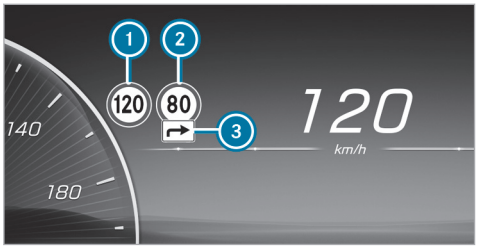

P223 0210 02

1 Permissible speed
2 Permissible speed when there is a restriction
3 Additional sign with restriction

The system can show up to two traffic signs in the driver display simultaneously. The system always prioritises displaying speed limits. Up to one traffic sign with a maximum permissible speed can be shown in the head-up display. If two speed signs are shown in the driver display, for example, when speed limits are detected, the value of left-hand speed limit 1 is transmitted to the limiter or Active Distance Assist DISTRONIC for adoption and is shown in the head-up display.

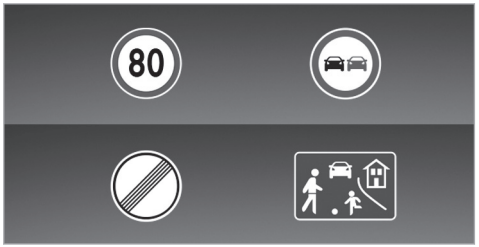

Examples of traffic signs which can be displayed

Traffic Sign Assist can detect and display following traffic signs 1:

- speed limitations
- end of the speed limit
- overtaking restrictions
- play streets

Traffic Sign Assist can detect following additional signs 3 and, if necessary, analyse the relevance of the restrictions using other vehicle sensors:

- in wet conditions
- on slippery road surfaces

- in fog
- temporary restrictions
- exits
- limits for car/trailer combinations

Traffic Sign Assist also uses data from the digital street map in the navigation system. Therefore, when you leave or enter a municipality or change roads, on a motorway exit or slip road for example, or after you turn at a junction, the display in the driver display can be updated without a traffic sign having been detected.

If Traffic Sign Assist cannot determine the currently applicable maximum permissible speed (e.g. due to missing signs), the following display appears in the driver display:



Traffic Sign Assist is not available in all countries. If the vehicle is in a country where Traffic Sign Assist is not supported, this is displayed continuously.

ⓘ Also observe the information on display messages in Traffic Sign Assist (→ page 471).

Warning when the maximum permissible speed is exceeded

The system can warn you if you unintentionally exceed the maximum permissible speed. To do this, you can specify in the multimedia system by how much the maximum permissible speed can be exceeded before a warning is issued. You can set the warning to visual only (the traffic sign flashes three times in the driver display) or visual and acoustic, including a warning tone.

Additional functions of Traffic Sign Assist (country-specific)

Warning for no-entry signs: Traffic Sign Assist can warn you if you drive the wrong way down a section of road, for example on motorway slip roads or one-way streets.

Warning at pedestrian crossings: if you approach pedestrian crossings, provided that pedestrians are in the danger zone or are moving towards it, Traffic Sign Assist can warn you up to a speed of approximately 70 km/h.

Warning at stop signs: Traffic Sign Assist can warn you up to a speed of approximately 70 km/h if you are about to drive past a stop sign unintentionally. For this to be possible, the signs must be clear, for example if the system detects more than one stop sign, or a stop sign can be confirmed using the digital navigation map. No warning can be issued if several different signs are detected.

Warning at red lights: Traffic Sign Assist can warn you up to a speed of approximately 70 km/h if you are about to drive through a red light unintentionally.

The following conditions must be fulfilled:

- Several traffic lights have been detected.
- All traffic lights detected are red.
- At least one of the red traffic lights detected is on the front passenger side beside the vehicle's own lane.
- The traffic lights are in the following sequence (from top to bottom): red, yellow, green.

ⓘ If the function is available, you can activate or deactivate the warnings at pedestrian crossings, stop signs and red lights in the Traffic Sign Assist menu under Further warnings (→ page 249).

ⓘ The assistance functions of DIGITAL LIGHT can also warn you of no-entry signs, stop signs and red lights by projecting a triangle onto the roadway (→ page 164).

System limits

The system may be impaired or may not function particularly in the following situations:

- If visibility is poor, e.g. due to insufficient illumination of the road, highly variable shade conditions, rain, snow, fog, swirling dust or heavy spray.
- If there is glare, e.g. from oncoming traffic, direct sunlight or reflections.
- If the windscreen in the area of the multifunction camera is dirty, or if the camera is misted up, damaged or covered.
- If traffic signs are difficult to detect, e.g. due to dirt, snow, ice, insufficient lighting or driving too close to the vehicle in front, or because they are covered, faded, damaged, badly positioned or twisted.
- Active traffic signs with LED displays may not be detected correctly or at all due to technical factors, such as transmission frequency.
- If the information on the navigation system's digital map is incorrect, incomplete or out of date.
- If signs or the road layout is ambiguous, e.g. traffic signs in roadworks, at exits and ramps, in neighbouring lanes or parallel roads.
- If signs do not conform to the standard.
- If signs or road layouts are specific to the country and deviate from the route guidance in the navigation system, e.g. at or beyond construction sites.
- After sharp turns and tight bends, when traffic signs are outside the camera's field of vision.
- If you overtake vehicles with traffic signs which are affixed or attached to them.

Setting Traffic Sign Assist

Multimedia system:

↝ ⌂ ▸▸ Settings ▸▸ Assistance ▸▸ Assistance ▸▸ Traffic Sign Assist

Activating or deactivating the speed warning

▶ Activate or deactivate Speed limit warning.

Setting the type of warning

▶ Select ✎ next to Speed limit warning.

▶ Select Visual & audible or Visual.

Setting the warning threshold

This value determines the speed at which a warning is issued when exceeded.

▶ Set the desired speed under Warning threshold.

Activating or deactivating further functions of Traffic Sign Assist

▶ Activate or deactivate Further warnings.
The available functions are activated or deactivated.

Setting the type of warning for further functions

- ▶ Select [✎] next to Further warnings.
- ▶ Select Visual & audible or Visual.

Traffic light view

Information on the traffic light view

The traffic light view supports the driver when waiting in front of a red light by displaying the camera image on the central display. The camera image is displayed when the driver is the first vehicle in front of the red light and faded out when the vehicle drives off.

Displaying traffic light view

Requirements:

- The Traffic light view option is switched on.
- A traffic light view is available.

Multimedia system:

[⌂] ▸▸ Settings ▸▸ Assistance ▸▸ Assistance ▸▸ Traffic light view

ⓘ This function is not available in all countries.

If the vehicle is in first position at a traffic light, the camera image with traffic light view is shown in the central display.

When the vehicle pulls away, the camera image is faded out.

- ▶ Activate [⬬] or deactivate [⬭] Traffic light view.

Using other available functions

- ▶ Select [✎].
- ▶ Select On request or Automatic.
  If On request is set and a traffic light view is available, the Please tap here for traffic light view. message is displayed. The camera image is shown after confirmation of the message.
  If Automatic is set, the camera image is automatically displayed when the traffic light view is available.

Active Blind Spot Assist with exit warning


Function of Active Blind Spot Assist with exit warning

Active Blind Spot Assist uses radar sensors to monitor the area up to 40 m behind and 3 m next to your vehicle.

The system can detect vehicles travelling from speeds of approximately 12 km/h and issue a warning if they move into the monitoring range.

Status display in the driver's display

- [🚘] **Grey:** the system is activated but inoperative.
- [🚘] **Green:** the system is activated and operational.

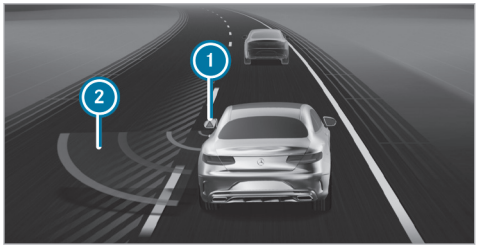

Driver display in the Assistance menu

If a vehicle is detected within the monitoring range, the red warning lamp lights up in the corresponding outside mirror. In the Assistance menu, the lamp in outside mirror (1) also lights up red, and the lane in which the vehicle is detected is hatched out.

If a vehicle is detected in the monitoring range and you switch on the turn signal indicator in the corresponding direction, a warning tone sounds twice and the warning lamp flashes red in the respective outside mirror. Red radar waves (2) are displayed next to your vehicle in the assistance graphic.

If the turn signal indicator remains on, the display in the outside mirror flashes for all other detected vehicles, but no further warning tone sounds. If you overtake a vehicle quickly, no warning is given.

ⓘ **Vehicles with active ambient lighting:** if Warning assistance is activated, the Active Blind Spot Assist warning is also accompanied by ambient lighting (→ page 169).

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognise dangers (→ page 219).

⚠ **WARNING** Risk of accident despite Active Blind Spot Assist

Active Blind Spot Assist does not react to the following:

- if you overtake a vehicle too closely so that it is in the blind spot area
- if vehicles travelling at a much faster speed approach and then overtake

Active Blind Spot Assist may not give warnings or intervene in such situations.

▶ Always pay careful attention to the traffic situation and maintain a safe distance at the side of the vehicle.

Exit warning

The exit warning is an additional function of Active Blind Spot Assist and can warn vehicle occupants attempting to leave the stationary vehicle about approaching vehicles.

⚠ **WARNING** Risk of accident despite exit warning

The exit warning neither reacts to stationary objects nor to vehicles approaching you at a greatly differing speed.

The exit warning cannot warn drivers in these situations.

▶ Always pay particular attention to the traffic situation when opening the doors and make sure there is sufficient clearance.

If a vehicle is detected in the monitoring range, the red warning lamp lights up in the corresponding outside mirror.

If a vehicle occupant pulls the door handle on the side of the warning, a warning tone sounds twice and the ambient lighting in the respective door and the warning lamps in the corresponding outside mirror flash red.

Vehicles with MBUX Interior Assistant: the visual warning begins as soon as the hand of a vehicle occupant moves in to the area of the door.

ⓘ **Vehicles with ambient lighting or active ambient lighting:** theWarning assistance of the ambient lighting can be activated and deactivated (→ page 169).

ⓘ The warning assistance can differ depending on the equipment and may vary according to the setting.

The exit warning is only available when Active Blind Spot Assist is activated and up to a maximum of three minutes after the ignition has been switched off. The exit warning is no longer available once the warning lamp in the outside mirror flashes three times.

The exit warning is only an aid and not a substitute for the attention of vehicle occupants. The responsibility for opening and closing the doors and for leaving the vehicle remains with the vehicle occupants.

System limits

Active Blind Spot Assist may be limited in the following situations, in particular:

- if there is dirt on the sensors or the sensors are obscured
- in poor visibility, e.g. due to fog, heavy rain or snow
- if there are narrow vehicles, e.g. bicycles or motorbikes
- if the road has very wide or narrow lanes
- if vehicles are not driving in the middle of their lane

Warnings may be issued in error when driving close to crash barriers or similar continuous lane borders. Always make sure that there is sufficient distance to the side for other traffic or obstacles.

Warnings may be interrupted when driving alongside long vehicles, for example lorries, for a prolonged time.

Active Blind Spot Assist is not operational when reverse gear is engaged.

Additionally, the exit warning may be limited in the following situations:

- when the sensors are covered by adjacent vehicles in narrow parking spaces
- when people approach the vehicle
- in the event of stationary or slowly moving objects

Function of the brake application of Active Blind Spot Assist

If Active Blind Spot Assist detects a risk of a side impact in the monitoring range, a course-correcting brake application is carried out. This is designed to help you avoid a collision.

The course-correcting brake application is available in the speed range between approximately 30 km/h and 200 km/h.

WARNING Risk of accident despite brake application of Active Blind Spot Assist

A course-correcting brake application cannot always prevent a collision.

- Always steer, brake or accelerate yourself, especially if Active Blind Spot Assist warns you or makes a course-correcting brake application.
- Always maintain a safe distance at the sides.

WARNING Risk of accident despite Active Blind Spot Assist

Active Blind Spot Assist does not react in the following situations:

- If you overtake vehicles at a high speed.
- If vehicles approach and overtake you at a greatly different speed.

Active Blind Spot Assist may not give warnings or intervene in such situations.

- Always pay careful attention to the traffic situation and maintain a safe distance at the side of the vehicle.



If a course-correcting brake application occurs, the red warning lamp flashes in the outside mirror and a warning tone sounds. In addition, a display (1) indicating the danger of a side collision appears in the driver's display.

In rare cases, the system may make an inappropriate brake application. This brake application may be interrupted at any time if you steer slightly in the opposite direction or accelerate.

System limits

Either a course-correcting brake application appropriate to the driving situation, or none at all, may occur especially in the following situations:

- Vehicles or obstacles, e.g. crash barriers, are located on both sides of your vehicle.
- A vehicle approaches too closely on the side.
- You have adopted a sporty driving style with high cornering speeds.
- You brake or accelerate significantly.
- A driving safety system intervenes, e.g. ESP® or Active Brake Assist.
- ESP® is deactivated.
- A loss of tyre pressure or a defective tyre is detected.

Activating/deactivating Active Blind Spot Assist

Multimedia system:

→ ⌂ ▸▸ Settings ▸▸ Assistance ▸▸ Avoid collision ▸▸ Active Blind Spot Assist

- Select Active Blind Spot Assist.
- Select On or Off.

Active Lane Keeping Assist

Function of Active Lane Keeping Assist

Active Lane Keeping Assist monitors the area in front of your vehicle by means of the multifunction camera (→ page 219) and can warn you before you leave your lane unintentionally. The system can guide you back into your lane through a course-correcting steering intervention and additionally warns you with vibration pulses in the steering wheel. Active Lane Keeping Assist is available in the speed range between 60 km/h and 200 km/h.

The system can intervene in the following situations:

- Active Lane Keeping Assist detects a lane marking.
- One of your front wheels goes over a lane marking.

If you activate the turn signal indicator, a steering intervention does not occur on the corresponding side.

If the system detects an obstacle, such as another vehicle in the adjacent lane, a steering intervention occurs regardless of the turn signal indicator. If you leave the lane without using the turn signal indicator, but an obstacle is detected in your lane, a steering intervention does not occur.



Display 1 will appear in the driver display and a warning tone will sound in the following situations:

- A steering intervention by Active Lane Keeping Assist lasts longer than approximately ten seconds.
- The system carries out two or more steering interventions within approximately three minutes without any steering intervention from the driver.

In the Active Lane Keeping Assist settings, you can set the sensitivity of the system and set the level of support. Additionally, you can set whether the system should react to discontinuous lane markings or only continuous lane markings (→ page 256).

Status displays for Active Lane Keeping Assist

White: Active Lane Keeping Assist is deactivated.

Yellow: there is a malfunction. Please also observe the display messages.

Grey: Active Lane Keeping Assist is activated, but not operating.

Green: Active Lane Keeping Assist is activated and operating. If the system is operational on only one side, the lane marking is shown in green on the corresponding side.

Red: Active Lane Keeping Assist has guided you back into your lane with a course-correcting steering intervention. The status display will flash if there is also a haptic warning in the steering wheel. The lane

marking is shown in red only on the side for which there is a warning.

Vehicles without Driving Assistance Package: if both lane markings are simultaneously shown in red in the status display, Active Lane Keeping Assist has initiated an emergency stop (→ page 238).

Active Lane Change Assist display in the "Assistance" menu



If the front wheel of the vehicle drives over a detected lane marking, this will be highlighted red in the Assistance menu in the driver's display.

ⓘ **Vehicles with active ambient lighting:** if Warning assistance is activated, the Active Lane Keeping Assist warning is also accompanied by ambient lighting (→ page 169).

System limits

In the following situations, no lane-correcting steering intervention occurs but rather a warning in the steering wheel, depending on the situation:

- You clearly and actively steer, brake or accelerate.
- If a driving safety system intervenes, such as ESP®, Active Brake Assist or Active Blind Spot Assist.
- You have adopted a sporty driving style with high cornering speeds or high rates of acceleration.
- When ESP® is deactivated.
- If a loss of tyre pressure or a defective tyre has been detected and displayed.

The system may be impaired or may not function particularly in the following situations:

- If there is poor visibility, e.g. due to insufficient illumination of the road, if there are highly variable shade conditions or in rain, snow, fog or heavy spray.
- If there is glare, e.g. from oncoming traffic, the sun or reflections.
- If the windscreen in the area of the multifunction camera is dirty, or if the camera is misted up, damaged or covered.
- If there are no lane markings, or several unclear lane markings are present for one lane, e.g. around roadworks.
- If the lane markings are worn, dark or covered.
- If the distance to the vehicle in front is too short and thus the lane markings cannot be detected.
- If the lane markings change quickly, e.g. lanes branch off, cross one another or merge.
- If the carriageway is very narrow and winding.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognise dangers (→ page 219).

Activating/deactivating Active Lane Keeping Assist

Multimedia system:

↳ ⌂ ▸▸ Settings ▸▸ Assistance ▸▸ Avoid collision ▸▸ Active Lane Keeping Assist

▶ Switch the function on or off.

Alternatively, Active Lane Keeping Assist can be activated and deactivated in the Assistance menu.

ⓘ After starting the engine, the settings are country-specific.

Setting Active Lane Keeping Assist

Multimedia system:

↳ ⌂ ▸▸ Settings ▸▸ Assistance ▸▸ Avoid collision ▸▸ Active Lane Keeping Assist

Setting the sensitivity

▶ Select ✎.

▶ Select Early, Med. or Late.

The last selected setting will be adopted the next time the engine is started.

ⓘ The standard setting for this function is dependent on the country.

Activating or deactivating assistance on discontinuous lane markings

▶ Select Advanced support.

The last selected setting will be adopted the next time the engine is started.

ⓘ The standard setting for this function is dependent on the country.

AIRMATIC

Function of AIRMATIC

AIRMATIC is an air suspension system with variable damping for improved driving comfort. The all-round level control system ensures the best possible suspension and constant ground clearance, even with a laden vehicle. When driving at speed, the vehicle is lowered automatically to improve driving safety and to reduce fuel consumption.

You also have the option of manually adjusting the vehicle level.

AIRMATIC includes the following components and functions:

- air suspension with automatic all-round level control
- speed-dependent lowering to reduce fuel consumption
- increased vehicle level for greater ground clearance, selected via the multimedia system
- ADS PLUS (Adaptive Damping System with constant damping force adjustment)

Suspension setting depending on the drive program

Drive program S and S+:

- The suspension setting is firmer.
- The vehicle is set to low level -1.
- The vehicle is lowered to low level -2 when driving at speeds above 120 km/h.
- When driving at speeds below 80 km/h, the vehicle is raised again to low level -1.

Drive program [C]:

- The suspension setting is comfortable.
- The vehicle is set to the normal level.
- The vehicle is lowered to low level -1 when driving at speeds above 120 km/h.
- The vehicle is lowered to low level -2 when driving at speeds above 160 km/h.
- When driving at speeds below 120 km/h, the vehicle is raised again to low level -1.
- When driving at speeds below 80 km/h, the vehicle is raised again to the normal level.

Drive program [C ECO]:

- The suspension setting is very comfortable.
- The vehicle is set to the normal level.
- When driving at speeds above approximately 140 km/h, the vehicle is lowered.
- When driving at speeds below approximately 40 km/h, the vehicle is raised again.

Setting the vehicle level

WARNING Risk of accident because vehicle level is too high

Driving characteristics may be impaired.

The vehicle can drift outwards, for example, when steering or cornering.

▶ Choose a vehicle level which is suited to the driving style and the road surface conditions.

WARNING Risk of entrapment from vehicle lowering

When lowering the vehicle, other people could become trapped if their limbs are between the vehicle body and the tyres or underneath the vehicle.

▶ Make sure no one is underneath the vehicle or in the immediate vicinity of the wheel arches when the vehicle is being lowered.

WARNING Risk of becoming trapped due to the vehicle lowering

Vehicles with AIRMATIC or level control: when you unload luggage or leave the vehicle, the vehicle first rises slightly and then returns to the set level shortly afterwards.

You or anyone else in the vicinity of the wheel arches or the underbody could thus become trapped.

The vehicle can also be lowered after being locked.

▶ When leaving the vehicle, make sure that nobody is in the vicinity of the wheel arches or the underbody.

NOTE Damage due to vehicle lowering

Parts of the body could be damaged when the vehicle is lowered.

▶ Make sure that there are no obstacles such as kerbs underneath or in the immediate vicinity of the body when the vehicle is being lowered.

Requirements:
- The vehicle has been started.
- The vehicle is not moving faster than 60 km/h.
- When the trailer socket is contacted (trailer/bicycle rack): the vehicle is not moving faster than 30 km/h.

Multimedia system:



Raising the vehicle

▶ Select  .
The indicator lamp lights up continuously.
The vehicle is raised to off-road level +1.

Your selection is saved. The off-road level +1 set remains stored even after the ignition has been switched off.

The vehicle is lowered again in the following situations:
- When driving faster than 80 km/h.
- When driving briefly between 60 km/h and 80 km/h.
- After selecting a different drive program using the DYNAMIC SELECT switch.
  In this case, the vehicle is adjusted to the height of the active drive program.
- When the trailer socket is contacted (trailer/bicycle rack): the vehicle is moving faster than 30 km/h.

Lowering the vehicle

▶ Select  .
The indicator lamp goes out.
The vehicle is adjusted to the height of the active drive program.

ⓘ In the Sport drive program, only the normal vehicle level is possible when the trailer socket is contacted (trailer/bicycle rack).

360° Camera

Function of the 360° Camera


The 360° Camera is a system that consists of four cameras which cover the immediate surroundings of the vehicle. The cameras assist you when you are parking, for example, or at exits with reduced visibility.

If this function is activated, the image from the reversing camera is automatically displayed in the central display when reverse gear is selected (→ page 262).

The 360° Camera includes the following cameras and evaluates their images:
- Reversing camera
- Front camera
- Two side cameras in the outside mirrors

The cameras are only an aid and may show a distorted view of obstacles, show them incorrectly or not show them at all. They are not a substitute for your attention to the surroundings. The responsibility for safe manoeuvring and parking remains with you. Make sure that there are no persons, animals or objects etc., in the manoeuvring area while manoeuvring and parking.


Menu overview Camera views

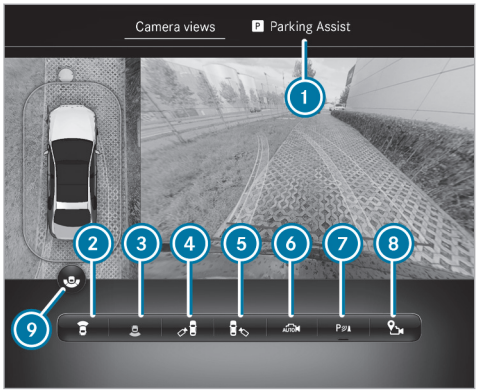

1. Menu Parking Assist
2. Top view with image from the front camera
3. Top view with image from the reversing camera
4. 3D view, left-hand side of the vehicle
5. 3D view, right-hand side of the vehicle
6. 3D auto view
7. To activate/deactivate Parking Assist PARKTRONIC (→ page 265)
8. To set the GPS activation point (→ page 263)
9. To switch between standard and wide-angle view

ⓘ In all views, the Parking Assist PARKTRONIC warning display is shown (→ page 263).

Function of the guide lines

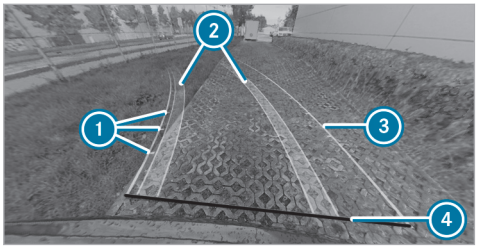


1. Guide lines at a distance of approximately 0.5 m, 1.0 m, 1.5 m and 3.0 m from the rear area
2. Path marking the course the tyres will take with the current steering wheel angle (dynamic)
3. Driven surface depending on the current steering wheel angle (dynamic)
4. Guide line at a distance of approximately 0.3 m from the rear area

ⓘ When Active Parking Assist is active, lanes and guide lines are displayed in green instead of yellow (→ page 266).

Top view with image from the front or reversing camera

If this function is activated, the image from the reversing camera is automatically displayed in the central display when reverse gear is selected (→ page 262).

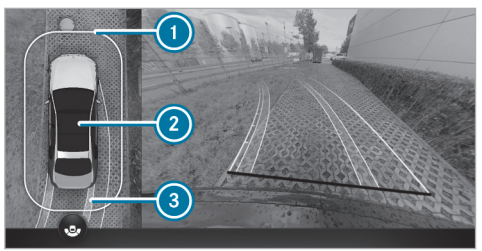

1. Warning display of Parking Assist PARKTRONIC (→ page 263)
2. Your vehicle from above
3. Lane indicating the route the vehicle will take at the current steering wheel angle

3D view, left/right-hand side of the vehicle

! **NOTE** Risk of accident due to objects being severely distorted in the display or not displayed at all

Due to the projection of the cameras, objects in the 3D views may be severely distorted when displayed or not displayed at all.

▶ Make sure that there are no persons, animals or objects etc. in the manoeuvring area while manoeuvring and parking.




1. Display of Parking Assist PARKTRONIC (→ page 263)

In the 3D view, left/right-hand side of the vehicle, the virtual camera moves to the respective side of the vehicle. When you change the transmission position, the view is automatically adapted.

3D auto view

ⓘ The area behind the vehicle is **not** displayed as a mirror image as is usual in the 3D views.

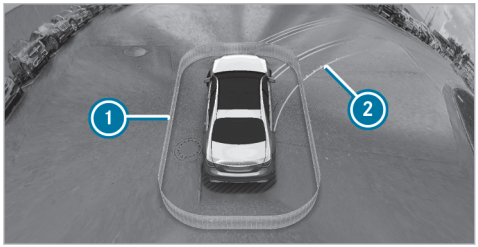

1 Display of Parking Assist PARKTRONIC (→ page 263)
2 Guide lines

In the 3D auto view, the virtual camera moves to the standard perspective, facing forward from the rear above the roof. The view changes automatically when approaching obstacles.

If you touch the touchscreen, the view changes to 3D view with free rotation. You can turn, tilt and zoom the views by touch.

Wide-angle view



1 Display of Parking Assist PARKTRONIC (→ page 263)
2 To switch between standard and wide-angle view

System limits

If the system is not ready for operation, the System inoperative message appears in the central display.

The 360° Camera will not function or will only partially function in the following situations:

- You are driving forwards at a speed greater than approximately 16 km/h.
- The doors are open.
- An outside mirror is not completely folded out.
- The boot lid is open.
- The weather conditions are poor, e.g. heavy rain, snow, fog, storm or spray.
- The light conditions are poor, e.g. at night or if light is shining into the camera.
- The camera lens is obstructed, dirty or misted up.
- If cameras or vehicle components in which the cameras are fitted are damaged. In this event, have the cameras, their positions and their setting checked at a qualified specialist workshop.

ⓘ Do not use the 360° Camera under such circumstances. You could otherwise injure others or collide with objects when parking the vehicle.

For technical reasons, the standard height of the vehicle may be altered if the vehicle is carrying a heavy load and can result in inaccuracies in the guide lines and in the display of the generated images.


The field of vision and other functions of the camera system may be restricted due to additional attachments on the vehicle (e.g. licence plate bracket, bicycle rack).

ⓘ The contrast of the display may be impaired by abrupt, direct sunlight or by other light sources, e.g. when driving out of a garage. In this case, pay particular attention.

ⓘ Have the display repaired or replaced if, for example, pixel errors considerably restrict its use.

See the notes on cleaning the 360° Camera (→ page 344).

Calling up the 360° Camera views using the button

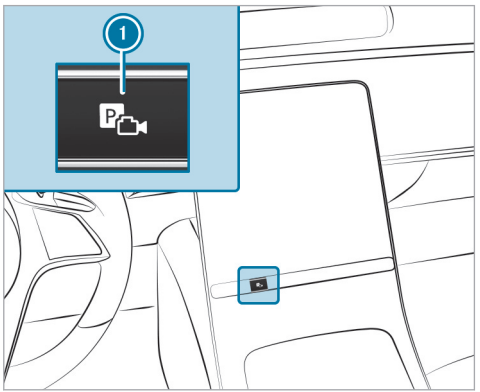

- Press button (1).
- Select the Camera views menu.
- In the multimedia system, select the desired view (→ page 258).

Selecting a view for the 360° Camera (reverse gear)

Requirements:

- The Rear camera image or 3D view setting is activated in the multimedia system (→ page 262).

- Shift to reverse gear.
- Select the desired view in the multimedia system (→ page 258).

Setting the reversing camera or 360° Camera

The reversing camera is only an aid. It is not a substitute for your attention to the surroundings. The responsibility for safe manoeuvring and parking remains with you. Make sure that no persons, animals or objects etc. are in the manoeuvring range. Pay attention to your surroundings and be ready to brake at all times.

Multimedia system:

→ ⌂ ▸▸ Settings ▸▸ Assistance ▸▸ Camera

- Select Rear camera image or System off.

360° Camera with GPS - managing activation positions

Multimedia system:

→ ⌂ ▸▸ Settings ▸▸ Assistance ▸▸ Camera

Renaming an activation position

ⓘ You can determine activation positions in the Camera views menu. (→ page 258)

- Select an activation position.
- Select ✎.
- Enter a name and confirm.
  The activation position is saved under the new name.

Deleting an activation position

- Select Manage activation positions.
- Select an activation position.
- Select 🗑.
- Confirm the prompt.
  The activation position is deleted.

Opening the camera cover of the reversing camera

Multimedia system:

→ ⌂ ▸▸ Settings ▸▸ Assistance ▸▸ Camera

- Select Open camera cover.

ⓘ The camera cover closes automatically after some time or after an ignition cycle.

Parking Assist PARKTRONIC

Function of Parking Assist PARKTRONIC


Parking Assist PARKTRONIC is an electronic parking assistance system which monitors the area surrounding your vehicle and shows you the distance between the vehicle and a detected obstacle visually and audibly.

The passive side impact protection also warns you of obstacles to the side. These must be detected beforehand by the sensors in the front or rear bumper while driving by them. If you steer in the direction of a detected obstacle and there is a risk of a lateral collision, a warning is issued. The passive side impact protection can be activated and deactivated via the multimedia system.

In order for front or rear obstacles to the side to be displayed, the vehicle must first travel a distance of at least half a vehicle length. Once the vehicle has travelled one vehicle length, obstacles on all sides can be shown.

Parking Assist PARKTRONIC is only an aid. It is not a substitute for your attention to the surroundings. The responsibility for safe manoeuvring and parking remains with you. Make sure that there are no persons, animals or objects in the manoeuvring area while manoeuvring and parking in/exiting parking spaces.

Messages in the central display

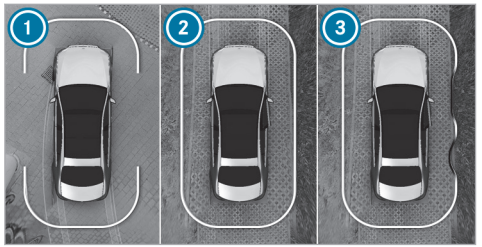

As soon as Parking Assist PARKTRONIC is operational, the respective areas of the display are shown in blue.

1. Operational, front and rear
2. Operational, all around
3. Operational, all around and obstacle detected

The colour of the display changes depending on the distance to the detected obstacle:


- **Blue:** > 1 m (no obstacles detected)
- **Yellow:** approx. 1 m - 0.7 m
- **Orange:** approx. 0.7 m - 0.4 m
- **Red:** < 0.4 m

Vehicles with 360° Camera: the boundary line shifts dynamically depending on the position and distance of the obstacles detected.

Depending on the distance to the obstacle detected, an intermittent warning tone also sounds. You can set the timing of the warnings in the multimedia system. In the Warn early setting, the system warns you from a distance of 1 m, in the standard setting only from 0.4 m.



If you are not in the Camera & parking menu and an obstacle in the vehicle path is detected, at speeds below 12 km/h (vehicles without Active Parking Assist) or 18 km/h (vehicles with Active Parking Assist), pop up window 1 appears in the central display.

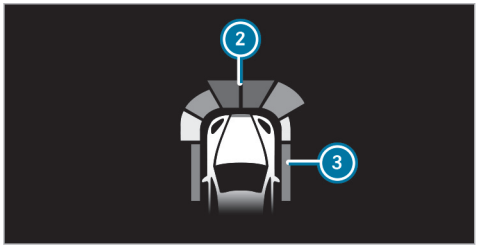

Optionally, obstacles detected by Parking Assist PARKTRONIC from a distance of approximately 1.0 m in front (2) and 0.7 m on sides (3) can also be displayed in the head-up display.

System limits

Parking Assist PARKTRONIC does not necessarily take into account the following obstacles:

- Obstacles below the detection range, e.g. persons, animals or objects.
- Obstacles above the detection range, e.g. overhanging loads, overhangs or loading ramps of lorries.
- Pedestrians or animals approaching the vehicle from the side.
- Objects placed next to the vehicle.

Obstacles on the sides are not shown in the following situations, for example:

- You park the vehicle and switch off the ignition.
- You open the doors.

After the engine is restarted, obstacles must be detected again by driving past them before a new warning can be issued.

Also observe the system limits of the 360° Camera (→ page 258).

Observe the information on vehicle sensors and cameras; the system otherwise cannot function properly (→ page 219).

Problems with Parking Assist PARKTRONIC

If the Parking Assist PARKTRONIC display lights up red for approximately 3 seconds and then goes out, and the P OFF symbol appears in the driver display, Parking Assist PARKTRONIC may have been deactivated due to signal interference. Start the vehicle again and check if Parking Assist PARKTRONIC is working at a different location.

If a warning tone also sounds, it may be due to one of the following causes:

- **The sensors are dirty:** clean the sensors and observe the notes on care of vehicle parts (→ page 344).
- **Parking Assist PARKTRONIC has been deactivated due to a malfunction:** restart the vehicle. If the problem persists, consult a qualified specialist workshop.

Activating/deactivating Parking Assist PARKTRONIC

! **NOTE** Risk of an accident from objects at close range

Parking Assist PARKTRONIC may not detect certain objects at close range.

▶ When parking or manoeuvring the vehicle, pay particular attention to any objects which are above or below the sensors, e.g. flowerpots or drawbars.

The vehicle or other objects could otherwise be damaged.

Requirements:
- The camera menu is open.
- Or: Active Parking Assist is active.
- Or: the PARKTRONIC pop-up window appears.

▶ Tap [P] in the central display.

If the indicator lamp is lit, Parking Assist PARKTRONIC is active. If the indicator lamp is not lit or the [P OFF] symbol appears in the instrument cluster, Parking Assist PARKTRONIC is not active.

ⓘ Parking Assist PARKTRONIC is automatically activated when the engine is started.

Alternatively, Parking Assist PARKTRONIC can be activated or deactivated in the quick access menu.

Setting the warning tones of Parking Assist PARKTRONIC

Multimedia system:

↳ [⌂] ▸▸ Settings ▸▸ Assistance ▸▸ Parking

Setting the volume or pitch of the warning tones

▶ Set the desired level under Volume or Tone pitch.

Activating/deactivating audio fadeout

▶ Activate or deactivate Audio fadeout.
The volume of the currently playing media source is reduced during a Parking Assist PARKTRONIC warning tone.

or

▶ Activate or deactivate Audio fadeout in trans. position R.
The volume of the currently playing media source is reduced when reverse gear is engaged.

Setting the time of the warnings

▶ Select Time of warning.

▶ Set the time for the warning.

P223 0210 02

Active Parking Assist

Function of Active Parking Assist

Active Parking Assist is an electronic parking assistance system, which uses ultrasound with the assistance of the 360° Camera. When you are driving forwards up to approximately 35 km/h, the system automatically measures parking spaces on both sides of the vehicle.

Active Parking Assist offers the following functions:
- Parking in parking spaces parallel to the road
- Parking in parking spaces perpendicular to the road (optionally either forwards or reverse)
- Parking in parking spaces that can only be detected as such due to markings (for example at the roadside)
- Exiting a parking space parallel to the road
- Exiting a parking space perpendicular to the road (optionally either left or right)

Active Parking Assist is only an aid. It is not a substitute for your attention to the surroundings. The responsibility for safe manoeuvring and parking remains with you. Make sure that no persons, ani-

mals or objects etc. are in the manoeuvring range.

If Active Parking Assist is available, the [P] message appears in the driver display. When the system detects parking spaces, [P] appears. The arrows show on which side of the road detected parking spaces are located. They are then shown in the central display.

The parking space can be selected as desired. Depending on the location of the parking space, the parking direction (rearwards or forwards) can also be selected as desired.

When Active Parking Assist is activated, the turn signal indicators are activated based on the calculated path of your vehicle. When you are entering or exiting a parking space, the procedure is assisted by acceleration, braking, steering and gear changes.

To start the parking procedure, press the [P] button (⟶ page 268).

Active Parking Assist will be cancelled in the following situations:

- You deactivate Parking Assist PARKTRONIC.
- You press the [P] button again.
- You begin steering.
- You engage transmission position [P].
- ESP® intervenes.
- You open the driver's door.

System limits

If the exterior lighting is malfunctioning, Active Parking Assist is not available.

Also observe the system limits of the 360° Camera (⟶ page 258).

Objects located above or below the detection range of Active Parking Assist, such as overhanging loads, overhangs or loading ramps of goods vehicles or the borders of parking spaces, are not detected during measurement of the parking space. These are also then not taken into account when calculating the parking procedure. In some circumstances, Active Parking Assist may therefore guide you into the parking space prematurely or brake too late.

Certain environmental conditions, such as snowfall or heavy rain, may lead to a parking space being measured inaccurately. Parking spaces that are partially occupied by trailer drawbars might not be identified as such or be measured incorrectly. Only use Active Parking Assist on level, high-grip ground.

⚠ WARNING Risk of accident due to objects located above or below the detection range of Active Parking Assist

If there are objects above or below the detection range, the following situations may arise:

- Active Parking Assist may steer too early.
- The vehicle may not stop in front of these objects.

This could cause a collision.


▶ In these situations, do not use Active Parking Assist.

Active Parking Assist can also display unsuitable parking spaces, e.g. parking spaces in which parking is not permitted or parking spaces on unsuitable surfaces.


Do not use Active Parking Assist in the following situations:

- In extreme weather conditions such as ice, packed snow or in heavy rain.
- When transporting a load that protrudes beyond the vehicle.
- If the parking space is on a steep downhill or uphill gradient.
- When snow chains are fitted.
- Directly after a tyre change or when spare tyres are fitted.
- If the tyre pressure is too low or too high.
- If the suspension is out of alignment, e.g. after bottoming out on a kerb.
- On steep inclines of more than approximately 15%.

Parking with Active Parking Assist

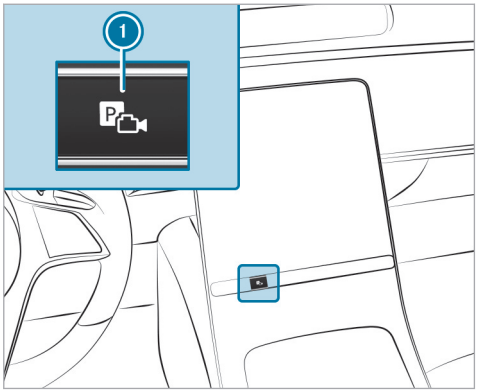


▶ Press button 1.

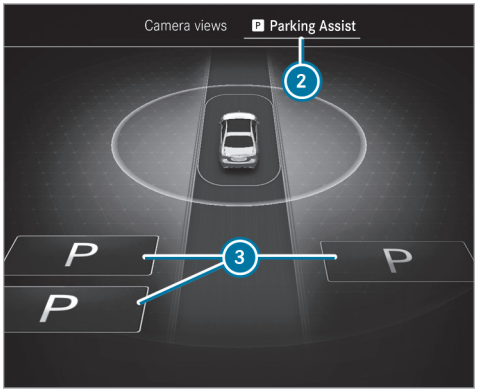

▶ Select Parking Assistance menu 2.

Parking spaces 3 detected by the system are shown in the central display.

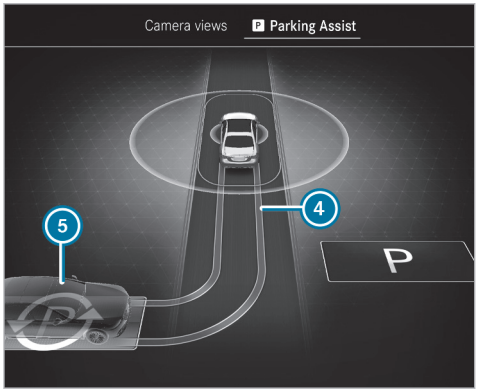

When the vehicle is stationary, indicated vehicle path (4) into currently selected parking space (5) also appears.

- If parking spaces are displayed: bring the vehicle to a standstill.
- If necessary, select another parking space.
- To change the parking direction, tap the selected parking space again.
- **To start the parking procedure:** press button (1) again.
  The vehicle drives into the selected parking space.

The turn signal indicator is switched on automatically when the parking procedure begins. You are responsible for selecting the turn signal indicator in accordance with the traffic conditions. If necessary, select the turn signal indicator accordingly.

⚠ **WARNING** Risk of accident due to vehicle swinging out while parking or pulling out of a parking space

While parking or exiting a parking space, the vehicle swings out and can drive onto areas of the oncoming lane.

This could cause you to collide with objects or other road users.

- Pay attention to objects and other road users.
- Where necessary, stop the vehicle or cancel the parking procedure with Active Parking Assist.

On completion of the parking procedure, the Active Parking Assist finished, take control of vehicle display message appears.

- Secure the vehicle against rolling away. When required by legal requirements or local conditions: turn the wheels towards the kerb.

ⓘ You can stop the vehicle and change the transmission position during the parking procedure. The system then calculates a new vehicle path. If no new vehicle path is available, the transmission position can be changed again, or the process can be cancelled. You can also interrupt the parking procedure by braking, for example, to let people in or out of the vehicle. The parking procedure can then be continued by briefly pressing the accelerator pedal.


Exiting a parking space with Active Parking Assist

Requirements:

- The vehicle has been parked with Active Parking Assist.

- Start the vehicle.

- Press button 1.

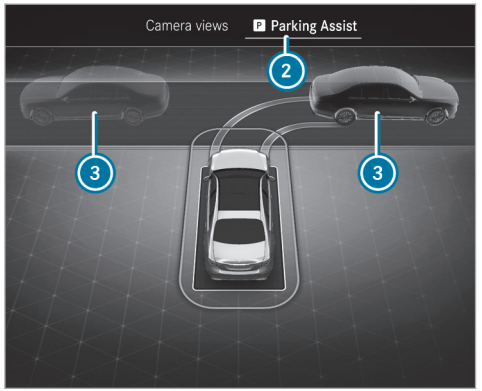

- Select Parking Assistance menu 2.
- If necessary, change direction of exit 3.
- **To start exiting the parking space:** press button 1 again.
- If necessary, change the transmission position. Observe any messages displayed in the driver display and central display.
  The vehicle moves out of the parking space.

The turn signal indicator is automatically switched on when exiting a parking space begins and switched off when it is completed. You are responsible for selecting the turn signal indicator in accordance with the traffic conditions. If necessary, select the turn signal indicator accordingly.

After the parking space has been exited, a warning tone and the Active Parking Assist finished, take control of vehicle message prompt you to take control of the vehicle. You have to accelerate, brake, steer and change gear yourself again.

If you do not react to the prompt to take control of the vehicle, the system will brake the vehicle to a standstill.

Function of Remote Parking Assist

ⓘ Remote Parking Assist is an additional function of Active Parking Assist. Comply with local traffic laws and regulations when using Remote Parking Assist on public roads.
If it is required to turn the wheels toward the kerb, you cannot use Remote Parking Assist.
Please note that you can only use Remote Parking Assist if you have a valid driving licence and are in a fit state to drive.

Remote Parking Assist parks your vehicle while you are outside of your vehicle. You can monitor the manoeuvring and parking procedure on your mobile phone.

With Remote Parking Assist, you can carry out all the parking procedures of Active Parking Assist. You can also position the vehicle directly in front of a garage or a driveway entrance and then use Remote Parking Assist to enter or exit a parking space.

Remote Parking Assist changes gear, accelerates, brakes and steers the vehicle. While Remote Parking Assist is active, the vehicle is locked.

Remote Parking Assist is only an aid. It is not a substitute for your attention to the surroundings. The responsibility for safe manoeuvring and parking remains with you. Interrupt or terminate the

parking procedure if necessary. Make sure that no persons, animals or objects etc. are in the manoeuvring range. Make sure to also pay attention to other vehicles.

System limits

If the system detects a malfunction or a system limit during the manoeuvring or parking procedure, the procedure will be cancelled:

- The vehicle is brought to a standstill.
- Transmission position P is selected and the electric parking brake is applied automatically.
- The engine is switched off.
- The vehicle remains locked.

If the parking manoeuvre is cancelled, a corresponding message is displayed on the mobile phone.

Depending on the situation, you can then take control of the procedure, manoeuvre the vehicle back to the starting position or manually take control of the vehicle.

The system limits of Active Parking Assist apply (→ page 266).

Certain environmental conditions, such as snowfall or heavy rain, may lead to a parking space being measured inaccurately or to connection problems with the mobile phone. Only use Remote Parking Assist on level, high-grip ground.

During the parking procedure, you should not stand more than approx. 3.0 m away from the vehicle. At greater distances, the procedure will be interrupted and a corresponding message will be displayed on the mobile phone. If you move closer to the vehicle, you will be able to continue the procedure.

Operating Remote Parking Assist

Requirements:
For the Remote Parking Assist function, you require a mobile phone and the current Remote Parking Assist App for your vehicle type.

The following operating systems are supported:

- Android™
- Apple® iOS

⚠ WARNING Danger due to insufficient view of the vehicle surroundings

If you manoeuvre, park or exit a parking space with the vehicle using Remote Parking Assist, observe the following:

- ▶ Make sure that you have the best view possible of the vehicle and the vehicle's surroundings.
- ▶ Make sure that no persons, animals or objects are in the path of your vehicle.
- ▶ Make sure that you maintain a suitable distance to the vehicle and that neither you nor other road users could be endangered.
- ▶ Be aware of the vehicle's surroundings at all times and identify possible dangers.
- ▶ If necessary, cancel the parking procedure.


No persons or pets are permitted to remain in the vehicle during the parking procedure. Observe the system limits at all times. If necessary, cancel the

parking procedure. Always make sure that others can access their vehicles.


- To activate the "Remote Parking Assist" service on the Mercedes me Homepage: https://www.me.mercedes-benz.com/.
- Authorise the mobile phone using the Remote Parking Assist App in the vehicle (→ page 274).

Selecting the parking manoeuvre in advance while inside the vehicle

- Stop the vehicle and select transmission position P.

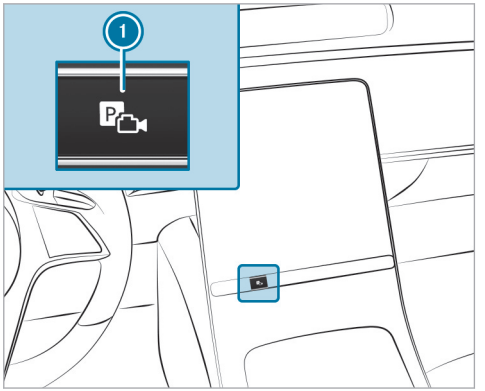

- Press button 1.

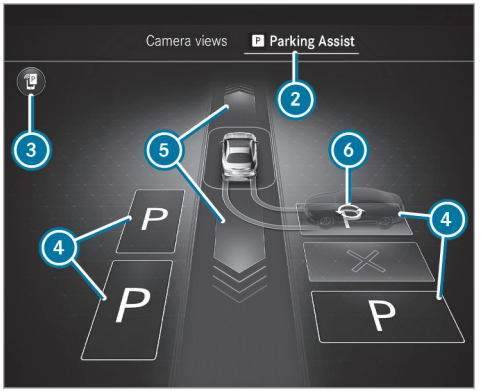

- Select Parking Assistance menu 2.
- For further information on Remote Parking Assist: select 3.
- If necessary, select another parking space 4 or exploration mode 5 to drive straight ahead, into a garage for example.
- If necessary, change parking direction 6.

ⓘ Alternatively, you can begin the parking procedure with Active Parking Assist (→ page 268) and continue with Remote Parking Assist from any vehicle position. To do this, stop the vehicle during the parking procedure and select transmission position P.

▶ Switch off the ignition, exit the vehicle and take the key with you.

Starting the parking procedure without selecting in advance

▶ Stop the vehicle and select transmission position P.

▶ Switch off the ignition, exit the vehicle and take the key with you.

Starting the parking procedure while outside the vehicle

▶ Unlock the vehicle.

Carrying out a parking procedure with Remote Parking Assist

ⓘ Keep the vehicle key with you during the parking procedure. You can cancel the parking procedure and bring the vehicle to a standstill by pressing a button on the key.

ⓘ On completion of the parking procedure, the vehicle is locked.

If you have started the parking procedure as described above, the vehicle is ready to connect to your mobile phone for a limited time.

▶ Start the Remote Parking Assist App on the mobile phone and connect to the vehicle.

▶ Follow the instructions of the Remote Parking Assist App.

ⓘ The indicator is automatically switched on when the parking procedure is started and switched off when it is completed.

ⓘ If the connection between the vehicle and the mobile phone is interrupted while a parking manoeuvre is being performed, the manoeuvre can be continued if the connection is re-established within a short time.

⚠ WARNING Risk of accident due to vehicle swinging out while parking or pulling out of a parking space

While parking or pulling out of a parking space, the vehicle swings out and can drive onto areas of the oncoming lane.

This could cause you to collide with objects or other road users.

▶ Pay attention to objects and other road users.

▶ Where necessary, stop the vehicle or cancel the parking procedure with Remote Parking Assist.

ⓘ The outside mirrors are not automatically folded out after exiting a parking space.

▶ After ending the parking procedure, ensure that all vehicle doors, windows and the boot are closed. Secure the vehicle against rolling away.

Cancelling the parking procedure

You can cancel the parking procedure of Remote Parking Assist at any time and bring the vehicle to a standstill.

- Cancel the parking procedure in the Remote Parking Assist App.

or

- Press a button on the vehicle key.

or

- Pull a door handle.

Authorising/de-authorising a mobile phone for Remote Parking Assist

Multimedia system:

→ ⌂ ▸▸ Settings ▸▸ Assistance ▸▸ Parking

Authorising a new mobile phone

In order to be able to use the Remote Parking Assist function, you must authorise your mobile phone. You can authorise up to six mobile phones.

- Select Remote Parking Assist.
- Select Authorise a new device.
  Remote Parking Assist is ready to connect.
- Start the Remote Parking Assist App and additionally start the authorisation process.
  A connection prompt is displayed.
- Scan the QR code on the central display.
  The mobile phone is authorised.

De-authorising mobile phones

- Select Remote Parking Assist.
- Select Deauthorise devices.
- **To de-authorise a mobile phone:** select a mobile phone.
  The mobile phone is deleted from the device list.
- **To de-authorise all mobile phones:** select Deauthorise all devices.
  All mobile phones are deleted from the device list.

Manoeuvring assistant

Function of Drive Away Assist

Drive Away Assist can reduce the severity of an impact when pulling away. If the system detects an obstacle in the direction of travel, the vehicle's speed is briefly reduced to approximately 2 km/h.

A risk of collision may arise in the following situations, for example:

- If the driver mixes up the accelerator and brake pedals.
- If the driver engages an incorrect gear.
- If the driver depresses the accelerator pedal with too much force.

Drive Away Assist is active under the following conditions:

- If the vehicle was stationary and the transmission position was changed to R or D.
- If the vehicle has rolled less than approximately 1.0 m since being at a standstill.
- If the detected obstacle is less than approx. 1.0 m away.

ⓘ You can activate and deactivate Drive-away Assist (→ page 277).

If a critical situation is detected, the following symbol appears red in the selected view in the Camera & parking menu:



ⓘ If Drive Away Assist is not available, the same symbol appears in grey. If the Camera & parking menu is not opened in the central display, the symbol and pop-up of Parking Assist PARKTRONIC both appear.

Drive Away Assist is only an aid. It is not a substitute for your attention to the surroundings. The responsibility for safe manoeuvring and parking remains with you. Make sure that no persons, animals or objects etc. are in the manoeuvring range.

⚠ **WARNING** Risk of accident caused by limited detection performance of Drive Away Assist

Drive Away Assist cannot always clearly identify objects and traffic situations.

- Always pay careful attention to the traffic situation; do not rely on Drive Away Assist alone.
- Be prepared to brake or swerve as necessary, provided the traffic situation permits and that it is safe to take evasive action.

System limits

The system limits of Active Parking Assist apply (→ page 266).

On uphill gradients, the performance of Drive Away Assist is restricted.

Function of cross traffic warning

The cross traffic warning can warn you of crossing traffic when you are reversing out of a parking space. The radar sensors in the bumper also monitor the area adjacent to the vehicle.

The cross traffic warning is automatically active when you reverse at a speed of less than approximately 10 km/h.

If a critical situation is detected, the following symbol appears in red in the selected view in the Camera & parking menu:



The vehicle can be automatically braked.

ⓘ If the cross traffic warning is not available, the same symbol appears in grey. If the Camera & parking menu is not opened in the central display, the symbol and pop-up of Parking Assist PARKTRONIC both appear.

The cross traffic warning is only an aid and not a substitute for your attention to the surroundings. The responsibility for safe manoeuvring and parking remains with you. Make sure that no persons, animals or objects etc. are in the manoeuvring range.

⚠ **WARNING** Risk of accident caused by limited detection performance of the cross traffic warning

The cross traffic warning cannot always clearly identify objects and traffic situations.

- ▶ Always pay careful attention to the traffic situation; do not rely on the cross traffic warning alone.
- ▶ Be prepared to brake or swerve as necessary, provided the traffic situation permits and that it is safe to take evasive action.

System limits

The system limits of Active Parking Assist apply (⟶ page 266).

If the radar sensors are obstructed by vehicles or other objects, detection is not possible.

In the following situations, the cross traffic warning is not available:

- on inclines

Manoeuvring brake function

The manoeuvring brake function can prevent collisions with pedestrians when the vehicle is reversing at slow speeds. If the reversing camera detects a person in the vehicle path, the vehicle can be braked to a standstill.

The manoeuvring brake function can intervene under the following conditions:

- The vehicle is reversing at a speed slower than 10 km/h.
- The camera image is shown in the central display (⟶ page 262).

ⓘ You can activate and deactivate the manoeuvring brake function (⟶ page 277).

If the manoeuvring brake function is triggered, the following symbol appears in red in the selected view in the Camera & parking menu:



ⓘ If the manoeuvring brake function is not available, the same symbol appears in grey. If the Camera & parking menu is not opened in the central display, the symbol and pop-up of Parking Assist PARKTRONIC both appear.

The manoeuvring brake function is only an aid. It is not a substitute for your attention to the surroundings. The responsibility for safe manoeuvring and parking remains with you. Make sure that no persons, animals or objects etc. are in the manoeuvring range.

⚠ **WARNING** Risk of accident caused by limited detection by the manoeuvring brake function

The manoeuvring brake function cannot always clearly detect people. Other obstacles are not detected by the function.

In these cases, the function may brake unnecessarily or not brake at all.

- ▶ Always pay careful attention to the traffic situation; do not rely on the manoeuvring brake function alone.
- ▶ Be ready to brake.

System limits

Observe the system limits of the following functions:

- Active Parking Assist (⟶ page 266)
- 360° Camera (⟶ page 258)

The manoeuvring brake function is not available in the following situations:

- on inclines

Activating/deactivating manoeuvring assistant

Multimedia system:

⮑ ⌂ ⏩ Settings ⏩ Assistance ⏩ Parking

▶ Select Manoeuvring assistance.

▶ Activate or deactivate the desired manoeuvring assistant.

ⓘ Manoeuvring assistant systems must be active for the function of Drive Away Assist (⟶ page 274) and the manoeuvring brake function (⟶ page 276).

Vehicle towing instructions

The vehicle is not suitable for the use of tow bar systems that are used for flat towing or dinghy towing, for example. Attaching and using tow bar systems can lead to damage on the vehicle. When you are towing a vehicle with tow bar systems, safe driving characteristics cannot be guaranteed for the towing vehicle or the towed vehicle. The vehicle-trailer combination may swerve from side to side. Comply with the permitted towing methods (⟶ page 361) and the instructions for towing with both axles on the ground (⟶ page 362).

Notes on the driver display

WARNING Risk of accident due to a driver display malfunction

If the driver display has failed or malfunctioned, the function restrictions applying to safety relevant systems are not visible.

The operating safety of your vehicle may be impaired.

- ▶ Drive on carefully.
- ▶ Have the vehicle checked immediately at a qualified specialist workshop.

If the operating safety of your vehicle is impaired, park the vehicle immediately and safely. Contact a qualified specialist workshop.

The driver display shows basic information such as speed, engine speed, fuel level and coolant temperature.

Additional functions available to you include the following:

- Different menus, for Assistance and Navigation
- Status displays for the driver assistance systems
- Display messages
- Indicator and warning lamps
- Information on Consumption and range

The menu contents and settings can be individually adjusted and set.

Notes on the 3D driver display

The 3D driver display enables a spatial representation of the content of the driver display. It is a prerequisite that the driver be recorded by the driver camera.

System limits

The system may be impaired or may not function in the following situations:

- The driver camera is deactivated or is not working.
- The driver is outside the detection range of the driver camera.
- The operating conditions are not in place, e.g. if the outside temperature is too low or too high.

Operating the driver display


WARNING Risk of distraction from information systems and communications equipment

If you operate information and communication equipment integrated in the vehicle when driving, you will be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- ▶ Only operate this equipment when the traffic situation permits.
- ▶ If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

Observe the legal requirements for the country in which you are currently driving when operating the driver display.

Scrolling on the menu bar

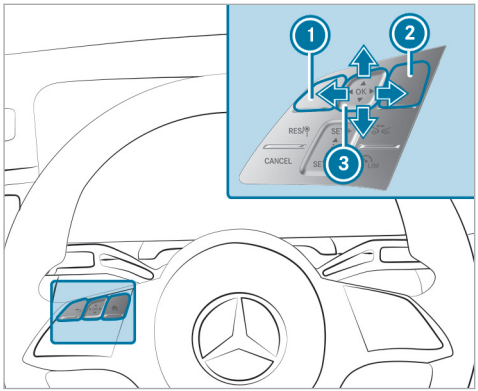

1 Back button
2 Main menu button
3 Touch Control

The content of the driver display is controlled using the control elements on the left side of the steering wheel. Touch Control 3 is used to navigate in a vertical and horizontal direction with one finger. Confirm the selection by pressing the Touch Control.

ⓘ To operate Touch Control 3 in the most effective way, use the tip of your thumb if possible. You can also set the sensitivity of the Touch Control on the central display (→ page 299).

- Briefly press main menu button 2.
- Select a menu by swiping to the left or right on Touch Control 3.
- Press Touch Control 3 to confirm.

Menus on the driver display

Notes on the menus on the driver display

⚠ **WARNING** Risk of distraction from information systems and communications equipment

If you operate information and communication equipment integrated in the vehicle when driving, you will be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- Only operate this equipment when the traffic situation permits.
- If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

Observe the legal requirements for the country in which you are currently driving when operating the driver display.

The following menus can be called up via the menu bar on the driver display:

- Understated
- Sport
- Maybach
- Classic
- Navigation
- Assistance
- Service

In some of these menus, you can select between different display content on the centre display area.

In most of the menus, you can use Options to configure further settings for the menu-specific display content.

ⓘ You can find further information about the possible settings and selections on the menus in the Digital Owner's Manual.

Head-up display

Function of the head-up display


The head-up display projects various content into the driver's field of vision, for example.

You can use the head-up display menu bar to select different contexts, e.g.:

- Minimal
- Sport
- Standard
- Augmented reality
- ECO display
- Settings
- Head-up display

The following image shows an example of the context with augmented reality.

Head-up display with navigation and augmented reality (10x5°)

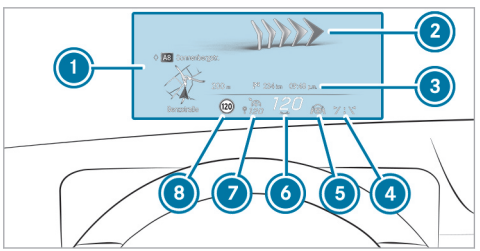

1. Navigation instructions
2. Augmented reality navigation instructions
3. Navigation status displays, such as remaining distance to the destination, expected time of arrival
4. Active Lane Keeping Assist status
5. Steer Assist status
6. Current speed
7. Set speed in the driver assistance system (e.g. Active Distance Assist DISTRONIC)
8. Detected traffic signs (Traffic Sign Assist)

When you receive a call, the Call waiting message will appear on the head-up display.

System limits

Visibility is particularly influenced by the following conditions:

- Seat position
- Image position setting
- Light conditions
- Wet road surfaces
- Objects on the display cover
- Polarisation in sunglasses

Function of the head-up display with augmented reality

WARNING Risk of accident and injury due to distraction as well as incorrect representation or interpretation of the display

When driving, you should not base your actions on the augmented reality display of the head-up display.

- Always keep an eye on the actual traffic situation.
- Avoid looking at the augmented reality display of the head-up display for an extended period of time.


WARNING Risk of accident and injury due to imprecise positioning of additional information

The additional information from the augmented reality display is not a substitute for observing the actual driving situation.

- Always keep an eye on the actual traffic situation when carrying out all driving manoeuvres.

The head-up display with augmented reality projects content into the driver's field of vision, such as:

- Information from and visualisation of the navigation system
- Information and visualization of the driver assistance systems, e.g. Active Distance Assist DISTRONIC
- Information from the menus of the driver display

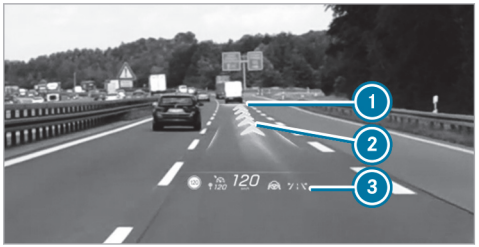

Head-up display with augmented reality (example)

1. Marker of the detected vehicle in front (Active Distance Assist DISTRONIC)
2. Change-of-direction arrows for the route (navigation)
3. Status line for driver assistance systems

The marker of the detected vehicle in front and the change-of-direction arrows for the route are dynamic displays. The vehicle marker stays with the vehicle in front, and Active Distance Assist regulates your speed based on this. The change-of-direction arrows point the way calculated by the navigation system.

System limits
Route guidance with augmented reality is not available in some situations, e.g. in the event of poor satellite reception or roads that have not been digitised.

Visibility is influenced by the following conditions:

- Driver camera and multifunction camera recording
- The extent to which the windscreen in the area of the multifunction camera is dirty, or if the camera is misted up, damaged or obscured.

Further system limits of the head-up display (→ page 280).

Operating the head-up display

Selecting display content of the head-up display via the menu bar of the driver display

- Press the ⌂ main menu button on the left.
- **To select the menu bar of the head-up display:** swipe upwards on the left-hand Touch-Control.



- **To switch between types of display content on the head-up display:** swipe to the left or right on the left-hand Touch Control.
  The head-up display shows a preview of the selected display contents after each swipe.
- Press the OK button to confirm the desired content.

Switching back to the driver display

- Press the ↩ or ⌂ button.

Setting the position and brightness

- On the menu bar of the head-up display, select the Settings menu by swiping to the left or right.
- Press the left-hand Touch Control.
  The current position and brightness settings will be displayed graphically on the head-up display as well as on the driver display.
- **To adjust the position:** swipe upwards or downwards on the left-hand Touch Control.
- **To adjust the brightness:** swipe to the right or left on the left-hand Touch Control.
  The settings configured for position and brightness will be saved automatically.
- Press the ↩ or OK button to exit the settings.

ⓘ **Vehicles with augmented reality function:** when the position is adjusted, the status bar will be moved upward and the display area reduced. This may impair visibility of the augmented reality slightly.

Selecting the head-up display with augmented reality

- Press the ⌂ main menu button on the left.

- **To select the menu bar of the head-up display:** swipe upwards on the left-hand Touch-Control.

or

- Press and hold the OK button.
- **To select the head-up display with augmented reality:** swipe to the left or right on the left-hand Touch-Control to activate the desired content.

Switching the Head-up Display on/off

Driver display:

→ ⌂

Switching on

- Swipe upwards on the left-hand Touch Control.
  Head-up display will appear.
- Press left-hand Touch Control OK.

Switching off

- Swipe upwards on the left-hand Touch Control.

- Select Head-up display by swiping on the left-hand Touch Control.
- Press left-hand Touch Control OK.

Setting the Head-up Display in the multimedia system

Multimedia system:

→ ⌂ » ★ » 🚗

Switching the 3D display for the driver display on or off

- Select 3D Driver Display.
  The 3D display of the driver display is switched on or off.


ⓘ The 3D display for the driver display is only activated when the driver camera detects the driver. Otherwise, the driver display switches from the 3D display to the 2D display (→ page 278).

Switching the head-up display on/off

- Select Head-up display.
  The Head-up Display is activated or deactivated.

P223 0210 02

Vehicles with a 48 V on-board electrical system (EQ Boost technology)

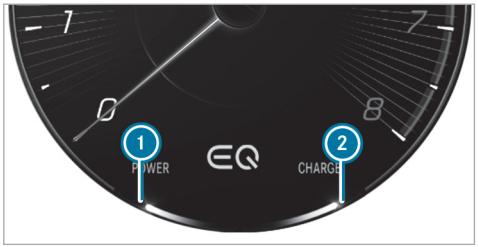


1 POWER shows the electric drive support.
2 CHARGE shows the recuperation power of the electric motor.

READY shows the drive system's operational readiness.

Overview of status displays on the driver display

The status displays for the driving and driving safety systems can be found in areas 1 to 4.

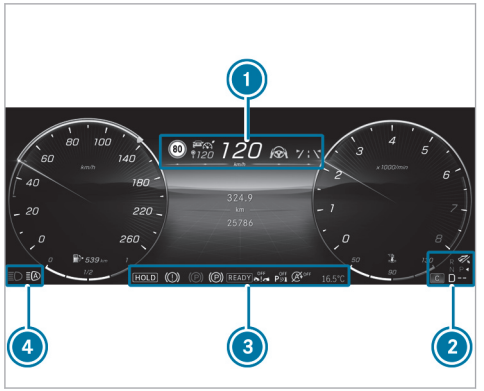

- Pedestrian detection (only on assistant display)
- Active Parking Assist is available (→ page 268)
- Active Parking Assist has detected a parking space (→ page 268)
- Parking Assist PARKTRONIC deactivated (→ page 265)
- Active Distance Assist DISTRONIC (→ page 228)
- Specified distance for Active Distance Assist DISTRONIC (→ page 228)
- Active Brake Assist switched off (→ page 246)
- Active Brake Assist impaired or not functioning (→ page 246)
- Active Steering Assist (→ page 236)
- Active Lane Change Assist (→ page 239)
- Active Lane Keeping Assist (→ page 254)
- Active Blind Spot Assist (only on assistant display) (→ page 252)
- Haptic accelerator pedal (→ page 201)
- ECO start/stop function (→ page 200)
- HOLD function (→ page 224)
- Adaptive Highbeam Assist Plus (→ page 166)
- Maximum permissible speed exceeded (for certain countries only)
- Active Stop-and-Go Assist (→ page 236)

Vehicles with Traffic Sign Assist: detected instructions and traffic signs (→ page 246).

Overview and operation

Notes on the MBUX multimedia system


WARNING Risk of distraction from information systems and communications equipment

If you operate information and communication equipment integrated in the vehicle when driving, you will be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- Only operate this equipment when the traffic situation permits.
- If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

Overview of the MBUX multimedia system

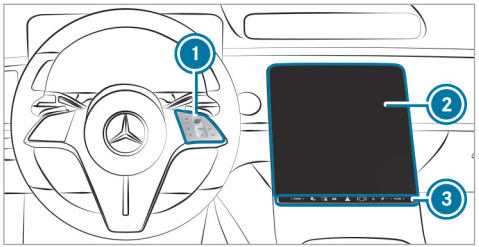

1. Touch Control and control panel for the MBUX multimedia system
   MBUX stands for Mercedes-Benz User Experience.
   - Operating Touch Control
2. Central display with touch functionality
   - Home screen overview
   - Operating the touchscreen
3. Control panel with fingerprint sensor [▣], switches the MBUX multimedia system on or off [⏻], switches the mute function on or off [🔇] and adjusts the volume [-/+]

Further operating options:


- Conducting a dialogue with the MBUX Voice Assistant.
- Operating functions contact-free with the MBUX Interior Assistant.
  The interaction then follows intelligently, reactively or with hand or head movements.
- If the vehicle is equipped with a driver camera, functions can be triggered via "Look & Answer".

ⓘ You can find further information about operation as well as about applications and services in the Digital Owner's Manual.

Anti-theft protection

This device is equipped with technical provisions to protect it against theft. More detailed information about anti-theft protection can be obtained at a qualified specialist workshop.

Home screen overview

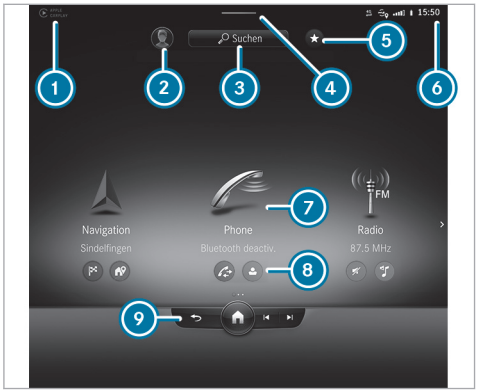

1. Status line
2. Calls up user profile settings and switches user
3. Uses the global search
4. Calls up the Control Centre (pull down)
5. Calls up favourites
6. Displays in the status line
7. Calls up applications
8. Quick-access to application
9. Global menu
   - Calls up previous menu
   - Calls up the home screen
   - Previous track or previous radio station
   - Next track or next radio station


   Active call: display of the call duration

In the image, the applications are arranged as a carousel. Pressing and holding on arranges the applications in a grid. This presentation is also used by a smartphone, for example.

The following functions are called up in the Control Center:

- Notifications Center
- Content sharing menu
- Favourites
- Vehicle quick-access

Content sharing menu

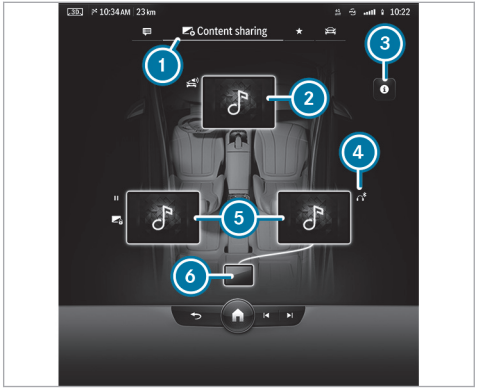

Example: showing displays

1. Calls up a menu
2. Central display with active content (cover display)
3. Displays animation for content sharing
4. Bluetooth® headphones connected to the right rear display


5 Rear displays with active content (cover display)
6 MBUX rear tablet

To share content, drag a display and drop it over another display.

To control media playback, tap a display.

Operating the MBUX multimedia system

Using Touch Control

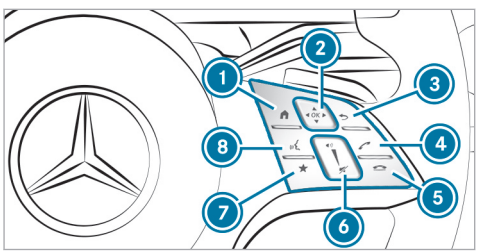


1 ⌂ Shows the home screen
2 Touch Control

◀ ▲ ▶ ▼ swipe in the direction of the arrow (navigate)
OK Press (confirm)
3 ↩ Returns to the previous display
4 Makes or accepts a call
5 Rejects or ends a call
6 Increase volume: swipe upwards
Reduce volume: swipe down
Switch off the sound: press
7 ★ Calls up favourites (press briefly) or adds favourites (press and hold)
8 Starts the MBUX Voice Assistant

You can navigate through menus and lists via the touch-sensitive surface of Touch Control 2 using **a single-finger swipe**, for example:

- **To enter a character:** select a character using the keyboard and press on Touch Control 2.
- **To select a menu option:** scroll in a list and press Touch Control 2.
- **To move the digital map:** swipe in any direction.

Using the touchscreen

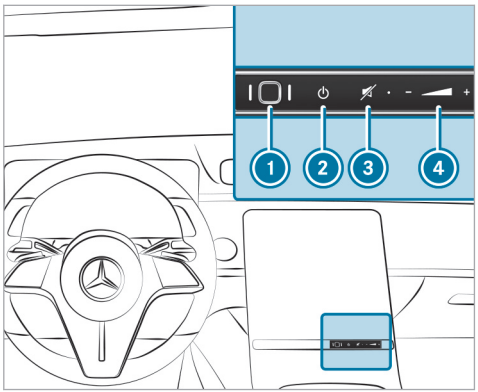

1 Fingerprint sensor
2 Switches the MBUX multimedia system on or off
3 Switches the mute function on/off
4 Adjusts the volume
Press − or + or swipe over the button

- **To select a menu item or entry:** tap on a symbol or an entry.
- **To increase the map scale:** tap twice quickly with one finger.
- **To reduce the map scale:** tap with two fingers.
- **To enter characters with the keypad:** tap on a button.
- **To navigate in menus:** swipe up, down, left or right.
- **To use handwriting to enter characters:** write the character with one finger on the touchscreen.
- **To zoom in and out of the map:** move two fingers together or apart.
- **To enlarge or reduce the size of a section of a website:** move two fingers together or apart.
- **To turn the digital map:** turn anti-clockwise or clockwise using two fingers.
- **To move the digital map:** touch the touchscreen and move your finger in any direction.
- **To save the destination in the digital map:** touch the touchscreen and hold until a message is shown.
- **To call up the home screen:** swipe up with three fingers in an application.
- **To set the volume on a scale:** touch the touchscreen and move the finger to the left or right.
- **To call up a global menu in the applications:** touch the touchscreen and hold until the Options menu appears.

Function of the MBUX Voice Assistant

Using the MBUX Voice Assistant, vehicle functions and various areas of the MBUX multimedia system can be operated by voice input. The MBUX Voice Assistant is operational approximately half a minute after switching on the ignition and can be operated from all seats. Further information and examples of voice commands can be found in the Digital Owner's Manual.

You can use the MBUX Voice Assistant to operate the following functions depending on the vehicle equipment:

- Telephone
- Text message and e-mail
- Navigation
- Radio, media, TV
- Vehicle functions
- Online functions

Full functionality of the voice control system is only available for you with activation of online voice control .

Conducting a dialogue

Starting a dialogue

- Say "Hey Mercedes" to activate the MBUX Voice Assistant. Voice activation must be switched on in the multimedia system.

or

- Press the button on the multifunction steering wheel.
  A blue line appears in the MBUX multimedia system. The dialogue can be started.

For the dialogue with the MBUX Voice Assistant, you can use complete sentences of colloquial language as voice commands. Voice activation can also be directly combined with a voice command, e.g. "Hey Mercedes, how fast can I drive?".

Calling up help

- **For information about the MBUX Voice Assistant:** say "Hey Mercedes, what can you do?"
- **Digital Owner's Manual:** "Show me the Owner's Manual". The full extent of the Digital Owner's Manual is available when the vehicle is stationary.

Operating functions (examples)

- **To operate the navigation:** "Search for an Asian restaurant, but not Japanese, in South London."
- **To operate the phone:** "Call my father."
- **To change the system language to English (short command):** "Change language to English".
- **To operate the radio:** "Show me the list of radio stations."
- **To operate media:** "Switch on random playback."
- **To operate vehicle functions:** "Switch the seat heating to level 2."
- **To operate online functions:** "What's the time in Sydney?"
- **To ask a question about the vehicle:** "Do I have Blind Spot Assist?"

Overview of the MBUX Interior Assistant

WARNING Risk of injury from the camera's laser radiation

This product uses a classification 1 laser system. If the housing is opened or damaged, laser radiation may damage your retina.

- Do not open the housing.
- Always have maintenance work and repairs carried out by a qualified specialist workshop.

This device is a class 1 laser product in accordance with DIN EN 60825-1:2014

You can activate or deactivate Interior Assistant functions, e.g. Light. The settings are saved in your current user profile and are seat-specific. Via the user profile they are also available in another vehicle with the MBUX Interior Assistant. This means that you only have to make the settings once and can take them with you to the other vehicle.

You can switch the Interior Assistant front and rear camera on and off using Front and Rear . The selected camera settings (on/off) are not saved in the user profile and only apply to the current vehicle. If you change to another vehicle with the MBUX Interior Assistant, please check the settings and adjust them if necessary.

The MBUX Interior Assistant is equipped with front and rear cameras.


ⓘ Alternatively, a configuration with front camera only is also available.

The front camera consists of two cameras that support the driver and the front passenger.


The rear camera consists of two cameras that support the left and right rear seat passengers.

The MBUX Interior Assistant records the vehicle occupants via 3D laser cameras. The cameras of the front camera are located in the overhead control panel. The cameras of the rear camera are located in the roof bows.

The Assistant detects interactions of the vehicle occupants via the cameras. It interprets the natural hand, head and body movements of the vehicle occupants either in context or at their explicit request. The Assistant can thus automatically trigger vehicle interior functions and assist appropriately to the situation.

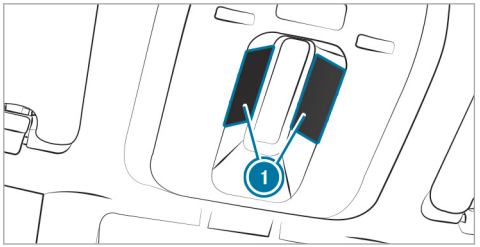

1 Arrangement of the cameras of the front camera in the overhead control panel

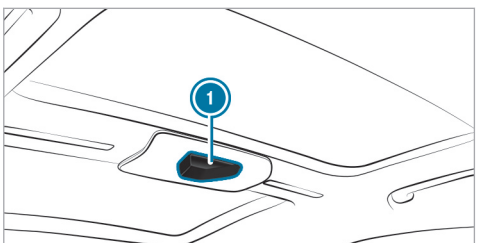

1 Arrangement of the rear camera in the roof bows

P223 0210 02

The Assistant supports vehicle and infotainment functions at three interaction levels:

- INTELLIGENT

  The Assistant recognises vehicle occupants automatically and activates functions.
- REACTIVE

  The Assistant recognises the natural body language of a vehicle occupant and carries out functions automatically, appropriate to the situation.
- CONTACTLESS

  The vehicle occupant actively requests a function using a hand movement or pose.

The Assistant offers functions for the following:

- SAFETY

  The Assistant supports vehicle occupants with the use of restraint systems.
- COMFORT

  The Assistant enhances comfort by automating functions inside the vehicle and supporting natural interaction with the vehicle.
- INFOTAINMENT

Operating options or information are highlighted and/or shown on the central display as your hand approaches. The vehicle occupants can carry out a favourite function with a hand pose.

System limits, display messages and notes for rectification

The error messages are shown in the central display, for example.

The system may be impaired or may not function in the following situations:

- The cameras may heat up during operation. As a result the cameras may switch off temporarily, particularly during longer periods of operation and at high outside temperatures.

  Do not touch or cover the cameras and wait until the cameras have cooled down and are available again.

  The Interior Assistant is temporarily unavailable. You will be informed as soon as the function is available again. message appears.

  You receive a message when the camera is available again.

- Front or rear camera is covered or dirty, fogged up or scratched.

  Wait until the camera has cooled down before cleaning the camera cover.

  The Interior Assistant is temporarily unavailable. Please refer to the Owner's Manual message appears.

  Clean the outside of the camera cover with a dry or damp cotton cloth. Do not use microfibre cloths. Do **not** remove the cover when cleaning.

- A vehicle occupant is very large. Clothing being worn (gloves, hat, scarf, colour of clothing) or objects carried on a person, for example a watch with a large face, are affecting the camera view. Or the detection range of the camera is restricted.

  The Availability of the Interior Assistant is limited for the driver. Please see the Owner's Manual message appears.

  Keep the camera's field of vision clear.

- The MBUX Interior Assistant is faulty.

  The Interior Assistant unavailable. Please visit a workshop. message appears.

  Consult a Mercedes-Benz service centre.

- Vehicles with rear bench seat: as soon as the centre rear seat is occupied, the rear seat functions are not supported.

  The Interior Assistant in rear seat only available if the centre seat is free. message appears.

  To use the Interior Assistant in the rear passenger compartment, keep the centre rear seat free.

Anticipatory exit warning (SAFETY/reactive)

Requirements:

- The vehicle is equipped with Active Blind Spot Assist with exit warning.
- Active Blind Spot Assist is activated (→ page 253).
- The vehicle is equipped with active ambient lighting or ambient lighting.
- The cameras are switched on:

The front camera activates the front doors.

The rear camera activates the rear doors.

ⓘ Observe the information on the system limits of Active Blind Spot Assist with exit warning (→ page 250).

The function can warn vehicle occupants about a possible collision with an approaching vehicle or bicycle when they exit the vehicle.

As soon as a vehicle occupant moves their hand towards the door handle, depending on the vehicle equipment, the following warnings are issued:

- The active ambient lighting or ambient lighting flashes red.
- The warning lamp in the outside mirror also flashes red for one of the front doors.
- When the door is opened, a warning tone sounds.

ⓘ The visual warning is thus already given **before** the door is opened.

ⓘ Further information on Active Blind Spot Assist with exit warning (→ page 250) and on ambient lighting (→ page 169).

Switching the reading light and search light and on or off

Requirements:

- **For the reading light:** the cameras are switched on:

  The front camera activates the reading light for driver and front passenger.

  The rear camera activates the reading light for the left and right rear seat passengers.
- The driver's and front passenger's hand movement takes place under the inside rearview mirror. Rear compartment passengers move their hand at the grab handle in front of the reading lamp.
- **For the search light:** the function is available in the vehicle when it is dark.

  The cameras are switched on:

  The front camera records the interaction area of the unoccupied front passenger seat.

  The rear camera records the interaction area of the unoccupied left or right rear seat.
- The seats covered are unoccupied or a child is sitting in a child restraint system.

P223 0210 02

Switching the reading light on and off



Carrying out operation of the reading light for the driver and front passenger




Carrying out operation of the reading light for rear occupants

- Move your hand up and down vertically under the inside review mirror.

or

- Move the hand on the grab handle vertically up and down in front of the reading light.
  The reading light is switched on or off.

Switching the search light on and off

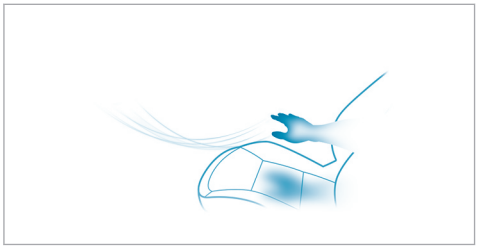

Interaction area for activating the search light

- **To switch on:** reach with your hand into the area of an unoccupied seat.
  The search light is switched on automatically for the vehicle occupants.
- **To switch off:** withdraw the hand from the area of the unoccupied seat.
  The search light is switched off again.

Automatic preselection of the outside mirror (COMFORT/reactive)

Requirements:

- The front camera is switched on.

Until now, to set the outside mirror the desired mirror had to be selected using a preselection button in the driver's door.

With the MBUX Interior Assistant, the mirror to be set is preselected automatically by the natural movement of your head to the left or right. When the hand touches the button for adjusting the outside mirror, the LED under the button of the preselected mirror side lights up.

Use the button to set the position of the active outside mirror.

ⓘ Preselection of the outside mirror using buttons is still possible. Further information on adjusting the outside mirrors (→ page 173).

ⓘ The driver camera is also used for this application.

Calling up favourites with the V pose (INFOTAINMENT/contactless)


Requirements:

- The front camera is switched on.
- At least one favourite has been saved in the favourites list.
- The favourite has been connected with the MBUX Interior Assistant.
- The area for detecting the favourites pose (V pose) is above the centre console in front of the central display.
- The V pose is held for a brief time.

The V pose makes it easier to call up favourites.

The front vehicle occupants can associate their own favourite with the V-pose. Some examples include a navigation destination, a radio station or a massage programme for a seat.

ⓘ If a favourite has not yet been saved and connected with the MBUX Interior Assistant, the multimedia system will assist you.

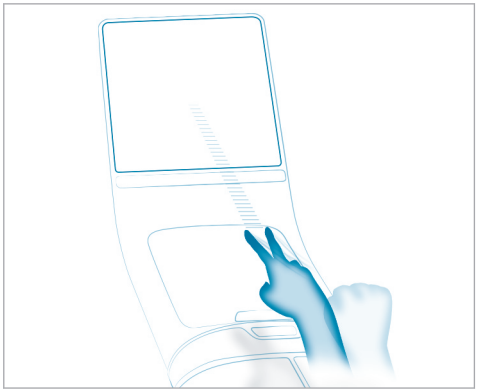

Implementation of the V-pose above the stowage compartment of the centre console at the height of the central display

▶ Position your hand above the stowage compartment of the centre console at the height of the central display. The back of your hand is facing upwards. In doing so, your index and middle finger are spread to form a V. With your other fingers bent inwards. Briefly hold the V pose.
The favourite is called up.

Function of the driver camera

The driver camera is in the driver's display or in the 3D driver display.

The driver camera detects the following characteristics:

- Head position
- Viewing direction
- Eyelid closure characteristics
- Driver's face

ⓘ The driver camera records image data for applications such as ATTENTION ASSIST and facial recognition, for example.
The camera converts the image data directly into meta data. No image data is saved in the process. The data is only processed in the vehicle and is not transmitted from the vehicle.
The camera is activated automatically each time the engine is started.

The driver camera must be set up for face detection before use. Teaching-in biometric data (→ page 297).

System limits

The system may be impaired or may not function in the following situations:

- The camera is covered or dirty, misted up or scratched.
- The driver's face and/or eyes are covered.
- The driver is wearing glasses that block infrared.

Display messages

In the following situations display messages may be shown:

- The driver camera is inoperative.

  The camera is faulty.

  The Driver camera inoperative See Owner's Manual message appears.
- The driver camera cannot capture the position of your head.

  The Change steering wheel/ seat position until 6 dots are visible on the upper edge of the screen message appears.
- The view of the driver camera is reduced or restricted.

  The Driver camera view currently restricted See Owner's Manual message appears.

Notes on care

Please comply with the notes on caring for the interior (→ page 346).

Switching the driver camera on or off

Multimedia system:

↝ ⌂ ▸▸ Settings ▸▸ System ▸▸ Intelligent assistants

▶ Select On or Off.

When the driver camera is switched off, the following functions are not available or limited:

- The 3D driver display
- The MBUX augmented reality Head-up Display (→ page 280)
- The microsleep detection of ATTENTION ASSIST (→ page 225)
- The facial recognition

  This function serves as sensor input for authentication and unlocking of the user profile and protected applications (→ page 297).
- Multimodality

  This function activates the MBUX Voice Assistant with eye controll, e.g. for the confirmation of a display message by voice.

Information on users, suggestions and favourites

⚠ **WARNING** Risk of becoming trapped during adjustment of the driver's seat after calling up a driver profile

Selecting a user profile may trigger an adjustment of the driver's seat to the position saved under the user profile. You or other vehicle occupants could be injured in the process.

▶ Make sure that when the position of driver's seat is being adjusted using the mul-

timedia system, no people or body parts are in the seat's range of movement.

If there is a risk of someone becoming trapped, stop the adjustment process immediately:

▶ a) Tap the warning message on the central display.

or

▶ b) Press a memory position button or a seat adjustment switch on the driver's door.
The adjustment process will be stopped.

The driver's seat is equipped with an access preventer.

If the driver's door is open, the driver's seat will **not** be set after calling up the driver's profile.

User profiles and user-specific content

Prerequisites for the vehicle owner:

- You have a Mercedes me user account.
- You have a Mercedes me PIN.
- You have agreed to the terms of use.

User profiles save personal settings. If the vehicle is used by several people, a person can change their profile settings without changing the settings of other users.

You can individualise a user profile in the vehicle using the set-up assistant or using the settings in your user profile. Some settings, e.g. the Mercedes me PIN and a profile photo are made in the Mercedes me app or in the Mercedes me Portal.

User-specific content and applications with personal data are protected by different levels of security. To access protected content, the Mercedes me PIN and, depending on the vehicle equipment, biometric sensors can be used.

ⓘ The security level is set by the multimedia system and calculated from the combination of all sensor inputs. Some security levels cannot be turned off.

ⓘ When a user profile is activated, the following personalised comfort systems, for example, can be adjusted or their settings loaded:

- Seat
- Ambient light
- Outside mirrors
- Blinds
- Air conditioning adjustment

If the user profile is activated when driving then the driver's seat position will not be adjusted.

Depending on the vehicle equipment you can, as a user, save the following settings, for example:

- Driver's seat, steering wheel and mirror settings
- Climate control
- Ambient lighting
- Radio (including station list)
- Suggestions and favourites

Suggestions

The vehicle can learn the habits of the driver. It then makes suggestions regarding navigation destinations, phone numbers and music preferences. The pre-requirements for that are the selection of a user, your consent to the recording of data and sufficient collected data.

Favourites
Favourites offer you quick access to frequently used applications. 100 favourites are available in total.

Configuring users, suggestions and favourites

Requirements:
- To use the set-up assistant: the vehicle is stationary.

Multimedia system:
Change user

Adding a user

- Select ⊕ Add user .
  A QR code is loaded.
- Scan the displayed QR code with the Mercedes me app or any QR code scanner on a mobile device. If the Mercedes me app is not yet installed on your mobile device, you will be directed to the store of your mobile device.
- Follow the directions in the app.
  The vehicle is connected with your Mercedes me user account. This automatically creates your user profile in the vehicle.

  If only your user profile is available, it will be loaded automatically.

  If more than one user profile is available, you will be directed to the user selection.

  When the vehicle is stationary, the set-up assistant starts automatically after user selection.

Selecting user options

- Select Settings.
- **To configure suggestions:** select Suggestions settings.
- Select Suggestions.
- Switch the options on or off.
  If an option is switched on and sufficient data has been gathered, suggestions based on your user behaviour will be offered to you.
- **For intelligent multimodality:** select Multimodality.
  If the option is active, the MBUX Voice Assistant can be activated in certain situations.
- **To switch the learning function off for 24 h:** switch on Deactiv. intelligent learning for 24h.
- **To delete cumulated suggestions:** select Reset suggestion history.
- Select Ja (Yes).

Protecting user-specific content and applications
If you add a new user, access protection is already activated for the user profile. The Mercedes me PIN and, depending on the vehicle equipment, biometric sensors are available for access. Biometric sensors must be taught in in the vehicle. The authentication process then takes all taught-in and available sensors into account.

The following user-specific content and applications are protected, for example:
- User selection and user profile settings
- The teaching-in of biometric sensors
- Suggestions

The data and determination of the most probable navigation destinations, media sources, radio stations, contacts and messages are protected.

- ENERGIZING COACH

  The recorded health data and their evaluation are protected.
- Mercedes me connect store

  The purchase of services is protected.

▶ Switch Protect content on or off.

▶ Switch Access protection on or off.

ⓘ When access protection is switched off, your user profile can be accessed and changed from every vehicle seat.

ⓘ Access protection is switched on or off on a vehicle-specific basis.

Teaching in, editing and deleting biometric data

The biometric data models are saved in the sensors in the vehicle. If recognition has been taught-in, this sensor serves as a contributory factor for authentication on the multimedia system.

▶ Select Biometric data.

▶ Select Fingerprint recognition, Facial recognition or Voice recognition.

ⓘ If necessary, authenticate yourself on the multimedia system.

▶ Select Configure.

▶ **To use fingerprint:** place and lift your finger several times on the fingerprint sensor under the touchscreen .
The finger is scanned. If the scanning procedure is successful, a message appears on the central display. You can unlock your user profile and protected applications with your fingerprint.

▶ **To use face recognition:** close the driver's door or fasten the driver's seat belt.

▶ Look at the driver display for about five seconds.
Your face is scanned. A message in the driver display shows whether facial recognition was successful or not. You can unlock your user profile and protected applications with the facial scan.

▶ **To use voice recognition:** speak the sentence shown on the central display and follow the instructions of the voice assistant.
If the voice recognition was successful, a message appears on the central display. You can unlock your user profile and protected applications with voice input.

ⓘ Avoid background or disturbing noises during voice recognition.

▶ **To delete biometric data:** select Delete.

▶ Select Yes.

Selecting a user

ⓘ When you call up your driver profile, the driver's seat and the steering wheel can be set.

You can cancel the setting process with the following actions:

- Tap on the Tap here to cancel. message in the central display.
- Press one of the seat operating buttons in the driver's door.

▶ Select Change user.

▶ Select a user.

- When requested to do so, authenticate with the Mercedes me PIN or a taught-in biometric characteristic.
  The user profile is loaded and activated.

ⓘ If you select Continue without selecting user, no specific settings for the user profile are loaded.

Adding favourites from categories

- Select ⌂.
- Select ★.
- Select ›.
- Select + Create new favourite.
- Select the category.
- Select a favourite.

Linking favourites with the MBUX Interior Assistant V pose

- Select ⌂.
- Select ★.
- Select ›.
- Select Driver or Passenger.
- Select the category.
- Select a favourite.

System settings

Overview of the system settings menu

In the system settings menu, you can make settings in the following menus and control elements:

- Display
  - Display brightness
- Control elements
  - Keyboard language and handwriting recognition
  - Touchpad sensitivity
  - Sensitivity of the Touch Controls
  - Haptic operation for the touchscreen
- MBUX Voice Assistant
- MBUX Interior Assistant
- Sound
  - Entertainment
  - Navigation and traffic announcements
  - Telephone
  - Voice amplification
- Connectivity
  - Wi-Fi, Bluetooth, NFC
- MBUX rear tablet child-proof lock
- Time & date
- Language
- Units for distance
- Updating software
- System Reset

Overview of software updates

Important software updates may be necessary for the security of your multimedia system's data. Install these updates, or else the security of your multimedia system cannot be ensured.

The multimedia system displays a corresponding message when a software update is available.

If the Automatic online update option is active, software updates are downloaded automatically. If

the option is deactivated, you will be informed of new software updates once. The software updates are available for downloading for a limited period of time.

Carrying out a software update:

- You can start online software updates via the communication module.
- You can start software updates via a Wi-Fi hotspot.
- You can start map updates from an external medium.

ⓘ To complete software updates via the communication module, the vehicle must be connected with the Internet and a Mercedes me user account.

ⓘ To complete software updates via Wi-Fi, the vehicle must be connected to an external Wi-Fi hotspot.

A software update consists of three steps:

- Downloading or copying of the data required for installation
- Installation of the downloaded software update
- Activation of the downloaded software update.

ⓘ It may be necessary to restart the MBUX multimedia system after completion of a software update.

ⓘ While some software updates are being downloaded, the multimedia system cannot be operated and the vehicle functions may be restricted.

ⓘ Some software updates require a safe vehicle status for the installation to be completed. They may only be carried out in a safely parked vehicle with the ignition switched off.

ⓘ For software updates requiring a safe vehicle status: when the last installation step is reached, a message appears in the central display after the ignition is switched off. Follow the step-by-step instructions in the central display to complete the installation.

Availability of the driver display and central display

During the installation of software updates, it is not possible to use the vehicle, central display and driver display. You may receive the following display messages when an installation is running:



ⓘ The display message does not appear every time a software update is installed.

In rare cases, an error can occur during the installation. The multimedia system automatically attempts to restore the previous version.

If it is not possible to restore the previous version, the display messages shown above appear every time the engine is started.

Failure of the central display

If the central display fails or the display message shown above is shown continuously, several systems such as the reversing camera, PARKTRONIC or climate control are no longer available. Drive

on carefully and consult a specialist workshop as soon as possible.

Failure of the driver display

If the driver display fails or there is a malfunction, you may not recognise limitations in the functions of systems relevant to safety or the speed display, for example. The operating safety of the vehicle may be impaired. Drive on carefully and have the vehicle checked at a qualified specialist workshop immediately (→ page 481).

Further information about software updates can be found at https://me.secure.mercedes-benz.com.

Setting up a Wi-Fi hotspot

Requirements:

- Wi-Fi is activated on the multimedia system and the communication device to be connected.
- The communication device to be connected supports at least one of the types of connection described.

The connection types shown depend on the device to be connected. The function must be supported by the multimedia system and by the device to be connected. The type of connection established must be selected on the multimedia system and on the device to be connected.

ⓘ Some functions may first need to be activated on the communication device being connected. More detailed information can be found in the manufacturer's operating instructions.

ⓘ The use of the vehicle data tariff by external devices is not available in all countries.

Multimedia system:

↴ ⌂ ▸▸ Settings ▸▸ System ▸▸ Internet and Bluetooth

▶ Select Wi-Fi.
The controller is to the right: Wi-Fi is switched on.

When Wi-Fi is switched on, you can connect the multimedia system with external hotspots or make it available as a hotspot for external devices.

When Wi-Fi is switched off, it is not possible to establish a hotspot connection.

When Wi-Fi is switched off, no connection can be established with the MBUX rear tablet.

ⓘ The availability of the functions is dependent on the country.

ⓘ The vehicle's data volume is used for data connection via the multimedia system. Data volumes can be purchased via the Mercedes me Portal.
The data tariff of the mobile communication device is used for the data connection via an external communication device.

Using the multimedia system as a Wi-Fi hotspot

▶ Select MBUX Hotspot.

▶ Select one of the following connection options.

Connecting using a QR code

Requirement: an app for scanning the QR code is installed on the device being connected.

Alternatively: the device being connected has an integrated QR code scanner (see manufacturer's operating instructions).

- Scan the QR code shown.
  The Wi-Fi connection is established.

Connecting using NFC

- Activate NFC on the device to be connected.
- Hold the device to be connected to the NFC interface when the NFC symbol appears in the status line.
- Follow the instructions on the device.
  The Wi-Fi connection is established.

Connecting using a security key

- Select the vehicle from the device to be connected. The vehicle is displayed with the MBUX XXXXX network name.
- Enter the security key which is shown in the central display on the device to be connected.
- Confirm the entry.

Generating a new security key

- Select the security key in the MBUX Hotspot menu.
- Confirm the prompt with Yes.
  A new security key is generated.

A connection will be established with the newly created security key.

ⓘ When a new security key is generated, all existing Wi-Fi connections are then disconnected. If the Wi-Fi connections are being re-established, the new security key must be entered.

Using a mobile communication device as a Wi-Fi hotspot (tethering)

An external Wi-Fi hotspot is accessed for the Internet connection of the multimedia system. The data tariff of the mobile communication device via Acquired data package is used for the data connection.

ⓘ This function is country-dependent.

- Select the Set up option in the Internet and Bluetooth menu.
- Select Connect to the Internet.
- Select one of the following connection options.

Setting up an Internet connection via Wi-Fi

ⓘ The Wi-Fi function on the mobile phone and Internet access via Wi-Fi must be activated (see the manufacturer's operating instructions).

- Select Search for Internet access.
- Select the network.
- Log in to the Wi-Fi network.

or

- Select the mobile phone with the Wi-Fi symbol in the Internet device manager.

Setting up an Internet connection via Bluetooth®

ⓘ The mobile phone must support the Bluetooth® profile PAN (**P**ersonal **A**rea **N**etwork).

- Select Search for Internet access.
  In the list displayed, all mobile phones already known to the multimedia system are shown. New devices can be set up using the phone application.
- Connect the mobile phone using Bluetooth®.

or

- Select the mobile phone with the Bluetooth® symbol in the Internet device manager.

Navigation and traffic

Notes on navigation

Route guidance with augmented reality

WARNING Risk of accident and injury as a result of distraction, incorrect depiction or wrong interpretation of the display

The camera image of the augmented reality display is not suitable as a guide for driving.

- Always keep an eye on the actual traffic situation.
- Avoid extended observation of the camera image.

WARNING Risk of accident and injury due to imprecise positioning of additional information

The additional information from the augmented reality display is not a substitute for observing the actual driving situation.

- Always keep an eye on the actual traffic situation when carrying out all driving manoeuvres.

Switching navigation on


Multimedia system:

→ Home ▸▸ Navigation

- Alternatively, activate the MBUX Voice Assistant (→ page 288).
- Switch to navigation.
  The map appears.

Navigation overview

Digital map

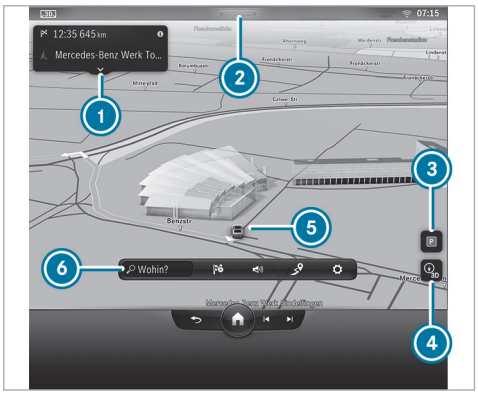

1. Navigation window
   Route guidance active: display for destination information, route list, lane recommendations, for example
2. Status line, calls up Control Center
3. Searches for parking facilities in the vicinity

4 Selects the map orientation
5 Current vehicle position (vehicle symbol or arrow)
6 Navigation menu

Navigation menu



1 Enters a POI or address and additional destination entries
2 Interrupts route guidance (if route guidance is active)
3 Repeats a navigation announcement and switch navigation announcements on or off
4 Calls up Route, and Traffic menus
- Showing the route overview, entering intermediate destinations, selecting alternative routes
- Displaying traffic incidents and local area reports

5 Makes settings for View, Messages & tones and Route

ⓘ If the navigation menu is not shown, tap on the digital map.
ⓘ The options are not available in all countries.


Entering a destination

Requirements:
- **For online search:** an Internet connection is established .
- Mercedes me connect is available.
- You have set up a user account in the Mercedes me Portal.
- The vehicle is connected with the user account and you have accepted the terms of use.

Further information can be found at: https://www.mercedes.me
- The service is available and has been activated.

Multimedia system:

→ ⌂ ▸▸ Navigation ▸▸ ⌕ Where to?

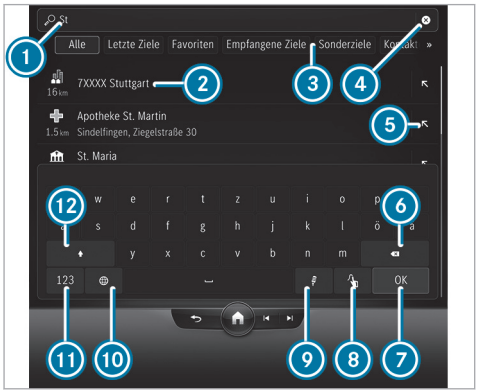

Example: entering a POI, address or contact

1. Input line with current entry
2. Search result
3. Selects destination input, displays further destination inputs with double arrow
4. Deletes an entry
5. Adopts the search result in the input line and continues the search
6. Deletes the last character entered
7. Hides the keypad
8. Switches to handwriting recognition
9. Starts the MBUX Voice Assistant
10. Sets the written language
11. Switches to digits and special characters
12. Switches to upper-case or lower-case letters

▶ Enter the destination in 1. The entries can be made in any order.
The search results are displayed in a list.

ⓘ Online search results for POIs may contain additional information, for example opening times and prices. The information is provided by an online map service.
This online function is not available in all countries.

ⓘ You can enter a destination as a 3 word address from what3words.
This option is not available in all countries.

▶ Hide the keyboard with OK.

▶ Select the destination in the list.
The route is calculated.

ⓘ Observe the notes on the MBUX multimedia system (→ page 285).

Calculating a route and using settings for route guidance



1. Saves a destination as a favourite
2. Selects a parking space in the vicinity of the destination
3. Calculates the route and starts route guidance
4. Calls up the route overview
5. Selects a point of interest in the vicinity of the destination

- **To call up the detailed display with destination address:** pull the bar above the symbol upwards.
  Depending on the destination selection and availability, online content, for example ratings, prices and weather information, is shown.
- **To share a destination:** select Share .
  This option allows you to scan the displayed QR code.

Adding an intermediate destination to the existing route or starting a new route guidance

- Select Add .
  The selected destination address is set as the next intermediate destination. Route guidance begins.

or

- Select Replace route .
  The selected destination address is set as a new destination. Route guidance begins.

Selecting a route type

- Select in the navigation menu (→ page 303).
- Select Route.
  The route is calculated as a fast route with a short journey time. The trailer mode can be used if a trailer has been coupled with the vehicle. If available, you can select online routes. Traffic announcements for the route are taken into account via Dynamic route guidance .

ⓘ Trailer mode and online routes are not available in all countries and for all vehicles.

Calculating alternative routes

- Select in the navigation menu.
- Select View.
- Activate Overview of route after start.
  Alternative routes are calculated for every route.

Selecting alternative routes

ⓘ If Overview of route after start has been switched on and a route has been calculated, the function is available.

- Select [ ] in the navigation menu.
- Select Other routes.
- When the alternative routes have been calculated, display the route in the navigation window by swiping to the right or left.
- Select Start.

Activating a commuter route

ⓘ A user profile has been created and Allow destination suggestions has been activated in the user options (→ page 297). Route guidance is not active.

- Select [ ] in the navigation menu.
- Select Route.
- Activate Activate commuter route.
  The navigation system automatically detects that the vehicle is on a commuter route.
  For the daily commuter route, traffic incidents on the route are also reported when driving without active route guidance.
- **To select or delete a commuter route:** selectStart or [×].

Avoiding or using route sections, e.g. motorways or ferries

- Select [ ] in the navigation menu.
- Select Route.
- Select Avoid options.
- Activate or deactivate the avoid option.

Activating route guidance with augmented reality

- Tap on [AR] in the map.
  The indicator lamp lights up blue.
  The video image of the augmented reality camera is shown on the central display before a turning manoeuvre. The video image includes additional information.
- **To return to the navigation map:** tap on [AR] again.
  The indicator lamp is not lit.

Showing property information for route guidance with augmented reality

Road guidance with augmented reality is activated.

- Select [ ] in the navigation menu.
- Select View.
- Select Augmented reality video.
- Activate Street names and House numbers.
  During route guidance, the activated options are shown as additional information in the camera image.

Using map functions

Multimedia system:

[ ] ▸▸ Navigation

Increasing map scale

- When the map is shown, tap twice quickly with one finger on the central display.

Decreasing map scale

- When the map is displayed, tap the central display with two fingers.

Moving the map

- When the map is displayed, swipe in any direction with one finger on the central display.
- **To reset the map to the current vehicle position:** select Centre .

Selecting map orientation

- Tap repeatedly on the compass symbol on the map.

  The map orientations changes in this order:
  - The 3D map view is aligned to the direction of travel.
  - The 2D map view is aligned to the direction of travel.
  - The 2D map view is displayed so that north is always at the top.
  - The map shows the complete route.

Using services

Requirements:

- There is an Internet connection.
- Mercedes me connect is available.
- You have set up a user account in the Mercedes me Portal.
- The vehicle is connected to a user account and you have accepted the conditions of use for the service.

  Further information can be found at: https://www.mercedes.me
- The service is available and has been activated.

Multimedia system:

→ Home ▸▸ Navigation

Showing traffic information

- Select in the navigation menu.
- Select View.
- Select Map symbols.
- Activate Traffic incidents and Free-flowing traffic.

  Traffic incidents, for example roadworks, local area reports (e.g. fog) and warning messages, are shown on the route.

  The traffic delay is displayed for the current route. The smallest value for the display for traffic delays is a minute.

Displaying hazard warnings

If hazard warnings are available these can be shown as symbols on the map. The display depends on the settings for the Traffic incidents option.

- Set the option using .

  If the option is activated, all of the symbols are shown.

  If the option is deactivated, the symbols are only shown when there is a hazard warning.

The following hazards may be shown on the map:

- Accidents and breakdowns
- Fog and ice
- Hazards reported manually
- Vehicle with active hazard warning light
- Mobile roadworks

Displaying online map contents

- Select in the navigation menu.

- Select View.
- Select Map symbols.
- Switch on an online service, e.g. Weather. Current weather information is displayed on the navigation map, e.g. temperature or cloud cover.

  The service information is not shown in all map scales, e.g. weather symbols or petrol station prices.

Telephone

Telephony

Notes on telephony

WARNING Risk of distraction from operating integrated communication equipment while the vehicle is in motion

If you operate communication equipment integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- Only operate this equipment when the traffic situation permits.
- If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

WARNING Risk of an accident from operating mobile communication equipment while the vehicle is in motion

Mobile communications devices distract the driver from the traffic situation. This could also cause the driver to lose control of the vehicle.

- As the driver, only operate mobile communications devices when the vehicle is stationary.
- As a vehicle occupant, only use mobile communications devices in the areas intended for this purpose, e.g. in the rear passenger compartment.

You must observe the legal requirements for the country in which you are currently driving when operating mobile communication equipment in the vehicle.

WARNING Risk of injury due to objects being stowed incorrectly

If objects in the vehicle interior are stowed incorrectly, they can slide or be thrown around and hit vehicle occupants. In addition, cup holders, open stowage spaces and mobile phone receptacles cannot always retain all objects within.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- Always stow objects so that they cannot be thrown around in such situations.
- Always make sure that objects do not protrude from stowage spaces, luggage nets or stowage nets.
- Close the lockable stowage spaces before starting a journey.

▶ Always stow and secure heavy, hard, pointed, sharp-edged, fragile or bulky objects in the boot/load compartment.

Observe the additional information on stowing mobile communications devices correctly:

- Loading the vehicle (→ page 139)

Bluetooth® connection

The menu view and the available functions in the telephone menu are in part dependent on the Bluetooth® profile of the connected mobile phone. If the mobile phone supports all the following Bluetooth® profiles, the full range of features is available:

- PBAP (Phone Book Access Profile)
  - The contacts on the mobile phone are shown automatically on the multimedia system.
- MAP (Message Access Profile)
  - The mobile phone message functions can be used on the multimedia system.
- HFP (hands-free profile)
  - Wireless telephony is available on the multimedia system.
- SAP (SIM Access Profile)
  - The car telephone has access to the SIM card data and dials into the mobile phone network via the exterior aerial.

Irrespective of this, Bluetooth® audio functionality can by used with any mobile radio unit.

For information on the range of functions of the mobile radio unit to be connected, see the manufacturer's operating instructions.

Network connection:

The following cases can lead to the call being disconnected while the vehicle is in motion:


- You switch into a transmission/reception station, in which no communication channel is free.
- The SIM card used is not compatible with the network available
- A mobile phone with "Twincard" is logged into the network with the second SIM card at the same time

The multimedia system supports calls in HD Voice® for improved speech quality. A requirement for this is that the mobile phone and the mobile phone network provider of the person you are calling support HD Voice® .

Depending on the quality of the connection, the voice quality may fluctuate.

Further information can be obtained from a Mercedes-Benz service centre or at: https://www.mercedes-benz.com/connect

Telephone menu overview

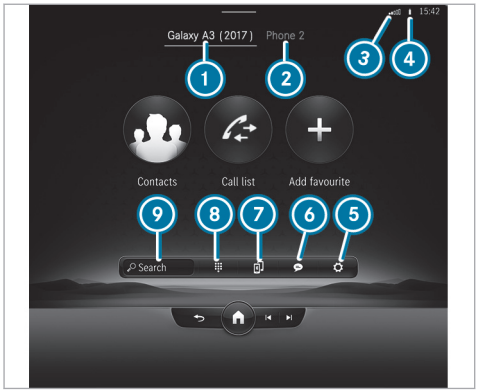

1. Bluetooth® device name of the currently connected mobile phone/of the mobile phone
2. Bluetooth® device name of the currently connected mobile phone/of the mobile phone (two phone mode)
3. Signal strength of the mobile phone network
4. Battery status of the connected mobile phone
5. Options
6. Messages
7. Calls up my devices
8. Numerical pad
9. Starts contact search

Telephony operating modes overview

Depending on your equipment, the following telephony operating modes are available:

- A mobile phone is connected to the multimedia system via Bluetooth®.
- Two mobile phones are connected with the multimedia system via Bluetooth® (two phone mode).
  - You can use all the functions of the multimedia system with both mobile phones.
- A mobile phone is connected as the car phone.

Connecting a mobile phone

Requirements:

- Bluetooth® is activated on the mobile phone (see the manufacturer's operating instructions).
- Bluetooth® is activated on the multimedia system.

Multimedia system:

⤳ ⌂ ▸▸ Phone ▸▸ ⚙ ▸▸ Devices ▸▸ My devices

Searching for a mobile phone

▶ Select Connect new device.

Connecting a mobile phone

▶ Select a mobile phone.
A code is displayed in the multimedia system and on the mobile phone.

▶ If both codes match, confirm the code on the mobile phone.

Functions in the telephony menu

In the telephony menu you have the following functions, for example:

- Making calls, e.g.:
  -  Accept a call
  -  End call
  - Answering a call with a message
  -  Conference
  - Accepting or rejecting a waiting call
- Managing contacts, e.g.:
  - Downloading mobile phone contacts
  - Managing the format of a contact's name
  - Deleting favourites
- Receiving and sending messages, e.g.:
  - Using the read-aloud function
  - Dictating a new message

Mercedes me and apps

Mercedes me connect

Information on Mercedes me connect

ⓘ Mercedes me connect or individual Mercedes me connect services are not available in every country. Find out at a Mercedes-Benz service centre if these functions are available in your country.

Mercedes me connect consists of multiple services.

You can use the following services via the multimedia system and the overhead control panel, for example:

- Accident and Breakdown Management (me button or situation-dependent display in the multimedia system)
- Mercedes-Benz emergency call system (automatic emergency call and SOS button)

The Mercedes me connect Accident and Breakdown Management and the Mercedes-Benz emergency call centre are available to you around the clock.

The me button and the SOS button can be found on the vehicle's overhead control panel (→ page 314).

You can also call the Mercedes-Benz Customer Centre using the multimedia system (→ page 315).

Please note that Mercedes me connect is a Mercedes-Benz service. In emergencies, first call the national emergency services using the standard national emergency service telephone numbers. In emergencies, you can also use the Mercedes-Benz emergency call system (→ page 322).

Please note the Mercedes me connect terms of use and the data protection information for Mercedes me connect. You can find these in your Mercedes me user account.

Further information about Mercedes me connect, the provided service scope and operation: https://moba.i.daimler.com/markets/ece-row/baix/cars/connectme/en_GB/#emotions/Startseite.html

Information on Mercedes me connect Accident and Breakdown Management

The Accident and Breakdown Management can include the following functions:

- Supplement to the Mercedes-Benz emergency call system (→ page 322)

  If necessary, the contact person at the Mercedes-Benz emergency call centre forwards the call to Mercedes me connect Accident and Breakdown Management. Forwarding the call is however not possible in all countries.
- Breakdown assistance by a technician on location and/or the towing away of the vehicle to the nearest Mercedes-Benz service centre

  You may be charged for these services.
- Addition to the emergency guide after automatic accident or breakdown detection (→ page 315)

  In the event of a breakdown or accident, further vehicle data is sent which enables optimal support by the Mercedes-Benz Customer Centre and the authorised service partner or breakdown assistance.
- Addition to the Mercedes me connect service Telediagnostics

  With the Telediagnostics function, specific wear and failure reports are recorded by the service provider, in so far as these can be clearly interpreted and are available through the monitoring of components that are subject to diagnostics.

  If your vehicle detects a breakdown or threat of a breakdown, you may be prompted via the multimedia system to contact the Mercedes-Benz Customer Centre for further help. This prompt in the multimedia system only appears when the vehicle is stationary.

ⓘ These services are subject to technical restrictions such as the mobile phone coverage, mobile network quality and the ability of the processing systems to interpret the transferred data. In some circumstances, this can result in delays or the failure of the information to appear in the multimedia system.

More information about Mercedes me connect services can be obtained in the Mercedes me Portal: https://me.secure.mercedes-benz.com

Data transferred during Mercedes me connect call services

The data transferred during a Mercedes me connect call depends on:


- The reason for initiation of the call
- The service that is selected in the voice control system
- The activated Mercedes me connect services

You can find out which data is transferred when using the services in the currently valid Mercedes me connect terms of use and the data protection information for Mercedes me connect. You can find these in your Mercedes me user account.

Mercedes me calls

Making a call via the overhead control panel

Mercedes me calls are not possible in every country. Find out at a Mercedes-Benz service centre if these functions are available in your country.

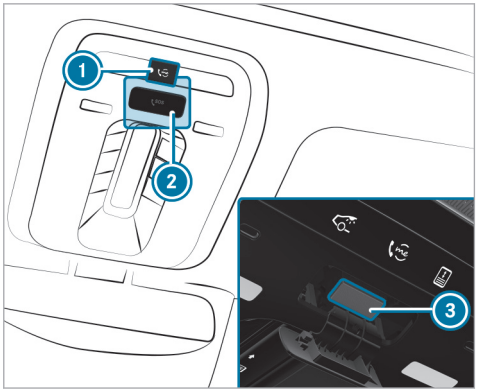

1 me button for service or information calls
2 SOS button cover
3 SOS button (emergency call system)

Making a Mercedes me call

- Press me button 1.

Making an emergency call

- To open the cover of SOS button 2, press it briefly.
- Press and hold SOS button 3 for at least one second.

If a Mercedes me call is active, an emergency call can still be triggered. This has priority over all other active calls.

Information about the Mercedes me call using the me button

A call to the Mercedes-Benz Customer Centre has been initiated via the me button in the overhead control panel or the multimedia system (→ page 314).

Using the voice dialogue system you access the desired service:

- Accident and Breakdown Management
- Mercedes-Benz Customer Centre for general information about the vehicle

You can find information on the following topics:

- Activation of Mercedes me connect
- Operating the vehicle

- Nearest Mercedes-Benz service centre
- Other products and services from Mercedes-Benz

Data is transferred during the connection to the Mercedes-Benz Customer Centre (⟶ page 316).

Calling the Mercedes-Benz Customer Centre using the multimedia system

Requirements:

- Access to a GSM network is available.
- The contract partner's GSM network coverage is available in the respective region.
- The ignition must be switched on so that vehicle data can be transferred automatically.

Multimedia system:

↴ ⌂ ▸▸ Phone ▸▸ 🤲

▶ Call Mercedes me connect.
After confirmation, the multimedia system sends the required vehicle data. The data transfer is shown in the central display.

Then, you can select a service and be connected to a specialist at the Mercedes-Benz Customer Centre.

Calling the Mercedes-Benz Customer Centre after automatic accident or breakdown detection

Requirements:

- The vehicle has detected an accident or breakdown situation.
- The vehicle is stationary.
- The hazard warning lights are switched on.

ⓘ This function is not available in all countries.

The vehicle can detect accident or breakdown situations under certain circumstances.

In the event an accident or breakdown is detected, the emergency guide shows safety notes in the multimedia system display.

After quitting the emergency guide display on the multimedia system, a prompt appears asking whether you would like to get support from the Mercedes-Benz Customer Centre.

▶ Select Call.
- After your agreement, or if the Mercedes me connect service "Accident and Breakdown Management" is active, the vehicle data is transferred automatically (⟶ page 313).
- The Mercedes-Benz Customer Centre takes your call and organises the breakdown and accident assistance.

You may be charged for these services.

ⓘ Depending on the severity of the accident, an automatic emergency call can be initiated. This has priority over all other active calls.

ⓘ In addition, if the Mercedes me connect service "Telediagnostics" is active, a similar prompt can appear after a delay in the event of a breakdown. If you are already in contact with the Mercedes-Benz Customer Centre or have already received support, this prompt can be ignored or declined.

ⓘ If you answer the prompt for support from the Mercedes-Benz Customer Centre with Call later, the message will be hidden and appear again later.

The prompt triggered by the Mercedes me connect service "Telediagnostics", can either be confirmed or declined. After being declined, this will not be shown again.

Arranging a service appointment via a Mercedes me call

If you have activated the maintenance management service, relevant vehicle data is transferred automatically to the Mercedes-Benz Customer Centre. You will then receive individual recommendations regarding the maintenance of your vehicle.

Regardless of whether you have consented to the maintenance management service, the multimedia system reminds you after a certain amount of time that a service is due. A prompt appears asking if you would like to make an appointment.

► **To arrange a service appointment:** select Call. After your agreement, the vehicle data is transferred and the Mercedes-Benz customer centre takes your preferred appointment date. The information is then sent to your desired service outlet.

This will contact you to confirm the appointment and if necessary consult about the details.

ⓘ If you select Call later after the service message appears, the message is hidden and reappears at a later time.

Giving consent to data transfer during a Mercedes me call

Requirements:

- There is an active Mercedes me call via the multimedia system or the me button in the overhead control panel (⟶ page 314).

ⓘ The prompt to confirm data transfer does not appear in all countries.

If the Accident and Breakdown Management services are not activated on Mercedes me, the Do you want to transfer your vehicle data and the vehicle's position to the Mercedes-Benz Customer Centre to improve the processing of your request? message is shown.

► Select Yes.
Relevant identification data is transmitted automatically.

More information on Mercedes me: https://www.mercedes.me

Transferred data during a Mercedes me call

If you initiate a service call using Mercedes me, data is transferred to enable targeted advice and an efficient service.

The following requirements must be fulfilled for the transfer of the data:

- The ignition is switched on.
- The required data transfer technology is supported by the mobile phone network provider.
- The quality of the mobile connection is sufficient.

Multi-stage transfer depends on the following factors:

- Reason for the initiation of the call
- The available mobile phone transmission technology.
- The activated Mercedes me connect services.
- The service selected in the voice control system.

ⓘ A prompt for consent to the data transmission only occurs if the corresponding Mercedes me connect service is not activated.

Data transfer if Mercedes me connect services are not activated

If no Mercedes me connect services are activated and the data protection prompt has been confirmed the following data is transmitted:

- Vehicle identification number
- Time of the call
- Reason for the initiation of the call
- Confirmation of the data protection prompt
- Country indicator of the vehicle
- Set language for the multimedia system
- Telephone number of the communication platform installed in the vehicle

If a call is made for a service appointment via the service reminder, the following data is also transmitted:

- Current mileage and maintenance data

If a call is made after automatic accident or breakdown detection using the multimedia system, the following data is also transmitted:

- Current mileage and maintenance data
- Current vehicle location

If Accident and Breakdown Management is called via the voice control system and no service has been activated, but the data protection query has been confirmed, the following data can also be called up from the vehicle by the Mercedes-Benz Customer Centre:

- Current vehicle location

If the data protection prompt has been rejected, the following data is transmitted to enable targeted advice and an efficient service:

- Reason for the initiation of the call
- Rejection of the data protection prompt
- Country indicator of the vehicle
- Set language for the multimedia system
- Telephone number of the communication platform installed in the vehicle

Data transfer if Mercedes me connect services are activated

Only if the respective service is activated will additional incident-specific data be transmitted in the second stage to enable an optimal service.

An overview of the data transferred is contained in the data protection information for the Mercedes me connect services. You can find these in your Mercedes me user account.

Data processing

The data transmitted within the scope of the call is deleted from the processing system after the call is finished, in so far as this data is not being used for other activated Mercedes me connect services.

The incident-specific data is processed and stored in the Mercedes-Benz Customer Centre and, if required to process the incident, forwarded to the service partner authorised by the Mercedes-Benz Customer Centre. Please take note of the data protection information on the Mercedes me Internet page https://www.mercedes.me or in the recorded message immediately after calling the Mercedes-Benz Customer Centre.

ⓘ The recorded message is not available in every country.

Overview of the Mercedes me & Apps menu

When you log in with a user account to the Mercedes me Portal, then services and offers from Mercedes-Benz will be available to you.

For more information consult a Mercedes-Benz service centre or visit the Mercedes me portal: https://me.secure.mercedes-benz.com

ⓘ Make sure you always keep the Mercedes me apps updated.

You can call up the menu using Apps in the multimedia system.

In the Apps menu, the following options can be available:

- Connecting the vehicle with the Mercedes me user account
- Deleting a connection between a Mercedes me user account and the vehicle
- Calling up the Mercedes me services
- Calling up apps such as, In-Car Office or the web browser depending on availability

Overview of In-Car Office

Using In-Car Office, you can connect your online services with the multimedia system.

Requirements for In-Car Office:

- The In-Car Office service is activated in your Mercedes me user account.
- You have a Mercedes me user account.
- You have set a Mercedes me PIN.
- You have synchronised your Mercedes me user account in the vehicle and via Mercedes me.
- You have a user account with an online service, e.g. Office 365 or Gmail, and have connected the online service with your Mercedes me user account.

  Alternatively you can link this user account from the multimedia system to your Mercedes me user account. You will be offered a QR code that will take you to the website from which you can make the link.

In-Car Office functions:

- Display pending appointments in the calendar
  - Reading out calendar entries
  - Calling (requirement being that a telephone is connected and a telephone number is saved)
  - Navigating to appointments (requirement being that the appointment contains a navigable destination)
  - Deleting a calendar entry
- Display and selection of tasks and calls to complete
  - Reading aloud
  - Calling (requirement being that a telephone is connected and a telephone number is saved)
  - Deleting
- Marking entry in Tasks & calls as completed ☑
- Managing e-mails
  - Showing or reading e-mails
  - Writing, answering and forwarding e-mails

ⓘ Alternatively, you can record text contents for your e-mail via the MBUX Voice Assistant or via the dictation function.

ⓘ You can start the In-Car Office function using the Apps menu. Please note that certain functions are only available when the vehicle is stationary.

Web browser overview



1. Search
2. To refresh/stop
3. Previous website
4. Options
5. Settings

ⓘ Under [•••] you have the following options:

- Bookmarks
- Load mobile website

ⓘ Websites cannot be shown while the vehicle is in motion.

Overview of smartphone integration

With Smartphone Integration, you can use certain functions on your mobile phone via the multimedia system display.

Only one mobile phone at a time can be connected via Smartphone Integration to the multimedia system. Also for use with two phone mode with smartphone integration, only one additional mobile phone can be connected using Bluetooth® with the multimedia system.

The full range of functions for Smartphone Integration is only possible with an Internet connection. The appropriate application must be downloaded on the mobile phone to use Smartphone Integration. The mobile phone must be switched on and connected to the multimedia system via the USB port using a suitable cable.

Apps for Smartphone Integration

- Mercedes-Benz Link (implementation of the function using the Mercedes-Benz Link control box)
- Apple CarPlay® (wireless connection via Bluetooth® also possible)
- Android Auto (wireless connection via Bluetooth® also possible)

ⓘ For safety reasons, the first activation of Mercedes-Benz Link, Apple CarPlay® or Android Auto on the multimedia system must be carried out when the vehicle is stationary and the parking brake is applied.

You can start Smartphone Integration using the My devices menu.

You can end Smartphone Integration via the My devices or by disconnecting the connecting cable between the mobile phone and multimedia system.

ⓘ Mercedes-Benz recommends disconnecting the connection via the device manager or the connecting cable only when the vehicle is stationary.

Overview of transferred vehicle data

When using Smartphone Integration, certain vehicle data is transferred to the mobile phone. This enables you to get the best out of selected mobile phone services. Vehicle data is not directly accessible.

The following system information is transmitted:

- Software release of the multimedia system
- System ID (anonymised)

The transfer of this data is used to optimise communication between the vehicle and the mobile phone.

To do this, and to assign several vehicles to the mobile phone, a vehicle identifier is randomly generated.

This has no connection to the vehicle identification number (VIN) and is deleted when the multimedia system is reset .

The following driving status data is transmitted:

- Transmission position engaged
- Distinction between parked, standstill, rolling and driving
- Day/night mode of the instrument cluster
- Drive type

The transfer of this data is used to alter how content is displayed to correspond to the driving situation.

The following position data is transmitted:

- Coordinates
- Speed
- Compass direction
- Acceleration direction

This data is used by the mobile phone to improve the accuracy of the navigation (e.g. for continuation in a tunnel).

Mercedes-Benz emergency call system

Information on available emergency call systems

Two types of emergency call system are available to you in the vehicle:

- Mercedes-Benz emergency call system
- 112 emergency call system (EU eCall)

The Mercedes-Benz emergency call system is not available in all countries. You can find more information on the regional availability of eCall at: https://www.mercedes-benz-mobile.com/extra/ecall/

The following applies for both emergency call systems:

- The transfer of specific data is required for the intended function of both emergency call systems. This will be explained in the "Data transfer" section (→ page 324).
- Both emergency call systems are included as standard equipment in your vehicle and are activated at the factory.
- The use of both emergency call systems is exempt from charges.
- Both emergency call systems only function in areas in which the mobile phone network providers offer mobile phone coverage.

  For both systems, insufficient network coverage from the mobile phone network providers can result in an emergency call not being transmitted.

Differences between the Mercedes-Benz emergency call system and the 112 emergency call system (EU eCall)

Mercedes-Benz emergency call system	112 emergency call system (EU eCall)
• The Mercedes-Benz emergency call system is permanently logged in to the mobile phone network. • Automatic and manual Mercedes-Benz emergency calls are transmitted to a Mercedes-Benz emergency call centre. In the event that the emergency call centre of the Mercedes-Benz emergency call system cannot be reached (e.g. due to a lack of network coverage), the 112 emergency call is carried out automatically.	• If you decide on the 112 emergency call system (EU eCall) only, then the system only logs in to the mobile phone network after the triggering of a manual or automatic emergency call. • The 112 emergency call system (EU eCall) transmits automatic and manual emergency calls directly to public coordination centres.

ⓘ The 112 emergency call system (EU eCall) in your vehicle meets the delegated regulation EU 2017/79. Proper and full functionality of the 112 emergency call system (EU eCall) depends on circumstances beyond the influence of Mercedes-Benz AG. This includes

mobile network coverage and the technical infrastructure of the public reception centres in the respective countries.

ⓘ Please observe that in the event of a repair genuine Mercedes-Benz batteries must be used which have been certified pursuant to the delegated regulation EU 2017/79 (Appendix I). Other manufacturers are also permitted provided their batteries are certified according to the delegated regulation EU 2017/79.

There is the option of deactivating the Mercedes-Benz emergency call system and using only the 112 emergency call system (EU eCall). Contact address for carrying out deactivation of the Mercedes-Benz emergency call system are the local dealers.

Mercedes-Benz recommends the activation of the Mercedes-Benz emergency call system for the following reasons:

- In emergency situations when abroad, you can also get support in a language you speak.
- Several transmission technologies are used to accelerate the transfer of the accident data and improve reliability of the transmission.
- The Mercedes-Benz emergency call system is permanently logged in to the mobile phone network, which ensures faster placement of the emergency call and faster transfer of the accident data.

  Measures for rescue, recovery or towing away can then be initiated in quickly.
- With a Mercedes-Benz emergency call, the accident data is only transferred to the public coordination centre with the approval of the customer.

  In the event of an automatically triggered emergency call in which there is no voice contact, the accident data is transmitted immediately to the public emergency call centre.
- If the Mercedes-Benz emergency call centre is not available, the 112 emergency call is carried out automatically.

Overview of emergency call systems

Both the Mercedes-Benz emergency call system as well as the 112 emergency call system (EU eCall) can help to reduce the time between an accident and the arrival of emergency services at the site of the accident. They help locate an accident site in places that are difficult to access.

Both emergency call systems can initiate an emergency call automatically (→ page 323) or manually (→ page 323).

Only make emergency calls if you or others are in need of rescue. Do not make an emergency call in the event of a breakdown or a similar situation.

Indicators in the displays

The following messages appear in the multimedia system display for both emergency call systems:

- SOS NOT READY: the ignition is not on or eCall is not available. This does not necessarily indicate complete failure of the emergency call system. Emergency calls call still be transmitted.

  The display only refers to the vehicle and does not take account of the availability of mobile phone networks and the Mercedes-Benz emergency call centre.

  The functional readiness of the emergency call system on the vehicle can be seen when the

SOS NOT READY display disappears once the ignition is switched on.

- SOS: The icon appears in the display during an active emergency call.

ⓘ If there is a malfunction of the emergency call system, the loudspeakers, microphone, airbag or the SOS button, for example, are faulty.

You can recognise a fault in the emergency call system by the following displays:

- A corresponding message appears on the driver display.
- The SOS button lights up red continuously.

Triggering an automatic emergency call

Requirements:

- The ignition is switched on.
- The starter battery is sufficiently charged.

Both the Mercedes-Benz emergency call system as well as the 112 emergency call system (EU eCall) automatically initiate an emergency call:

- After activation of the restraint systems such as airbags or seat belt tensioners after an accident
- After an automatically initiated emergency stop by Active Emergency Stop Assist

The emergency call has been made:

- A voice connection is established with the emergency call centre.
- A message with accident data is transmitted to the emergency call centre.

The SOS button in the overhead control panel flashes until the emergency call is finished.

If no connection can be made to the public emergency services, a corresponding message appears in the display.

▶ Dial the emergency number 112 or an appropriate local emergency call number on your mobile phone.

If an emergency call has been initiated:

- Remain in the vehicle if the road and traffic conditions permit you to do so until a voice connection is established with the emergency call centre.
- On the basis of the call, the emergency call centre decides whether it is necessary to call rescue teams and/or the police to the accident site.
- If no vehicle occupant answers, an ambulance is sent to the vehicle immediately.

Triggering a manual emergency call

▶ **To use the SOS button in the overhead control panel:** press the SOS button at least one second long (→ page 314).

or

▶ **To use voice control:** use the voice commands of the MBUX Voice Assistant.

The emergency call has been made:

- A voice connection is established with an emergency call centre.

- Remain in the vehicle if the road and traffic conditions permit you to do so until a voice connection is established with the emergency call centre.
- On the basis of the call, the emergency call centre decides whether it is necessary to call rescue teams and the police to the accident site.
- A message with accident data is transmitted to the emergency call centre.

If no connection can be made to the public emergency services, a corresponding message appears in the central display.

▶ Dial the emergency number 112 or an appropriate local emergency call number on your mobile phone.

Emergency call system data transmission

For both the Mercedes-Benz emergency call system as well as the 112 emergency call system (EU eCall) data is transferred to the Mercedes-Benz emergency call centre or the public emergency services call centre.

Depending on the emergency call system (→ page 320) activated different data is transmitted to the appropriate emergency call centre.

Transmitted data according to activated emergency call system:

Mercedes-Benz emergency call	112 emergency call
• Position data of the vehicle • Position data on the route (a few 100 m before the incident) • Direction of travel • Vehicle identification number • Drive type of the vehicle (e.g. petrol, diesel, CNG, LPG, electric or hydrogen) • Number of people determined to be in the vehicle • Whether the emergency call was initiated manually or automatically • Time of the accident • Language setting on the multimedia system • Whether Mercedes me connect is available or not This is a requirement for the option of forwarding the call to the Mercedes-Benz Customer Centre if necessary.	• Position data of the vehicle • Position data on the route (a few 100 m before the incident) • Direction of travel • Vehicle identification number • Drive type of the vehicle (e.g. petrol, diesel, CNG, LPG, electric or hydrogen) • Number of people determined to be in the vehicle • Whether the emergency call was initiated manually or automatically • Time of the accident

ⓘ If only the 112 emergency call system (EU eCall) is activated in the vehicle, the accident data is transmitted directly to the public emergency call centre.

For accident clarification purposes, the following measures can be taken up to an hour after the emergency call has been initiated:

- The current vehicle position can be determined.
- A voice connection to the vehicle occupants can be established.
- Emergency call data can be called up.

ⓘ For Russia: various functions, e.g. receiving traffic information, cannot be performed for up to two hours after sending an emergency call.

Self diagnosis function of the emergency call system

Your car verifies the operability of the emergency call system each time the ignition is ON. During this time the SOS button lights up red for five seconds. In case of system failure, you will be informed with text message on the instrument cluster and with red indicator SOS NOT READY on the display.

Please, make sure, that during 30 seconds after switching ignition ON the red indicator SOS NOT READY in the upper right corner of display is switched OFF, this means the emergency call system passed diagnostics successfully.

Starting/ending ERA-GLONASS test mode

Requirements:

- The starter battery is sufficiently charged.
- The ignition is switched on.
- The vehicle has been stationary for at least one minute.

ⓘ The test mode is currently available in the following countries, for example:

- Russia
- Belarus
- Kazakhstan
- Armenia
- Kyrgyzstan

▶ **To start the test mode:** press and hold the button on the multifunction steering wheel for at least five seconds.
The test mode is started and automatically ends after the language test has been performed.

▶ **To end the test mode manually:** switch off the ignition.
The test mode is ended.

Information on data processing

Processing of personal data via the Mercedes-Benz emergency call system

All processing of personal data via the Mercedes-Benz emergency call system corresponds with the specifications in the EU Regulation 2016/679 "on the protection of individuals with regard to the processing of personal data (GDPR)".

The data is solely used by the Mercedes-Benz emergency call system for rescue and recovery in the event of an accident.

The owner of a vehicle, that is equipped with a Mercedes-Benz emergency call system in addition to the 112 emergency call system (EU eCall), has

the right to use the 112 emergency call system instead of the Mercedes-Benz emergency call system.

Contact address for carrying out deactivation of the Mercedes-Benz emergency call system are the local dealers.

Processing of personal data via the 112 emergency call system (EU eCall)

All processing of personal data via the 112 emergency call system (EU eCall) corresponds with the specifications in the EU Regulation 2016/679 "on the protection of individuals with regard to the processing of personal data (GDPR)" and is based particularly on the necessity of upholding the vital interests of the affected person in accordance with Article 6, Clause 1, Letter d of the GDPR.

The processing of this type of data is strictly limited to the purpose of operating the emergency calls to the standard European emergency call number 112.

Data recipient

The recipients of data that is processed using the 112 emergency call system (EU eCall) are the relevant emergency call inquiry terminals that are specified to first receive and handle emergency calls to the standard European emergency call number 112 by the respective country authorities in whose territory you are located.

Arrangements for data processing

Both emergency call systems are designed so that the following requirements are fulfilled:

- The data contained in the system memory is not accessible outside the system prior to the initiation of an emergency call.
- Both emergency call systems cannot be traced and there is no continuous tracking in normal operation.
- The data in the system's internal memory is automatically and continuously deleted.
- The location data of the vehicle is continuously overwritten in the system's internal memory, so that no more than the last three current locations required for the normal function of the system are available.
- The record of the activity data of both emergency call systems is only kept for as long as is required to fulfil the purpose of handling the emergency call, and under no circumstances for more than 13 hours after the time that an emergency call is initiated.

Rights of persons affected by the data processing

The person affected by the data processing (the vehicle owner) has the right to access the data and if applicable can demand the correction, deletion or barring of data that affects him or her and that the processing of which does not correspond with the GDPR regulations. Each correction, deletion or barring carried out according to this regulation must be shared with the third party to which the data has been transmitted, provided this does not prove to be infeasible and does not incur disproportionate expenditure.

The person affected by the data processing has the right to complain to the appropriate data protection authority should they be of the opinion that their rights have been infringed by the processing of their personal data.

Responsible contact point for the processing of access rights: Konzernbeauftragter für den Datenschutz, Daimler AG, HPC G353, D-70546 Stuttgart, Germany

Radio, media & TV

Overview of the symbols and functions in the media menu

Symbol	Designation	Function
	Play	Select to start or continue playback.
	Rest	Select to pause the playback.
	Repeat a track	Select to repeat the current track or the active playlist. • Select once: the active playlist is repeated. • Select twice: the current track is repeated. • Select three times: the function is deactivated.
	Random playback	Select to play back the tracks in random order.
	Skip forwards/back	Select to skip to the next or to the previous track.
	Additional options	Select to show additional options.
	Categories	Select to show or search through available categories (e.g. playback lists, albums, artists, etc.).
	Search	Select to search in the active menu. You can search for artists, genres or moods, for example.

Symbol	Designation	Function
	Settings	Select to make settings.
	Home	Select to return to the home screen.
	Messaging	Select to call up messaging.
	Full screen	Select to switch to full screen mode.

The following functions and settings are available in the media menu:

- Connecting external data storage media with the multimedia system (e.g. using USB or Bluetooth®)
- Playing back audio or video files
- Streaming online music
- Looking at TV programmes in the TV menu

Additional functions in the TV menu

Symbol	Designation	Function
	Settings	Select to make settings in the TV menu. The following functions can be switched on/off or configured: • Channel fix • Country-specific character set • Audio language • Subtitles • Teletext • Picture format
	EPG	Select to show current programme information for the channel.
	Channel list	Select to show a list of available channels with the current programme.

Receiving TV channels in HD quality

NOTE Damage to the CI+ module and Smart Card

The CI+ module is designed for use in the home. The CI+ module can overheat and be damaged by continuous exposure to high outside temperatures.

- Make sure that the CI+ module is not subject to high temperatures for extended periods of time.
  If the CI+ module is damaged, no encrypted channels can be received.

ⓘ The CI+ module is not available in all countries.

A CI+ module (Common Interface Module), which is not included in the scope of delivery, is used to decrypt HD programmes according to the CI+ standard.

In some countries, an additional smart card is required, which is inserted into the CI+ module (see the manufacturer's operating manual).

The CI+ module is connected in the CI+ box in the glove compartment.

- **To insert the smart card in the CI+ module:** if required (country-dependent), insert the smart card into the CI+ module slot.

ⓘ The CI+ box is designed for operation at temperatures between 0 °C and 65 °C. At operating temperatures that are higher or too low a message appears in the multimedia system and the CI+ module is switched off automatically. If the CI+ module is switched off, no encrypted channels can be received.

Overview of the symbols and functions in the radio menu

Symbol	Designation	Function
	Home	Select to return to the home screen.
	Messaging	Select to call up messaging.
	Skip forwards/back	Select to skip to the next or to the previous station.
	Settings	Select to have further options shown. The setting options are country-dependent.
	Additional options	Select to show additional options.
TA	Traffic information service	Select to switch on the traffic information service. When the traffic information service is switched on, TA is blue.
	Station list	Select to have the station list shown.
	Search	Select to search in the active menu. You can search for artists, genres or moods, for example.

Additional functions of TuneIn Radio

ⓘ A relatively large volume of data can be transmitted when using TuneIn Radio.

Symbol	Designation	Function
	Settings	The following additional settings are available in the TuneIn Radio menu: • Selecting stream • Logging on to or out of the TuneIn account
	Favourites	Select during playback to save the station currently set as a favourite.
	Play/Pause	Select to start, stop or continue playback.
	Browse	Select to choose a category and then a radio station.

Depending on the frequency band selected, different functions are available to you.

Select the desired frequency band in the radio menu head runner.

Calling up TuneIn Radio

Requirements:

- There is a user account at https://www.mercedes.me.
- The vehicle is linked to the Mercedes me user account.
- The TuneIn Radio service is activated in the Mercedes me portal.
- The data volume is available.

Depending on the country, data volume may need to be purchased.

- A fast Internet connection for data transmission free of interference.

ⓘ Data volume can be purchased **directly from a mobile phone network provider** via the Mercedes me Portal.

ⓘ The functions and services are country-dependent. For more information, consult a Mercedes-Benz service centre.

Multimedia system:

↝ ⌂ ›› Radio

▶ Select TuneIn Radio.
The TuneIn menu appears. The last station set starts playing.

ⓘ The connection quality depends on the local mobile phone reception.

Sound settings

Overview of functions in the sound menu

The setting options and functions available depend on the sound system fitted. You can find out which sound system is fitted in your vehicle in the Digital Owner's Manual.

Standard sound system

The following functions are available:

- Equaliser:
  - Treble, mid-range and bass
- Balance and fader
- Volume:
  - Automatic adjustment

Burmester® 3D-surround sound system and Burmester® high-end 4D surround sound system

The following functions are available:

- Equaliser:
  - Treble, mid-range and bass
- Balance and fader
- Sound focus
- VIP seat (Burmester® high-end 4D surround sound system)
- Sound profiles
- Volume:
  - Automatic adjustment

ASSYST PLUS service interval display

Function of the ASSYST PLUS service interval display

The ASSYST PLUS service interval display on the driver display provides information on the remaining time or distance before the next service due date.

You can hide this service display using the back button on the left-hand side of the steering wheel.

Depending on how the vehicle is used, the ASSYST PLUS service interval display may shorten the service interval, e.g. in the following cases:

- mainly short-distance driving
- when the engine is often left idling for long periods
- in the event of frequent cold start phases

Mercedes-Benz recommends avoiding such operating conditions.

You can obtain information concerning the servicing of your vehicle from a qualified specialist workshop, e.g. a Mercedes-Benz Service Centre.

Displaying the service due date

Driver display:

↳ Service

The next service due date is displayed.

▶ **To exit the display:** press the back button on the left-hand side of the steering wheel.

Bear in mind the following related topic:

- Operating the driver display (→ page 278).

Information on regular maintenance work

! **NOTE** Premature wear through failure to observe service due dates

Maintenance work which is not carried out at the right time or incompletely can lead to increased wear and damage to the vehicle.

▶ Adhere to the prescribed service intervals.

▶ Always have the prescribed maintenance work carried out at a qualified specialist workshop.

Special service requirements

The prescribed service interval is based on normal operation of the vehicle. Maintenance work will need to be performed more often if the vehicle is operated under arduous conditions or increased loads.

The ASSYST PLUS service interval display is only an aid. The driver of the vehicle bears responsibility as regards to whether maintenance work needs to be performed more often than specified based on the actual operating conditions and/or loads.

Examples of arduous operating conditions:

- regular city driving with frequent intermediate stops
- mainly short-distance driving
- frequent operation in mountainous terrain or on poor road surfaces
- when the engine is often left idling for long periods
- operation in particularly dusty conditions and/or if air-recirculation mode is frequently used

In these or similar operating conditions, have the interior air filter, engine air cleaner, engine oil and oil filter etc. changed more frequently. The tyres must be checked more frequently if the vehicle is operated under increased loads. Further information can be obtained at a qualified specialist workshop.

Battery disconnection periods

The ASSYST PLUS service interval display can calculate the service due date only when the battery is connected.

- Display the service due date on the driver display and note it down before disconnecting the battery (→ page 335).

Engine compartment

Active bonnet (pedestrian protection)

Operation of the active bonnet (pedestrian protection)

In certain accident situations, the actuation of the active bonnet reduces the risk of injury to pedestrians. The rear area of the bonnet is raised by approximately 80 mm.

After being triggered, the active bonnet remains in the raised position. Limited visibility due to the raised bonnet cannot be ruled out.

After the active bonnet has been actuated, pedestrian protection may be limited.

Have the full functionality of the active bonnet restored immediately in a qualified specialist workshop.

If necessary, adjust your seat position and drive carefully to a qualified specialist workshop. If a safe continued journey is not possible, contact a qualified specialist workshop.

Opening and closing the bonnet

WARNING Risk of accident due to driving with the bonnet unlocked

The bonnet may open and block your view.

- Never release the bonnet when driving.
- Before every trip, ensure that the engine bonnet is locked.

WARNING Risk of accident and injury when opening and closing the bonnet

The bonnet may suddenly drop into the end position.

There is a risk of injury for anyone in the engine bonnet's range of movement.

- Do not open or close the bonnet if there is a person in the bonnet's range of movement.

WARNING Risk of burns when opening the bonnet

If you open the bonnet when the engine has overheated or when there is a fire in the engine compartment, the following situations may occur:

- You could come into contact with hot gases.

- You could come into contact with other hot, escaping operating fluids.

▶ Before opening the bonnet, allow the engine to cool down.

▶ In the event of a fire in the engine compartment, keep the bonnet closed and call the fire service.

⚠ WARNING Risk of injury due to moving parts

Components in the engine compartment may continue running or start up suddenly, even if the ignition is switched off.

Make sure of the following before performing tasks in the engine compartment:

▶ Switch the ignition off.

▶ Never reach into the danger zone surrounding moving components, e.g. the rotation area of the fan.

▶ Remove jewellery and watches.

▶ Keep items of clothing and hair away from moving parts.

⚠ WARNING Risk of injury from touching components under voltage

The ignition system and the fuel injection system work under high voltage. You could receive an electric shock.

▶ Never touch components of the ignition system or the fuel injection system when the ignition is switched on.

⚠ WARNING Risk of burns from hot component parts in the engine compartment

Certain component parts in the engine compartment can be very hot, e.g. the engine, the cooler and parts of the exhaust system.


▶ Allow the engine to cool down and only touch component parts described in the following.

⚠ WARNING Risk of injury from using the windscreen wipers while the engine bonnet is open

When the engine bonnet is open, and the windscreen wipers are set in motion, you can be trapped by the wiper linkage.

▶ Always switch off the windscreen wipers and ignition before opening the engine bonnet.

Opening the bonnet

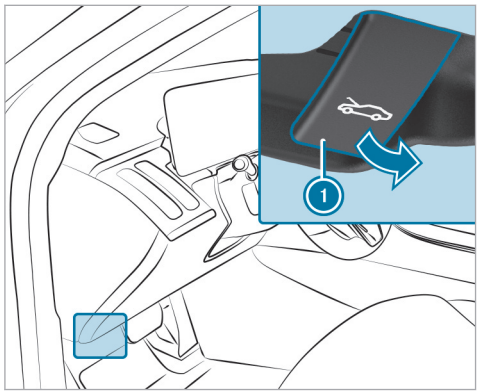

- ▶ Pull on handle (1) twice.
  The bonnet will be released and open slightly.
- ▶ Then lift the bonnet by hand.

Closing the bonnet

! NOTE Damage to the bonnet

If the bonnet is closed manually, there is a risk of dents.

- ▶ Do not close the bonnet manually.

- ▶ Lower the bonnet to a height of around 20 cm and then allow it to fall, applying a little force as you let it go.
- ▶ If the bonnet can still be lifted slightly, open the bonnet again and close it with a little more force until it engages correctly.

Engine oil

Checking the engine oil level with the driver display

Requirements:

- The engine has been warmed up.
- The vehicle is parked on a level surface.
- The engine is running at idle speed.
- The bonnet is closed.

The engine oil level is determined during driving. Determining the engine oil level can take up to 30 minutes with a normal driving style and even longer with an active driving style.

Driver display:

↳ Service

The engine oil level is shown.

One of the following messages will appear on the driver display:

- Engine oil level Measuring now...: measurement of the oil level is not yet possible.

- ▶ Repeat the request after a maximum of 30 minutes' driving.

- Engine oil level OK and the bar display for indicating the oil level on the driver display is green and is between "min" and "max": the oil level is correct.
- Engine oil level Top up 1,0 l and the bar display for indicating the oil level on the driver display is yellow and is below "min":

- ▶ Add 1 l of engine oil.

- Engine oil level Reduce and the bar display for indicating the oil level on the driver display is yellow and is above "max":

▶ Drain off any excess engine oil that has been added. To do so, consult a qualified specialist workshop.

- For engine oil level switch on ignition

▶ Switch on the ignition to check the engine oil level.

- Engine oil level System inoperative: The oil level sensor is defective or not connected.

▶ Consult a qualified specialist workshop.

- Engine oil level currently inoperative

▶ Close the bonnet.

Topping up engine oil

⚠ WARNING Risk of burns from hot component parts in the engine compartment

Certain component parts in the engine compartment can be very hot, e.g. the engine, the cooler and parts of the exhaust system.

▶ Allow the engine to cool down and only touch component parts described in the following.

⚠ WARNING Risk of fire and injury from engine oil

If engine oil comes into contact with hot component parts in the engine compartment, it may ignite.

▶ Make sure that no engine oil is spilled next to the filler opening.

▶ Allow the engine to cool off and thoroughly clean the engine oil from component parts before starting the vehicle.

! NOTE Engine damage caused by an incorrect oil filter, incorrect oil or additives

▶ Do not use engine oils or oil filters which do not correspond to the specifications explicitly prescribed for the service intervals.

▶ Follow the instructions on the service interval display for changing the engine oil and observe the prescribed change intervals.

▶ Do not use additives.


! NOTE Damage caused by topping up too much engine oil

Too much engine oil can damage the engine or the catalytic converter.

▶ Have excess engine oil removed at a qualified specialist workshop.

ⓘ Depending on driving style, the vehicle consumes up to 0.8 litre of oil per 1000 km. The oil consumption may be higher than this when the vehicle is new or if you frequently drive at high engine speeds.

ⓘ Depending on the engine, the cap may be installed in the engine compartment in different locations.

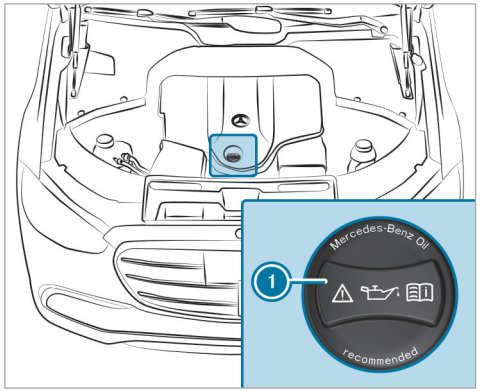

- Turn cap (1) anti-clockwise and remove it.
- Top up the engine oil.
- Replace cap (1) and turn it clockwise until it engages.
- Check the oil level again (→ page 338).

Checking the coolant level

WARNING Risk of burns from hot component parts in the engine compartment

Certain component parts in the engine compartment can be very hot, e.g. the engine, the cooler and parts of the exhaust system.

- Allow the engine to cool down and only touch component parts described in the following.

WARNING Risk of scalding from hot coolant

If you open the cap, you could be scalded.

- Let the motor cool down before opening the cap.
- When opening the cap, wear protective gloves and safety glasses.
- Open the cap slowly to release pressure.

- Only have the coolant checked or refilled at a qualified specialist workshop.

Topping up the windscreen washer system

WARNING Risk of burns from hot component parts in the engine compartment


Certain component parts in the engine compartment can be very hot, e.g. the engine, the cooler and parts of the exhaust system.

- Allow the engine to cool down and only touch component parts described in the following.

WARNING - Risk of fire and injury due to windscreen washer concentrate

Windscreen washer concentrate is highly flammable. It could ignite if it comes into contact with hot engine component parts or the exhaust system.

- Make sure that no windscreen washer concentrate spills out next to the filler opening.

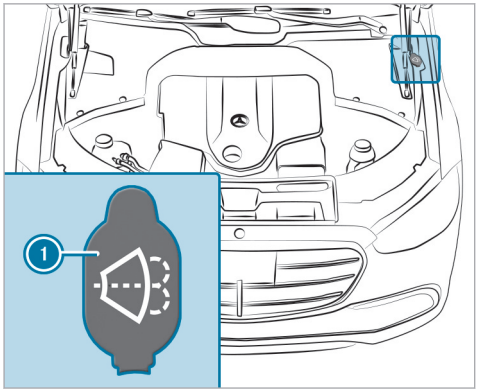

- Remove cap (1) by the tab.
- Top up the washer fluid.

ⓘ Further information about the windscreen washer fluid (→ page 468)

Keeping the air-water duct free

- Keep the area between the bonnet and the windscreen free of deposits, e.g. ice, snow and leaves.

Cleaning and care

Information on washing the vehicle in a car wash

⚠ WARNING Risk of an accident due to reduced braking power after washing the vehicle

Braking efficiency is reduced after washing the vehicle.

- After the vehicle has been washed, brake carefully while paying attention to the traffic conditions until braking power has been fully restored.

! NOTE Damage from automatic braking

If one of the following functions is switched on, the vehicle brakes automatically in certain situations:

- Active Brake Assist
- Active Distance Assist DISTRONIC
- HOLD function
- Active Parking Assist

To avoid damage to the vehicle, deactivate these systems in the following or similar situations:

- during towing
- in a car wash

! NOTE Damage due to unsuitable car wash

- Before driving into a car wash make sure that the car wash is suitable for the vehicle dimensions.

- ▶ Ensure there is sufficient ground clearance between the underbody and the guide rails of the car wash.
- ▶ Ensure that the clearance width of the car wash, in particular the width of the guide rails, is sufficient.

To avoid damage to your vehicle when using a car wash, ensure the following beforehand:

- Active Distance Assist DISTRONIC is deactivated.
- the HOLD function is switched off.
- the 360° camera is switched off.
- the vehicle is locked and the door handles retracted.
- the side windows and sliding sunroof are completely closed.
- the blower for the ventilation/heating is switched off.
- the windscreen wiper switch is in position 0.
- the key is at a minimum distance of 6 m away from the vehicle. Otherwise the boot lid or a door could open unintentionally.
- for car washes with a conveyor system:
  - neutral N is engaged.
  - the vehicle is locked from inside.
- do not make any hand movements in the area of the overhead control panel or deactivate (→ page 299) the Sliding sunroof and roller sunblind option in the settings for the MBUX interior assistant.

ⓘ If, after the car wash, you remove the wax from the windscreen and wiper rubbers, this will prevent smearing and reduce wiper noise.

Information on using a high-pressure cleaner

⚠ **WARNING** Risk of an accident when using high-pressure cleaners with round-spray nozzles

The water jet can cause externally invisible damage.

Components damaged in this way may unexpectedly fail.

- ▶ Do not use a high-pressure cleaner with round-spray nozzles.
- ▶ Have damaged tyres or chassis parts replaced immediately.

To avoid damage to your vehicle, observe the following when using a high-pressure cleaner:

- the key is at a minimum distance of 3 m away from the vehicle. Otherwise the boot lid or a door could open unintentionally.
- maintain a distance of at least 30 cm to the vehicle.
- **vehicles with decorative foil:** parts of your vehicle are covered with a decorative foil. Maintain a distance of at least 70 cm between the foil-covered parts of the vehicle and the nozzle of the high-pressure cleaner. Move the high-pressure cleaner nozzle around whilst cleaning. The water temperature of the high-pressure cleaner must not exceed 60°C.
- observe the information on the correct distance in the equipment manufacturer's operating instructions.

- do not direct the nozzle of the high-pressure cleaner directly at sensitive parts, e.g. tyres, gaps, electrical components, batteries, light sources and ventilation slits.

Washing the vehicle by hand

NOTE Engine damage due to water ingress

- Take care not to point the water jet directly towards the air inlet grille below the bonnet.

observe the legal requirements, e.g. in a number of countries, washing by hand is only permitted in specially designated wash bays.

- Use a mild cleaning agent, e.g. car shampoo.
- Wash the vehicle with lukewarm water using a soft car sponge. When doing so, do not expose the vehicle to direct sunlight.
- Carefully hose the vehicle off with water and dry using a chamois.

ⓘ Observe the notes on the care of car parts (→ page 344).

Notes on paintwork/matt finish paintwork care

Observe the notes on cleaning and care to avoid damaging the paintwork and interfering with the driver assistance systems.

Paint

- Insect remains: soak with insect remover and rinse off the treated areas afterwards.
- Bird droppings: soak with water and rinse off afterwards.
- Tree resin, oils, fuels and greases: remove by rubbing gently with a cloth soaked in petroleum ether or lighter fluid.
- Coolant and brake fluid: remove with a damp cloth and clean water.
- Tar stains: use tar remover.
- Wax: use silicone remover.
- Do not attach stickers, films or similar materials. Only have film attached to the bumper at a qualified specialist workshop.
- Remove dirt immediately, where possible.

Matt finish

- Only use care products approved for Mercedes-Benz.
- Do not attach stickers, films or similar materials. Only have film attached to the bumper at a qualified specialist workshop.
- Do not polish the vehicle and light-alloy wheels.
- Only use car washes that correspond to the latest engineering standards.
- Do not use car wash programmes with a final hot wax treatment.
- Do not use paint cleaners, buffing or polishing products, gloss preservers, e.g. wax.

In the event of paintwork damage:

- Always have paintwork repairs carried out at a qualified specialist workshop.
- Make sure the radar sensors function (→ page 219).

Notes on cleaning decorative foils

Observe the notes on matt finish care in the chapter "Notes on paintwork/matt finish paintwork care" (→ page 343). They also apply to matt decorative foils.

Observe the notes on cleaning decorative foils to avoid vehicle damage.

Cleaning

- For cleaning, use plenty of water and a mild cleaning agent without additives or abrasive substances, e.g. a car shampoo approved for Mercedes-Benz.
- Remove dirt immediately, where possible, whilst avoiding rubbing too hard. There is otherwise a risk of damaging the decorative foil irreparably.
- If there is dirt on the finish or if the decorative foil is dull: use the Paint Cleaner recommended and approved for Mercedes-Benz.
- Insect remains: soak with insect remover and rinse off the treated areas afterwards.
- Bird droppings: soak with water and rinse off afterwards.
- To prevent water stains, dry a foil-wrapped vehicle with a soft, absorbent cloth after every car wash.

Avoiding damage to the decorative foil

- The service life and colouring of decorative foils are impaired by:
  - sunlight
  - temperature, e.g. hot air blower
  - weather conditions
  - stone chippings and dirt
  - chemical cleaning agents
  - oily products
- Do not use polish on matt decorative foil. Polishing will have the effect of shining the foil-wrapped surface.
- Do not treat matt or structured decorative foils with wax. Permanent stains may occur.

Scratches, corrosive deposits, areas affected by corrosion and damage caused by incorrect care cannot always be completely repaired. In such cases, visit a qualified specialist workshop.

You can obtain more information on care and cleaning products from the manufacturer.

In the case of foil-wrapped surfaces, optical differences may occur between the surfaces that were not protected by a decorative foil after removing a decorative foil.

ⓘ Have work or repairs to decorative foils carried out at a qualified specialist workshop, e.g. in a Mercedes-Benz Service Centre.

Notes on care of car parts

⚠ **WARNING** Risk of entrapment if the windscreen wipers are switched on while the windscreen is being cleaned

If the windscreen wipers are set in motion while you are cleaning the windscreen or wiper blades, you can be trapped by the wiper arm.

▶ Always switch off the windscreen wipers and the ignition before cleaning the windscreen or wiper blades.

WARNING Risk of burns from the tailpipe and tailpipe trims

The exhaust tailpipe and tailpipe trims can become very hot. If you come into contact with these parts of the vehicle, you could burn yourself.

- Always be particularly careful around the tailpipe and the tailpipe trims and supervise children especially closely in this area.
- Allow vehicle parts to cool down before touching them.

To avoid damage to the vehicle, observe the notes on cleaning and care of the following vehicle parts:

Wheels and rims

- Use water and acid-free alloy wheel cleaners.
- Do not use acidic alloy wheel cleaners to remove brake dust. This could damage wheel bolts and brake components.
- To avoid corrosion of the brake disks and brakepads, drive the vehicle for a few minutes after cleaning before parking it. The brake disks and brakepads warm up and dry out.

Windows

- Clean the windows inside and outside with a damp cloth and with a cleaning agent recommended for Mercedes-Benz.
- Do not use dry cloths or abrasive or solvent-based cleaning agents to clean the inside of windows.

ⓘ Remove external fogging or dirt on the windscreen in front of the multifunction camera. Otherwise, driving systems and driving safety systems may be impaired or not available (→ page 219).

Wiper blades

- Move the wiper arms into the replacement position (→ page 172).
- With the wiper arms folded out, clean the wiper blades with a damp cloth.
- Do not clean the wiper blades too often.

Exterior lighting

- Clean the lenses with a wet sponge and mild cleaning agent, e.g. car shampoo.
- Only use cleaning agents or cleaning cloths that are suitable for plastic lenses.

Sensors

- Clean the sensors in the front and rear bumpers with a soft cloth and car shampoo (→ page 219).
- When using a high-pressure cleaner, maintain a minimum distance of 30 cm.

360° camera

- Open the camera cover with the multimedia system (→ page 263).
- Use clean water and a soft cloth to clean the camera lens.
- Do not use a high-pressure cleaner.

Tailpipes

- Clean with a cleaning agent recommended for Mercedes-Benz, especially in the winter and after washing the vehicle.
- Do not use acidic cleaning agents.

Notes on care of the interior

WARNING Risk of injury from plastic parts breaking off after the use of solvent-based care products

Care and cleaning products containing solvents can cause surfaces in the cockpit to become porous. When the airbags are deployed, plastic parts may break away.

- Do not use any care or cleaning products containing solvents to clean the cockpit.

WARNING Risk of injury or death from bleached seat belts

Bleaching or dyeing seat belts can severely weaken them.

This can, for example, cause seat belts to tear or fail in an accident.

- Never bleach or dye seat belts.

To avoid damage to the vehicle, observe the following notes on cleaning and care:

Seat belts

- Clean with lukewarm and soapy water.
- Do not use chemical cleaning agents.
- Do not dry by heating them to over 80 °C or exposing them to direct sunlight.

Display

- Switch off the display and let it cool down.
- Clean the surface carefully with a microfibre cloth and a suitable display care product (TFT-LCD).
- Do not use any other agents.

Plastic trim

- Clean with a damp microfibre cloth.
- For heavy soiling: use a cleaner recommended for Mercedes-Benz.
- Do not attach stickers, films or similar materials.
- Do not allow cosmetics, insect repellent or sun cream to come in contact with the plastic trim.

Real wood and trim elements

- Clean with a microfibre cloth.
- Black piano-lacquer look: clean with a damp cloth and soapy water.
- For heavy soiling: use a cleaner recommended for Mercedes-Benz.
- Do not use solvent-based cleaning agents, polishes or waxes.

Roof lining

- Clean with a brush or dry shampoo.

Carpet

- Use a carpet and textile cleaning agent recommended for Mercedes-Benz.

Steering wheel made of genuine leather or DINAMICA

NOTE Damage caused by wrong cleaners

- Do not use solvent-based cleaning agents such as tar remover or wheel cleaner; neither should you use polishes or waxes. Otherwise you may damage the finish.

- Clean with a damp cloth and 1% soapy water solution and then wipe with a dry cloth.

- For heavy soiling: use a cleaner recommended for Mercedes-Benz.
- Leather care: use a leather care agent that has been recommended for Mercedes-Benz.
- Do not allow the leather to become too damp.
- Do not use a microfibre cloth.

ⓘ Leather is a natural product. It has natural surface properties, such as differences in structure, marks caused by growth and injury or subtle colour differences.

Genuine leather seat covers

- Clean with a damp cloth and then wipe with a dry cloth.
- Leather care: use a leather care agent that has been recommended for Mercedes-Benz.
- Do not allow the leather to become too damp.
- Do not use a microfibre cloth.

DINAMICA seat covers

- Clean with a damp cloth.
- Do not use a microfibre cloth.

Fabric seat covers

- Clean with a damp microfibre cloth and 1% soapy water and allow to dry.


EASY-PACK boot box

- Clean with a damp cloth.
- Do not use any alcohol-based thinners, petrol or abrasive cleaning agents.

Emergency

Removing the safety vest


The safety vests are located in stowage spaces in the front door.

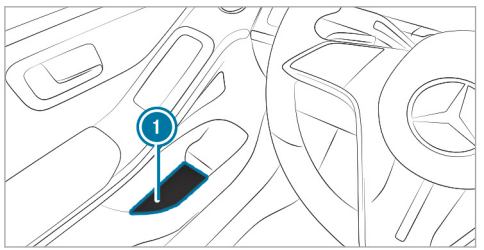

▶ Take the safety vest bag out of stowage space 1.

▶ Open the safety vest bag and pull out the safety vest.

ⓘ Safety vests can also be stored in the rear door stowage spaces.

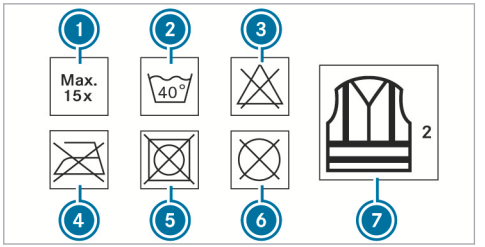

1 Maximum number of washes
2 Maximum wash temperature
3 Do not bleach
4 Do not iron
5 Do not tumble dry
6 Do not dry clean
7 This is a class 2 vest

The requirements defined by the legal standard are only fulfilled in the following cases:


- the safety vest is the correct size
- the safety vest is fully closed whilst being worn

Replace the safety vest in the following cases:

- the reflective strips are damaged or dirt on the reflective strips can no longer be removed
- the maximum number of washes is exceeded
- the fluorescence has faded


Warning triangle

Removing the warning triangle

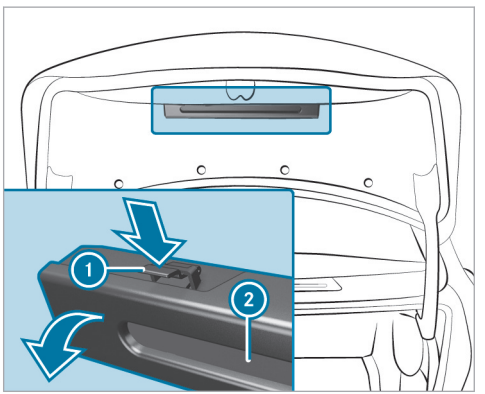

- Push both sides of warning triangle holder (1) in the direction of the arrow and open it.
- Remove warning triangle (2).


Setting up the warning triangle

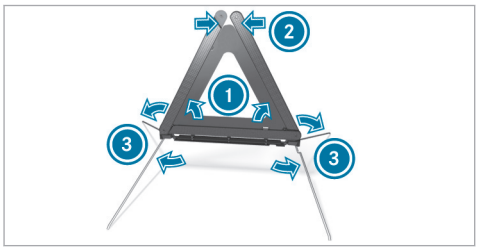


- Fold side reflectors (1) upwards to form a triangle and attach at the top using upper press-stud (2).
- Fold legs (3) down and out to the side.

First-aid kit (soft sided)

First-aid kit (soft sided) (1) is located on the right-hand side of the boot and is secured with Velcro strip (2).

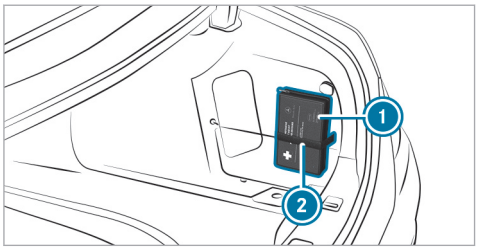

Removing the fire extinguisher

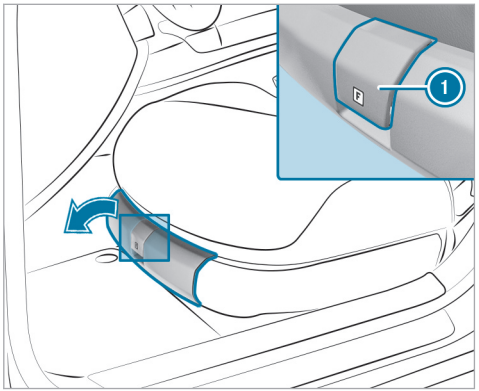

! **NOTE** Damage to the stowage compartment

- Keep the stowage compartment closed while the vehicle is moving.

- Pull handle (1) up and fold the cover forwards in the direction of the arrow.

- ▶ Remove the fire extinguisher from the stowage compartment.
- ▶ After removing the fire extinguisher, close the cover again.

Flat tyre

Notes on flat tyres

⚠ WARNING Risk of accident due to a flat tyre

A flat tyre severely affects the driving characteristics as well as the steering and braking of the vehicle.

Tyres without run-flat characteristics:

- ▶ Do not drive with a flat tyre.
- ▶ Change the flat tyre immediately with an emergency spare wheel or spare wheel. Alternatively, consult a qualified specialist workshop.

Tyres with run-flat characteristics:

- ▶ Observe the information and warning notes on MOExtended tyres (run-flat tyres).

In the event of a flat tyre, the following options are available depending on your vehicle's equipment:

- **Vehicles with MOExtended tyres:** it is possible to continue the journey for a short period of time. Make sure you observe the notes on MOExtended tyres (run-flat tyres) (→ page 350).
- **Vehicles with a TIREFIT kit:** you can repair the tyre so that it is possible to continue the journey for a short period of time. To do this, use the TIREFIT kit (→ page 351).
- **Vehicles with Mercedes me connect:** you can make a call for breakdown assistance via the overhead control panel in the case of a breakdown (→ page 314).
- **All vehicles:** change the wheel (→ page 377).

Notes on MOExtended tyres (run-flat tyres)

⚠ WARNING Risk of accident when driving in limp-home mode

Driving in emergency mode impairs the handling characteristics of the vehicle.

- ▶ Do not exceed the permissible maximum speed of the MOExtended tyres.
- ▶ Avoid any abrupt steering and driving manoeuvres as well as driving over obstacles (kerbs, pot holes, off-road). This applies, in particular, to a loaded vehicle.
- ▶ Stop driving in the emergency mode if you notice:
  - banging noise
  - vehicle vibration
  - smoke which smells like rubber
  - continuous ESP® intervention
  - cracks in the tyre sidewalls
- ▶ After driving in emergency mode, have the rims checked by a qualified specialist

workshop with regard to their further use.

▶ The defective tyre must be replaced in every case.

With MOExtended tyres (run-flat tyres), you can continue to drive your vehicle even if there is a total loss of pressure in one or more tyres. However, the tyre affected must not show any clearly visible damage.

You can recognise MOExtended tyres by the MOExtended marking which appears on the side wall of the tyre.

Vehicles with tyre pressure monitoring system: MOExtended tyres may only be used in conjunction with an activated tyre pressure monitoring system.

If a pressure loss warning message appears in the driver's display, proceed as follows:

- Check the tyre for damage.
- If driving on, observe the following notes.

Driving distance possible in emergency mode after the pressure loss warning:

Load condition	Driving distance possible in emergency mode
Partially laden	80 km
Fully laden	30 km

The driving distance possible in emergency mode may vary depending on the driving style. Observe the maximum permissible speed of 80 km/h.

If a tyre has gone flat and cannot be replaced with an MOExtended tyre, you can use a standard tyre as a temporary measure.

TIREFIT kit storage location

Depending on the vehicle's equipment, the storage bag for the TIREFIT kit is located in the luggage compartment or on the left side of the stowage net. Comply with the loading guidelines (→ page 139).

ⓘ You can find information on the power category (LK) and/or electrical data on the back of the tyre inflation compressor:

- LK2 – 12 V/15 A, 180 W, 0.8 kg

At a distance of approximately 1 m to the tyre inflation compressor and approximately 1.6 m above the ground, the following sound pressure levels apply:

- Emissions sound pressure level L_{PA} 83 dB (A)
- Sound power level L_{WA} 91 dB (A)

The tyre inflation compressor is maintenance-free. If there is a malfunction, please contact a qualified specialist workshop.

Using the TIREFIT kit

Requirements:

- Tyre sealant bottle and tyre inflation compressor (→ page 351)
- TIREFIT sticker
- Gloves (depending on the vehicle equipment)

You can use TIREFIT tyre sealant to seal perforation damage of up to 4 mm, particularly those in the tyre contact surface. You can use TIREFIT in outside temperatures down to -20 °C.

WARNING Risk of accident when using tyre sealant

The tyre sealant may be unable to seal the tyre properly, especially in the following cases:

- there are large cuts or punctures in the tyre (larger than damage previously mentioned)
- the wheel rims have been damaged
- after journeys with very low tyre pressure or with flat tyres

▶ Do not continue driving.

▶ Consult a qualified specialist workshop.

WARNING Risk of injury and poisoning from tyre sealant

Tyre sealant is hazardous to health and causes irritation. Do not allow it to come into contact with your skin, eyes or clothing, and do not swallow it. Do not inhale any vapours. Keep the tyre sealant away from children.

Observe the following if you come into contact with the tyre sealant:

▶ Rinse off the tyre sealant from your skin using water immediately.

▶ If tyre sealant gets into your eyes, thoroughly rinse them using clean water immediately.

▶ If tyre sealant has been swallowed, thoroughly rinse out your mouth immediately and drink plenty of water. Do not induce vomiting and seek medical attention immediately.

▶ Change out of clothing which has come into contact with tyre sealant immediately.

▶ If an allergic reaction occurs, seek medical attention immediately.


NOTE Overheating due to the tyre inflation compressor running too long

▶ Do not run the tyre inflation compressor for longer than ten minutes without interruption.


Comply with the manufacturer's safety notes on the sticker on the tyre inflation compressor.

Have the tyre sealant bottle replaced in a qualified specialist workshop every five years.


▶ Do not remove any foreign objects which have entered the tyre.

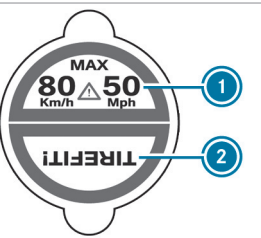

- Affix part (1) of the TIREFIT sticker to the instrument cluster within the driver's field of vision.
- Affix part (2) of the TIREFIT sticker near the valve on the wheel with the defective tyre.

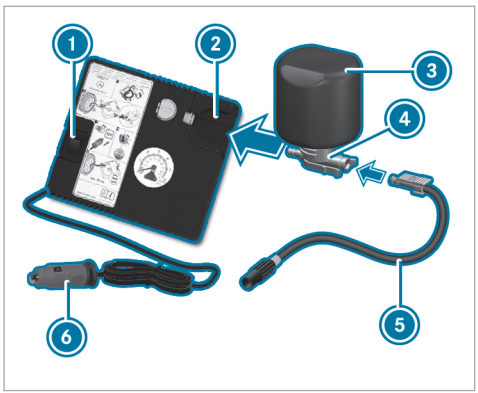

- Pull plug (6) with the cable and hose (5) out of the tyre inflation compressor housing.
- Push the plug of hose (5) into flange (4) of tyre sealant bottle (3) until the plug engages.
- Place tyre sealant bottle (3) head downwards into recess (2) of the tyre inflation compressor.

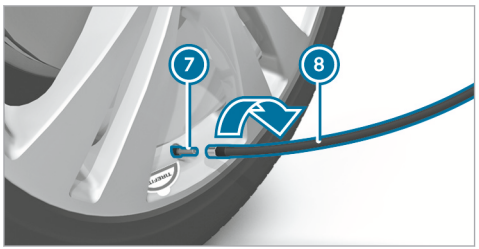

- Remove the valve cap from valve (7) on the faulty tyre.
- Screw filling hose (8) onto valve (7).
- Insert plug (6) into a 12 V socket in your vehicle.
- Switch on the ignition.
- Switch on the tyre inflation compressor using On/Off switch (1).
  The tyre is inflated. First, tyre sealant is pumped into the tyre. The pressure may briefly rise to approximately 500 kPa (5 bar/73 psi).

Do not switch off the tyre inflation compressor during this phase!

- Let the tyre inflation compressor run for a maximum of ten minutes.
  The tyre should then have attained a tyre pressure of at least 200 kPa (2.0 bar/29 psi).

If tyre sealant leaks out, make sure you clean the affected area as quickly as possible. It is preferable to use clean water.

If you get tyre sealant on your clothing, have it cleaned as soon as possible with perchloroethylene.

If, after ten minutes, a tyre pressure of 200 kPa (2.0 bar/29 psi) has not been attained:

- Switch off the tyre inflation compressor.
- Unscrew the filling hose from the valve of the defective tyre.

P223 0210 02

Please note that tyre sealant may leak out when unscrewing the filling hose.

- Drive forwards or in reverse very slowly for approximately 10 m.
- Pump up the tyre again.
  After a maximum of ten minutes the tyre pressure must be at least 200 kPa (2.0 bar/29 psi).

⚠ WARNING Risk of accident due to the specified tyre pressure not being attained

If the minimum tyre pressure is not reached after the specified time, the tyre is too badly damaged. The tyre sealant cannot repair the tyre in this instance.

The braking and driving characteristics may be greatly impaired.

- Do not continue driving.
- Consult a qualified specialist workshop.

If, after ten minutes, a tyre pressure of 200 kPa (2.0 bar/29 psi) has been attained:

- Switch off the tyre inflation compressor.
- Unscrew the filling hose from the valve of the defective tyre.

⚠ WARNING Risk of accident from driving with sealed tyres

A tyre temporarily sealed with tyre sealant impairs the handling characteristics and is not suitable for higher speeds.

- Adapt your driving style accordingly and drive carefully.
- Do not exceed the maximum speed limit with a tyre that has been repaired using tyre sealant.

- Observe the maximum permissible speed for a tyre sealed with tyre sealant 80 km/h.

! NOTE Staining from leaking tyre sealant

After use, excess tyre sealant may leak out from the filling hose.

- Therefore, place the filling hose in the plastic bag that contained the TIREFIT kit.

ENVIRONMENTAL NOTE Environmental pollution caused by environmentally irresponsible disposal

Tyre sealant contains pollutants.

- Have the tyre sealant bottle disposed of professionally, e.g. at a Mercedes-Benz Service Centre.

- Stow the tyre sealant bottle and the tyre inflation compressor.
- Pull away immediately.
- Stop driving after approximately ten minutes and check the tyre pressure using the tyre inflation compressor.
  The tyre pressure must now be at least 130 kPa (1.3 bar/19 psi).

⚠ WARNING Risk of accident due to the specified tyre pressure not being attained


If the specified tyre pressure is not reached, the tyre is too badly damaged. The tyre sealant cannot repair the tyre in this instance.

The braking and driving characteristics may be greatly impaired.

- Do not continue driving.
- Consult a qualified specialist workshop.

Countries that have Mercedes-Benz Service24h: you will find a sticker with the telephone number, e.g. on the B-pillar on the driver's side.

- Correct the tyre pressure if it is still at least 130 kPa (1.3 bar/19 psi). See the tyre pressure table on the fuel filler flap for values.
- **To increase the tyre pressure:** switch on the tyre inflation compressor.

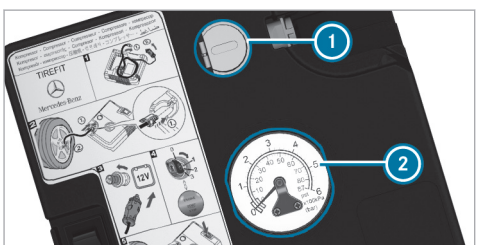

- **To reduce the tyre pressure:** press pressure release button (1) next to manometer (2).
- When the tyre pressure is correct, unscrew the filling hose from the valve of the sealed tyre.
- Screw the valve cap onto the valve of the sealed tyre.
- Pull the tyre sealant bottle out of the tyre inflation compressor.
  The filling hose stays on the tyre sealant bottle.
- Drive to the nearest qualified specialist workshop and have the tyre, tyre sealant bottle and filling hose replaced there.

Battery (vehicle)

Notes on the 12 V battery

WARNING Risk of an accident due to work carried out incorrectly on the battery

Work carried out incorrectly on the battery can, for example, lead to a short circuit. This can restrict functions relevant for safety systems and impair the operating safety of your vehicle.

You could lose control of the vehicle in the following situations in particular:

- when braking
- in the event of abrupt steering manoeuvres and/or when the vehicle's speed is not adapted to the road conditions

- In the event of a short circuit or a similar incident, contact a qualified specialist workshop immediately.
- Do not drive on.
- Always have work on the battery carried out at a qualified specialist workshop.

- Further information on ABS (→ page 221)
- Further information on ESP® (→ page 222)

For safety reasons, Mercedes-Benz recommends that you only use batteries which have been tested and approved for your vehicle by Mercedes-Benz.

All vehicles except vehicles with a lithium-ion battery

WARNING Risk of explosion due to electrostatic charge

Electrostatic charge can ignite the highly explosive gas mixture in the battery.

- To discharge any electrostatic charge that may have built up, touch the metal vehicle body before handling the battery.

The highly flammable gas mixture is created while the battery is charging and during starting assistance.

WARNING Danger of chemical burns from the battery acid

Battery acid is caustic.

- Avoid contact with the skin, eyes or clothing.
- Do not lean over the battery.
- Do not inhale battery gases.
- Keep children away from the battery.
- Immediately rinse battery acid off thoroughly with plenty of clean water and seek medical attention immediately.

All vehicles

ENVIRONMENTAL NOTE Environmental damage due to improper disposal of batteries



Batteries contain pollutants. It is illegal to dispose of them with the household rubbish.

- 

  Dispose of batteries in an environmentally responsible manner. Take discharged batteries to a qualified specialist workshop or to a collection point for used batteries.

If you have to disconnect the 12 V battery, contact a qualified specialist workshop.

Comply with safety notes and take protective measures when handling batteries.



Risk of explosion.



Fire, naked flames and smoking are prohibited when handling the battery. Avoid creating sparks.



Electrolyte or battery acid is corrosive. Avoid contact with the skin, eyes or clothing. Wear suitable protective clothing, in particular gloves, an apron and a face mask. Immediately rinse electrolyte or acid splashes off with clean water. Consult a doctor if necessary.



Wear safety glasses.



Keep children away.



Observe this Owner's Manual.

Observe the following if you do not intend to use the vehicle over an extended period of time:

- Activate standby mode.
- Alternatively: connect the battery to a battery charger approved by Mercedes-Benz or consult a qualified specialist workshop to disconnect the battery.

Notes on starting assistance and charging the 12 V battery

Vehicles with a lithium-ion battery

When charging the battery and during starting assistance, always use the jump-start connection point in the engine compartment.

NOTE Damage to the battery from overvoltage

When charging using a battery charger without a restriction of the maximum charging voltage, the battery or the on-board electronics can be damaged.

- Only use battery chargers with a maximum charging voltage of 14.8 V.

All other vehicles

When charging the battery and during starting assistance, always use the jump-start connection point in the engine compartment.

NOTE Damage to the battery from overvoltage

When charging using a battery charger without a restriction of the maximum charging voltage, the battery or the on-board electronics can be damaged.

- Only use battery chargers with a maximum charging voltage of 14.8 V.

WARNING Risk of explosion from hydrogen gas igniting

There is a danger of hydrogen gas igniting when charging the battery if there is a short circuit or sparks start to form.

- Make sure that the positive terminal of the connected battery does not come into contact with vehicle parts.
- Never place metal objects or tools on a battery.
- The described order of the battery clamps must be observed when connecting and disconnecting the battery.
- When giving starting assistance, always make sure that you only connect battery terminals with identical polarity.
- During starting assistance, you must observe the described order for connecting and disconnecting the jump lead.
- Do not connect or disconnect the battery clamps while the engine is running.

WARNING Risk of explosion during charging process and starting assistance

During the charging process and starting assistance, the battery may release an explosive gas mixture.

- Avoid fire, naked flames, creating sparks and smoking.
- Make sure there is sufficient ventilation.
- Do not lean over a battery.

WARNING Risk of explosion from a frozen battery

A discharged battery may freeze at temperatures slightly above or below freezing point.

During starting assistance or battery charging, battery gas can be released.

- Always allow a battery to thaw before charging it or performing starting assistance.

If the indicator/warning lamps in the instrument cluster do not light up at low temperatures, it is very likely that the discharged battery has frozen.

In this case you may neither jump-start the vehicle nor charge the battery.

The service life of a battery that has been thawed may be dramatically shortened. The starting characteristics may be impaired, especially at low temperatures.

It is recommended that you have a thawed battery checked at a qualified specialist workshop.

All vehicles

NOTE Damage caused by numerous or extended attempts to start the engine

Numerous or extended attempts to start the engine may damage the catalytic converter due to non-combusted fuel.

- Avoid numerous and extended attempts to start the engine.

Observe the following points during starting assistance and when charging the battery:

- Only use undamaged jump lead/charging cables with a sufficient cross-section and insulated terminal clamps.
- Non-insulated parts of the terminal clamps must not come into contact with other metal parts while the jump lead/charging cable is connected to the battery/jump-start connection point.
- The jump lead/charging cable must not come into contact with any parts which may move when the engine is running.
- Always make sure that neither you nor the battery is electrostatically charged.
- Keep away from fire and naked flames.
- Do not lean over the battery.

Observe the additional following points when charging the battery:

- Only use battery chargers tested and approved for Mercedes-Benz.
- Read the battery charger's operating instructions before charging the battery.


Observe the additional following points during starting assistance:

- Starting assistance may only be provided using vehicles, batteries or other jump start devices with a nominal voltage of 12 V.
- The vehicles must not touch.
- **Vehicles with a petrol engine:** jump-start the vehicle only when the engine and exhaust system are cold.

Starting assistance and charging the 12 V battery


Preparing starting assistance/the charging process

- Secure the vehicle by applying the electric parking brake.
- Select transmission position P.
- Switch off the ignition and all electrical consumers.
- Open the bonnet.

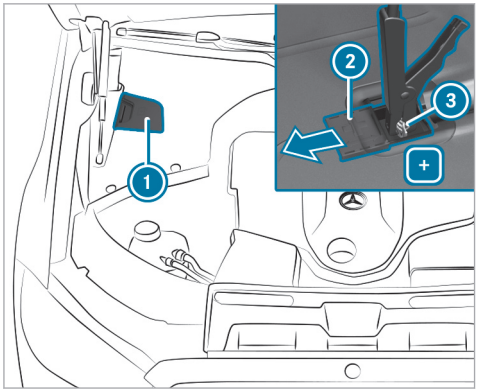

- Open cover 1.
- Slide protective cover 2 of positive contact 3 on the jump-starting connection point in the direction of the arrow.

Starting assistance

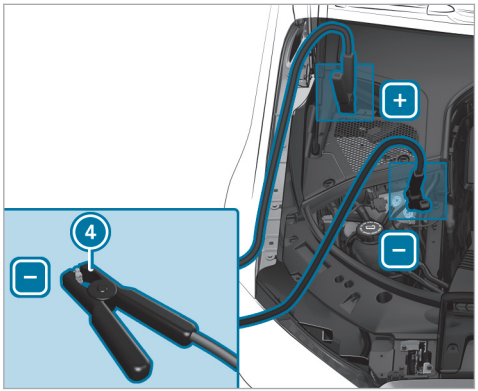

- Connect the positive contacts of the vehicles with the jump lead. Start with your own vehicle first.
- Start the engine of the donor vehicle and run it at idling speed.
- Connect negative terminal 4 of the donor battery to the earth point of your vehicle using

the jump lead. Start with the donor vehicle first.

- ▶ Start the engine of your own vehicle.
- ▶ Let the engines run for several minutes.
- ▶ Before disconnecting the jump leads, switch on an electrical consumer in your own vehicle, e.g. the rear window heater or the lighting.

When starting assistance has finished:

- ▶ First remove the jump lead from the earth point of your own vehicle and the negative terminal of the donor battery, then remove the jump lead from the positive contacts of both vehicles. Always start with your own vehicle first.
- ▶ Close protective cover (2) of positive contact (3) and close cover (1).

Further information can be obtained at a qualified specialist workshop.

Charging the 12 V battery

- ▶ Connect the positive contacts of the vehicle and the charger with the charging cable. Start with the vehicle first.
- ▶ Connect the negative contact of the charger and earth point (4) on the vehicle with the charging cable. Start with the charger first.
- ▶ Start the charging process.

When the charging process is complete:

- ▶ Remove the charging cable from earth point (4) on the vehicle and the negative contact of the charger first and then from the positive contacts on the vehicle and charger. Always start with the vehicle first.
- ▶ Close protective cover (2) of positive contact (3) and close cover (1).

Replacing the 12 V battery

- ▶ Observe the notes on the 12 V battery (→ page 355).

Mercedes-Benz recommends that you have the 12 V battery replaced at a qualified specialist workshop, e.g. at a Mercedes-Benz Service Centre.

Observe the following notes if you want to replace the battery yourself:

- Always replace a faulty battery with a battery which meets the specific vehicle requirements.

  The vehicle is equipped with an AGM technology battery (Absorbent Glass Mat) or a lithium-ion battery. Full vehicle functionality is only guaranteed with an AGM battery or lithium-ion battery. For safety reasons, Mercedes-Benz recommends that you only use batteries which have been tested and approved for your vehicle by Mercedes-Benz.
- Carry over detachable parts, such as vent hoses, elbow fittings or terminal covers from the battery being replaced.
- Make sure that the vent hose is always connected to the original opening on the side of the battery.

  Fit any existing or supplied cell caps.

Otherwise, gases or battery acid could escape.

- Make sure that detachable parts are reconnected in the same way.

Tow-starting or towing away

Permitted towing methods

NOTE Damage from automatic braking

If one of the following functions is switched on, the vehicle brakes automatically in certain situations:

- Active Brake Assist
- Active Distance Assist DISTRONIC
- HOLD function
- Active Parking Assist

To avoid damage to the vehicle, deactivate these systems in the following or similar situations:

- ▶ During towing
- ▶ In a car wash

Mercedes-Benz recommends transporting your vehicle in the case of a breakdown, rather than towing it away.

For towing, use a tow rope or tow bar with both axles on the ground. Do not use tow bar systems (→ page 277).

NOTE Damage to the vehicle due to towing away incorrectly

- ▶ Observe the instructions and notes on towing away.

Towing with a raised axle: towing should be performed by a towing company.

Vehicles with rear wheel drive

Permitted towing methods	
Both axles on the ground	Yes, maximum 50 km at 50 km/h
Front axle raised	No
Rear axle raised	Yes, if the steering wheel is fixed in the centre position with a steering wheel lock

4MATIC vehicles

Permitted towing methods	
Both axles on the ground	Yes, maximum 50 km at 50 km/h
Front axle raised	No
Rear axle raised	No

Towing the vehicle with both axles on the ground

- Observe the notes on the permitted towing methods (→ page 361).
- Make sure that the battery is connected and charged.

When the battery is discharged, the following actions cannot be performed:

- the engine cannot be started
- the electric parking brake cannot be released or applied
- the automatic transmission cannot be shifted to position N or P

ⓘ If the automatic transmission cannot be shifted to position N or the driver's display in the instrument cluster does not show anything, have the vehicle transported away (→ page 363). A towing vehicle with lifting equipment is required for vehicle transportation.

NOTE Damage due to towing away at excessively high speeds or over long distances

The drivetrain could be damaged when towing at excessively high speeds or over long distances.

- A towing speed of 50 km/h must not be exceeded.
- A towing distance of 50 km must not be exceeded.

WARNING Risk of accident when towing a vehicle which is too heavy

If another vehicle is tow-started or towed away, its weight must not exceed the permissible gross mass of your own vehicle, otherwise the following could occur:

- the towing eye may become detached.
- the vehicle/trailer combination may swerve or even overturn.

- If another vehicle is tow-started or towed away, its weight must not exceed the permissible gross mass of your own vehicle.

If a vehicle must be tow-started or towed away, its weight must not exceed the permissible gross mass of the towing vehicle.

- Information on the permissible gross mass of the vehicle can be found on the vehicle identification plate (→ page 459).
- Do not open the driver's door or front passenger door, otherwise the automatic transmission automatically shifts to position P.
- Fit the towing eye (→ page 364).
- Fasten the tow bar.

NOTE Damage due to incorrect connection of the tow bar

- Only connect the tow rope or tow bar to the towing eyes.

- Deactivate the automatic locking mechanism .
- Do not activate the HOLD function.

- Deactivate tow-away protection (→ page 111).
- Deactivate Active Brake Assist (→ page 246).
- Shift the automatic transmission to position N.
- Release the electric parking brake.

⚠ WARNING Risk of accident due to limited safety-related functions during the towing process

Safety-related functions are limited or no longer available in the following situations:

- the ignition is switched off.
- the brake system or power steering system is malfunctioning.
- the energy supply or the on-board electrical system is malfunctioning.

When your vehicle is then towed away, significantly more effort may be required to steer and brake than is normally required.

- Use a tow bar.
- Make sure that the steering wheel can move freely before towing the vehicle away.

! NOTE Damage due to excessive tractive power

If you pull away sharply, the tractive power may be too high and the vehicles could be damaged.

- Pull away slowly and smoothly.


Loading the vehicle for transport

- Observe the notes on towing away (→ page 362).
- Connect the tow bar to the towing eye in order to load the vehicle.
- Shift the automatic transmission to position N.

ⓘ The automatic transmission may be locked in position P in the event of damage to the electrics. To shift to N, provide the on-board electrical system with power (→ page 359).

- Raise the vehicle in order to achieve greater ground clearance (→ page 257).
- Load the vehicle onto the transporter.
- Shift the automatic transmission to position P.
- Use the electric parking brake to secure the vehicle against rolling away.
- Only secure the vehicle by the wheels.

4MATIC vehicles

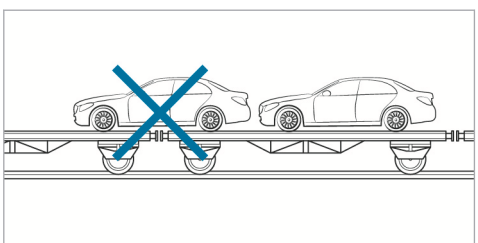


- Make sure that the front and rear axles come to rest on the same transportation vehicle.

! NOTE Damage to the drivetrain due to incorrect positioning

- Do not position the vehicle above the connection point of the transport vehicle.


Towing eye storage location

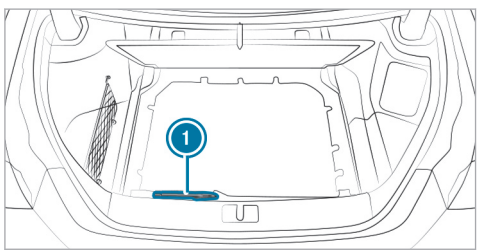

Towing eye (1) is located under the boot floor.

Depending on the vehicle equipment, the towing eye may be located at another position in the boot.

Installing the towing eye

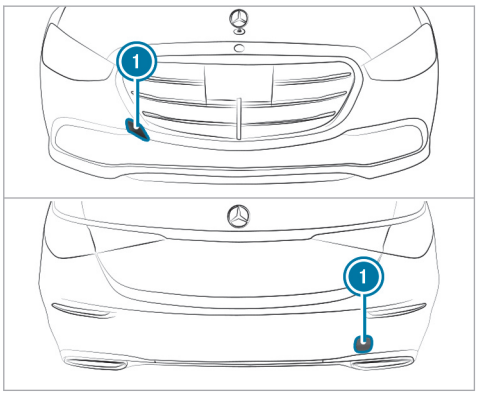

- Press the mark on cover (1) inwards and remove.
- Screw in the towing eye clockwise as far as it will go and tighten.
- Make sure that cover (1) engages in the bumper when you remove the towing eye.

! NOTE Damage to the vehicle due to incorrect use of the towing eye

When a towing eye is used to recover a vehicle, the vehicle may be damaged in the process.

- Only use the towing eye to tow away or tow start the vehicle.

Tow-starting the vehicle (emergency engine start)

! NOTE Damage to the automatic transmission due to tow-starting

Tow-starting the vehicle can damage the automatic transmission.

- Do not tow-start the vehicle.

- Do not tow-start the vehicle.

Electrical fuses

Notes on electrical fuses

WARNING Risk of accident and injury due to overloaded lines

If you manipulate or bridge a faulty fuse or if you replace it with a fuse with a higher amperage, the electric line could be overloaded.

This could result in a fire.

- Always replace faulty fuses with specified new fuses containing the correct amperage.

NOTE Damage due to incorrect fuses

Electrical components or systems may be damaged by incorrect fuses, or their functionality may be significantly impaired.

- Only use fuses that have been approved by Mercedes-Benz and which have the correct fuse rating.

Blown fuses must be replaced with fuses of the same rating, which you can recognise by the colour and fuse rating. The fuse ratings and further information to be observed can be found in the fuse assignment diagram.

Fuse assignment diagram: in the vehicle document wallet.

NOTE Damage or malfunctions caused by moisture

Moisture may cause damage to the electrical system or cause it to malfunction.

- When the fuse box is open, make sure that no moisture can enter the fuse box.
- When closing the fuse box, make sure that the seal of the lid is positioned correctly on the fuse box.

If the newly inserted fuse also blows, have the cause traced and rectified at a qualified specialist workshop.

Ensure the following before replacing a fuse:

- The vehicle is secured against rolling away.
- All electrical consumers are switched off.
- The ignition is switched off.

P223 0210 02

The electrical fuses are located in the following fuse boxes:

- Fuse box in the engine compartment on the driver's side (→ page 365)
- Fuse box on the driver's side of the cockpit (→ page 367)
- Fuse box in the front passenger footwell (→ page 368)
- Fuse box in the boot on the right-hand side of the vehicle, when viewed in the direction of travel (→ page 368)

Opening and closing the fuse box in the engine compartment

Requirements:

- Observe the notes on electrical fuses (→ page 365).
- Have the following tools readily available:
  - a dry cloth
  - a screwdriver with an appropriate head


Opening

ⓘ Depending on the vehicle equipment, access to the fuse box may be limited. Mercedes-Benz recommends consulting a qualified specialist workshop, e.g. a Mercedes-Benz Service Centre.


⚠ **WARNING** Risk of injury from using the windscreen wipers while the engine bonnet is open

When the engine bonnet is open, and the windscreen wipers are set in motion, you can be trapped by the wiper linkage.


- Always switch off the windscreen wipers and ignition before opening the engine bonnet.

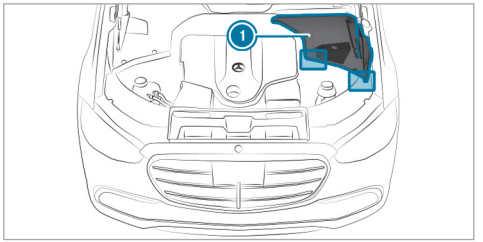


- Release the rotary catches on cover 1 and pull the cover up and out.
- Remove any existing moisture from the fuse box using a dry cloth.

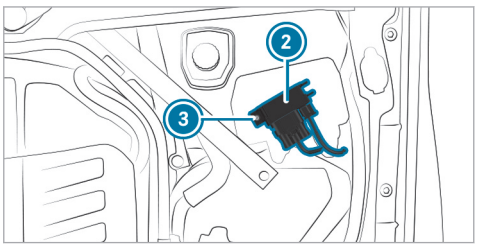


- Depending on the vehicle equipment, there may be an electrical component 2 on the fuse box lid. If present, unscrew screw 3 and put the component to the side without disconnecting the electrical connection.

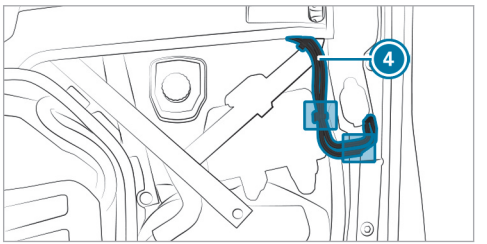


- If present, release hoses 4 from the retaining clips on the fuse box and vehicle body.

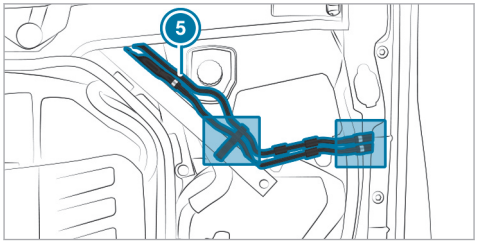

- If present, release hoses (5) from the retaining clips in the engine compartment and vehicle body.

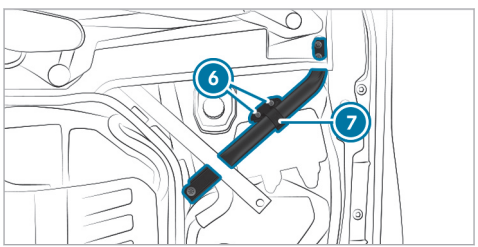

- Unscrew screws (6) and fold out bar (7).

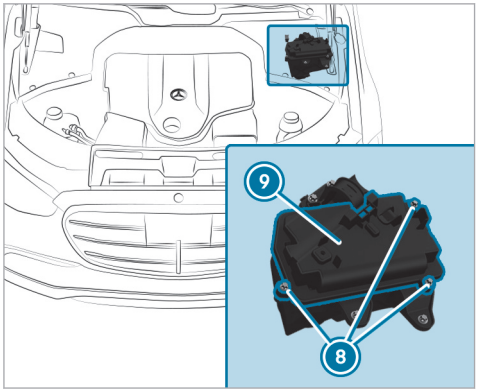

- Unscrew screws (8) and remove fuse box lid (9) to the side.


Closing

- Check whether the seal is positioned correctly in lid (9).
- Place lid (9) on the fuse box and tighten screws (8).
- Fold back bar (7) and tighten screws (6).
- If present, engage hoses (5) in the retaining clips in the engine compartment and vehicle body.
- If present, engage hoses (4) in the retaining clips on the fuse box and vehicle body.
- If present, insert electrical component (2) into the holder on the fuse box lid and tighten screws (3).
- Insert cover (1) and engage the rotary catches.

Opening and closing the fuse box in the cockpit

Requirements:

- Observe the notes on electrical fuses (→ page 365).

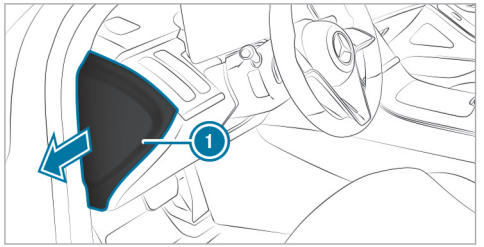


▶ Open cover (1) in the direction of the arrow and remove it.

Opening and closing the fuse box in the front passenger footwell

Requirements:

- Observe the notes on electrical fuses (→ page 365).

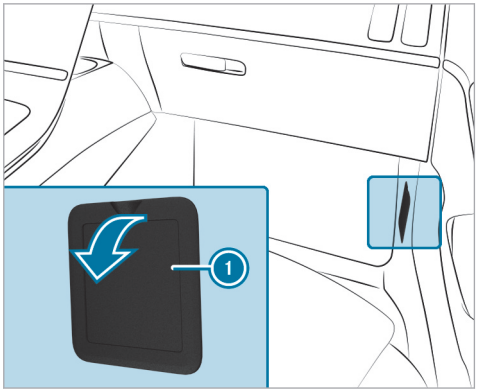


▶ Open cover (1) in the direction of the arrow and remove it.

Opening and closing the fuse box in the boot

Requirements:

- Observe the notes on electrical fuses (→ page 365).

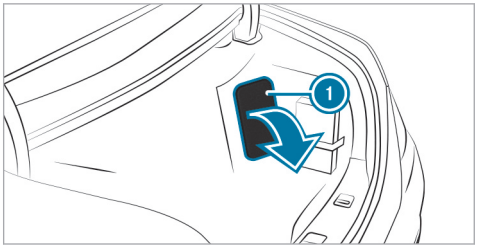

▶ Fold cover (1) down in the direction of the arrow.

Notes on noise or unusual handling characteristics

Make sure there are no vibrations, noises or unusual handling characteristics when the vehicle is in motion. This may indicate that the wheels or tyres are damaged. Hidden tyre damage could also be causing the unusual handling characteristics.

If you suspect that a tyre is defective, reduce your speed immediately and have the tyres and wheels checked at a qualified specialist workshop.

Notes on regularly inspecting wheels and tyres

⚠ **WARNING** Risk of injury due to damaged tyres

Damaged tyres can cause tyre pressure loss.

▶ Check the tyres regularly for signs of damage and replace any damaged tyres immediately.

⚠ **WARNING** Risk of aquaplaning due to insufficient tyre tread

Insufficient tyre tread will result in reduced tyre grip.

The risk of aquaplaning is increased on wet roads, especially when the speed of the vehicle is not adapted to suit the conditions.

▶ Thus, you should regularly check the tread depth and the condition of the tread across the entire width of all tyres.

Minimum tread depth for:

- Summer tyres: 3 mm
- M+S tyres: 4 mm

▶ For safety reasons, replace the tyres before the legally-prescribed limit for the minimum tread depth is reached.

Carry out the following checks on all wheels regularly, at least once a month or as required, for example, prior to a long journey or driving off-road:

- Check the tyre pressure (→ page 370).
- Visually inspect wheels and tyres for damage.
- Check the valve caps.
- Visual check of the tyre tread depth and the tyre contact surface across the entire width.

  The minimum tread depth for summer tyres is 3 mm and for winter tyres 4 mm.

Notes on snow chains

⚠ **WARNING** Risk of accident due to incorrect snow chain fitting

If you have fitted snow chains to the front wheels, the snow chains may drag against the vehicle body or chassis components.

This could cause damage to the vehicle or the tyres.

▶ Never fit snow chains on the front wheels.

▶ Only fit snow chains on the rear wheels in pairs.

NOTE Damage to components of the vehicle body or chassis due to fitted snow chains

If you fit snow chains to the front wheels of 4MATIC vehicles, you may damage components of the vehicle body or chassis.

- Only fit snow chains to the rear wheels of 4MATIC vehicles.

Observe the following notes when using snow chains:

- Snow chains are only permissible for certain wheel/tyre combinations. You can obtain information about this from a Mercedes-Benz Service Centre.
- For safety reasons, only use snow chains that have been specifically approved for your vehicle by Mercedes-Benz, or snow chains with the same quality standard.
- If snow chains are fitted, the maximum permissible speed is 50 km/h.
- **Vehicles with Active Parking Assist:** do not use Active Parking Assist when snow chains are fitted.
- **Vehicles with level control:** if snow chains are fitted, only drive at raised vehicle level (→ page 257).
- **Vehicles with rear axle steering:** if snow chains are fitted, only drive with snow chain mode active (→ page 370).

ⓘ You can deactivate ESP® to pull away (→ page 223). This allows the wheels to spin, achieving an increased driving force.

Activating or deactivating snow chain mode

Multimedia system:



- Activate or deactivate Snow chain mode.

When the function is active, the vehicle behaves as if snow chains were mounted. For example, the maximum steering movement of the rear wheels is limited.

Additionally, parts of the driving and driving safety systems are not available when snow chain mode is active.

Tyre pressure

Notes on tyre pressure

Tyre pressure which is too high or too low can:

- Shorten the service life of the tyres.
- Cause increased tyre damage.
- Adversely affect driving characteristics and thus driving safety, e.g. due to aquaplaning.

WARNING Risk of accident due to repeated pressure drop in the tyres

The wheels, valves or tyres could be damaged.

Too low a tyre pressure can lead to the tyres bursting.

- Examine the tyres for foreign objects.
- Check whether the tyre has a puncture or the valve has a leak.

▶ If you are unable to rectify the damage, contact a qualified specialist workshop.

Information on the recommended tyre pressure for the vehicle's factory-fitted tyres can be found on the tyre pressure table on the inside of the fuel filler flap (→ page 371).

Use a suitable pressure gauge to check the tyre pressure. The outer appearance of a tyre does not permit any reliable conclusion about the tyre pressure.

Only correct tyre pressures when the tyres are cold. Conditions for cold tyres:


- The vehicle has been parked with the tyres out of direct sunlight for at least three hours.
- The vehicle has travelled less than 1.6 km.

The vehicle's tyres heat up when driving. As the temperature of the tyres increases, so too does the tyre pressure.

Vehicles with tyre pressure monitoring systems: you can also see the tyre pressure in the driver's display.

Tyre pressure table

The tyre pressure table is on the inside of the fuel filler flap.

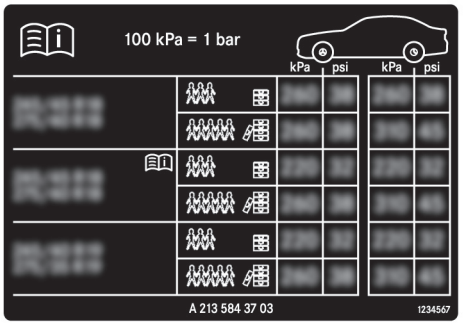

If one or more tyre sizes precede a tyre pressure, the following tyre pressure information is only valid for those tyre sizes and their respective load condition.

If the preceding tyre sizes are complemented by the [📖] symbol, the tyre pressure information following shows alternative tyre pressures. Fuel consumption may then increase slightly.

The load conditions "partially laden" and "fully laden" are defined in the table for different numbers of passengers and amounts of luggage. The actual number of seats may differ from this.

Tyre pressure monitoring system

Function of the tyre pressure monitoring system

The system checks the tyre pressure and the tyre temperature of the tyres fitted to the vehicle by means of a tyre pressure sensor.

The tyre pressure and the tyre temperature appear in the driver's display (→ page 372).

If there is a substantial pressure loss or if the tyre temperature is excessive, you will be warned with display messages (→ page 517) or the [(!)] warning lamp in the instrument cluster (→ page 537).

The tyre pressure monitoring system is only an aid. It is the driver's responsibility to set the tyre pressure to the recommended cold tyre pressure suitable for the operating situation.

In most cases, the tyre pressure monitoring system will automatically update the new reference values after you have changed the tyre pressure. You can, however, also update the reference values by restarting the tyre pressure monitoring system manually (→ page 372).

System limits

The system may be impaired or may not function particularly in the following situations:

- the tyre pressure has been set incorrectly
- sudden pressure loss caused by a foreign object penetrating the tyre, for example
- there is a malfunction caused by another radio signal source

Checking the tyre pressure with the tyre pressure monitoring system

Requirements:

- The ignition is switched on.

Driver display:

→ ⌂ » Service

One of the following displays appears:

- Current tyre pressure of each wheel:



- Tyre pressures will be displayed after a few minutes of driving
- Tyre pressure monitor active: the teach-in process of the system is not yet complete. The tyre pressures are already being monitored.

▶ Compare the tyre pressure with the recommended tyre pressure for the current operating condition (→ page 371). Observe the notes on tyre temperature (→ page 370).

ⓘ The values displayed in the driver display may deviate from those of the tyre pressure gauge as they refer to sea level. At high elevations, the tyre pressure values indicated by a pressure gauge are higher than those shown by the driver display. In this case, do not reduce the tyre pressure.

Bear in mind the following related topic:

- Notes on tyre pressure (→ page 370)

Restarting the tyre pressure monitoring system

Requirements:

- The recommended tyre pressure is correctly set for the respective operating status on each of the four wheels (→ page 370).

Restart the tyre pressure monitoring system in the following situations:

- The tyre pressure has changed.
- The wheels or tyres have been changed or newly fitted.

Driver display:

→ ⌂ ▸▸ Service

- Select Tyre pressure and confirm with OK. The driver's display shows the Use current tyre pressures as new reference values? message.
- Select Yes and confirm the restart with OK. The driver's display shows the Tyre pressure monitor restarted message.

  Current warning messages are deleted and the yellow (!) warning lamp goes out.

  After you have been driving for a few minutes, the system checks whether the current tyre pressures are within the specified range. The current tyre pressures are then accepted as reference values and monitored.

Bear in mind the following related topic:

- Notes on tyre pressure (→ page 370)

Wheel change

Notes on selecting, fitting and replacing tyres

⚠ WARNING Risk of accident due to incorrect dimensions of wheels and tyres

If wheels and tyres of the wrong size are used, the wheel brakes or wheel suspension components may become damaged.

- Always replace wheels and tyres with those that fulfil the specifications of the original part.

When replacing wheels, make sure to fit the correct:

- Designation
- Type

When replacing tyres, make sure to fit the correct:

- Designation
- Manufacturer
- Type

⚠ WARNING Risk of injury through exceeding the specified tyre load-bearing capacity or the permissible speed rating

Exceeding the load-bearing capacity of the tyres can lead to tyre damage and could cause the tyres to explode.

- Therefore, only use tyre types and sizes approved for your vehicle model.
- Observe the tyre load-bearing capacity rating and speed rating required for your vehicle.

! NOTE Vehicle and tyre damage through tyre types and sizes that have not been approved

For safety reasons, only use tyres, wheels and accessories which have been specially approved by Mercedes-Benz for your vehicle.

These tyres are specially adapted to the control systems, such as ABS, ESP® and 4MATIC, and marked as follows:

- MO = Mercedes-Benz Original
- MOE = Mercedes-Benz Original Extended (run-flat tyres only for certain wheels)
- MO1 = Mercedes-Benz Original (only certain AMG tyres)

Certain characteristics, such as handling, vehicle noise emissions, consumption, etc. may otherwise be adversely affected. Furthermore, other tyre sizes could result in the tyres rubbing against the body and axle components when loaded. This could result in damage to the tyre or the vehicle.

Only use tyres, wheels and accessories that have been checked and recommended by Mercedes-Benz.

NOTE Risk to driving safety from retreaded tyres

Retreaded tyres are neither tested nor recommended by Mercedes-Benz, since previous damage cannot always be detected on retreaded tyres.

For this reason driving safety cannot be guaranteed.

- Do not use used tyres if you have no information about their previous usage.

NOTE Possible damage to wheels or tyres when driving over obstacles

Large wheels have a lower tyre section width. The lower the tyre section width, the greater is the risk of damage to wheels or tyres when driving over obstacles.

- Avoid obstacles or drive particularly carefully.

NOTE Possible wheel and tyre damage when parking on kerbs or in potholes

Parking on kerbs or in potholes may damage the wheels and tyres.

- If possible, park only on flat surfaces.
- Avoid kerbs and potholes when parking.

NOTE Damage to electronic component parts from the use of tyre-fitting tools

Vehicles with a tyre pressure monitoring system: electronic component parts are located in the wheel. Tyre-fitting tools should not be applied in the area of the valve.

The tools could damage the electronic component parts.

- Have the tyres changed at a qualified specialist workshop only.

NOTE Damage to summer tyres at low ambient temperatures

At low ambient temperatures, tears could form when driving with summer tyres, causing permanent damage to the tyre.

- At temperatures below 7 °C use M+S- tyres.

Accessory parts that are not approved for your vehicle by Mercedes-Benz or are not being used correctly can impair the operating safety.

Before purchasing and using non-approved accessories, visit a qualified specialist workshop and enquire about:

- Suitability
- Legal stipulations
- Factory recommendations

WARNING Risk of accident with high performance tyres

The special tire tread in combination with the optimised tyre compound means that the risk of skidding and aquaplaning on wet roads is increased.

In addition, the tyre grip is greatly reduced at a low outside temperature and tyre running temperature.

- Switch on the ESP® and adapt your driving style accordingly.
- Use M+S tyres at outside temperatures of less than 10 °C.
- Only use the tyres for their intended purpose.

Observe the following when selecting, fitting and replacing tyres:

- Country-specific requirements for tyre approval that define a specific tyre type for your vehicle.
- Furthermore, the use of certain tyre types in certain regions and areas of operation can be highly beneficial.
- Only use tyres and wheels of the same type (summer tyres, winter tyres, MOExtended tyres) and the same make.
- Only fit wheels of the same size on one axle (left and right).

  It is only permissible to fit a different wheel size in the event of a flat tyre in order to drive to the specialist workshop.
- Do not make any modifications to the brake system, the wheels or the tyres.

  The use of shims or brake dust shields is not permitted and may invalidate the vehicle's general operating permit.
- **Vehicles with a tyre pressure monitoring system:** all fitted wheels must be equipped with functioning sensors for the tyre pressure monitoring system.
- At temperatures below 7°C use winter tyres or all-season tyres marked M+S for all wheels.

  Winter tyres provide the best possible grip in wintry road conditions.
- For M+S tyres, only use tyres with the same tread.
- Observe the maximum permissible speed for the M+S tyres fitted.

If the tyre's maximum speed is below that of the vehicle, this must be indicated by an appropriate label in the driver's field of vision.

- Run in new tyres at moderate speeds for the first 100 km.
- Replace the tyres after six years at the latest, regardless of wear.
- **When replacing with tyres that do not feature run-flat characteristics:** vehicles with MOExtended tyres are not equipped with a TIREFIT kit at the factory. Equip the vehicle with a TIREFIT kit after replacing with tyres that do not feature run-flat characteristics, e.g. winter tyres.

For more information on wheels and tyres, contact a qualified specialist workshop.

Be sure to also observe the following further related subjects:

- Notes on tyre pressure (→ page 370)
- Tyre pressure table (→ page 371)
- Notes on the emergency spare wheel (→ page 382)

Notes on interchanging wheels

WARNING Risk of injury through different wheel sizes

Interchanging the front and rear wheels can severely impair the driving characteristics.

The disk brakes or wheel suspension components may also be damaged.

- Only interchange the front and rear wheels if the wheels and tyres have the same dimensions.

Interchanging the front and rear wheels if the wheels or tyres have different dimensions can render the general operating permit invalid.

The wear patterns on the front and rear wheels differ:

- front wheels wear more on the tyre shoulder
- rear wheels wear more in the centre of the tyre

Do not drive with tyres that have too little tread depth. This significantly reduces traction on wet roads (aquaplaning).

On vehicles with the same front and rear wheel size, you can interchange the wheels every 5000 to 10,000 km, depending on the wear. Ensure the direction of rotation is maintained for the wheels.

Observe the instructions and safety notes on "Changing a wheel" when doing so (→ page 377).

Notes on storing wheels

When storing wheels, observe the following notes:

- After removing wheels, store them in a cool, dry and preferably dark place.
- Protect the tyres from contact with oil, grease or fuel.

Overview of the tyre-change tool kit


Apart from some country-specific variants, vehicles are not equipped with a tyre-change tool kit. For more information on which tyre-changing tools are required and approved for performing a wheel change on your vehicle, consult a qualified specialist workshop.

Required tyre-changing tools may include, for example:

- Jack
- Chock
- Wheel wrench

ⓘ The jack weighs approximately 3.4 kg. The maximum load capacity of the jack can be found on the sticker affixed to the jack. The jack is maintenance-free. If there is a malfunction, please contact a qualified specialist workshop.

The tyre-change tool kit is located in tool bag ① on the boot floor.

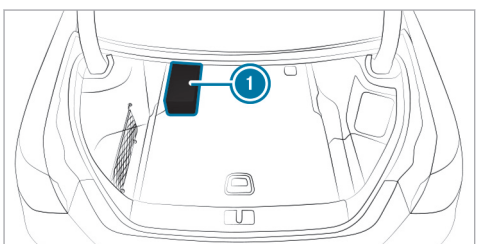

The tool bag contains:

- Jack
- Gloves
- Wheel wrench
- Centring pin
- Folding chock
- Ratchet for jack

Preparing the vehicle for a wheel change

Requirements:

- The required tyre-change tool kit is available. If your vehicle is not equipped with the tyre-change tool kit, consult a qualified specialist workshop to find out about suitable tools.
- The vehicle is not on a slope.
- The vehicle is on solid, non-slippery and level ground.


▶ Apply the electric parking brake manually.
▶ Move the front wheels to the straight-ahead position.
▶ Shift the transmission to position P.
▶ **Vehicles with level control system:** set the normal vehicle level (→ page 257).
▶ Switch off the engine.
▶ Make sure that the engine cannot be started.
▶ Place chocks or other suitable items under the front and rear of the wheel that is diagonally opposite the wheel you wish to change.
▶ Remove the hub cap if necessary (→ page 377).
▶ Raise the vehicle (→ page 378).

Removing and fitting the wheel trim/hub caps

Requirements:

- The vehicle is prepared for a wheel change (→ page 377).

Aluminium hub cap

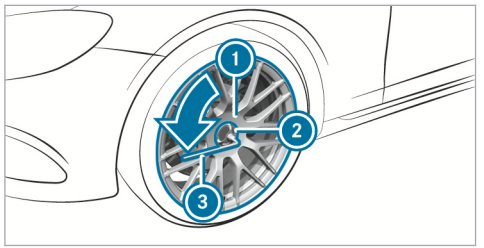

- ▶ **To remove:** position socket (2) from the tyre-change tool kit on hub cap (1).
- ▶ Position wheel spanner (3) on socket (2).
- ▶ Using wheel spanner (3), turn hub cap (1) anti-clockwise and remove it.
- ▶ **To fit:** follow the instructions above in reverse order.

ⓘ **Specified tightening torque:** 25 Nm.


Raising the vehicle when changing a wheel


Requirements:

- There are no persons in the vehicle.
- The vehicle has been prepared for a wheel change (→ page 377).
- The hub caps have been removed (→ page 377).

Important notes on using the jack:

- Use only a vehicle-specific jack that has been approved by Mercedes-Benz to raise the vehicle.
- The jack is only designed for raising and holding the vehicle for a short time while a wheel is being changed and not for maintenance work under the vehicle.
- The jack must be placed on a firm, flat and non-slip surface.
- The foot of the jack must be positioned vertically under the jack support point.

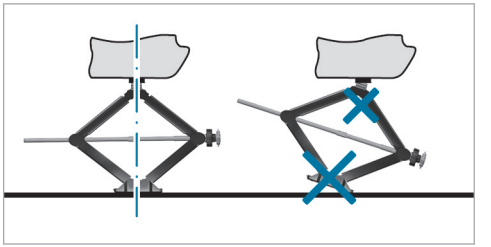


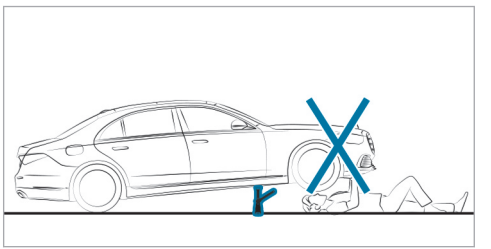


Rules of conduct when the vehicle is raised:

- Never place your hands and/or feet under the vehicle.
- Never lie under the vehicle.

- Do not start the engine and do not release the electric parking brake.
- Do not open or close any doors or the boot lid.

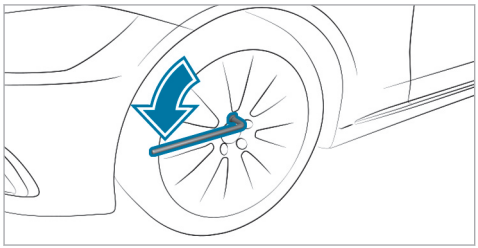

▶ Using the wheel wrench, loosen the wheel bolts on the wheel you wish to change by about one full turn. Do not unscrew the bolts completely.

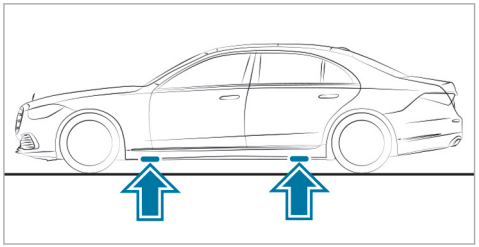

Position of jack support points

⚠ WARNING Risk of injury from incorrect positioning of the jack

If you do not position the jack correctly at the appropriate jacking point of the vehicle, the jack could tip with the vehicle raised.


▶ Only position the jack at the appropriate jacking point of the vehicle. The base of the jack must be positioned vertically under the jacking point of the vehicle.

! NOTE Vehicle damage from the jack

If you do not position the jack correctly at the appropriate jack support point of the vehicle, the jack could tip over with the vehicle raised.

▶ The jack is designed exclusively for jacking up the vehicle at the jack support points.

▶ Take the ratchet ring spanner out of the tyre-change tool kit and place it on the hexagon nut of the jack so that the letters "AUF" are visible.

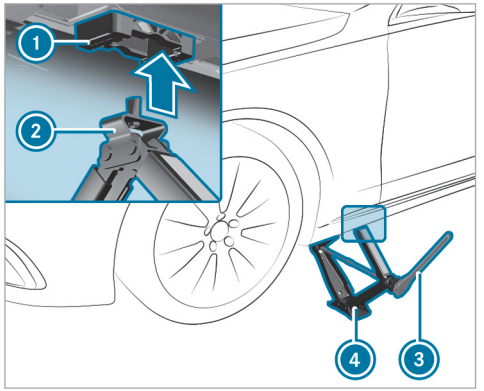

- Position support (2) of jack (4) on jack support point (1).
- Turn ratchet ring spanner (3) clockwise until jack support (2) sits completely on jack support point (1) and the base of the jack lies evenly on the ground.
- Continue to turn ratchet ring spanner (3) until the tyre is raised a maximum of 3 cm off the ground.
- Loosen and remove the wheel (→ page 380).

Removing a wheel

Requirements:


- The vehicle is raised.

When changing a wheel, avoid applying any force to the brake discs, as this could impair the level of comfort when braking.

NOTE Damage to threading from dirt on wheel bolts

- Do not place wheel bolts in sand or on a dirty surface.

- Unscrew the uppermost wheel bolt completely.

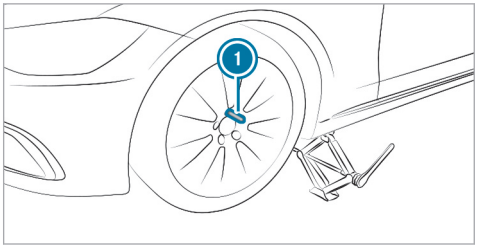

- Screw centring pin (1) into the thread instead of the wheel bolt.
- Unscrew the remaining wheel bolts completely.
- Remove the wheel.

Fitting a new wheel

WARNING Risk of accident from losing a wheel

Oiled or greased wheel bolts can cause the wheel bolts to come loose, as too can damaged wheel bolts or wheel hub threads.

- Never oil or grease the threads.
- In the event of damage to the threads, contact a qualified specialist workshop immediately.
- Have the damaged wheel bolts or damaged hub threads replaced.
- Do not continue driving.

- Observe the information on the choice of tyres (→ page 373).

For tyres with a specified direction of rotation, an arrow on the side wall of the tyre indicates the correct direction of rotation. Observe the direction of rotation when fitting.

- Slide the wheel to be mounted onto the centring pin and push it on.

⚠ WARNING Risk of injury from tightening wheel bolts and nuts

If you tighten the wheel bolts or wheel nuts when the vehicle is raised, the jack could tip.

- Only tighten wheel bolts or wheel nuts when the vehicle is on the ground.

- Be sure to observe the instructions and safety notes on "Changing a wheel" (→ page 373).
- For safety reasons, only use wheel bolts which have been approved by Mercedes-Benz and for the wheel in question.
- Tighten the wheel bolts evenly in a diagonal pattern in the order indicated until they are finger-tight.
- Unscrew and remove the centring pin.
- Tighten the last wheel bolt until it is finger-tight.
- Lower the vehicle (→ page 381).

Lowering the vehicle after a wheel change

Requirements:


- The new wheel has been fitted (→ page 380).

! NOTE Risk of trapping the jack

If the AIRMATIC system has released air when raising the vehicle, the jack can become trapped when the vehicle is lowered.

- Start the engine. This adapts the vehicle level.
- Remove the jack from under the vehicle.

- **To lower the vehicle:** place the ratchet onto the hexagon nut of the jack so that the letters "AB" are visible and turn anti-clockwise.

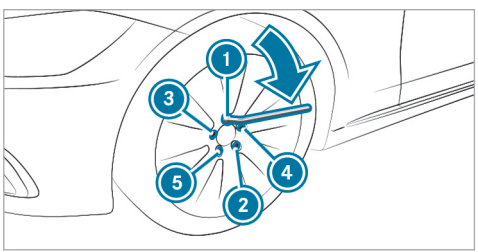

- Tighten the wheel bolts evenly in a diagonal pattern in the order indicated ① to ⑤ with an initial maximum force of 80 Nm.
- Tighten the wheel bolts evenly in a diagonal pattern in the order indicated ① to ⑤ to the specified tightening torque of 150 Nm.

WARNING Risk of accident due to incorrect tightening torque

The wheels could come loose if the wheel bolts or wheel nuts are not tightened to the prescribed torque.

- Ensure that the wheel bolts or wheel nuts are tightened to the prescribed tightening torque.
- If you are not sure, do not move the vehicle. Contact a qualified specialist workshop and have the tightening torque checked immediately.

- Check the tyre pressure of the newly fitted wheel and adjust it if necessary.
- **Vehicles with a tyre pressure monitoring system:** restart the tyre pressure monitoring system (→ page 372).
  Exception: the new wheel is an emergency spare wheel.

Emergency spare wheel

Notes on the emergency spare wheel

WARNING Risk of accident caused by incorrect wheel and tyre dimensions

The wheel or tyre size and the tyre type of the emergency spare wheel or spare wheel and the wheel to be replaced may differ. The emergency spare wheel or spare wheel can significantly impair driving characteristics of the vehicle.

To prevent hazardous situations:

- Drive carefully.
- Never fit more than one emergency spare wheel or spare wheel that differs in size.
- Only use an emergency spare wheel or spare wheel briefly.
- Do not deactivate ESP®.
- Have the emergency spare wheel or spare wheel of a different size replaced at the nearest qualified specialist workshop. The new wheel must have the correct dimensions.

ⓘ The emergency spare wheel is secured in the emergency spare wheel bag in the boot.

Observe the following notes on fitting an emergency spare wheel:

- Check the tyre pressure of the emergency spare wheel fitted. Correct the pressure as necessary.
- The maximum permissible speed with an emergency spare wheel fitted is 80 km/h.
- Do not fit the emergency spare wheel with snow chains.
- Replace the emergency spare wheel after six years at the latest, regardless of wear.

- Use the wheel bolts that are included with the emergency spare wheel.

  Specified tightening torque: 130 Nm

ⓘ **Vehicles with a tyre pressure monitoring system:** if an emergency spare wheel is fitted, the tyre pressure monitoring system cannot function reliably. For a few minutes after an emergency spare wheel is fitted, the system may still display the tyre pressure of the removed wheel. Only restart the system again when the emergency spare wheel has been replaced with a new wheel.

Be sure to also observe the following further related subjects:

- Notes on tyre pressure (→ page 370)
- Tyre pressure table (→ page 371)
- Notes on fitting tyres (→ page 373)

Notes on technical data

The technical data was determined in accordance with EU Directives. The data stated only applies to vehicles with standard equipment. You can obtain further information from a Mercedes-Benz Service Centre.

Only for certain countries: you can find vehicle-specific vehicle data in the COC documents (CERTIFICATE OF CONFORMITY). These papers are included with the vehicle.

On-board electronics

Notes on tampering with the engine electronics

NOTE Premature wear through improper maintenance

Improper maintenance may cause vehicle components to wear more quickly and the vehicle's operating permit may be invalidated.

- Always have work on the engine electronics and related components carried out at a qualified specialist workshop.

NOTE Increased wear and tear or damage caused by measures undertaken to increase performance

Engine management measures undertaken to increase performance can lead to increased wear and tear or damage to the drive system.

- Do not undertake engine management measures to increase performance.

Two-way radios

Notes on fitting two-way radios

WARNING Risk of accident due to improper work on two-way radios

If two-way radios are manipulated or retrofitted incorrectly, the electromagnetic radiation from the two-way radios can interfere with the vehicle electronics and jeopardise the operating safety of the vehicle.

- You should have all work on electrical and electronic components carried out at a qualified specialist workshop.

WARNING Risk of accident from incorrect operation of two-way radios

If you use two-way radios in the vehicle improperly, their electromagnetic radiation can disrupt the vehicle's electronics. This is true in the following situations, in particular:

- The two-way radio is not connected to an exterior aerial.
- The exterior aerial is fitted incorrectly or is not a low-reflection aerial.


This could jeopardise the operating safety of the vehicle.

- Have the low-reflection exterior aerial fitted at a qualified specialist workshop.
- When operating two-way radios in the vehicle, always connect them to the low-reflection exterior aerial.

NOTE Invalidation of the operating permit due to failure to comply with the instructions for installation and use

The operating permit may be invalidated if the instructions for installation and use of two-way radios are not observed.

- Only use approved frequency bands.
- Observe the maximum permissible output power in these frequency bands.
- Only use approved aerial positions.

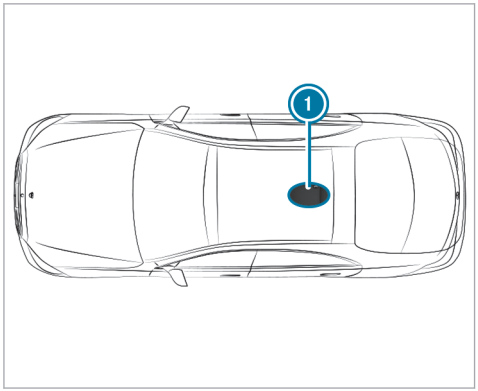

1 Rear roof area

On vehicles with a panoramic sliding sunroof, fitting an aerial to the roof area is not permitted.

Use Technical Specification ISO/TS 21609 (Road Vehicles – "EMCs for installation of aftermarket radio frequency transmitting equipment") when retrofitting two-way radios. Comply with the legal requirements for detachable parts.

If your vehicle has fittings for two-way radio equipment, use the power supply and aerial connectors provided in the pre-installation. Observe the manufacturer's supplements when fitting.

Two-way radio transmission output

The maximum transmission output (PEAK) at the base of the aerial must not exceed the values in the following table:

Frequency band and maximum transmission output

Frequency band	Maximum transmission output
2 m frequency band 144 - 174 MHz	50 W
Terrestrial Trunked Radio (TETRA) 380 - 460 MHz	10 W
70 cm frequency band 430 - 470 MHz	35 W

Frequency band	Maximum transmission output
Two-way radio 2G	2 W
Two-way radio 3G/4G/5G	0.5 W

The following devices can be used in the vehicle without restrictions:

- two-way radios with a maximum transmission output of up to 100 mW
- two-way radios with transmitter frequencies in the 380 - 420 MHz frequency band and a maximum transmission output of up to 2 W (TETRA)
- mobile phones (2G/3G/4G/5G)

There are no restrictions when positioning the aerial on the outside of the vehicle for the following frequency bands:

- TETRA
- 2G/3G/4G/5G

Radio operating permits for vehicle components

Overview of manufacturers

Manufacturer's abbreviated designation	Manufacturer information
ADC	ADC Automotive Distance Control Systems GmbH, Peter-Dornier-Straße 10, 88131 Lindau, Germany
Bosch	Robert Bosch GmbH, Daimlerstraße 6, 71229 Leonberg, Germany
Continental Antenna	Continental Advanced Antenna GmbH, Römerring 1, 31137 Hildesheim, Germany
Continental Automotive	Continental Automotive GmbH, Siemensstraße 12, 93055 Regensburg, Germany
Gentex	Gentex Corporation, 600 North Centennial Street, Zeeland MI 49464, USA
HELLA	HELLA KGaA Hueck & Co., Rixbecker Straße 75, 59552 Lippstadt, Germany
Hirschmann	Hirschmann Car Communication GmbH, Stuttgarter Straße 45-51, 72654 Neckartenzlingen, Germany
Huf Baolong	Huf Baolong Electronics Bretten GmbH, Gewerbestraße 40, 75015 Bretten, Germany
HUF	HUF Hülsbeck & Fürst GmbH & Co. KG, Steeger Straße 17, 42551 Velbert, Germany

Manufacturer's abbreviated designation	Manufacturer information
KATHREIN	KATHREIN Automotive GmbH & Co. KG, Römerring 1, 31137 Hildesheim, Germany
LEOPOLD KOSTAL	LEOPOLD KOSTAL GmbH & Co. KG, Hauert 11, 44227 Dortmund, Germany
MARQUARDT	MARQUARDT GmbH, Schloßstraße 16, 78604 Rietheim-Weilheim, Germany
Meta System	Meta System S.P.A., Via T. Galimbreti 5, 42124 Reggio Emilia, Italy
Panasonic	Panasonic Automotive Systems Europe GmbH, Robert-Bosch-Straße 27, 63225 Langen, Germany

Manufacturer's abbreviated designation	Manufacturer information
Schrader	Schrader Electronics Ltd., 11 Technology Park, Belfast Road, Antrim BT41 1QS, Northern Ireland, United Kingdom
Veoneer	Veoneer Sweden AB, Wallentinsvägen 22, 44737 Vårgårda, Sweden
WITTE-Velbert	WITTE-Velbert GmbH & Co. KG, Hoeferstr. 3-15, 42551 Velbert, Germany

Argentina

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-A (radar sensor)	C-18005
ADC	ARS4-B (radar sensor)	C-17908
ADC	ARS4-C (radar sensor)	C-23776
Bosch	MRR1Rear (radar sensor)	C-21798
Bosch	MRRe14FCR (radar sensor)	C-20030
Bosch	FR5CPCCF (radar sensor)	H-23855

CNC COMISIÓN NACIONAL DE COMUNICACIONES

Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE213E1 (antenna amplifier)	H-15475
Continental Antenna	RKE223E1 (antenna amplifier)	H-24637
Continental Automotive	CMKG1 (locking system)	H-24376
Continental Automotive	MARS Keyless (locking system)	H-17929
HELLA	DM4 (locking system)	H-17845

CNC COMISIÓN NACIONAL DE COMUNICACIONES

Manufacturer	Model designation	Radio equipment approval number
Hirschmann	920287A (locking system)	H-15694
Hirschmann	920287B (locking system)	H-15695
Huf Baolong	TSSRE4A (tyre pressure monitoring sensor)	H-20027
HUF	HUF14632 (locking system)	H-15541
HUF	HUF4761 (locking system)	H-11545

CNC COMISIÓN NACIONAL DE COMUNICACIONES

Manufacturer	Model designation	Radio equipment approval number
LEOPOLD KOSTAL	KK1 (locking system)	H-16874
MARQUARDT	DC12A (locking system)	H-17689
MARQUARDT	DC12B (locking system)	H-21034
MARQUARDT	DC12K (locking system)	H-21035
MARQUARDT	MS2 (locking system)	H-17598
MARQUARDT	MS4 (locking system)	H-23101
MARQUARDT	MS5 (locking system)	H-24933

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MK1 (locking system)	H-17213
MARQUARDT	MK2 (locking system)	H-17212
MARQUARDT	3350.38 (locking system)	H-23166
MARQUARDT	MU1 (locking system)	H-23102
MARQUARDT	MU2 (locking system)	H-24936
Schrader	AG5SP4 (tyre pressure monitoring sensor)	H-4788

Manufacturer	Model designation	Radio equipment approval number
Schrader	GG4T (tyre pressure monitoring sensor)	H-20495
Schrader	DG6W2D4 (tyre pressure monitoring sensor)	H-20959
Veoneer	77V12BSM (radar sensor)	C-23670
Veoneer	77V12CRN (radar sensor)	C-23672

Manufacturer	Model designation	Radio equipment approval number
Veoneer	77GHz MMRV1 (radar sensor)	EXPENACOM 9967/2017
WITTE-Velbert	SDHTAG3NFC (locking system)	H-24664

Australia

Manufacturer	Model designation	Radio equipment approval number
Huf Baolong	TSSRE4A (tyre pressure monitoring sensor)	
Huf Baolong	TSSSG4G6 (tyre pressure monitoring sensor)	
Huf Baolong	TSSSG4G6b (tyre pressure monitoring sensor)	

Manufacturer	Model designation	Radio equipment approval number
Schrader	AG5SP4 (tyre pressure monitoring sensor)	
Schrader	GG4T (tyre pressure monitoring sensor)	
Schrader	DG6W2D4 (tyre pressure monitoring sensor)	

Bahamas

Manufacturer	Model designation	Radio equipment approval number
Veoneer	77V12BSM (radar sensor)	FCC ID: WU877V12BSM
Veoneer	77V12CRN (radar sensor)	FCC ID: WU877V12CRN

Belarus

Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE223E1 (antenna amplifier)	TP BY
Continental Automotive	CMKG1 (locking system)	TP BY
Continental Automotive	MARS Keyless (locking system)	TP BY

Manufacturer	Model designation	Radio equipment approval number
HELLA	DM4 (locking system)	TP BY
MARQUARDT	DC12A (locking system)	TP BY
MARQUARDT	DC12B (locking system)	TP BY
MARQUARDT	DC12K (locking system)	TP BY

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MS2 (locking system)	TP BY
MARQUARDT	MS4 (locking system)	TP BY
MARQUARDT	MS5 (locking system)	TP BY
MARQUARDT	MK1 (locking system)	TP BY

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MK2 (locking system)	TPBY
MARQUARDT	MU1 (locking system)	TPBY

Botswana

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-A (radar sensor)	BOCRA/TA/2018/2026
ADC	ARS4-B (radar sensor)	BOCRA/TA/2019/4582
Bosch	FR5CPCCF (radar sensor)	BOCRA/TA/2019/4975
Bosch	MRR1Rear (radar sensor)	BOCRA/TA/2017/3788
Continental Antenna	RKE213E1 (antenna amplifier)	BOCRA/TA/2017/4387
Continental Antenna	RKE223E1GNS (antenna amplifier)	BOCRA/TA/2017/5050
Continental Automotive	CMKG1 (locking system)	BOCRA/TA/2019/5075
Continental Automotive	MARS Keyless (locking system)	BOCRA/TA/2019/4661
HELLA	DM4 (locking system)	BOCRA/TA/2019/4662
Hirschmann	920287A (locking system)	BOCRA/TA/2019/4724
Hirschmann	920287B (locking system)	BOCRA/TA/2019/4723
Huf Baolong	TSSRE4A (tyre pressure monitoring sensor)	No. 20233
HUF	HUF4761 (locking system)	BOCRA/TA/2019/4664
LEOPOLD KOSTAL	KK1 (locking system)	BOCRA/TA/2019/4593
MARQUARDT	DC12A (locking system)	BOCRA/TA/2019/4389
MARQUARDT	DC12B (locking system)	BOCRA/TA/2019/4388

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	DC12K (locking system)	BOCRA/TA/2019/4390
MARQUARDT	MS2 (locking system)	BOCRA/TA/2019/5135
MARQUARDT	MS4 (locking system)	BOCRA/TA/2019/4758
MARQUARDT	MS5 (locking system)	BOCRA/TA/2020/5473
MARQUARDT	MK1 (locking system)	BOCRA/TA/2019/4359
MARQUARDT	MK2 (locking system)	BOCRA/TA/2019/4360
MARQUARDT	3350.38 (locking system)	BOCRA/TA/2019/4687
MARQUARDT	MU1 (locking system)	BOCRA/TA/2019/4759

Manufacturer	Model designation	Radio equipment approval number
Schrader	AG5SP4 (tyre pressure monitoring sensor)	No. 1967
Veoneer	77V12BSM (radar sensor)	BOCRA/TA/2019/4975
Veoneer	77V12CRN (radar sensor)	BOCRA/TA/2019/4980
WITTE-Velbert	SDHTAG3NFC (locking system)	BOCRA/TA/20205342

Brazil

ANATEL

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-C (radar sensor)	06783-19-02496
Bosch	FR5CPCCF (radar sensor)	06351-19-03745
Continental Antenna	RKE213E1 (antenna amplifier)	3691-15-5298
Continental Automotive	CMKG1 (locking system)	00325-20-02149

ANATEL

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	MARS Keyless (locking system)	03189-17-02856
HELLA	DM4 (locking system)	04689-17-05364
Hirschmann	920287A (locking system)	1855-12-5762
Hirschmann	920287B (locking system)	1787-12-8058
HUF	HUF14632 (locking system)	03627-15-06643

ANATEL

Manufacturer	Model designation	Radio equipment approval number
HUF	HUF4761 (locking system)	00053-13-06643
MARQUARDT	DC12A (locking system)	01333-17-02930
MARQUARDT	DC12B (locking system)	01395-11-02930
MARQUARDT	DC12K (locking system)	01392-11-02930
MARQUARDT	MS2 (locking system)	00616-17-02930
MARQUARDT	MS4 (locking system)	06218-19-02930

ANATEL

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	3350.38 (locking system)	03149-19-02930
MARQUARDT	MK1 (locking system)	03756-15-02930
MARQUARDT	MK2 (locking system)	03757-15-02930
Veoneer	77V12BSM (radar sensor)	06468-19-12386

ANATEL

Manufacturer	Model designation	Radio equipment approval number
Veoneer	77V12CRN (radar sensor)	06352-19-12386
WITTE-Velbert	SDHTAG3NFC (locking system)	00616-17-02930

Brunei Darussalam

AITI

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-C (radar sensor)	DRQ-D-JATI-07-2000-10 90000 DTA-004005
Bosch	FR5CPCCF (radar sensor)	DRQ-D-JATI-07-2000-10 9000 DTA-004222
Bosch	LRR3 (radar sensor)	DRQ-D-MAJU-02-2011-1 11083-LPD-31820

AITI

Manufacturer	Model designation	Radio equipment approval number
Bosch	MRR1Rear (radar sensor)	DRQ-DMAJU-02-2011-11108 3-LPD-31504
Bosch	MRRe14FCR (radar sensor)	DTA-000793
Continental Antenna	RKE213E1 (antenna amplifier)	DRQ-D-JATI-07-2000-10 9000 DTA-001661
Continental Antenna	RKE223E1GNS (antenna amplifier)	DRQ-D-JATI-07-2000-10 9000 DTA-004998

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	CMKG1 (locking system)	DRQ-D-JATI-07-2000-109000 DTA-005043
Continental Automotive	MARS Keyless (locking system)	DRQ-D-MAJU-02-2011-111083- LPD-39004
HELLA	DM4 (locking system)	DRQ-DJATI-07-2000-109000 DTA-000351
Hirschmann	920287A (locking system)	DRQ-DJATI-07-2000-109000 DTA-001661
Hirschmann	920287B (locking system)	DRQ-DMAJU-02-2011-111083 DTA-000794
Huf Baolong	TSSRE4A (tyre pressure monitoring sensor)	DTA No. 000310
Huf Baolong	TSSSG4G6 (control unit) (tyre pressure monitoring sensor)	DTA No. 000311
Huf Baolong	TSSSG4G6b (control unit) (tyre pressure monitoring sensor)	DTA No. 003757
HUF	HUF14632 (locking system)	DRQ-DJATI-07-2000-8916- LPD-30012
HUF	HUF4761 (locking system)	DRQ-D-JATI-07-2000-109000 DTA-006138
LEOPOLD KOSTAL	KK1 (locking system)	DRQ-DMAJU-02-2011-111083- LPD-30419

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	DC12A (locking system)	DRQ-DJATI-07-2000-8916-LPD-38937
MARQUARDT	DC12B (locking system)	DRQ-D-JATI-07-2000-109000 DTA-000068
MARQUARDT	DC12K (locking system)	DRQ-D-JATI-07-2000-109000 DTA-000066
MARQUARDT	MS2 (locking system)	DRQ-DJATI-07-2000-8916- LPD-38890

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MS4 (locking system)	DRQ-DJATI-07-2000-109000 DTA-003525
MARQUARDT	MS5 (locking system)	DRQ-D-JATI-07-2000-109000 DTA-005850
MARQUARDT	MK1 (locking system)	DRQ-DJATI-07-2000-8916- LPD-33567
MARQUARDT	MK2 (locking system)	DRQ-DJATI-07-2000-8916- LPD-33568

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	3350.38 (locking system)	DRQ-DJATI-07-2000-109000 DTA-003662
MARQUARDT	MU1 (locking system)	DRQ-DJATI-07-2000-109000 DTA-003524
MARQUARDT	MU2 (locking system)	DRQ-D-JATI-07-2000-109000 DTA-005843

Manufacturer	Model designation	Radio equipment approval number
Schrader	AG5SP4 (tyre pressure monitoring sensor)	DRQ-D-QAF AUTO-05-2003-1089 4-LPD-29559 DRQDJATI-07-2000-8916LPD-29665
Schrader	DG6W2D4 (tyre pressure monitoring sensor)	DTA-001514
Schrader	MFR (control unit) (tyre pressure monitoring sensor)	DTA No. 003893

Manufacturer	Model designation	Radio equipment approval number
Veoneer	77V12BSM (radar sensor)	DRQ-D-JATI-07-2000-109000 DTA-004000
Veoneer	77V12CRN (radar sensor)	DRQ-D-JATI-07-2000-109000 DTA-003999
Veoneer	77GHz MMRV1 (radar sensor)	DRQ-D-JATI-07-2000-8916-LPD-30870
WITTE-Velbert	SDHTAG3NFC (locking system)	DRQ-D-JATI-07-2000-109000 DTA-005628

Ghana

Manufacturer	Model designation	Radio equipment approval number
		NCA APPROVED
ADC	ARS4-B (radar sensor)	1R3-1M-7E1-160
ADC	ARS4-C (radar sensor)	ZRO-1H-7E3-152
Bosch	FR5CPCCF (radar sensor)	ZR0-M8-7E3-230
Continental Antenna	RKE213E1 (antenna amplifier)	ZRO-M8-7E3-X53
Continental Antenna	RKE223E1GNS (antenna amplifier)	ZRO-M8-7E3-225
Continental Automotive	CMKG1 (locking system)	ZRO-M8-7E3-277

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	MARS Keyless (locking system)	BR3-1M-GE2-16A
HELLA	DM4 (locking system)	BR3-1M-GE2-157
Hirschmann	920287A (locking system)	ZRO-M8-7E3-X45
Hirschmann	920287B (locking system)	ZRO-M8-7E3-X47
HUF	HUF4761 (locking system)	EX6-6M-GE2-16C
LEOPOLD KOSTAL	KK1 (locking system)	ZRO-M8-7E3-X49
MARQUARDT	DC12A (locking system)	ZRO-M8-7E3-X50
MARQUARDT	DC12B (locking system)	ZRO-M8-7E3-X51
MARQUARDT	DC12K (locking system)	ZRO-M8-7E3-X52
MARQUARDT	MS2 (locking system)	BR3-1M-GE-129
MARQUARDT	MS4 (locking system)	ZRO-1H-7E3-26E
MARQUARDT	MS5 (locking system)	SRO-1M-7E4-11B
MARQUARDT	MK1 (locking system)	ZRO-M8-7E3-X4A
MARQUARDT	MK2 (locking system)	ZRO-M8-7E3-X4C
MARQUARDT	3350.38 (locking system)	ZRO-M8-7E3-X3C
MARQUARDT	MU1 (locking system)	ZRO-M8-7E3-272
MARQUARDT	MU2 (locking system)	SRO-1M-7E3-129
Veoneer	77V12BSM (radar sensor)	ZRO-1H-7E3-142
Veoneer	77V12CRN (radar sensor)	ZR0-M8-7E3-230
WITTE-Velbert	SDHTAG3NFC (locking system)	SRO-1M-7E4-X59

Indonesia

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-A (radar sensor)	36010/SDPPI/2017 2130
ADC	ARS4-B (radar sensor)	38132/SDPPI/2017 2130
ADC	ARS4-C (radar sensor)	68676/SDPPI/2020  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 
Bosch	LRR3 (radar sensor)	40556/SDPPI/2018
Bosch	MRR1Rear (radar sensor)	34538/SDPPI/2017
Bosch	MRRe14FCR (radar sensor)	53078/SDPPI/2017 PLG3612

Manufacturer	Model designation	Radio equipment approval number
Bosch	FR5CPCCF (radar sensor)	67882/SDPPI/2020  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 

Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE213E1 (antenna amplifier)	41771/I/SDPPI/2018 5205

Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE223E1GNS (antenna amplifier)	66185/ SDPPI/2020 10325  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	D-WMI2020A (control unit)	66678/ SDPPI/ 2020 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	CMKG1 (locking system)	66911/ SDPPI/ 2020 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	MARS Keyless (locking system)	69379/SDPPI/ 2020 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 
HELLA	DM4 (locking system)	52221/SDPPI/ 2017 6051

Manufacturer	Model designation	Radio equipment approval number
Hirschmann	920287A (locking system)	29510/SDPPI/2016 3159
Hirschmann	920287B (locking system)	28238/SDPPI/2016 3159
Huf Baolong	TSSRE4A (tyre pressure monitoring sensor)	52166/SDPPI/2017 3533
HUF	HUF14632 (locking system)	41618/SDPPI/2018 3533
HUF	HUF4761 (locking system)	26742/SDPPI/2015 3533
KATHREIN	RKE213E1 (locking system)	41771/SDPPI/2018 5205
LEOPOLD KOSTAL	KK1 (locking system)	41121/SDPPI/2018 5125
MARQUARDT	DC12A (locking system)	67373/SDPPI/2020 7163
MARQUARDT	DC12B (locking system)	59840/SDPPI/2019 7163

Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	DC12K (locking system)	59838/SDPPI/2019 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MS2 (locking system)	67372/SDPPI/2020 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MS4 (locking system)	64126/SDPPI/2019 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MS5 (locking system)	69077/SDPPI/2020 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MK1 (locking system)	40283/SDPPI/2018 2208  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MK2 (locking system)	40282/SDPPI/2018 2208  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	3350.38 (locking system)	62233/SDPPI/2019 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 

Manufacturer	Model designation	Radio equipment approval number
Schrader	GG4T (tyre pressure monitoring sensor)	54083/SDPPI/2017 PLG3612
Schrader	AG5SP4-D (tyre pressure monitoring sensor)	38892/SDPPI/2018 3612
Schrader	DG6W2D4 (tyre pressure monitoring sensor)	57058/SDPPI/2018 PLG3612
Schrader	MC34MA4 (tyre pressure monitoring sensor)	25626/SDPPI/2015 PLG3612
Veoneer	77GHz MMRV1 (radar sensor)	40524/R/I/SDPPI/2018

Manufacturer	Model designation	Radio equipment approval number
Veoneer	77V12CRN (radar sensor)	66830/SDPPI/2020 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 

Manufacturer	Model designation	Radio equipment approval number
Veoneer	77V12BSM (radar sensor)	66792/SDPPI/2020 7163  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 

Manufacturer	Model designation	Radio equipment approval number
Panasonic	DAIRSE	63550/SDPPI/2019  Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya 

Jamaica

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	CMKG1 (locking system)	SMA – CMKG1
MARQUARDT	DC12A (locking system)	SMA - DC12A
MARQUARDT	DC12B (locking system)	SMA - DC12B
MARQUARDT	DC12K (locking system)	SMA - DC12K
MARQUARDT	MS2 (locking system)	SMA - MS2
MARQUARDT	MS4 (locking system)	SMA - MS4

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MS5 (locking system)	SMA - MS5
MARQUARDT	MK1 (locking system)	SMA - MK1
MARQUARDT	MK2 (locking system)	SMA - MK2
MARQUARDT	3350.38 (locking system)	SMA - 3350.38
MARQUARDT	MU1 (locking system)	SMA - MU1
MARQUARDT	MU2 (locking system)	SMA - MU2

Jordan

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-A (radar sensor)	TRC/LPD/2014/126
ADC	ARS4-B (radar sensor)	TRC/LPD/2014/248
ADC	ARS4-C (radar sensor)	T/4/11/11/6676
Bosch	FR5CPCCF (radar sensor)	T/4/11/11/6645
Bosch	LRR3 (radar sensor)	TRC/LPD/2009/15
Bosch	MRR1Rear (radar sensor)	TRC/LPD/2014/73
Bosch	MRRe14FCR (radar sensor)	TRC/LPD/2017/254

Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE213E1 (antenna amplifier)	T/4/11/11/7046
Continental Antenna	RKE223E1GNS (antenna amplifier)	T/4/11/11/9682
Continental Automotive	CMKG1 (locking system)	T/4/11/11/1799
Continental Automotive	MARS Keyless (locking system)	TRC/LPD/2017/183
Gentex	EUROII (convenience system)	TRC/LPD/2014/258
Gentex	MUAHL 5 (convenience system)	TRC/LPD/2015/299

Manufacturer	Model designation	Radio equipment approval number
HELLA	DM4 (locking system)	T/4/11/11/6459
Hirschmann	920287A (locking system)	T/4/11/11/10883
Hirschmann	920287B (locking system)	TRC/LPD/2012/53
Huf Baolong	TSSRE4A (tyre pressure monitoring sensor)	TRC/LPD/2017/421
Huf Baolong	TSSSG4G6 (control unit) (tyre pressure monitoring sensor)	TRC/LPD/2017/422
Huf Baolong	TSSSG4G6b (control unit) (tyre pressure monitoring sensor)	TRC/LPD/2017/175
HUF	HUF14632 (locking system)	T/4/11/11/4355
HUF	HUF4761 (locking system)	TRC/LPD/2012/144
LEOPOLD KOSTAL	KK1 (locking system)	TRC/LPD/2015/102
MARQUARDT	DC12A (locking system)	T/4/11/11/1899
MARQUARDT	DC12B (locking system)	T/4/11/11/10892
MARQUARDT	DC12K (locking system)	T/4/11/11/10891
MARQUARDT	MS2 (locking system)	T/4/11/11/6412
MARQUARDT	MS4 (locking system)	TRC/LPD/2019/127
MARQUARDT	MS5 (locking system)	T/4/11/11/3509
MARQUARDT	MK1 (locking system)	T/4/11/11/11020
MARQUARDT	MK2 (locking system)	T/4/11/11/11021
MARQUARDT	3350.38 (locking system)	T/4/11/11/1973
MARQUARDT	MU1 (locking system)	T/4/11/11/2511
MARQUARDT	MU2 (locking system)	T/4/11/11/4462

Manufacturer	Model designation	Radio equipment approval number
Schrader	AG5SP4-D (tyre pressure monitoring sensor)	TRC/LPD/2019/21
Schrader	MFR (control unit) (tyre pressure monitoring sensor)	TRC/LPD/2019/184
Schrader	GG4T (tyre pressure monitoring sensor)	TRC/LPD/2017/456
Schrader	DG6W2D4 (tyre pressure monitoring sensor)	TRC/LPD/2018/139
Schrader	MC34MA4 (tyre pressure monitoring sensor)	TRC/LPD/2011/158
Veoneer	77V12BSM (radar sensor)	T/4/11/11/5557
Veoneer	77V12CRN (radar sensor)	T/4/11/11/5556
Veoneer	77GHz MMRV1 (radar sensor)	TRC/LPD/2015/161
WITTE-Velbert	SGHTAG3NFC (locking system)	T/4/11/11/2635

Canada

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-C (radar sensor)	IC: 4135A-ARS4C
Bosch	FR5CPCCF (radar sensor)	IC: 3887A-FR5CPCCF
Veoneer	77V12BSM (radar sensor)	IC: 8436B-77V12BSM
Veoneer	77V12CRN (radar sensor)	IC: 8436B-77V12CRN

Malaysia

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-C (radar sensor)	SQASI/TA/19/2872
Bosch	FR5CPCCF (radar sensor)	CIDF15000490
Bosch	LRR3 (radar sensor)	RALM/35A/0716/S(16-2324)
Bosch	MRR1Rear (radar sensor)	RALM/66A/0618/S(18-2468)
Bosch	MRRe14FCR (radar sensor)	RALM/45A/0517/S(17-1576)
Continental Antenna	RKE213E1 (antenna amplifier)	RAUU/28C/0915/S(15-2703)
Continental Antenna	RKE223E1GNS (antenna amplifier)	RDDK/34B/1219/S(19-5319)
Continental Automotive	CMKG1 (locking system)	RFCP/13A/0220/S(20-0197)
Continental Automotive	MARS Keyless (locking system)	RAAU/51C/0417/S(17-1034) CIDF15000578
HELLA	DM4 (locking system)	RDDK/41A/0717/S(17-2269) CIDF15000578
Hirschmann	920287A (locking system)	RAUU/63A/0311/S(11-0432)

Manufacturer	Model designation	Radio equipment approval number
Hirschmann	920287B (locking system)	RAUU/22C/0615/S(15-1864)
Huf Baolong	TSSRE4A (tyre pressure monitoring sensor)	CIDF17000184
Huf Baolong	TSSSG4G6 (control unit) (tyre pressure monitoring sensor)	RAQP/57A/0817/S(17-2424)
HUF	HUF14632 (locking system)	RAYN/25A/0715/S(15-2385)
HUF	HUF4761 (locking system)	RAAU/16B/1112/S(12-2053)
LEOPOLD KOSTAL	KK1 (locking system)	RAUU/27C/0815/S(15-2953)
MARQUARDT	DC12A (locking system)	RDDK/33A/0317/S(17-0669)
MARQUARDT	DC12B (locking system)	RAUU/62A/0311/S(11-0263)
MARQUARDT	DC12K (locking system)	RAUU/62A/0311/S(11-0264)
MARQUARDT	MS2 (locking system)	RDDK/31A/0217/S(17-0405)
MARQUARDT	MS4 (locking system)	RDDK/25B/1019/S(19-0943)
MARQUARDT	MS5 (locking system)	RGLO/02A/0720/S(20-2580)

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MK1 (locking system)	RAAU/14C/0615/S(15-1057)
MARQUARDT	MK2(locking system)	RAAU/12C/0515/S(15-1059)
MARQUARDT	3350.38(locking system)	RDDK/17B/0819/S(19-1082)
MARQUARDT	MU2(locking system)	RGLO/01A/0720/S(20-2579)

Manufacturer	Model designation	Radio equipment approval number
Meta System	ITS/TPS (interior protection)	RAVG/18Q/0212/S(11-2068)
Meta System	MUW II (interior protection)	RAVG/17Q/0212/S(11-2067)
Schrader	AG5SP4-D (tyre pressure monitoring sensor)	RCDD/03A/0615/S(19-2094)
Schrader	MFR (control unit) (tyre pressure monitoring sensor)	RAQP/62A/0419/S(19-1694)

Manufacturer	Model designation	Radio equipment approval number
Veoneer	77GHz MMRV1 (radar sensor)	RALM/31A/0316/S(16-0727)
Veoneer	77V12BSM (radar sensor)	SQASI/TA/19/2980
Veoneer	77V12CRN (radar sensor)	SQASI/TA/19/2982
WITTE-Velbert	SDHTAG3NFC(locking system)	RDDK/43B/0420/S(20-1749)

Morocco

Manufacturer	Model designation	Radio equipment approval number
		AGREE PAR L'ANRT MAROC
ADC	ARS4-A (radar sensor)	MR 9490 ANTR 2014-07-23
ADC	ARS4-B (radar sensor)	MR 9778 ANTR 2014-11-11
ADC	ARS4-C (radar sensor)	MR 20231 ANTR 2019
Bosch	FR5CPCCF (radar sensor)	MR 20575 ANTR 2019
Bosch	LRR3 (radar sensor)	MR 5371 ANTR 2010-02-02
Bosch	MRR1Rear (radar sensor)	MR 9186 ANTR 2014-04-22
Bosch	MRRe14FCR (radar sensor)	MR 13900 ANTR 2017-05-04
Continental Antenna	RKE213E1 (antenna amplifier)	MR 10631 ANTR 2015-07-16
Continental Antenna	RKE223E1GNS (antenna amplifier)	MR 21174 ANTR 2019-10-14
Continental Automotive	CMKG1 (locking system)	MR 21701 ANTR 2019-12-05
Continental Automotive	MARS Keyless (locking system)	MR 13681 ANTR 2017-04-04
HELLA	DM4 (locking system)	MR 14426 ANTR 2017-07-28
Hirschmann	920287A (locking system)	MR 6700 ANTR 2011-11-16
Hirschmann	920287B (locking system)	MR 7260 ANTR 2012-06-13
Huf Baolong	TSSRE4A (tyre pressure sensor) (tyre pressure monitoring sensor)	MR 14320 ANTR 2017-07-07

Manufacturer	Model designation	Radio equipment approval number
Huf Baolong	TSSSG4G6 (control unit) (tyre pressure monitoring sensor)	MR 14319 ANTR 2017-07-07
Huf Baolong	TSSSG4G6b (control unit) (tyre pressure monitoring sensor)	MR 19561 ANTR 2019-04-26
HUF	HUF14632 (locking system)	MR 10506 ANTR 2015-06-22
HUF	HUF4761 (locking system)	MR 7829 ANTR 2013-02-14
LEOPOLD KOSTAL	KK1 (locking system)	MR 10697 ANTR 2015-08-05
MARQUARDT	DC12A (locking system)	MR 13429 ANTR 2017-03-03
MARQUARDT	DC12B (locking system)	MR 6698 ANTR 2011-11-16
MARQUARDT	DC12K (locking system)	MR 6699 ANTR 2011-11-16
MARQUARDT	MS2 (locking system)	MR 13300 ANTR 2017-02-15
MARQUARDT	MS4 (locking system)	MR 19199 ANTR 2019-03-25
MARQUARDT	MS5 (locking system)	MR 23805 ANRT 22/04/2020
MARQUARDT	MK1 (locking system)	MR 10645 ANTR 2015-07-21
MARQUARDT	MK2 (locking system)	MR 10987 ANTR 2015-10-22
MARQUARDT	3350.38 (locking system)	MR 18817 ANTR 2019-02-12
MARQUARDT	CMKG1 (locking system)	MR 21701 ANTR 2019-12-05

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MU1 (locking system)	MR 19200 ANTR 2019-03-25
MARQUARDT	MU2 (locking system)	MR 23804 ANRT 22/04/2020
Schrader	AG5SP4-D (tyre pressure sensor) (tyre pressure monitoring sensor)	MR 10216 ANTR 2015-03-18
Schrader	MFR (control unit) (tyre pressure monitoring sensor)	MR 19527 ANTR 2019-04-30
Schrader	GG4T (tyre pressure monitoring sensor)	MR 14777 ANRT 2017-09-20
Schrader	DG6W2D4 (tyre pressure monitoring sensor)	MR 16355 ANTR 2018-04-19
Schrader	MC34MA4 (tyre pressure monitoring sensor)	MR 6706 ANTR 2011-11-17
Veoneer	77GHz MMRV1 (radar sensor)	MR 10436 ANTR 2015
Veoneer	77V12BSM (radar sensor)	MR 20097 ANTR 2019
Veoneer	77V12CRN (radar sensor)	MR 20149 ANTR 2019
WITTE-Velbert	SDHTAG3NFC (locking system)	MR 23310 ANRT 10/03/2020

Mexico

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-A (radar sensor)	IFETEL: RCPCOAR14-1191
ADC	ARS4-B (radar sensor)	IFETEL: RLVCOAR15-0008
ADC	ARS4-C (radar sensor)	IFETEL: RLVCOR19-1062
Bosch	FR5CPCCF (radar sensor)	IFETEL: RCPBOFR19-1356
Bosch	LRR3 (radar sensor)	IFETEL: RCPBOLR09-0828

Manufacturer	Model designation	Radio equipment approval number
Bosch	MRR1Rear (radar sensor)	IFETEL: RCPBOMR14-0922
Bosch	MRRe14FCR (radar sensor)	IFETEL: RCPBOMR17-0598
Continental Antenna	RKE213E1 (antenna amplifier)	IFETEL: RLVKARK15-1741
Continental Antenna	RKE223E1 (antenna amplifier)	IFETEL: RLVCORK19-2174
Continental Automotive	CMKG1 (locking system)	IFETEL: RCPCOCM19-2315

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	MARS Keyless (locking system)	IFETEL: RLVDAMA18-1827
Gentex	EURO II (convenience system)	IFETEL: RCPJOHO07-598-A9
Gentex	MUAHL 5 (convenience system)	IFETEL: RCPGEMU15-0448
HELLA	DM4 (locking system)	IFETEL: RLVHEDM17-10
Hirschmann	920287A (locking system)	IFETEL: RLVHI9211-0472

Manufacturer	Model designation	Radio equipment approval number
Hirschmann	920287B (locking system)	IFETEL: RLVHI9212-0608
Huf Baolong	TSSRE4A (tyre pressure monitoring sensor)	IFETEL: RLVHUTS17-0806
HUF	HUF14632 (locking system)	IFETEL: RLVHUHU15-1204
HUF	HUF4761 (locking system)	IFETEL: RLVHUHU12-1587
LEOPOLD KOSTAL	KK1 (locking system)	IFETEL: RLVKOKK15-0891

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	DC12A (locking system)	IFETEL: RLVMEDC17-0348
MARQUARDT	DC12B (locking system)	IFETEL: RLVMADC11-0446
MARQUARDT	DC12K (interior protection)	IFETEL: RLVMADC11-0446
MARQUARDT	MS2 (locking system)	IFETEL: RLVMAMS17-0222
MARQUARDT	MS4 (locking system)	IFETEL: RLVMAMS19-0449

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MS5 (locking system)	IFETEL: RLVMEMS20-0957
MARQUARDT	MK1 (locking system)	IFETEL: RLVMAMK15-1042
MARQUARDT	MK2 (locking system)	IFETEL: RLVMAMK15-1043
MARQUARDT	3350.38 (locking system)	IFETEL: RCPMA3319-0530
MARQUARDT	MU1 (locking system)	IFETEL: RCPMAMU19-1342

Manufacturer	Model designation	Radio equipment approval number
Meta System	ITS/TPS (interior protection)	IFETEL: IFT/223/UCS/DG-AUSE/4871/2016
Meta System	MUW II (interior protection)	IFETEL: IFT/223/UCS/DG-AUSE/5064/2016
Schrader	AG5SP4-D (tyre pressure monitoring sensor)	IFETEL: RCPSCAG15-0627
Schrader	MFR (tyre pressure monitoring sensor)	IFETEL: RLVSCMF15-0959

Manufacturer	Model designation	Radio equipment approval number
Schrader	GG4T (tyre pressure monitoring sensor)	IFETEL: RLVSCGG17-1665
Schrader	DG6W2D4 (tyre pressure monitoring sensor)	IFETEL: RLVSCDG18-04
Schrader	MC34MA4 (tyre pressure monitoring sensor)	IFETEL: RCPSCMR14-062
Veoneer	77GHz MMRV1 (radar sensor)	IFETEL: RLVAU7717-0744

Manufacturer	Model designation	Radio equipment approval number
Veoneer	77V12BSM (radar sensor)	IFETEL: RLVVE7719-1063
Veoneer	77V12CRN (radar sensor)	IFETEL: RCPVE7719-0998
WITTE-Velbert	SDHTAG3NFC (locking system)	IFETEL: RCPWISD20-0943

Moldova

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-C (radar sensor)	MD OC TIP 024 A6632-19
Bosch	FR5CPCCF (radar sensor)	MD OC TIP 024 A6560-19
Bosch	LRR3 (radar sensor)	MD OC TIP 024 A6227-18
Bosch	MRR1Rear (radar sensor)	MD OC TIP 024 A5957-17
Bosch	MRRe14FCR (radar sensor)	MD OC TIP 024 A6004-18
Continental Antenna	RKE213E1 (antenna amplifier)	MD OC TIP 024 A6500-19

Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE223E1GNS (antenna amplifier)	MD OC TIP 024 A6648-19
Continental Automotive	CMKG1 (locking system)	MD OC TIP 024 A6671-20
Continental Automotive	MARS Keyless (locking system)	MD OC TIP 024 A5876-17
HELLA	DM4 (locking system)	MD 0C TIP 024 A6761-20
Hirschmann	920287A (locking system)	MD OC TIP 024 A6652-20

Manufacturer	Model designation	Radio equipment approval number
Hirschmann	920287B (locking system)	MD OC TIP 024 A6514-19
HUF	HUF4761 (locking system)	MD OC TIP 024 A6449-19
LEOPOLD KOSTAL	KK1 (locking system)	MD OC TIP 024 A6440-19
MARQUARDT	DC12A (locking system)	MD OC TIP 024 A6684-20
MARQUARDT	DC12B (locking system)	MD OC TIP 024 A6253-18
MARQUARDT	DC12K (locking system)	MD OC TIP 024 A6252-18

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MS2 (locking system)	MD OC TIP 024 A6444-19
MARQUARDT	MS4 (locking system)	MD OC TIP 024 A6569-19
MARQUARDT	MS5 (locking system)	MO OC TIP 024 A6774-20
MARQUARDT	MK1 (locking system)	MD OC TIP 024 A6551-19
MARQUARDT	MK2 (locking system)	MD OC TIP 024 A6552-19
MARQUARDT	3350.38 (locking system)	MD OC TIP 024 A6398-19

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MU1 (locking system)	MD OC TIP 024 A6570-19
MARQUARDT	MU2 (locking system)	MD OC TIP 024 A6773-20
Veoneer	77GHz MMRV1 (radar sensor)	MD OC TIP 024 A5678-16
Veoneer	77V12BSM (radar sensor)	MD OC TIP 024 A6508-19
Veoneer	77V12CRN (radar sensor)	MD OC TIP 024 A6506-19
WITTE-Velbert	SDHTAG3NFC (locking system)	MD OC TIP 024 A6753-20

Mongolia

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	CMKG1 (locking system)	A19000633
Continental Automotive	MARS Keyless (locking system)	A18000328
HELLA	DM4 (locking system)	A18000329
MARQUARDT	DC12A (locking system)	A19000400
MARQUARDT	DC12B (locking system)	A19000371

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	DC12K (locking system)	A19000372
MARQUARDT	MS2 (locking system)	A19000289
MARQUARDT	MS4 (locking system)	A19000516
MARQUARDT	MS5 (locking system)	A20000085
MARQUARDT	MK1 (locking system)	A19000374
MARQUARDT	MK2 (locking system)	A19000374



Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MU1 (locking system)	A19000517
MARQUARDT	MU2 (locking system)	A20000086

Niger

Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE213E1 (antenna amplifier)	029/ ARCEP/DG/19
Continental Automotive	MARS Keyless (locking system)	083/ ARCEP/DG/19
HELLA	DM4 (locking system)	082/ ARCEP/DG/19
Hirschmann	920287A (locking system)	097/ ARCEP/DG/19
Hirschmann	920287B (locking system)	098/ ARCEP/DG/19
HUF	HUF4761 (locking system)	053/ ARCEP/DG/19
KATHREIN	RKE213E1 (locking system)	029/ ARCEP/DG/19
LEOPOLD KOSTAL	KK1 (locking system)	037/ ARCEP/DG/19
MARQUARDT	DC12A (locking system)	010/ ARCEP/DG/19
MARQUARDT	DC12B (locking system)	008/ ARCEP/DG/19
MARQUARDT	DC12K (locking system)	009/ ARCEP/DG/19
MARQUARDT	MS2 (locking system)	014/ ARCEP/DG/19
MARQUARDT	MS4 (locking system)	HOMO-0096/ ARCEP/DG/2019
MARQUARDT	MK1 (locking system)	034/ ARCEP/DG/19
MARQUARDT	MK2 (locking system)	035/ ARCEP/DG/19

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	3350.38 (locking system)	015/ARCEP/DG/19
MARQUARDT	MU1 (locking system)	HOMO-0095/ARCEP/DG/2019

Nigeria

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-A (radar sensor)	NCC/TSNI/WN/TA/CERT/AB00388/2015
ADC	ARS4-B (radar sensor)	NCC/TSNI/WN/TA/CERT/2062/2018
ADC	ARS4-C (radar sensor)	NCC/TSNI/WN/TA/CERT/3078/2019
Bosch	FR5CPCCF (radar sensor)	NCC/TSNI/WN/TA/CERT/3282/2019
Bosch	MRR1Rear (radar sensor)	NCC/TSNI/WN/TA/CERT/2089/2018
Bosch	MRRe14FCR (radar sensor)	NCC/TSNI/WN/TA/CERT/2042/2018
Continental Antenna	RKE213E1 (antenna amplifier)	NCC/TSNI/WN/TA/CERT/0865/2015
Continental Antenna	RKE223E1GNS (antenna amplifier)	NCC/TSNI/WN/TA/CERT/3372/2020
Continental Automotive	CMKG1 (locking system)	NCC/TSNI/WN/TA/CERT/3440/2020
Continental Automotive	MARS Keyless (locking system)	NCC/TSNI/WN/TA/CERT/1670/2017
HELLA	DM4 (locking system)	NCC/TSNI/WN/TA/CERT/1830/2017
Hirschmann	920287A (locking system)	NCC/TSNI/WN/TA/CERT/3100/2019

Manufacturer	Model designation	Radio equipment approval number
Hirschmann	920287B (locking system)	NCC/TSNI/WN/TA/CERT/3101/2019
HUF	HUF14632 (locking system)	NCC/TSNI/WN/TA/CERT/0829/2015
HUF	HUF4761 (locking system)	NCC/TSNI/WN/TA/CERT/2884/2019
LEOPOLD KOSTAL	KK1 (locking system)	NCC/TSNI/WN/TA/CERT/0823/2015
MARQUARDT	DC12A (locking system)	NCC/TSNI/WN/TA/CERT/1714/2017
MARQUARDT	DC12B (locking system)	NCC/TSNI/WN/TA/CERT/2627/2019
MARQUARDT	DC12K (locking system)	NCC/TSNI/WN/TA/CERT/2626/2019
MARQUARDT	MS2 (locking system)	NCC/TSNI/WN/TA/CERT/1667/2017
MARQUARDT	MS4 (locking system)	NCC/TSNI/WN/TA/CERT/3212/2019
MARQUARDT	MS5 (locking system)	NCC/TSNI/WN/TA/CERT/3635/2020
MARQUARDT	MK1 (locking system)	NCC/TSNI/WN/TA/CERT/0739/2015
MARQUARDT	MK2 (locking system)	NCC/TSNI/WN/TA/CERT/0740/2015
MARQUARDT	3350.38 (locking system)	NCC/TSNI/WN/TA/CERT/2882/2019

Manufacturer	Model designation	Radio equipment approval number
Veoneer	77V12BSM (radar sensor)	NCC/ TSNI/WN/TA/ CERT/ 3069/2019
Veoneer	77V12CRN (radar sensor)	NCC/ TSNI/WN/TA/ CERT/ 3068/2019

Oman

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-A (radar sensor)	TRA/TA-R/ 2016/14 D080134
ADC	ARS4-B (radar sensor)	TRA/TA-R/ 2210/14 D080134
ADC	ARS4-C (radar sensor)	TRA/TA-R/ 7769/19 D172338
Bosch	FR5CPCCF (radar sensor)	TRA/TA-R/ 7983/19 D172338
Bosch	LRR3 (radar sensor)	TRA/TA-R/ 1049/09
Bosch	MRR1Rear (radar sensor)	TRA/TA-R/ 1849/14
Bosch	MRRe14FCR (radar sensor)	TRA/TA-R/ 4353/17

Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE213E1 (antenna amplifier)	TRA/TA-R/ 2715/15 D090258
Continental Antenna	RKE223E1GNS (antenna amplifier)	TRA/TA-R/ 8337/19
Continental Automotive	CMKG1 (locking system)	TRA/TA-R/ 8642/19 D172338
Continental Automotive	MARS Keyless (locking system)	TRA/TA-R/ 4158/17 D080134
HELLA	DM4 (locking system)	TRA/TA-R/ 4548/17 D080134
Hirschmann	920287A (locking system)	TRA/TA-R/ 0210/11 D080353
Hirschmann	920287B (locking system)	TRA/TA-R/ 0655/12 D080353
Huf Baolong	TSSRE4A (tyre pressure monitoring sensor)	TRA R/ 4516/17 D100428
Huf Baolong	TSSSG4G6 (tyre pressure monitoring sensor)	TRA R/ 4515/17 D100428
Huf Baolong	TSSSG4G6b (tyre pressure monitoring sensor)	TRA R/ 7506/19 D100428
HUF	HUF14632 (locking system)	TRA/TA-R/ 2665/15
HUF	HUF4761 (locking system)	TRA/TA-R/ 0920/12
LEOPOLD KOSTAL	KK1 (locking system)	TRA/TA-R/ 3129/16

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	DC12A (locking system)	TRA/TA-RD/4056/17 D100428
MARQUARDT	DC12B (locking system)	TRA/TA-R/0227/11 D080353
MARQUARDT	DC12K (locking system)	TRA/TA-R/0228/11 D080353
MARQUARDT	MS2 (locking system)	TRA/TA-R/4136/17 D080134
MARQUARDT	MS4 (locking system)	TRA/TA-R/7316/19 D172249
MARQUARDT	MS5 (locking system)	TRA/TA-R/9324/20 D100428
MARQUARDT	MK1 (locking system)	TRA/TA-R/2848/15 D080353
MARQUARDT	MK2 (locking system)	TRA/TA-R/2900/15 D080353
MARQUARDT	3350.38 (locking system)	TRA/TA-R/7051/19 D172249
MARQUARDT	MU1 (locking system)	TRA/TA-R/7353/19 D172249
MARQUARDT	MU2 (locking system)	TRA/TA-R/9325/20 D100428
Schrader	AG5SP4-D (tyre pressure monitoring sensor)	TRA R/2380/15 D080134

Manufacturer	Model designation	Radio equipment approval number
Schrader	MFR (tyre pressure monitoring sensor)	TRA R/ 7464/19 D090258
Schrader	GG4T (tyre pressure monitoring sensor)	TRA TA-R/ 4686/17 D080134
Schrader	DG6W2D4 (tyre pressure monitoring sensor)	TRA TA-R/ 5511/18 D172249
Veoneer	77GHz MMRV1 (radar sensor)	TRA/TA-R/ 2706/15

Manufacturer	Model designation	Radio equipment approval number
Veoneer	77V12BSM (radar sensor)	TRA R/ 7706/19 D172338
Veoneer	77V12CRN (radar sensor)	TRA R/ 7707/19 D172338
WITTE-Velbert	SDHTAG3NFC (locking system)	TRA/TA-R/ 9150/20

Pakistan

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-A (radar sensor)	9.9014/2019
ADC	ARS4-B (radar sensor)	9.1048/2018
ADC	ARS4-C (radar sensor)	9.9389/2019
Bosch	FR5CPCCF (radar sensor)	9.198/2020
Continental Antenna	RKE213E1 (antenna amplifier)	9.142/2016

Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE223E1GNS (antenna amplifier)	9.100169/2019
Continental Automotive	CMKG1 (locking system)	9.100175/2019
Continental Automotive	MARS Keyless (locking system)	9.213/2017
HELLA	DM4 (locking system)	9.409/2017
Hirschmann	920287A (locking system)	9.845/2013
Hirschmann	920287B (locking system)	9.846/2013
HUF	HUF14632 (locking system)	9.598/2015
HUF	HUF4761 (locking system)	9.790/2013
LEOPOLD KOSTAL	KK1 (locking system)	9.118/2016
MARQUARDT	DC12A (locking system)	9.131/2017
MARQUARDT	DC12B (locking system)	9.829/2013
MARQUARDT	DC12K (locking system)	9.830/2013
MARQUARDT	MS2 (locking system)	9.133/2017
MARQUARDT	MS4 (locking system)	9.100171/2019
MARQUARDT	MK1 (locking system)	9.486/2015
MARQUARDT	MK2 (locking system)	9.497/2015

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MU1 (locking system)	9.100170/2019
Veoneer	77GHz MMRV1 (radar sensor)	9.9284/2019
Veoneer	77V12BSM (radar sensor)	9.9391/2019
Veoneer	77V12CRN (radar sensor)	9.9391/2019

Paraguay

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-A (radar sensor)	2019-05-I-0271
ADC	ARS4-B (radar sensor)	2019-07-I-0353
ADC	ARS4-C (radar sensor)	2019-11-I-0602
Bosch	FR5CPCCF (radar sensor)	2019-09-I-0508

Manufacturer	Model designation	Radio equipment approval number
Bosch	MRRe14FCR (radar sensor)	2017-06-I-0000162
Bosch	MRR1Rear (radar sensor)	2019-05-I-000236
Continental Antenna	RKE213E1 (antenna amplifier)	2016-02-I-0000038
Continental Antenna	RKE223E1GNS (antenna amplifier)	2019-12-I-0656

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	CMKG1 (locking system)	2020-02-I-0110
Continental Automotive	MARS Keyless (locking system)	2017-05-I-0000136
HELLA	DM4 (locking system)	2017-08-I_0000261
Hirschmann	920287A (locking system)	2016-5-I-000134 y 2011-06-I-0059
Hirschmann	920287B (locking system)	2017-04-I-0000119 y 2012-05-I-0096
Huf Baolong	TSSRE4A (tyre pressure monitoring sensor)	2017-09-I-0000328
HUF	HUF14632 (locking system)	2020-06-I-0284 y 2015-08-I-0000226
HUF	HUF4761 (locking system)	2017-12-I-0000409 y 2012-10-I-0178
LEOPOLD KOSTAL	KK1 (locking system)	2015-06-I-0000181
MARQUARDT	DC12A (locking system)	2017-07-I-0000199
MARQUARDT	DC12B (locking system)	2016-5-I-000144 y 2011-06-I-0067
MARQUARDT	DC12K (locking system)	2016-5-I-000143 y 2011-06-I-0068
MARQUARDT	MS2 (locking system)	2017-04-I-0000101
MARQUARDT	MS4 (locking system)	2019-10-I-0581

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MK1 (locking system)	2020-07-I-0390 y 2015-07-I-0000200
MARQUARDT	MK2 (locking system)	2020-07-I-0391 y 2015-07-I-0000201
MARQUARDT	3350.38 (locking system)	2019-04-I-000216

Manufacturer	Model designation	Radio equipment approval number
Panasonic	DAIRSE	Importer: Condor S.A.C.I Casa Central, J.B. Gorostiaga 315 y Guaraníes, Asunción, Paraguay, (595 21) 569 7000, sac@condor.com.py
Schrader	AG5SP4-D (tyre pressure monitoring sensor)	2015-04-I-0000150

Manufacturer	Model designation	Radio equipment approval number
Veoneer	77GHz MMRV1 (radar sensor)	2015-07-I-000194
Veoneer	77V12BSM (radar sensor)	2019-07-I-0399
Veoneer	77V12CRN (radar sensor)	2019-07-I-0398
WITTE-Velbert	SDHTAG3NFC (locking system)	2020-06-I-0326

Philippines

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-A (radar sensor)	ESD-1409466C
ADC	ARS4-B (radar sensor)	ESD-1409834C
ADC	ARS4-C (radar sensor)	ESD-1920226C
Bosch	FR5CPCCF (radar sensor)	ESD-1920531C
Bosch	MRR1Rear (radar sensor)	ESD-1408917C
Bosch	MRRe14FCR (radar sensor)	ESD-1716172C
Veoneer	77V12BSM (radar sensor)	ESD-1920160C
Veoneer	77V12CRN (radar sensor)	ESD-1920162C
Veoneer	77GHz MMRV1 (radar sensor)	ESD-1510921C
Schrader	AG5SP4-D (tyre pressure monitoring sensor)	ESD-1510376C
Continental Antenna	RKE213E1 (antenna amplifier)	ESD-1511856C
Continental Antenna	RKE223E1GNS (antenna amplifier)	ESD-1921015C
Continental Automotive	CMKG1 (locking system)	ESD-2021556C
Continental Automotive	MARS Keyless (locking system)	ESD-1714865C
HELLA	DM4 (locking system)	ESD-1715539C

Manufacturer	Model designation	Radio equipment approval number
Hirschmann	920287A (locking system)	ESD-1105246C
Hirschmann	920287B (locking system)	ESD-1206044C
Huf Baolong	TSSRE4A (tyre pressure monitoring sensor)	ESD-1715393C
HUF	HUF14632 (locking system)	ESD-1511236C
HUF	HUF4761 (locking system)	ESD-1206521C
LEOPOLD KOSTAL	KK1 (locking system)	ESD-1510698C
MARQUARDT	DC12A (locking system)	ESD-1714489C
MARQUARDT	DC12B (locking system)	ESD-1105216C
MARQUARDT	DC12K (locking system)	ESD-1105215C
MARQUARDT	MS2 (locking system)	ESD-1715652C
MARQUARDT	MS4 (locking system)	ESD-1919133C
MARQUARDT	MS5 (locking system)	ESD-2022426C
MARQUARDT	MK1 (locking system)	ESD-1510644C
MARQUARDT	MK2 (locking system)	ESD-1510645C
MARQUARDT	3350.38 (locking system)	ESD-1919198C
MARQUARDT	MU1 (locking system)	ESD-1919146C



Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MU2 (locking system)	ESD-2022425C
WITTE-Velbert	SDHTAG3NFC (locking system)	ESD-2022599C

Zambia



Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE213E1 (antenna amplifier)	ZMB/ZICTA/TA/2019/3/11
Continental Automotive	MARS Keyless (locking system)	ZMB/ZICTA/TA/2019/3/3
HELLA	DM4 (locking system)	ZMB/ZICTA/TA/2019/3/4
Hirschmann	920287A (locking system)	ZMB/ZICTA/TA/2019/7/12
Hirschmann	920287B (locking system)	ZMB/ZICTA/TA/2019/7/11



Manufacturer	Model designation	Radio equipment approval number
HUF	HUF4761 (locking system)	ZMB/ZICTA/TA/2018/12/18
LEOPOLD KOSTAL	KK1 (locking system)	ZMB/ZICTA/TA/2019/3/48
MARQUARDT	DC12A (locking system)	ZMB/ZICTA/TA/2019/5/16
MARQUARDT	DC12B (locking system)	ZMB/ZICTA/TA/2019/5/17
MARQUARDT	DC12K (locking system)	ZMB/ZICTA/TA/2019/5/18
MARQUARDT	MS2 (locking system)	ZMB/ZICTA/TA/2018/9/30

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MS4 (locking system)	ZMB/ZICTA/TA/2019/7/123
MARQUARDT	MK1 (locking system)	ZMB/ZICTA/TA/2019/3/20
MARQUARDT	MK2 (locking system)	ZMB/ZICTA/TA/2019/3/21
MARQUARDT	3350.38 (locking system)	ZMB/ZICTA/TA/2019/3/6
MARQUARDT	MU1 (locking system)	ZMB/ZICTA/TA/2019/7/124

Manufacturer	Model designation	Radio equipment approval number
Veoneer	77V12BSM (radar sensor)	ZMB/ZICTA/TA/2019/6/59
Veoneer	77V12CRN (radar sensor)	ZMB/ZICTA/TA/2019/6/60

Serbia

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-A (radar sensor)	И011 14
ADC	ARS4-B (radar sensor)	И011 14
ADC	ARS4-C (radar sensor)	И011 14 34540-328/19-3
Bosch	FR5CPCCF (radar sensor)	И01119 34540-400/19-04
Bosch	LRR3 (radar sensor)	1-06-3454-190/09
Bosch	MRR1Rear (radar sensor)	34540-840/17-3



Manufacturer	Model designation	Radio equipment approval number
Bosch	MRRe14FCR (radar sensor)	P1617068100
Continental Antenna	RKE213E1 (antenna amplifier)	И005 18 P1618107600
Continental Antenna	RKE223E1GNS (antenna amplifier)	И005 19 P1619151300
Continental Automotive	CMKG1 (locking system)	И005 20 P1620007300
Continental Automotive	MARS Keyless (locking system)	И005 17 P1617052600



Manufacturer	Model designation	Radio equipment approval number
Gentex	EURO II (convenience system)	И005 14 P1614085200
HELLA	DM4 (locking system)	И005 20 P1620100100
Hirschmann	920287A (locking system)	И005 18 P1618084500
Hirschmann	920287B (locking system)	И005 18 P1618084400
Huf Baolong	TSSRE4A (tyre pressure monitoring sensor)	И005 17



Manufacturer	Model designation	Radio equipment approval number
Huf Baolong	TSSSG4G6 (tyre pressure monitoring sensor)	И005 17
Huf Baolong	TSSSG4G6b (tyre pressure monitoring sensor)	И005 19
HUF	HUF14632 (locking system)	И005 18 P1618104600
HUF	HUF4761 (locking system)	И005 18 P1618156300



Manufacturer	Model designation	Radio equipment approval number
LEOPOLD KOSTAL	KK1 (locking system)	И005 18 P1618080200
MARQUARDT	DC12A (locking system)	И005 17 P1620044700
MARQUARDT	DC12B (locking system)	И011 11
MARQUARDT	DC12K (locking system)	И011 11
MARQUARDT	MS2 (locking system)	И011 17
MARQUARDT	MS4 (locking system)	И005 19 P1619129100



Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MS5 (locking system)	И005 20 P1620062300
MARQUARDT	MK1 (locking system)	34540-306/18-3
MARQUARDT	MK2 (locking system)	34540-304/18-3
MARQUARDT	3350.38 (locking system)	34540-124/19-5
MARQUARDT	MU1 (locking system)	И005 19 P1619129200
MARQUARDT	MU2 (locking system)	И005 20 P1620062200



Manufacturer	Model designation	Radio equipment approval number
Meta System	MUW II (interior protection)	И011 19 P1619045500
Schrader	AG5SP4-D (tyre pressure monitoring sensor)	И005 15
Schrader	MFR (tyre pressure monitoring sensor)	И005 19
Schrader	GG4T (tyre pressure monitoring sensor)	И005 17



Manufacturer	Model designation	Radio equipment approval number
Schrader	DG6W2D4 (tyre pressure monitoring sensor)	И005 18
Schrader	MC34MA4 (tyre pressure monitoring sensor)	И011 11
Veoneer	77GHz MMRV1 (radar sensor)	И011 18 34540-483/18-3
Veoneer	77V12BSM (radar sensor)	34540-327/19-6



Manufacturer	Model designation	Radio equipment approval number
Veoneer	77V12CRN (radar sensor)	34540-325/19-5
WITTE-Velbert	SDHTAG3NFC (locking system)	И005 20 P1620047900

Singapore

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-A (radar sensor)	DA103365
ADC	ARS4-B (radar sensor)	DA103365
ADC	ARS4-C (radar sensor)	DA103365
Bosch	FR5CPCCF (radar sensor)	N3368-19
Bosch	LRR3 (radar sensor)	N0380-15
Bosch	MRR1Rear (radar sensor)	N0871-19
Bosch	MRRe14FCR (radar sensor)	N1699-17
Continental Antenna	RKE213E1 (antenna amplifier)	N2681-20 DA105282
Continental Antenna	RKE223E1GNS (antenna amplifier)	N4939-19 DA107248

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	CMKG1 (locking system)	N4774-19 DA103365
Continental Automotive	MARS Keyless (locking system)	N1298-17 DA103365
HELLA	DM4 (locking system)	N3010-17 DA103365
Hirschmann	920287A (locking system)	N0812-11 DA103365
Hirschmann	920287B (locking system)	N1231-12 DA103365
HUF Baolong	TSSRE4A (tyre pressure monitoring sensor)	DA103787
HUF Baolong	TSSSG4G6 (tyre pressure monitoring sensor)	DA103787
HUF Baolong	TSSSG4G6b (tyre pressure monitoring sensor)	DA28467
HUF	HUF14632 (locking system)	N1934-20 DA105282
HUF	HUF4761 (locking system)	N2797-12 DA103365
LEOPOLD KOSTAL	KK1 (locking system)	N2292-15 DA103365
MARQUARDT	DC12A (locking system)	N1138-17 DA103787
MARQUARDT	DC12B (locking system)	N0793-16 DA103365
MARQUARDT	DC12K (locking system)	N0726-16 DA103365
MARQUARDT	MS2 (locking system)	N1067-17 DA103787
MARQUARDT	MS4 (locking system)	G2709-19 N2718-19 N2717-19 DA103787
MARQUARDT	MS5 (locking system)	G2147-20 N2151-20 DA103787

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MK1 (locking system)	N2522-15 DA103365
MARQUARDT	MK2 (locking system)	N2523-15 DA103365
MARQUARDT	3350.38 (locking system)	N0506-19 DA103787
MARQUARDT	MU1 (locking system)	G2267-19 DA103365
MARQUARDT	MU2 (locking system)	G2148-20 DA103787
Meta System	ITS/TPS (interior protection)	N2215-11
Meta System	MUW II (interior protection)	N2216-11

Manufacturer	Model designation	Radio equipment approval number
Schrader	AG5SP4-D (tyre pressure monitoring sensor)	DA105282
Veoneer	77GHz MMRV1 (radar sensor)	N2779-15 DA103365
Veoneer	77V12BSM (radar sensor)	DA103365
Veoneer	77V12CRN (radar sensor)	DA103365
WITTE-Velbert	SDHTAG3NFC (locking system)	N1755-20

South Africa

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-A (radar sensor)	TA-2014/1637
ADC	ARS4-B (radar sensor)	TA-2014/1783
ADC	ARS4-C (radar sensor)	TA-2019/1595
Bosch	FR5CPCCF (radar sensor)	TA-2019/1200
Bosch	MRR1Rear (radar sensor)	TA-2014/212
Bosch	MRRe14FCR (radar sensor)	TA-2017/2013

Manufacturer	Model designation	Radio equipment approval number
Bosch	LRR3 (radar sensor)	1965/007009/07
Continental Antenna	RKE213E1 (antenna amplifier)	TA-2015/1438
Continental Antenna	RKE223E1 (antenna amplifier)	TA-2020/043
Continental Automotive	CMKG1 (locking system)	TA-2019/5405
Continental Automotive	MARS Keyless (locking system)	TA-2016/3500

Manufacturer	Model designation	Radio equipment approval number
Gentex	EURO II (convenience system)	TA-2005/614
Gentex	MUAHL 5 (convenience system)	TA-2015/1386
HELLA	DM4 (locking system)	TA-2017/2518
Hirschmann	920287A (locking system)	TA-2011/374
Hirschmann	920287B (locking system)	TA-2013/1262

Manufacturer	Model designation	Radio equipment approval number
Huf Baolong	TSSRE4A (tyre pressure monitoring sensor)	TA-2017/1393
Huf Baolong	TSSSG4G6 (control unit) (tyre pressure monitoring sensor)	TA-2017/1391
Huf Baolong	TSSSG4G6b (tyre pressure monitoring sensor)	TA-2019/1440
HUF	HUF14632 (locking system)	TA-2015/1077

Manufacturer	Model designation	Radio equipment approval number
HUF	HUF4761 (locking system)	TA-2012/1543
LEOPOLD KOSTAL	KK1 (locking system)	TA-2015/595
Meta System	ITS Master (interior protection)	TA-2011/1636
Meta System	ITS Sensor (interior protection)	TA-2011/1227
Meta System	MUW II (interior protection)	TA-2019/261

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	DC12A (locking system)	TA-2017/312
MARQUARDT	DC12B (locking system)	TA-2011/370
MARQUARDT	DC12K (locking system)	TA-2012/1542
MARQUARDT	MS2 (locking system)	TA-2016/3314
MARQUARDT	MS4 (locking system)	TA-2019/843
MARQUARDT	MS5 (locking system)	TA-2020/5765
MARQUARDT	MK1 (locking system)	TA-2015/179

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MK2 (locking system)	TA-2015/180
MARQUARDT	3350.38 (locking system)	TA-2018/3985
Schrader	AG5SP4-D (tyre pressure monitoring sensor)	TA-2015/072
Schrader	MFR (tyre pressure monitoring sensor)	TA-2019/273
Schrader	GG4T (tyre pressure monitoring sensor)	TA-2017/3884

Manufacturer	Model designation	Radio equipment approval number
Schrader	DG6W2D4 (tyre pressure monitoring sensor)	TA-2017/2933
Schrader	MC34MA4 (tyre pressure monitoring sensor)	TA-2011/1370
Veoneer	77GHz MMRV1 (radar sensor)	TA-2015/2087
Veoneer	77V12BSM (radar sensor)	TA-2019/1380

Manufacturer	Model designation	Radio equipment approval number
Veoneer	77V12CRN (radar sensor)	TA-2019/1382
WITTE-Velbert	SDHTAG3NFC (locking system)	TA-2020/055

South Korea

Manufacturer	Model designation	Radio equipment approval number
HUF	HUF14632 (locking system)	MSIP-CRM-HHF-HUF-14632
MARQUARDT	MU1 (locking system)	R-R-MQU-MU1

Thailand



Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-C (radar sensor)	A57013-19
Bosch	FR5CPCCF (radar sensor)	A57008-19
Bosch	LRR3 (radar sensor)	A57006-15
Bosch	MRR1Rear (radar sensor)	A57005-14
Bosch	MRRe14FCR (radar sensor)	A57003-17
Continental Antenna	RKE213E1 (antenna amplifier)	SDoC



Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE223E1GNS (antenna amplifier)	SDoC
Continental Automotive	CMKG1 (locking system)	SDoC
Continental Automotive	MARS Keyless (locking system)	SDoC
HELLA	DM4 (locking system)	SDoC



Manufacturer	Model designation	Radio equipment approval number
Hirschmann	920287A (locking system)	SDoC
Hirschmann	920287B (locking system)	SDoC
HUF	HUF14632 (locking system)	SDoC
HUF	HUF4761 (locking system)	SDoC
LEOPOLD KOSTAL	KK1 (locking system)	SDoC



Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	DC12A (locking system)	SDoC
MARQUARDT	DC12B (locking system)	SDoC
MARQUARDT	DC12K (locking system)	SDoC
MARQUARDT	MS2 (locking system)	SDoC
MARQUARDT	MS4 (locking system)	SDoC
MARQUARDT	MS5 (locking system)	SDoC A75004-20



Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MK1 (locking system)	SDoC
MARQUARDT	MK2 (locking system)	SDoC
MARQUARDT	3350.38 (locking system)	SDoC
MARQUARDT	MU1 (locking system)	A75002-20
MARQUARDT	MU2 (locking system)	A75005-20



Manufacturer	Model designation	Radio equipment approval number
Meta System	MUW II (interior protection)	RF test report: 149852-2R1TRFEMC EMC test report: 149852-1R1TRFEMC Safety report: 149852TRFSAF
Veoneer	77GHz MMRV1 (radar sensor)	A57008-16
Veoneer	77V12BSM (radar sensor)	A57004-19



Manufacturer	Model designation	Radio equipment approval number
Veoneer	77V12CRN (radar sensor)	A57004-19
WITTE-Velbert	SDHTAG3NFC (locking system)	SDoC

Togo

Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE213E1 (antenna amplifier)	No. 024/19
Continental Automotive	MARS Keyless (locking system)	No. 040/19
HELLA	DM4 (locking system)	No. 039/19
Hirschmann	920287A (locking system)	No. 089/19
Hirschmann	920287B (locking system)	No. 088/19
HUF	HUF4761 (locking system)	No. 041/19
KATHREIN	RKE213E1 (locking system)	No. 024/19
LEOPOLD KOSTAL	KK1 (locking system)	No. 060/19
MARQUARDT	DC12A (locking system)	No. 055/19
MARQUARDT	DC12B (locking system)	No. 057/19
MARQUARDT	DC12K (locking system)	No. 056/19
MARQUARDT	MS2 (locking system)	No. 008/19
MARQUARDT	MS4 (locking system)	No. 101/19
MARQUARDT	MK1 (locking system)	No. 021/19
MARQUARDT	MK2 (locking system)	No. 022/19

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	3350.38 (locking system)	No. 016/20
MARQUARDT	MU1 (locking system)	No. 100/19

Ukraine

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-A (radar sensor)	UA RF: 1CONT0004
ADC	ARS4-B (radar sensor)	UA RF: 1CONT0001
ADC	ARS4-C (radar sensor)	UA.TR.109.R .0017-19
Bosch	FR5CPCCF (radar sensor)	UA RF: 1BOSC0009
Bosch	LRR3 (radar sensor)	UA.TR.109.R .0031-19
Bosch	MRR1Rear (radar sensor)	UA.TR.109.R .0598-18
Bosch	MRRe14FCR (radar sensor)	UA.TR.109.R .0030-19
Continental Antenna	RKE213E1 (antenna amplifier)	UKR.355-12 3/19
Continental Antenna	RKE223E1GNS (antenna amplifier)	UA.R.TR.052 .682-19
Continental Automotive	CMKG1 (locking system)	UA1.001.02 1175-20-TE
Continental Automotive	MARS Keyless (locking system)	RTS.UKR.35 5-34/18

Manufacturer	Model designation	Radio equipment approval number
Gentex	EURO II (convenience system)	UA1.001.008806-15
HELLA	DM4 (locking system)	UA.TR.109.R.0325-18
Hirschmann	920287A (locking system)	UKR.355-7/20
Hirschmann	920287B (locking system)	UKR.355-8/20
Huf Baolong	TSSRE4A (tyre pressure monitoring sensor)	UA 1.001.018568-19-TE

Manufacturer	Model designation	Radio equipment approval number
Huf Baolong	TSSSG4G6 (control unit) (tyre pressure monitoring sensor)	UA 1.001.018586-19-TE
Huf Baolong	TSSSG4G6b (control unit) (tyre pressure monitoring sensor)	UA 1.001.019289-19-TE
HUF	HUF14632 (locking system)	UKR.355-113/19
HUF	HUF4761 (locking system)	UA1.001.018653-19-TE

Manufacturer	Model designation	Radio equipment approval number
LEOPOLD KOSTAL	KK1 (locking system)	1O094.006682-19
MARQUARDT	DC12A (locking system)	UA.R.TR.052.307-19
MARQUARDT	DC12B (locking system)	UA.R.TR.052.308-19
MARQUARDT	DC12K (locking system)	UA.R.TR.052.309-19
MARQUARDT	MS2 (locking system)	UA1.001.019129-19-TE
MARQUARDT	MS4 (locking system)	UA.R.TR.052.528-19

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MK1 (locking system)	UA1.001.01 9233-19-TE
MARQUARDT	MK2 (locking system)	UA1.001.01 9234-19-TE
MARQUARDT	3350.38 (locking system)	UA1.001.01 8888-19-TE
Schrader	AG5SP4 (tyre pressure monitoring sensor)	UA.TR. 028
Veoneer	77V12BSM (radar sensor)	UA RF: 1VEON2BSM

Manufacturer	Model designation	Radio equipment approval number
Veoneer	77V12CRN (radar sensor)	UA RF: 1VEON2CRN
Veoneer	77GHz MMRV1 (radar sensor)	TEC/ DoC No VEONEER.UKR.355-3/19 NKRZi No-UA RF:2VEONMRV1
WITTE-Velbert	SDHTAG3NFC (locking system)	UA.R.TR.052.120-20

Uzbekistan

Manufacturer	Model designation	Radio equipment approval number
HELLA	DM4 (locking system)	UZ.SMT.01.319.25 81135
MARQUARDT	MS2 (locking system)	UZ.SMT.01.319.25 50607
MARQUARDT	MS4 (locking system)	UZ.SMT.01.319.25 81337
MARQUARDT	MS5 (locking system)	UZ.SMT.01.319.25 81337

United Arab Emirates

Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-A (radar sensor)	TRA ER58296/17, DA40068
ADC	ARS4-B (radar sensor)	TRA ER61136/18, DA40068/15
ADC	ARS4-C (radar sensor)	TRA ER77062/19, DA40068
Bosch	FR5CPCCF (radar sensor)	TRA ER74533/19, DA36758/14
Continental Antenna	RKE213E1 (antenna amplifier)	TRA ER64693/18, DA36975/14
Continental Antenna	RKE223E1GNS (antenna amplifier)	TRA E76442/19, DA65993/17
Continental Automotive	CMKG1 (locking system)	TRA ER77964/20, DA0018994/09
Continental Automotive	MARS Keyless (locking system)	TRA ER56005/15, DA44932/15
Gentex	MUAHL 5 (convenience system)	TRA ER41849/15, DA35176/14
HELLA	DM4 (locking system)	TRA ER56616/17, DA44932/15
Hirschmann	920287A (locking system)	TRA ER52213/17, DA35219/14

Manufacturer	Model designation	Radio equipment approval number
Hirschmann	920287B (locking system)	TRA ER42011/5, DA35219/14
Huf Baolong	TSSRE4A (tyre pressure monitoring sensor)	TRA ER57806/17, DA36976/14
Huf Baolong	TSSSG4G6 (control unit) (tyre pressure monitoring sensor)	TRA ER57807/17, DA36976/14
Huf Baolong	TSSSG4G6b (control unit) (tyre pressure monitoring sensor)	TRA ER7307/19, DA0086237/12

Manufacturer	Model designation	Radio equipment approval number
HUF	HUF14632 (locking system)	TRA ER63716/18, DA36976/14
HUF	HUF4761 (locking system)	TRA ER55496/17, DA36976/14
LEOPOLD KOSTAL	KK1 (locking system)	TRA ER62622/18
MARQUARDT	DC12A (locking system)	TRA ER53465/17, DA0018994/09

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	DC12B (locking system)	TRA ER0067828/11, DA0018994/09
MARQUARDT	DC12K (locking system)	TRA ER0067829/11, DA0018994/09
MARQUARDT	MS2 (locking system)	TRA ER52668/17, DA0018994/09

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MS4 (locking system)	TRA ER71616/19, DA0018994/09
MARQUARDT	MS5 (locking system)	TRA ER80720/20, DA0018994/09
MARQUARDT	MK1 (locking system)	TRA ER64145/18, DA0018994/09

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MK2 (locking system)	TRA ER64146/18, DA0018994/09
MARQUARDT	3350.38 (locking system)	TRA ER69280/19, 0018994/09
MARQUARDT	MU1 (locking system)	TRA ER71833/19, DA0018994/09
MARQUARDT	MU2 (locking system)	TRA ER81329/20, DA0018994/09

Manufacturer	Model designation	Radio equipment approval number
Schrader	AG5SP4-D (tyre pressure monitoring sensor)	TRA ER37156/15, DA0047074/10
Schrader	GG4T (tyre pressure monitoring sensor)	TRA ER57985/17, DA0047074/10
Schrader	DG6W2D4 (tyre pressure monitoring sensor)	TRA ER960528/18, DA0047074/10

Manufacturer	Model designation	Radio equipment approval number
Schrader	MC34MA4 (tyre pressure monitoring sensor)	TRA ER37066/15, DA0047074/10
Veoneer	77GHz MMRV1 (radar sensor)	TRA ER39759/15, DA0020858
Veoneer	77V12BSM (radar sensor)	ER72324/19

Manufacturer	Model designation	Radio equipment approval number
Veoneer	77V12CRN (radar sensor)	ER72323/19
WITTE-Velbert	SDHTAG3NFC (locking system)	TRA ER79695/20, DA0018994/09

United States

Manufacturer	Model designation	Radio equipment approval number
Bosch	FR5CPCCF (radar sensor)	FCC ID: NF3-FR5CPCCF
Veoneer	77V12BSM (radar sensor)	FCC ID: WU877V12BSM

Vietnam

Manufacturer	Model designation	Radio equipment approval number
Bosch	FR5CPCCF (radar sensor)	234/CVT-TT3
Continental Antenna	RKE213E1 (antenna amplifier)	C0274151118AF04A2
Continental Antenna	RKE223E1GNS (antenna amplifier)	C0007100120AF04A2
Continental Automotive	CMKG1 (locking system)	Suntech VietNam Technology Company Limited C0001070120AF04A2
Continental Automotive	MARS Keyless (locking system)	Mercedes-Benz Vietnam Company Limited B0748240419AF04A2
HELLA	DM4 (locking system)	Suntech VietNam Technology Company Limited B0625050419AF04A2
Huf Baolong	TSSRE4A (tyre pressure monitoring sensor)	C0112200717AF04A2
MARQUARDT	DC12A (locking system)	Suntech VietNam Technology Company Limited C0048080319AF04A2
MARQUARDT	DC12B (locking system)	Suntech VietNam Technology Company Limited C0050080319AF04A2
MARQUARDT	DC12K (locking system)	Suntech VietNam Technology Company Limited C0049080319AF04A2

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MS2 (locking system)	Suntech VietNam Technology Company Limited C0035150219AF04A2
MARQUARDT	MS4 (locking system)	Suntech VietNam Technology Company Limited C0231240919AF04A2
MARQUARDT	MS5 (locking system)	Suntech VietNam Technology Company Limited C0141140520AF04A2

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MK1 (locking system)	Suntech VietNam Technology Company Limited C0021180119AF04A2
MARQUARDT	MK2 (locking system)	Suntech VietNam Technology Company Limited C0022180119AF04A2
MARQUARDT	3350.38 (locking system)	Suntech VietNam Technology Company Limited C0076150319AF04A2

Manufacturer	Model designation	Radio equipment approval number
Schrader	AG5SP4 (tyre pressure monitoring sensor)	C0002050119AF042A
Schrader	GG4T (tyre pressure monitoring sensor)	C0170191017AF04A2
Schrader	DG6W2D4 (tyre pressure monitoring sensor)	C0078070518AF04A2



Manufacturer	Model designation	Radio equipment approval number
Veoneer	77V12BSM (radar sensor)	A47/CVT-TT3
Veoneer	77V12CRN (radar sensor)	A48/CVT-TT3

Eurasian Economic Union



Manufacturer	Model designation	Radio equipment approval number
ADC	ARS4-A (radar sensor)	–
ADC	ARS4-B (radar sensor)	–
ADC	ARS4-C (radar sensor)	ЕАЭС N RU Д-DE.PA01.B.87137/19
Bosch	FR5CPCCF (radar sensor)	–
Bosch	LRR3 (radar sensor)	–
Bosch	MRR1Rear (radar sensor)	–



Manufacturer	Model designation	Radio equipment approval number
Bosch	MRRe14FCR (radar sensor)	–
Bosch	FR5CPCCF (radar sensor)	ЕАЭС N RU Д-DE.PA01.B.77223/19
Continental Antenna	RKE213E1 (antenna amplifier)	–
Continental Antenna	RKE223E1GNS (antenna amplifier)	–
Continental Automotive	MARS Keyless (locking system)	–

Manufacturer	Model designation	Radio equipment approval number
HELLA	DM4 (locking system)	–
Hirschmann	920287A (locking system)	–
Hirschmann	920287B (locking system)	–
Huf Baolong	TSSRE4A (tyre pressure monitoring sensor)	–
Huf Baolong	TSSSG4G6 (tyre pressure monitoring sensor)	–

Manufacturer	Model designation	Radio equipment approval number
Huf Baolong	TSSSG4G6b (tyre pressure monitoring sensor)	–
HUF	HUF4761 (locking system)	–
HUF	HUF14632 (locking system)	–
LEOPOLD KOSTAL	KK1 (locking system)	–
MARQUARDT	DC12A (locking system)	–


Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	DC12B (locking system)	–
MARQUARDT	DC12K (locking system)	–
MARQUARDT	MS2 (locking system)	–
MARQUARDT	MS4 (locking system)	–
MARQUARDT	MS5 (locking system)	–
MARQUARDT	MK1 (locking system)	–
MARQUARDT	MK2 (locking system)	–


Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	3350.38 (locking system)	–
MARQUARDT	MU1 (locking system)	–
Schrader	AG5SP4-D (tyre pressure monitoring sensor)	–
Veoneer	77GHz MMRV1 (radar sensor)	–
Veoneer	77V12BSM (radar sensor)	ЕАЭС N RU Д-US.Э M03.B.00100/19

Manufacturer	Model designation	Radio equipment approval number
Veoneer	77V12CRN (radar sensor)	ЕАЭС N RU Д-US.Э M03.B.00102/19
WITTE-Velbert	SDHTAG3NFC (locking system)	–

Vehicle identification plate, VIN and engine number overview


Vehicle identification plate

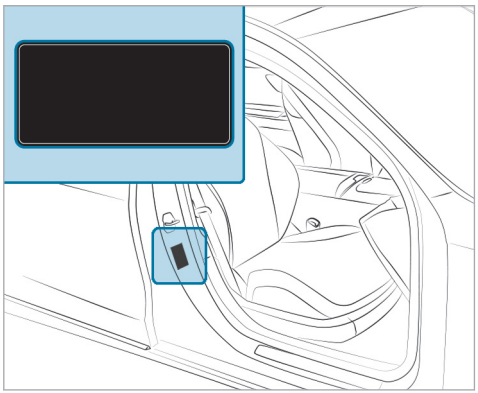

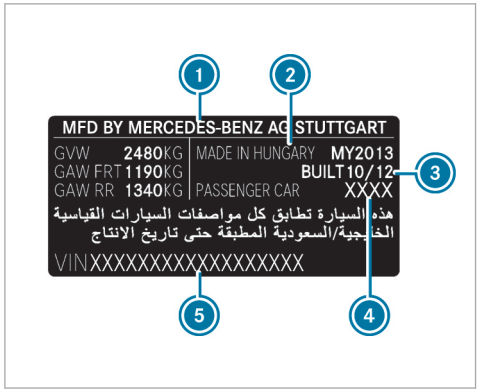

Vehicle identification plate (example: Kuwait)

1. Vehicle manufacturer
2. Place of manufacture
3. Manufacturing date
4. Paint code
5. VIN (vehicle identification number)

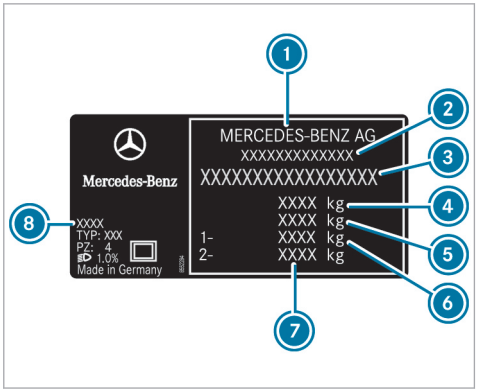


Vehicle identification plate (example: all other countries)

1. Vehicle manufacturer
2. EU general operating permit number (only for certain countries)
3. VIN (vehicle identification number)
4. Maximum permissible gross vehicle weight (kg)
5. Maximum permissible gross weight of vehicle combination (kg) (for certain countries only, optional)
6. Maximum permissible front axle load (kg)
7. Maximum permissible rear axle load (kg)
8. Paint code

ⓘ The data shown in the illustration is example data.


VIN at the lower edge of the windscreen

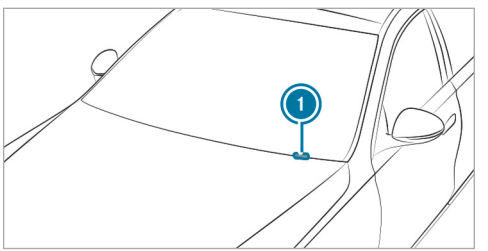

1. VIN (vehicle identification number)

The VIN at the lower edge of the windscreen is only available in some countries.

VIN in the engine compartment

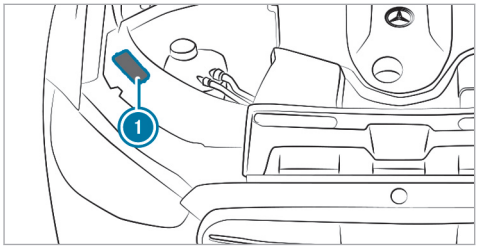

1 VIN (vehicle identification number)

Engine number

The engine number is stamped into the crankcase.

ⓘ Further information can be obtained at a qualified specialist workshop.

Operating fluids

Notes on operating fluids

WARNING Risk of injury from operating fluids harmful to your health

Operating fluids may be poisonous and harmful to your health.

- ▶ Observe the text on the original containers when using, storing or disposing of operating fluids.
- ▶ Always store operating fluids sealed in their original containers.
- ▶ Always keep children away from operating fluids.

ENVIRONMENTAL NOTE Environmental pollution caused by environmentally irresponsible disposal

- ▶ Dispose of operating fluids in an environmentally responsible manner.

Operating fluids include the following:

- fuels
- lubricants
- coolant
- brake fluid
- windscreen washer fluid
- climate control system refrigerant

Only use products approved by Mercedes-Benz. Damage caused by the use of products that have not been approved is not covered by the Mercedes-Benz warranty or goodwill gestures.

The operating fluids approved by Mercedes-Benz can be identified by the following inscriptions on the container:

You can identify operating fluids approved by Mercedes-Benz by the following inscriptions on the container:

- MB-Freigabe (e.g. MB-Freigabe 229.51)
- MB-Approval (e.g. MB-Approval 229.51)

Further information on approved operating fluids:

- in the Mercedes-Benz Specifications for Operating Fluids by entering the designation
  - at https://bevo.mercedes-benz.com
  - in the Mercedes-Benz BeVo App
- at a qualified specialist workshop

⚠ WARNING Risk of fire or explosion from fuel

Fuels are highly flammable.

- Fire, naked flames, smoking and creation of sparks must be avoided.
- Switch off the ignition and, if available, the stationary heater, before and while refuelling the vehicle.

⚠ WARNING Risk of injury from fuels

Fuels are poisonous and hazardous to your health.

- Do not swallow fuel or let it come into contact with skin, eyes or clothing.
- Do not inhale fuel vapour.
- Keep children away from fuel.
- Keep doors and windows closed during the refuelling process.

If you or other people come into contact with fuel, observe the following:

- Immediately rinse fuel off your skin with soap and water.
- If fuel comes into contact with your eyes, immediately rinse them thoroughly with clean water. Seek medical attention immediately.
- If you swallow fuel, seek medical attention immediately. Do not induce vomiting.
- Change immediately out of clothing that has come into contact with fuel.

Fuel

Information on fuel grades for vehicles with a petrol engine

Observe the notes on operating fluids (→ page 461).

! NOTE Damage caused by the wrong fuel

Even small amounts of the wrong fuel could result in damage to the fuel system, the engine and the emission control system.

- Only refuel using unleaded, sulphur-free petrol that conforms to European EN 228, or an equivalent specification.

Fuel of this specification may contain up to 10% ethanol by volume. Your vehicle is suitable for use with E10 fuel.

Never refuel with one of the following fuels:

- diesel
- regular petrol with an octane number lower than 91 RON

- petrol with more than 10% ethanol by volume, e.g. E15, E20, E85, E100
- petrol with more than 3% methanol by volume, e.g. M15, M30
- petrol with additives containing metal

If you have accidentally refuelled with the wrong fuel:

▶ do not switch the ignition on.

▶ consult a qualified specialist workshop.

According to European standard EN 16942 you can find the compatibility indications at the following locations:

- On the vehicle on the information label in the fuel filler flap
- On the fuel dispenser or pump nozzle suitable for your vehicle throughout Europe



1 For petrol with maximum 5% ethanol by volume

2 For petrol with maximum 10% ethanol by volume

If the available fuel is not sufficiently low in sulphur, this can produce unpleasant odours.

Recommended fuel: the recommended octane number for your vehicle can be found in the information label in the fuel filler flap (→ page 209).

All models: if you wish to achieve maximum engine output, refuel using only super unleaded petrol with at least 98 RON. Alternatively, you can also refuel using premium-grade petrol with at least 95 RON.

P223 0210 02

All models: as a temporary measure, if the recommended fuel is not available, you may also use regular unleaded petrol with an octane number of at least 91 RON. This may reduce engine output and increase fuel consumption.

Never refuel using petrol with a lower RON.

Further information on fuel can be obtained at a filling station or a qualified specialist workshop.

Information on additives in petrol

Observe the notes on operating fluids (→ page 461).

! NOTE Damage from use of unsuitable additives

Even small amounts of the wrong additive may lead to malfunctions occurring.

▶ Only add cleaning additives recommended by Mercedes-Benz to the fuel.

Mercedes-Benz recommends that you use brand-name fuels with additives.

In some countries, the fuel available may not have sufficient additives. Residue could build up in the

fuel injection system as a result. In this case, in consultation with a Mercedes-Benz service centre, mix the fuel with the cleaning additive recommended by Mercedes-Benz. Observe the notes and mixing ratios indicated on the tank.

Information on fuel grades for vehicles with a diesel engine

General notes

Observe the notes on operating fluids (→ page 461).

⚠ WARNING Risk of fire from fuel mixture

If you mix diesel fuel with petrol, the flash point of the fuel mixture is lower than that of pure diesel fuel.

- ▶ Never refuel using petrol in diesel engines.
- ▶ Never mix petrol with diesel fuel.

! NOTE Damage caused by the wrong fuel

Even small amounts of the wrong fuel could result in damage to the fuel system, the engine and the emission control system.

Vehicles with a diesel particulate filter

- ▶ Only refuel using sulphur-free diesel fuel that conforms to European standard EN 590, or an equivalent specification. In countries without sulphur-free diesel fuel, refuel using only low-sulphur diesel fuel with a sulphur content less than 50 ppm.

Vehicle without diesel particulate filter:

- ▶ refuel using only diesel fuel with a sulphur content less than 500 ppm.

Never refuel with one of the following fuels:

- petrol
- marine diesel
- heating oil
- pure fatty acid methyl ester or vegetable oil
- paraffin or kerosene

If you have accidentally refuelled with the wrong fuel:

- ▶ do not switch the ignition on.
- ▶ consult a qualified specialist workshop.

The following compatibility indication for fuel applies to your vehicle:



1 For diesel fuel with a maximum of 7% by volume bio-diesel (fatty acid methyl ester)

According to European standard EN 16942 you can find the compatibility indications at the following locations:

- On the vehicle on the information label in the fuel filler flap (⟶ page 209)
- On the fuel dispenser or pump nozzle suitable for your vehicle throughout Europe

Information on low outside temperatures
Refuel your vehicle with as much winter diesel fuel as possible at the beginning of winter.

Before changing over to winter diesel fuel, the fuel tank should be empty, if possible. Keep the fuel level low for the first refuelling with winter diesel fuel, e.g. to reserve level. The fuel tank can be filled as usual when next refuelling.

Further information on fuel can be obtained at a filling station or a qualified specialist workshop.

Tank content and reserve fuel

Missing values were not available at the time of going to press.

Model	Total capacity
Mercedes-Maybach S 450	
Mercedes-Maybach S 580 4MATIC Mercedes-Maybach S 650 4MATIC	76.0 litres
	of which reserve fuel
Mercedes-Maybach S 450	
Mercedes-Maybach S 580 4MATIC Mercedes-Maybach S 650 4MATIC	8.0 l

Engine oil

Notes on engine oil

Observe the notes on operating fluids (⟶ page 461).



! **NOTE** Engine damage caused by an incorrect oil filter, incorrect oil or additives

- Do not use engine oils or oil filters other than those which meet the specifications necessary for the prescribed service intervals.
- Do not alter the engine oil or oil filter in order to achieve longer change intervals than prescribed.
- Do not use additives.
- Have the engine oil changed after the prescribed intervals.

Mercedes-Benz recommends that you have the oil change carried out at a qualified specialist workshop.

Only use engine oils approved by Mercedes-Benz.

Petrol engines: For certain countries, different engine oils can be used in conjunction with reduced maintenance intervals.

ⓘ Further information on different engine oils can be obtained at a qualified specialist workshop.

Quality and capacity of engine oil

Missing values were not available at the time of going to press.

Model	MB-Freigabe or MB-Approval
Mercedes-Maybach S 450	
Mercedes-Maybach S 580 4MATIC	229.52 229.61*
Mercedes-Maybach S 650 4MATIC	

* recommended for lowest possible fuel consumption (lowest SAE viscosity class in each case; observe possible restrictions of the approved SAE viscosity classes)

To achieve the lowest possible fuel consumption, it is recommended to use the engine oil specifications marked in the table for the lowest SAE viscosity class. Possible restrictions of the approved SAE viscosity classes must be observed.

ⓘ If the engine oils listed in the table are not available, you may add a maximum of 1.0 litre of the following engine oils once only.

Engine oils for one-time filling only in exceptional cases:

- **Mercedes-Maybach S 450:** MB-Freigabe or MB-Approval not available at the time of going to press.
- **Mercedes-Maybach S 580 4MATIC:** MB-Freigabe or MB-Approval 229.51 or ACEA C3
- **Mercedes-Maybach S 650 4MATIC:** MB-Freigabe or MB-Approval not available at the time of going to press.

The following values refer to an oil change, including the oil filter.

Missing values were not available at the time of going to press.

Model	Capacity
Mercedes-Maybach S 450	
Mercedes-Maybach S 580 4MATIC	8.5 litres
Mercedes-Maybach S 650 4MATIC	

Notes on brake fluid

Observe the notes on operating fluids (→ page 461).

WARNING Risk of an accident due to vapour pockets forming in the brake system

The brake fluid constantly absorbs moisture from the air. This lowers the boiling point of the brake fluid. If the boiling point is too low, vapour pockets may form in the brake system when the brakes are applied hard.

This impairs the braking effect.

- Have the brake fluid renewed at the specified intervals.

Have the brake fluid regularly replaced at a qualified specialist workshop.
Only use a brake fluid approved by Mercedes-Benz according to MB-Freigabe or MB-Approval 331.0.

Coolant

Notes on coolant

Observe the notes on operating fluids (→ page 461).

WARNING Risk of fire- and injury from antifreeze

If antifreeze comes into contact with hot component parts in the engine compartment, it may ignite.

- Allow the engine to cool down before you top up the antifreeze.
- Make sure that no antifreeze spills out next to the filler opening.
- Thoroughly clean the antifreeze from component parts before starting the vehicle.

NOTE Damage caused by incorrect coolant

- Only use coolant that has been premixed with the required antifreeze protection.

Information on coolant is available at the following locations:

- in the Mercedes-Benz Specification for Operating Fluids 310.1
  - at https://bevo.mercedes-benz.com
  - in the Mercedes-Benz BeVo app
- at a qualified specialist workshop

NOTE Overheating at high outside temperatures

If an inappropriate coolant is used, the engine cooling system is not sufficiently protected against overheating and corrosion at high outside temperatures.

- Always use coolant approved by Mercedes-Benz.
- Observe the instructions in the Mercedes-Benz Specifications for Operating Fluids 310.1.

Have the coolant regularly replaced at a qualified specialist workshop.

Proportion of antifreeze concentrate in the engine cooling system:

- a minimum of 50% (antifreeze protection down to approximately -37°C)
- a maximum of 55% (antifreeze protection down to -45°C)

Notes on windscreen washer fluid

Observe the notes on operating fluids (→ page 461).

WARNING - Risk of fire and injury due to windscreen washer concentrate

Windscreen washer concentrate is highly flammable. It could ignite if it comes into contact with hot engine component parts or the exhaust system.

- Make sure that no windscreen washer concentrate spills out next to the filler opening.

NOTE Damage to the exterior lighting due to unsuitable windscreen washer fluid

Unsuitable windscreen washer fluids may damage the plastic surface of the exterior lighting.

- Only use windscreen washer fluids which are also suitable for use on plastic surfaces, e.g. MB SummerFit or MB WinterFit.

NOTE Blocked spray nozzles caused by mixing windscreen washer fluids

- Do not mix MB SummerFit and MB WinterFit with other windscreen washer fluids.

Do not use distilled or de-ionised water. Otherwise, the fill level sensor may be triggered erroneously.

Recommended windscreen washer fluid:

- above freezing point: e.g. MB SummerFit
- below freezing point: e.g. MB WinterFit

For the correct mixing ratio, refer to the information on the antifreeze container.


Mix washer fluid with windscreen washer fluid all year round.

Vehicle data

Vehicle dimensions

The heights specified may vary as a result of the following factors:

- tyres
- load
- condition of the suspension
- optional equipment

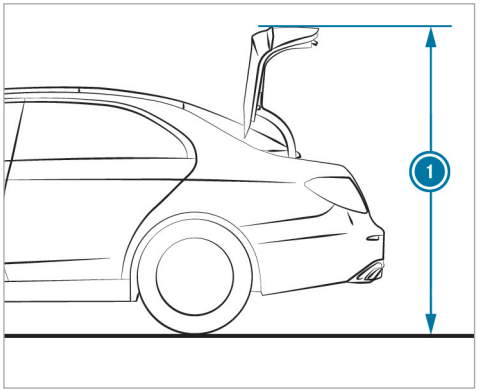

Missing values were not available at the time of going to press.

Height when opened

Model	1 Height when opened
Mercedes-Maybach S 450	
Mercedes-Maybach S 580 4MATIC	1855 mm
Mercedes-Maybach S 650 4MATIC	

Vehicle dimensions

Mercedes-Maybach S 450	
Vehicle length	
Vehicle width including outside mirrors	
Vehicle width excluding outside mirrors	
Vehicle height	
Wheelbase	

Mercedes-Maybach S 580 4MATIC	
Vehicle length	5469 mm
Vehicle width including outside mirrors	2109 mm
Vehicle width excluding outside mirrors	1954 mm
Vehicle height	1510 mm
Wheelbase	3396 mm

Mercedes-Maybach S 650 4MATIC	
Vehicle length	
Vehicle width including outside mirrors	
Vehicle width excluding outside mirrors	
Vehicle height	
Wheelbase	

Weights and loads

Please note the following for the specified vehicle data:

- Items of optional equipment increase the unladen weight and reduce the payload.
- Vehicle-specific weight information can be found on the vehicle identification plate (→ page 459).

Missing values were not available at the time of going to press.

Model	Maximum roof load
Mercedes-Maybach S 450	
Mercedes-Maybach S 580 4MATIC	
Mercedes-Maybach S 650 4MATIC	

Display messages

Introduction

Information about display messages

Display messages appear on the driver display.

Display messages with graphical symbols are simplified in the Owner's Manual and may differ from the symbols on the driver display. The driver display shows high-priority display messages in red. Certain display messages are accompanied by a warning tone.

Please act in accordance with the display messages and follow the additional notes in the Owner's Manual.

For some display messages, a symbol will also be shown:

- ⓘ Further information
- × Hide display message

With the left-hand Touch Control, you can select the respective symbol by swiping to the left or right. Press the ⓘ symbol to show further information on the central display. Press the × symbol to hide the display message.

You can hide low-priority display messages by pressing the back button or the left-hand Touch Control. The display messages will then be stored in the message memory.

Rectify the cause of a display message as quickly as possible.

High-priority display messages cannot be hidden. The driver display shows these display messages continuously until the cause of the display message has been rectified.

Calling up saved display messages

Driver display:

↳ Service ▸▸ Message memory: XX

If there are no display messages, No messages will appear on the driver display.

- Scroll through the display messages by swiping upwards or downwards on the left-hand Touch Control.
- **To exit the message memory:** press the back button.

Occupant safety



Display messages	Possible causes/consequences and ▶ Solutions
 Restraint system malfunction Consult workshop	* The restraint system is malfunctioning (→ page 40). ⚠ **WARNING** Risk of injury due to malfunctions in the restraint system Components in the restraint system may be activated unintentionally or not deploy as intended in an accident. ▶ Have the restraint system checked and repaired immediately at a qualified specialist workshop.
 Front left malfunction Consult workshop (example)	* The corresponding restraint system is malfunctioning (→ page 40). ⚠ **WARNING** Risk of injury due to malfunctions in the restraint system Components in the restraint system may be activated unintentionally or not deploy as intended in an accident. ▶ Have the restraint system checked and repaired immediately at a qualified specialist workshop.
 Left windowbag malfunction Consult workshop (example)	* The corresponding restraint system is malfunctioning (→ page 40). ⚠ **WARNING** Risk of injury or fatal injury due to a malfunction in the windowbag The windowbag might be triggered unintentionally or might not be triggered at all in the event of an accident. ▶ Have the windowbag checked and repaired immediately at a qualified specialist workshop.


Display messages	Possible causes/consequences and ▶ Solutions
Push rear left seat belt extender back manually See Owner's Manual (example)	* The corresponding seat belt extender is malfunctioning. ▶ Slide the seat belt extender back into its original position manually. ▶ If the malfunction occurs again, consult a qualified specialist workshop.
Front passenger airbag disabled See Owner's Manual	* The front passenger airbag has been disabled even though an adult or a person of adult build is on the front passenger seat. If additional forces are applied to the seat, the weight the system detects may be too low. ⚠ **WARNING** - Risk of injury or even fatal injury when the front passenger airbag is disabled If the front passenger airbag is disabled, It will not be deployed in the event of an accident and cannot perform its intended protective function. A person in the front passenger seat could then, for example, come into contact with the vehicle interior, especially if the person is sitting too close to the dashboard. ▶ Be aware of the status of the front passenger airbag both before and during the journey. ▶ Stop the vehicle immediately in accordance with the traffic conditions. ▶ Make sure that no objects are trapped under the front passenger seat. ▶ Check the status of the automatic front passenger airbag actuation (→ page 52). ▶ If necessary, consult a qualified specialist workshop immediately.

Display messages	Possible causes/consequences and ▶ Solutions
Front passenger airbag enabled See Owner's Manual	* The front passenger airbag will be enabled while the vehicle is in motion in the following situations: • even when a child, a small adult or an object weighing less than the system weight threshold is located on the front passenger seat • even when the front passenger seat is not occupied The system may detect objects or forces that are adding to the weight applied to the seat. ⚠ **WARNING** Risk of injury or death when using a child restraint system while the front passenger airbag is enabled If you secure a child in a child restraint system on the front passenger seat and the front passenger airbag is enabled, the front passenger airbag can deploy in the event of an accident. The child could be struck by the airbag. ▶ Ensure, both before and during the journey, that the status of the front passenger airbag is correct. NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur. ▶ Stop the vehicle immediately in accordance with the traffic conditions. ▶ Make sure that no objects are trapped under the front passenger seat. ▶ Check the status of automatic front passenger airbag actuation (→ page 52). ▶ If necessary, consult a qualified specialist workshop immediately.

Display messages	Possible causes/consequences and ▶ Solutions
PRE-SAFE inoperative See Owner's Manual	* The PRE-SAFE® functions are malfunctioning. ▶ Consult a qualified specialist workshop.
PRE-SAFE impulse side inoperative See Owner's Manual	* The PRE-SAFE® Impulse Side system is malfunctioning or inoperative after having already been triggered. ▶ Consult a qualified specialist workshop.

Key

Display messages	Possible causes/consequences and ▶ Solutions
 Replace key	* Have the key replaced. ▶ Consult a qualified specialist workshop.
 Change key batteries	* The key battery is discharged. ▶ Replace the battery (→ page 83).

Display messages	Possible causes/consequences and ▶ Solutions
 Key not detected (white display message)	* The key is currently undetected. ▶ Change the location of the key in the vehicle. ▶ If the key is still not recognised, place it in the slot for starting with the key (→ page 193).
 Key not detected (red display message)	* The key cannot be detected and may no longer be in the vehicle. The key is no longer in the vehicle and you switch off the engine: • You can no longer start the engine. • You cannot centrally lock the vehicle. ▶ Ensure that the key is in the vehicle. If the key detection function has a malfunction due to a strong radio signal source: ▶ Stop the vehicle immediately in accordance with the traffic conditions. ▶ Place the key in the slot for starting the engine with the key (→ page 193).
Place the key in the marked space See Owner's Manual	* Key detection is malfunctioning. ▶ Change the location of the key in the vehicle. ▶ Place the key in the slot for starting the engine with the key (→ page 193).

Lights

Display messages	Possible causes/consequences and ▶ Solutions
 Left dipped beam (example)	* The corresponding light source is defective. ▶ Drive on carefully. ▶ Consult a qualified specialist workshop immediately. ⓘ LED light sources: the display message for the corresponding light appears only when all the light-emitting diodes in the light are faulty.
 Malfunction See Owner's Manual	* The exterior lighting is malfunctioning. ▶ Consult a qualified specialist workshop.
 Automatic driving lights inoperative	* The light sensor for automatic driving lights is malfunctioning. ▶ Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
 Active Light System inoperative	* The active headlamps are malfunctioning. ▶ Consult a qualified specialist workshop.
 Switch on headlamps	* You are driving without low-beam headlamps. ▶ Turn the light switch to the ≡D or AUTO position.
 Switch off lights	* You are leaving the vehicle and the lights are still switched on. ▶ Turn the light switch to the AUTO position.
DIGITAL LIGHT Functions limited	* The DIGITAL LIGHT system is malfunctioning. The lighting system will continue to work even without the functions of the DIGITAL LIGHT system. ▶ Consult a qualified specialist workshop.
MULTIBEAM LED Functions limited	* The MULTIBEAM LED system is malfunctioning. The lighting system will continue to work, but without the functions of the MULTIBEAM LED system. ▶ Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
Check dipped-beam setting (left/right-side traffic)	* The type of traffic has been selected manually. ▶ Check the setting and change it manually if necessary (→ page 168).
Dipped-beam setting (left/right-side traffic) Manual adjustment only	* The automatic headlamp conversion for left-hand/right-hand traffic has malfunctioned. ▶ Change the headlamps over manually (→ page 168).
Adaptive Highbeam Assist Plus currently unavailable See Owner's Manual	* Adaptive Highbeam Assist Plus is temporarily unavailable. Once the cause of the problem is no longer present, the system will be available again. The Adaptive Highbeam Assist Plus available again display message will appear. ▶ Drive on. ▶ Operate the high beam manually until Adaptive High Beam Assist Plus is available again.
Adaptive Highbeam Assist Plus inoperative	* Adaptive Highbeam Assist Plus is malfunctioning. ▶ Stop the vehicle in accordance with the traffic conditions and restart the engine. ▶ If the display message still appears, consult a qualified specialist workshop.
Hazard warning lamp system Malfunction	* The hazard warning lamp switch is malfunctioning. ▶ Consult a qualified specialist workshop.

Climate control

Display messages	Possible causes/consequences and ▶ Solutions
 inoperative See Owner's Man.	* The stationary heater is temporarily malfunctioning. ▶ When the vehicle is stationary on a level surface and the engine has cooled down, make up to four attempts to switch on the stationary heater, waiting several minutes between each attempt. ▶ If the stationary heater does not switch on, consult a qualified specialist workshop. ⓘ The stationary heater cannot be activated if the outside temperature is above 15 °C.
 inoperative Battery low	* The on-board electrical system voltage is too low. The stationary heater has switched itself off. ▶ Drive an extended distance until the battery has reached a sufficient charge level again.
 Inoperative Refuel vehicle	* There is too little fuel in the fuel tank. The stationary heater cannot be switched on. ▶ Refuel the vehicle.


Vehicle

Display messages	Possible causes/consequences and ▶ Solutions
	* The driver display is inoperative due to a failed software update. The display message is shown every time the engine is started. **⚠ WARNING** Risk of accident due to a driver display malfunction If the driver display has failed or malfunctioned, the function restrictions applying to safety relevant systems are not visible. The operating safety of your vehicle may be impaired. ▶ Drive on carefully. ▶ Have the vehicle checked immediately at a qualified specialist workshop. If the operating safety of your vehicle is impaired, park the vehicle immediately and safely. Contact a qualified specialist workshop. If the driver display fails, you may not recognise function restrictions affecting systems relevant to safety or the speed display, for example. The operating safety of the vehicle may be impaired (→ page 299). ▶ Have the vehicle checked by a qualified specialist workshop immediately.

Display messages	Possible causes/consequences and ▶ Solutions
 Vehicle is operational Switch off ignition before exiting	* You are leaving the vehicle in a ready-to-drive state. ▶ When you leave the vehicle, switch off the ignition, secure the vehicle against rolling away and take the key with you. ▶ If you do not leave the vehicle, switch off the electrical consumers, e.g. the seat heating. Otherwise, the 12 V battery may discharge and it will then be possible to start the vehicle only with the aid of a second battery (starting assistance).
 Steering malfunction Drive carefully Visit workshop	* A power steering malfunction has occurred. Steering characteristics may be impaired as a result. ▶ Drive on carefully. ▶ Consult a qualified specialist workshop.
 Steering malfunction Increased physical effort See Owner's Manual	* The power steering assistance is malfunctioning. **WARNING** Risk of an accident due to altered steering characteristics If the power assistance of the steering fails partially or completely, you will need to use more force to steer. ▶ If safe steering is possible, drive on carefully. ▶ Visit or consult a qualified specialist workshop immediately.

Display messages	Possible causes/consequences and ▶ Solutions
 Steering malfunction Stop immediately See Owner's Manual	* The steering is malfunctioning. Steering capability is significantly impaired. ⚠ **WARNING** Risk of accident if steering capability is impaired If the steering does not function as intended, the vehicle's operating safety is jeopardised. ▶ Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ▶ Consult a qualified specialist workshop.
 Rear axle steering currently malfunctioning	* The rear axle steering is temporarily unavailable. The turning circle may become wider. ▶ Stop the vehicle in accordance with the traffic conditions and restart the engine. If the display message does not disappear: ▶ Drive on carefully. ▶ Consult a qualified specialist workshop.
 Rear axle steering Malfunction Visit workshop	* The rear axle steering is malfunctioning. The rear axle has no steering capability. The steering wheel may be tilted when you drive in a straight line. ▶ Adapt your speed and drive on carefully. ▶ Consult a qualified specialist workshop immediately.

Display messages	Possible causes/consequences and ▶ Solutions
 Rear axle steering Malfunction Stop immediately	* The rear axle steering is malfunctioning. The rear axle has no steering capability. The steering wheel may tilt considerably when you drive in a straight line. Depending on the steering wheel's tilting position, the steering wheel will also vibrate and a continuous warning tone will sound. **⚠ WARNING** Risk of accident if steering capability is impaired If the steering does not function as intended, the vehicle's operating safety is jeopardised. ▶ Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ▶ Consult a qualified specialist workshop. ▶ When stopping, bear the enlarged vehicle width in mind.
Snow chain mode Maximum speed exceeded	* The maximum permissible speed for snow chain mode has been exceeded. ▶ Drive more slowly.
Active bonnet malfunction See Owner's Manual	* The active bonnet (pedestrian protection) is malfunctioning or inoperative after having already been triggered. ▶ Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
	* At least one door is open. ▶ Close all doors.
	* The bonnet is open. ⚠ **WARNING** Risk of accident due to driving with the bonnet unlocked The bonnet may open and block your view. ▶ Never release the bonnet when driving. ▶ Before every trip, ensure that the engine bonnet is locked. ▶ Stop the vehicle immediately, paying attention to road and traffic conditions. ▶ Close the bonnet.
	* The boot lid is open. ⚠ **DANGER** Risk of exhaust gas poisoning Combustion engines emit poisonous exhaust gases such as carbon monoxide. Exhaust gases can enter the vehicle interior if the boot lid is open when the engine is running, especially if the vehicle is in motion. ▶ Always switch off the engine before opening the boot lid. ▶ Never drive with the boot lid open.

Display messages	Possible causes/consequences and ▶ Solutions
	▶ Close the boot lid.
Anti-theft alarm system Malfunction	* The anti-theft alarm system is malfunctioning. ▶ Consult a qualified specialist workshop.
Ambient light warning support inoperative	* The ambient lighting may not provide full visual warning support. ▶ Lock the vehicle and unlock it again after a few minutes. ▶ If the display message appears regularly, contact a qualified specialist workshop.
 Top up washer fluid	* The washer fluid level in the washer fluid reservoir has dropped below the minimum. ▶ Top up the washer fluid (⟶ page 340).
 Intensive cleaning activated for 30 s	* Intensive cleaning of the windscreen has been activated (⟶ page 171).

Engine

Display messages	Possible causes/consequences and ▶ Solutions
To switch off the engine, press the Start/Stop button for at least 3 seconds or 3 times.	* You have pressed the start/stop button while the vehicle is in motion. ▶ Information about switching off the engine while driving (→ page 193).
 Top up coolant See Owner's Manual	* The coolant level is too low. ! NOTE Engine damage due to insufficient coolant ▶ Avoid long journeys with insufficient coolant. ▶ Add coolant (→ page 340). ▶ Have the engine cooling system checked at a qualified specialist workshop.
 Coolant Stop vehicle Switch engine off	* The coolant is too hot. ▶ Stop the vehicle immediately in accordance with the traffic conditions and switch off the engine.

Display messages	Possible causes/consequences and ▶ Solutions
	⚠ WARNING Risk of burns when opening the bonnet If you open the bonnet when the engine has overheated or when there is a fire in the engine compartment, the following situations may occur: • You could come into contact with hot gases. • You could come into contact with other hot, escaping operating fluids. ▶ Before opening the bonnet, allow the engine to cool down. ▶ In the event of a fire in the engine compartment, keep the bonnet closed and call the fire service. ▶ Wait until the engine has cooled down. ▶ Make sure that the air supply to the radiator is not obstructed. ▶ Avoiding high loads on the engine, drive to the nearest qualified specialist workshop. In doing so, ensure that the coolant temperature display remains below 120°C.
	* The fan motor is defective. ▶ Avoiding high loads on the engine, drive to the nearest qualified specialist workshop. In doing so, ensure that the coolant temperature display remains below 120 °C.

Display messages	Possible causes/consequences and ▶ Solutions
 Reserve fuel level	* The fuel supply has dropped into the reserve range. ▶ Refuel.

Transmission

Display messages	Possible causes/consequences and ▶ Solutions
Only select P when vehicle is stationary	* It is possible to select the park position P only if the vehicle is stationary. ▶ To stop, depress the brake pedal. ▶ Shift the transmission to park position P when the vehicle is stationary.
Apply brake to deselect P position	* You have attempted to shift the transmission out of park position P and into another transmission position. ▶ Depress the brake pedal. ▶ Select transmission position D, R or neutral N.
Apply brake and start engine to shift out of P or N	* You have attempted to shift the transmission out of park position P or neutral N and into another transmission position. ▶ Depress the brake pedal. ▶ Start the engine.

Display messages	Possible causes/consequences and ▶ Solutions
	▶ Change the transmission position.
Apply brake to engage D or R	* You have attempted to select transmission position D or R. ▶ Depress the brake pedal. ▶ Select transmission position D or R.
Apply brake to engage R	* You have attempted to select transmission position R. ▶ Depress the brake pedal. ▶ Select transmission position R.
Apply parking brake to park Visit workshop	* A malfunction has occurred in the emergency power supply to park position P. ▶ Consult a qualified specialist workshop. ▶ Until then, always select park position P manually before you switch off the engine. ▶ Before leaving the vehicle, apply the electric parking brake.
Risk of vehicle rolling away Driver's door open Transmission not in P	* The driver's door is not fully closed and transmission position D, R or neutral N is selected. The vehicle may roll away. ▶ Select park position P when switching off the vehicle.
Risk of vehicle rolling away Apply parking brake to park	* The transmission is malfunctioning. Park position P cannot be selected. ▶ Park the vehicle safely. ▶ Use the electric parking brake to secure the vehicle against rolling away.

Display messages	Possible causes/consequences and ▶ Solutions
	▶ On gradients, turn the front wheels so that the vehicle will roll towards the kerb if it starts moving.
Risk of vehicle rolling away N activated manually No automatic switch to P	* While the vehicle was at a standstill or driving at very low speed, neutral [N] was engaged with the engine running or the ignition switched on. **! NOTE** Damage to the vehicle due to it rolling away When the ignition is being switched off or the driver's door opened, automatic engagement of park position [P] is deactivated. The vehicle may roll away. ▶ Be ready to brake. ▶ Do not leave the vehicle unattended. ▶ Depress the brake pedal until the vehicle is stationary. ▶ Engage park position [P] when the vehicle is stationary with the brake pedal depressed. ▶ To continue driving with the brake pedal depressed, select transmission position [D] or [R].
N automatically activated Please engage transmission position again	* Neutral [N] was automatically engaged when the vehicle was rolling or being driven. ⓘ When you open the driver's door in neutral [N], park position [P] will be engaged automatically. ▶ Depress the brake pedal until the vehicle comes to a standstill. ▶ Engage park position [P] when the vehicle is stationary with the brake pedal depressed. ▶ To continue driving with the brake pedal depressed, select transmission position [D] or [R].

Display messages	Possible causes/consequences and ▶ Solutions
Reversing not poss. Consult workshop	* The transmission is malfunctioning. The transmission position R cannot be selected. ▶ Consult a qualified specialist workshop.
Transmission Malfunction Stop	* The transmission is malfunctioning. The transmission shifts to neutral N automatically. ▶ Stop the vehicle immediately in accordance with the traffic conditions. ▶ Depress the brake pedal. ▶ Engage park position P. ▶ Consult a qualified specialist workshop.
Consult workshop without changing the transmission position	* The transmission is malfunctioning. It is no longer possible to change the transmission position. ▶ If transmission position D is selected, consult a qualified specialist workshop and do not change the transmission position. ▶ For all other transmission positions, park the vehicle safely. ▶ Consult a qualified specialist workshop.
Stop vehicle Leave engine running Wait Transmission cooling	* The transmission is overheating. Pulling away may be temporarily impaired or not possible. ▶ Stop the vehicle immediately in accordance with the traffic conditions. Do not continue driving. ▶ Leave the engine running. ▶ Wait until the display message disappears before pulling away.
Auxiliary battery malfunction	* There is a malfunction in the auxiliary battery. ▶ Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
	▶ Until then, always select park position P manually before you switch off the engine. ▶ Before leaving the vehicle, apply the electric parking brake.

Brakes

Display messages	Possible causes/consequences and ▶ Solutions
 Parking brake See Owner's Manual	* The yellow (P) indicator lamp is lit. The electric parking brake is malfunctioning. **To apply:** ▶ Switch the ignition off and switch it back on. ▶ Apply the electric parking brake manually (→ page 217). If it is not possible to apply the electric parking brake: ▶ Consult a qualified specialist workshop. ▶ Where necessary, also secure the parked vehicle against rolling away. * The yellow (P) indicator lamp and the red (P) indicator lamp are lit. The electric parking brake is malfunctioning. **To release:** ▶ Switch the ignition off and switch it back on. ▶ Release the electric parking brake manually (→ page 217). or

Display messages	Possible causes/consequences and ▶ Solutions
	▶ Release the electric parking brake automatically (→ page 216). If it is still not possible to release the electric parking brake: ▶ Do not continue driving. Consult a qualified specialist workshop. * The yellow Ⓟ indicator lamp is lit and the red Ⓟ indicator lamp is flashing. The electric parking brake is malfunctioning. The electric parking brake could not be applied or released. ▶ Switch the ignition off and switch it back on. **To apply:** ▶ Release and then apply the electric parking brake manually (→ page 217). **To release:** ▶ Apply and then release the electric parking brake manually. If it is not possible to apply the electric parking brake or the red Ⓟ indicator lamp continues to flash: ▶ Do not continue driving. Consult a qualified specialist workshop. ▶ Where necessary, also secure the parked vehicle against rolling away. * The yellow Ⓟ indicator lamp is lit and the red Ⓟ indicator lamp flashes for approximately ten seconds after the electric parking brake has been applied or released. It then remains lit or goes out. The electric parking brake is malfunctioning. **If the charge level is too low:**

Display messages	Possible causes/consequences and ▶ Solutions
	▶ Charge the 12 V battery. **To apply:** ▶ Apply the electric parking brake manually. If it is not possible to apply the electric parking brake: ▶ Consult a qualified specialist workshop. ▶ Where necessary, also secure the parked vehicle against rolling away. **To release:** ▶ If the conditions for automatic release are fulfilled and the electric parking brake is not released automatically, release the electric parking brake manually (→ page 217). If it is still not possible to release the electric parking brake: ▶ Do not continue driving. Consult a qualified specialist workshop.
 Release parking brake	* The red (P) indicator lamp is flashing. The electric parking brake is applied while you are driving: • A condition for automatic release of the electric parking brake has not been fulfilled (→ page 216). • You are performing emergency braking using the electric parking brake (→ page 217). ▶ Check the conditions for automatic release of the electric parking brake.

Display messages	Possible causes/consequences and ▶ Solutions
	▶ Release the electric parking brake manually.
 Turn on the ignition to release the parking brake	* The red (P) indicator lamp is lit. You have attempted to release the electric parking brake with the ignition switched off. ▶ Switch on the ignition.
 Brake immediately	* A malfunction has occurred while the HOLD function was activated. A horn may also sound at regular intervals. You cannot start the engine. ▶ Immediately depress the brake pedal firmly until the display message disappears. You can restart the engine.
 Check brake fluid level	* There is insufficient brake fluid in the brake fluid reservoir. ⚠ **WARNING** Risk of an accident due to low brake fluid level If the brake fluid level is too low, the braking effect and the braking characteristics may be impaired. ▶ Stop the vehicle as soon as possible, paying attention to road and traffic conditions. Do not continue driving. ▶ Consult a qualified specialist workshop. ▶ Do not top up the brake fluid.


Display messages	Possible causes/consequences and ▶ Solutions
 Check brake pads See Owner's Manual	* The brakepads have reached the wear limit. ▶ Consult a qualified specialist workshop.

Driving systems

Display messages	Possible causes/consequences and ▶ Solutions
 Off	* The HOLD function is deactivated because the vehicle is slipping or a condition for activation is not fulfilled. ▶ Reactivate the HOLD function later or check the activation conditions for the HOLD function (→ page 224).
 ATTENTION ASSIST inoperative	* ATTENTION ASSIST is malfunctioning. ▶ Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
 ATTENTION ASSIST: Take a break!	* ATTENTION ASSIST has detected fatigue or an increasing lack of concentration on the part of the driver (→ page 225). ▶ If necessary, take a break.
 ATTENTION ASSIST Micro-sleep Take a break!	* ATTENTION ASSIST has detected indicators of microsleep (→ page 225). A warning tone will also sound. ▶ It is recommended that you take a break immediately. ▶ Press the left-hand Touch Control and acknowledge the display message.
 --- km/h	* The limiter can temporarily not be engaged. Once the cause of the problem is no longer present, the system will be available again.
 passive	* If you depress the accelerator pedal beyond the point of resistance (kickdown), the limiter will be switched to passive mode (→ page 227).

Display messages	Possible causes/consequences and ▶ Solutions
Limiter inoperative	* The limiter is malfunctioning. ▶ Consult a qualified specialist workshop.
 - - - km/h	* Active Distance Assist DISTRONIC cannot be activated as not all activation conditions are fulfilled. ▶ Comply with the activation conditions of Active Distance Assist DISTRONIC (→ page 231).
 suspended	* If you depress the accelerator pedal beyond the Active Distance Assist DISTRONIC setting, the system will switch to passive mode (→ page 228).
 Off	* Active Distance Assist DISTRONIC was deactivated. If a warning tone also sounds, Active Distance Assist DISTRONIC has deactivated automatically (→ page 231).
Active Distance Assist currently unavailable See Owner's Manual	* Active Distance Assist DISTRONIC is temporarily unavailable. The ambient conditions are outside the system limits (→ page 228). As soon as the ambient conditions are within the system limits, the system will become available again. ▶ Drive on.

Display messages	Possible causes/consequences and ▶ Solutions
Active Distance Assist inoperative	* Active Distance Assist DISTRONIC is malfunctioning. Other driving systems and driving safety systems may also be malfunctioning. ▶ Consult a qualified specialist workshop.
Active Distance Assist available again	* Active Distance Assist DISTRONIC is operational again. ▶ Switch on Active Distance Assist DISTRONIC (→ page 231).
Speed limit (winter tyres) XXX km/h	* You have reached the maximum permissible stored speed for winter tyres. It is not possible to exceed this speed.
 Maximum speed exceeded	* You have exceeded the maximum permissible speed (for certain countries only). ▶ Drive more slowly.
Active Steering Assist currently unavailable See Owner's Manual	* Active Steering Assist is temporarily unavailable. The ambient conditions are outside the system limits (→ page 236). As soon as the ambient conditions are within the system limits, the system will become available again. ▶ Drive on. ▶ Check the tyre pressure if necessary.

Display messages	Possible causes/consequences and ▶ Solutions
Active Steering Assist inoperative	* Active Steering Assist is malfunctioning. Active Distance Assist DISTRONIC remains available. ▶ Consult a qualified specialist workshop.
Active Steering Assist currently unavailable due to multiple emergency stops	* Active Steering Assist is temporarily unavailable due to multiple emergency stops. ▶ Take over the steering and stop in accordance with the traffic conditions. ▶ Switch the ignition off and switch it back on. Active Steering Assist is available once more.
 Beginning emergency stop	* Your hands are not on the steering wheel. The Active Steering Assist will initiate an emergency stop (→ page 236). ▶ Put your hands on the steering wheel. Information on cancelling an emergency stop (→ page 238).
	* Active Steering Assist has reached the system limits (→ page 236). You have not steered independently for a considerable period of time. ▶ Take over the steering and drive on in accordance with the traffic conditions.
Active Emergency Stop Assist currently unavailable See Owner's Manual	* Active Emergency Stop Assist is temporarily unavailable. ▶ Consult a qualified specialist workshop.
Active Emergency Stop Assist inoperative	* Active Emergency Stop Assist is malfunctioning. ▶ Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
Active Lane Change Assist currently unavailable See Owner's Manual	* Active Lane Change Assist is temporarily unavailable. The ambient conditions are outside the system limits (→ page 239). As soon as the ambient conditions are within the system limits, the system will become available again. ▶ Drive on.
Active Lane Change Assist inoperative	* Active Lane Change Assist is malfunctioning. ▶ Consult a qualified specialist workshop.
Active Stop-and-Go Assist currently unavailable see Owner's Manual	* Active Stop-and-Go Assist is temporarily unavailable. Active Distance Assist DISTRONIC and Active Steering Assist are still available. The ambient conditions are outside the system limits (→ page 228). As soon as the ambient conditions are within the system limits, the system will become available again. ▶ Drive on.
Active Stop-and-Go Assist inoperative See Owner's Manual	* Active Stop-and-Go Assist is malfunctioning. Active Stop-and-Go Assist has been deactivated. Active Distance Assist DISTRONIC and Active Steering Assist are still available. ▶ Consult a qualified specialist workshop.
Traffic Sign Assist currently unavailable See Owner's Manual	* Traffic Sign Assist is temporarily unavailable. Once the cause of the problem is no longer present, the system will be available again. ▶ Drive on.

Display messages	Possible causes/consequences and ▶ Solutions
Traffic Sign Assist inoperative	* Traffic Sign Assist is malfunctioning. ▶ Stop the vehicle in accordance with the traffic conditions and restart the engine. ▶ If the display message still appears, consult a qualified specialist workshop.
Active Blind Spot Assist currently unavailable See Owner's Manual	* Active Blind Spot Assist is temporarily unavailable. The system limits have been reached (→ page 250). Once the cause of the problem is no longer present, the system will be available again. ▶ Drive on. or ▶ If the display message does not disappear, stop the vehicle in accordance with the traffic conditions and restart the engine.
Active Blind Spot Assist inoperative	* Active Blind Spot Assist is malfunctioning. ▶ Consult a qualified specialist workshop.
Active Lane Keeping Assist currently unavailable See Owner's Manual	* Active Lane Keeping Assist is temporarily unavailable. The ambient conditions are outside the system limits (→ page 254). As soon as the ambient conditions are within the system limits, the system will become available again. ▶ Drive on.
Active Lane Keeping Assist inoperative	* Active Lane Keeping Assist is malfunctioning. ▶ Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
 Currently unavailable Radar dirty	* Front and corner radar sensors and/or lidar (hereafter "sensors") are malfunctioning. Possible causes: • The sensors are dirty • Heavy rain or snow • Extended country driving without other traffic, e.g. in the desert Driving systems and driving safety systems may be malfunctioning or temporarily unavailable. The brake system, steering and drive system will continue to function normally. ▶ Drive on. Once the causes of the problem are no longer present, the driving systems and driving safety systems will be available again and the corresponding symbols will be switched off. If the display message does not disappear: ▶ Stop the vehicle in accordance with the traffic conditions. ▶ Clean all sensor covers from outside (→ page 219). ▶ Restart the engine.

Display messages	Possible causes/consequences and ▶ Solutions
 currently unavailable Camera dirty	* The view of the multifunction camera is restricted. Possible causes: • Dirt on the windscreen in the field of vision of the multifunction camera • Heavy rain, snow or fog • Mist on the inside of the windscreen: in certain weather conditions, mist can form on the inside of the windscreen during cold times of year in particular. ⓘ This mist on the windscreen is removed automatically within a short time with the aid of a heater. The restriction is temporary. Driving systems and driving safety systems may be malfunctioning or temporarily unavailable. The brake system, steering and drive system will continue to function normally. ▶ Drive on. Once the causes of the problem are no longer present, the driving systems and driving safety systems will be available again and the corresponding symbols will be switched off. If the display message does not disappear: ▶ Stop the vehicle in accordance with the traffic conditions. ▶ Clean the windscreen, especially in the position of the multifunction camera (→ page 219). ▶ Restart the engine.
Driver camera view currently restricted See Owner's Manual	* The visibility of the driver camera is reduced. Possible causes: • Objects or stickers are projecting into the driver camera's field of vision.


Display messages	Possible causes/consequences and ▶ Solutions
	• The driver camera is dirty. ▶ Keep the driver camera's field of vision free. ▶ Clean the driver camera if necessary. Please comply with the notes on caring for the interior (→ page 346).
Change steering wheel/ seat position until 6 dots are visible on the upper edge of the screen	* The driver camera cannot capture your line of sight. ▶ Change the steering wheel and seat position until six dots are visible on the top edge of the screen.
Driver camera inoperative See Owner's Manual	* The driver camera is malfunctioning. ▶ Consult a qualified specialist workshop.
 Fault Drive at max. 80 km/h	* AIRMATIC is functioning only to a limited extent. The vehicle's handling characteristics may be affected. **NOTE** The tyres on the front axle or the fenders could be damaged by large steering movements ▶ Avoid large steering movements while driving and listen for scraping sounds. ▶ If you hear scraping sounds, pull over and stop the vehicle in accordance with the traffic conditions, and set a higher vehicle level if possible. ▶ Drive in a manner appropriate for the current level, but do not exceed 80 km/h. ▶ Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
 Max. speed 20km/h	* AIRMATIC is functioning only to a limited extent. The vehicle's handling characteristics may be affected. ▶ The current level is too high. Do not drive at speeds greater than 20 km/h. ▶ Consult a qualified specialist workshop.
 STOP Vehicle level too low	* You have pulled away despite the vehicle level being too low. ▶ Stop the vehicle in accordance with the traffic conditions. The vehicle will be raised to the selected vehicle level. ▶ Wait until the display message disappears before pulling away. If the display message does not disappear and a warning tone also sounds, AIRMATIC is malfunctioning: ▶ Do not drive at speeds greater than 80 km/h and consult a qualified specialist workshop immediately. **NOTE** The tyres on the front axle or the fenders could be damaged by large steering movements ▶ Avoid large steering movements while driving and listen for scraping sounds. ▶ If you hear scraping sounds, pull over and stop the vehicle in accordance with the traffic conditions, and set a higher vehicle level if possible. ▶ Set a higher vehicle level (⟶ page 257). Depending on the malfunction, the vehicle will be raised.

Display messages	Possible causes/consequences and ▶ Solutions
 Vehicle rising Please wait	* The vehicle level is too low. The vehicle will be raised to the selected vehicle level. ▶ Wait until the display message disappears before pulling away.
Limited availability of Active Parking Assist manoeuvring assistant See Owner's Manual	* Active Parking Assist's manoeuvring assistant is temporarily unavailable or only partially available. ▶ Clean all sensors of the parking and camera system (→ page 344). ▶ If the display message still appears, consult a qualified specialist workshop.
PARKTRONIC inoperative See Owner's Manual	* Parking Assist PARKTRONIC is malfunctioning. Once the cause of the problem is no longer present, the system will be available again. ▶ Continue driving while paying attention to the vehicle's surroundings. or ▶ Stop the vehicle in accordance with the traffic conditions and restart the engine. ▶ If the display message still appears, consult a qualified specialist workshop.
Active Parking Assist and PARKTRONIC inoperative See Owner's Manual	* Active Parking Assist and Parking Assist PARKTRONIC are malfunctioning. Once the cause of the problem is no longer present, the system will be available again. ▶ Continue driving while paying attention to the vehicle's surroundings. or


Display messages	Possible causes/consequences and ▶ Solutions
	▶ Stop the vehicle in accordance with the traffic conditions and restart the engine. ▶ If the display message still appears, consult a qualified specialist workshop.

Driving safety systems

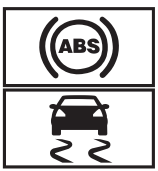Display messages	Possible causes/consequences and ▶ Solutions
 currently unavailable See Owner's Manual	* ABS and ESP® are temporarily unavailable. Other driving systems and driving safety systems (e.g. BAS) may also be temporarily unavailable. The brake system will continue to operate normally. Braking distance may increase in an emergency braking situation. ⚠ **WARNING** Risk of skidding if ABS and ESP® are malfunctioning The wheels may lock during braking and ESP® does not perform any vehicle stabilisation. The steerability and braking characteristics are heavily impaired and the braking distance may increase. In addition, other driving safety systems are switched off. ▶ Drive carefully on a suitable stretch of road, making slight steering movements at a speed above 30 km/h. ▶ If the display message does not disappear, consult a qualified specialist workshop immediately. Drive carefully.

Display messages	Possible causes/consequences and ▶ Solutions
 inoperative See Owner's Manual	* ABS and ESP® are malfunctioning. Other driving systems and driving safety systems (e.g. BAS) may also be malfunctioning. The brake system will continue to operate normally. Braking distance may increase in an emergency braking situation. **⚠ WARNING** Risk of skidding if ABS and ESP® are malfunctioning The wheels may block during braking and ESP® does not perform any vehicle stabilization. The steerability and braking characteristics are heavily impaired and the braking distance may increase. In addition, other driving safety systems are switched off. ▶ Drive on carefully. ▶ Have ABS and ESP® checked immediately at a qualified specialist workshop.
 currently unavailable See Owner's Manual	* ESP® is temporarily unavailable. Other driving systems and driving safety systems (e.g. BAS) may also be malfunctioning. **⚠ WARNING** Risk of skidding if ESP is malfunctioning® If ESP® is malfunctioning, ESP® cannot carry out vehicle stabilisation. In addition, other driving safety systems are switched off. ▶ Drive carefully on a suitable stretch of road, making slight steering movements at a speed above 30 km/h.

Display messages	Possible causes/consequences and ▶ Solutions
	▶ If the display message does not disappear, consult a qualified specialist workshop immediately. Drive carefully.
 inoperative See Owner's Manual	* ESP® is malfunctioning. Other driving systems and driving safety systems (e.g. BAS) may also be malfunctioning. The brake system will continue to operate normally. Braking distance may increase in an emergency braking situation. ⚠ **WARNING** Risk of skidding if ESP® is malfunctioning If ESP® is malfunctioning, ESP® cannot carry out vehicle stabilisation. In addition, other driving safety systems are switched off. ▶ Drive on carefully. ▶ Have ESP® checked at a qualified specialist workshop.

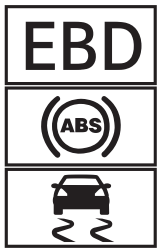Display messages	Possible causes/consequences and ▶ Solutions
 inoperative See Owner's Manual	* EBD, ABS and ESP® are malfunctioning. Other driving systems and driving safety systems (e.g. BAS) may also be malfunctioning. **⚠ WARNING** Risk of skidding if EBD, ABS and ESP® are malfunctioning The wheels may block during braking and ESP® does not perform any vehicle stabilization. The steerability and braking characteristics are heavily impaired and the braking distance may increase. In addition, other driving safety systems are switched off. ▶ Drive on carefully. ▶ Have the brake system checked immediately at a qualified specialist workshop.
Active Brake Assist Functions currently limited See Owner's Manual	* **Vehicles with the Driving Assistance Package or Blind Spot Assist:** Active Brake Assist with cross-traffic function, Evasive Steering Assist or PRE-SAFE® PLUS are temporarily unavailable or only partially available. The ambient conditions are outside the system limits (⟶ page 242). ▶ Drive on. As soon as the ambient conditions are within the system limits, the system will become available again. ▶ If the display message does not disappear, stop the vehicle in accordance with the traffic conditions and restart the engine.


Display messages	Possible causes/consequences and ▶ Solutions
Active Brake Assist Functions limited See Owner's Manual	* **Vehicles with the Driving Assistance Package:** Active Brake Assist with cross-traffic function, Evasive Steering Assist or PRE-SAFE® PLUS are temporarily unavailable or only partially available. ▶ Consult a qualified specialist workshop.

Mercedes me connect

Display messages	Possible causes/consequences and ▶ Solutions
Device detected at diagnostics connection See Owner's Manual	* The vehicle functions for fault detection are restricted. At least one of the main functions of the Mercedes me connect system is malfunctioning. ▶ Observe the notes on the diagnostics connection (→ page 31). ▶ Consult a qualified specialist workshop.
 Inoperative	* At least one of the main functions of the Mercedes me connect system or of the SOS emergency call system is malfunctioning. ▶ Consult a qualified specialist workshop.

Battery

Display messages	Possible causes/consequences and ▶ Solutions
 12 V on-board electrical system Visit workshop	* The 12 V on-board electrical system is malfunctioning. ▶ Consult a qualified specialist workshop immediately.
 Stop vehicle See Owner's Manual	* The 12 V battery is no longer being charged and the charge level is too low. **!** **NOTE** Possible engine damage if you continue driving ▶ Do not continue driving under any circumstances. ▶ Consult a qualified specialist workshop. ▶ Stop the vehicle immediately in accordance with the traffic conditions. Do not continue driving. ▶ Switch off the engine. ▶ Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
 Switch on the engine to charge the 12 V battery	* The engine is off and the charge level of the 12 V battery is too low. ▶ Switch off electrical consumers that are not required. To charge the 12 V battery: ▶ Leave the engine running for a few minutes, or drive an extended distance.
 Stop the vehicle Leave the engine running to charge the 12 V battery	* The 12 V battery charge level is too low. ▶ Stop the vehicle immediately in accordance with the traffic conditions. Do not continue driving. ▶ Leave the engine running. ▶ If the display message disappears: drive on. ▶ If the display message does not disappear: consult a qualified specialist workshop.
 Stop vehicle See Owner's Manual	* The 48 V on-board electrical system is malfunctioning. ▶ Stop the vehicle immediately in accordance with the traffic conditions. Do not continue driving. ▶ Switch off the engine. ▶ Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
 48 V battery See Owner's Manual	* The 48 V on-board electrical system has function restrictions. Comfort functions may be restricted. ▶ Consult a qualified specialist workshop immediately.
 Please wait 48 V battery charging	* The 48 V battery is discharged. You have switched on the ignition while the 12 V battery was being charged with a suitable charger or while another vehicle was providing starting assistance. The discharged 48 V battery is charged automatically via the voltage converter. After a few minutes, the driver display will show the Motor can be started again display message. ▶ Start the engine. ▶ Drive the vehicle for a while to charge the 12 V battery and the 48 V battery after disconnecting the charger from the vehicle. If the Motor can be started again display message does not appear after a few minutes: ▶ Try to start the engine again. ▶ If the engine does not start, consult a qualified specialist workshop.
Cannot start engine See Owner's Manual	* The charge level of the 48 V battery is too low. You can no longer start the engine. ▶ Switch off electrical consumers that are not required.

Display messages	Possible causes/consequences and ▶ Solutions
	▶ Connect a suitable charger approved for Mercedes-Benz with sufficient charge output to the jump-start connection point of the 12 V battery (→ page 359). The 48 V battery is charged via the voltage converter in the vehicle.
Motor can be started again	* The 48 V battery has been charged automatically via the voltage converter. ▶ Start the engine and drive the vehicle for a while to charge the 12 V battery and the 48 V battery.

Tyre pressure monitor

Display messages	Possible causes/consequences and ▶ Solutions
Tyre press. monitor currently unavailable	* There is interference from a powerful radio signal source. As a result, no signals from the tyre pressure sensors are being received. The tyre pressure monitoring system is temporarily unavailable. The tyre pressure monitoring system will restart automatically as soon as the cause has been rectified. ▶ Drive on.
Tyre press. monitor inoperative	* The tyre pressure monitoring system is malfunctioning. ⚠ **WARNING** There is a risk of an accident if the tyre pressure monitoring system is malfunctioning The tyre pressure monitoring system cannot issue a warning if there is pressure loss in one or more of the tyres. Tyres with insufficient tyre pressure may impair the driving characteristics as well as steering and braking. ▶ Have the tyre pressure monitoring system checked at a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
Tyre press. monitor inoperative No wheel sensors	* The wheels fitted do not have suitable tyre pressure sensors. The tyre pressure monitoring system is deactivated. ▶ Fit wheels with suitable tyre pressure sensors.
 Wheel sensor(s) missing	* There is no signal from the tyre pressure sensor of one or more wheels. No pressure value is displayed for the affected tyre. ▶ Have the faulty tyre pressure sensor replaced at a qualified specialist workshop.
 Check tyre(s)	* The tyre pressure in one or more tyres has dropped significantly. The wheel position is displayed. A warning tone also sounds. ⚠ **WARNING** Risk of an accident due to insufficient tyre pressure • The tyres can burst. • The tyres can wear excessively and/or unevenly. • The driving characteristics as well as the steering and braking may be greatly impaired. You could then lose control of the vehicle. ▶ Observe the recommended tyre pressures. ▶ Adjust the tyre pressure if necessary. ▶ Stop the vehicle in accordance with the traffic conditions. ▶ Check the tyre pressure (→ page 370) and the tyres.

Display messages	Possible causes/consequences and ▶ Solutions
 Rectify tyre pressure	* The tyre pressure is too low in at least one of the tyres, or the difference in tyre pressure between the individual wheels is too great. ▶ Check the tyre pressure and add air, if necessary. ▶ When the tyre pressure is correct, restart the tyre pressure monitoring system (⟶ page 372).
 Warning tyre defect	* The tyre pressure in one or more tyres has dropped suddenly. The wheel position will be displayed. ⚠ **WARNING** Risk of an accident from driving with a flat tyre • The tyres can overheat and be damaged. • The driving characteristics as well as the steering and braking characteristics may be greatly impaired. You could then lose control of the vehicle. ▶ Do not drive with a flat tyre. ▶ Do not exceed the maximum permissible driving distance in emergency mode and the maximum permissible speed with a flat MOExtended tyre. ▶ Observe the notes on flat tyres. Notes in the event of a flat tyre (⟶ page 350). ▶ Stop the vehicle in accordance with the traffic conditions. ▶ Check the tyres.

Display messages	Possible causes/consequences and ▶ Solutions
Tyre(s) overheated	* At least one tyre is overheating. The affected tyres are displayed in red. At temperatures close to the limit value, the tyres are displayed in yellow. ⚠ **WARNING** Risk of an accident from driving with overheated tyres Overheated tyres can burst. ▶ Reduce speed so that the tyres cool down.
Reduce speed	* At least one tyre is overheating. The affected tyres are displayed in red. At temperatures close to the limit value, the tyres are displayed in yellow. ⚠ **WARNING** Risk of an accident from driving with overheated tyres Overheated tyres can burst. ▶ Reduce speed so that the tyres cool down.

Engine oil

Display messages	Possible causes/consequences and ▶ Solutions
 Add 1 litre engine oil when next refuelling	* The engine oil level has dropped to the minimum level. **NOTE** Engine damage caused by driving with insufficient engine oil ▶ Avoid long journeys with insufficient engine oil. ▶ When next refuelling, add 1 litre of engine oil (→ page 339). Notes on engine oil (→ page 465).
 Engine oil level Reduce oil level	* The engine oil level is too high. **NOTE** Engine damage caused by driving with excess engine oil ▶ Avoid long journeys with excess engine oil. ▶ Consult a qualified specialist workshop immediately and have the engine oil level reduced.
 Engine oil level Stop vehicle Switch engine off	* The engine oil level is too low. **NOTE** Engine damage caused by driving with insufficient engine oil ▶ Avoid long journeys with insufficient engine oil. ▶ Stop the vehicle immediately in accordance with the traffic conditions. Do not continue driving.

Display messages	Possible causes/consequences and ▶ Solutions
	▶ Switch off the engine. ▶ Add 1 l of engine oil (→ page 339). ▶ Check the engine oil level. Notes on engine oil (→ page 465).
 Engine oil pressure Stop Switch off engine	* The oil pressure is too low. **NOTE** Engine damage caused by driving with insufficient oil pressure ▶ Avoid driving with insufficient oil pressure. ▶ Stop the vehicle immediately in accordance with the traffic conditions. Do not continue driving. ▶ Consult a qualified specialist workshop.
 Engine oil level cannot be measured	* The electrical connection to the oil level sensor has been interrupted or the oil level sensor is faulty. ▶ Consult a qualified specialist workshop.

Warning and indicator lamps


Overview of indicator and warning lamps

Some systems will perform a self-test when the ignition is switched on. Some indicator and warning lamps may briefly light up or flash. This behaviour is non-critical. These indicator and warning lamps indicate a malfunction only if they light up or flash after the engine has been started or during a journey.

Driver display



Driver display with driver camera

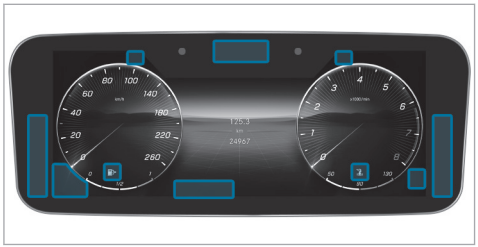

Indicator and warning lamps:

- Restraint system (→ page 524)
- Seat belt (→ page 524)
- Power steering (yellow) (→ page 525)
- Power steering (red) (→ page 525)
- Rear-axle steering (yellow) (→ page 525)
- Rear-axle steering (red) (→ page 525)
- Coolant temperature (→ page 527)
- Engine diagnostics (→ page 527)
- Electrical fault (→ page 527)
- Reserve fuel with fuel filler flap location indicator (→ page 527)
- Electric parking brake (red) (→ page 530)
- Electric parking brake (yellow) (→ page 530)
- Brakes (yellow) (→ page 530)
- Brakes (red) (→ page 530)
- Distance warning (→ page 532)
- AIRMATIC (→ page 532)
- ABS (→ page 534)
- ESP® (→ page 534)
- ESP® OFF (→ page 534)
- Mercedes me connect (→ page 536)
- Tyre pressure monitoring system (→ page 537)
- Standing lights (→ page 159)
- Low beam (→ page 159)
- High beam (→ page 161)

P223 0210 02

Turn signal lights (→ page 161)

Rear fog light (→ page 159)

Occupant safety

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
 Restraint system warning lamp	* The red restraint system warning lamp is lit while the engine is running. The restraint system is malfunctioning (→ page 40). **⚠ WARNING** Risk of injury due to malfunctions in the restraint system Components in the restraint system may be activated unintentionally or not deploy as intended in an accident. ▶ Have the restraint system checked and repaired immediately at a qualified specialist workshop. ▶ Drive on carefully. ▶ Comply with the messages on the driver display. ▶ Consult a qualified specialist workshop immediately.
 Seat belt warning lamp flashes	* The red seat belt warning lamp flashes and an intermittent warning tone sounds. The driver or front passenger has not fastened his/her seat belt while the vehicle is in motion. ▶ Fasten your seat belt (→ page 44). There are objects on the front passenger seat. ▶ Remove the objects from the front passenger seat.

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
 Seat belt warning lamp lights up	* The red seat belt warning lamp lights up once the engine has started. In addition, an intermittent warning tone may sound. The red seat belt warning lamp reminds the driver and front passenger to fasten their seat belts. ▶ Fasten your seat belt (→ page 44). If you have placed objects on the front passenger seat, the red seat belt warning lamp may remain lit.

Vehicle


Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
 Power steering warning lamp (yellow)	* The yellow power steering warning lamp is lit when the engine is running. The power assistance or the steering itself is malfunctioning. ▶ Note the messages on the driver display.
 Power steering warning lamp (red)	* The red power steering warning lamp is lit while the engine is running. The power assistance or the steering itself is malfunctioning. ⚠ **WARNING** Risk of accident if steering capability is impaired If the steering does not function as intended, the vehicle's operating safety is jeopardised.

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
	▶ Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ▶ Consult a qualified specialist workshop. ▶ Note the messages on the driver display.
 Rear axle steering warning lamp (yellow)	* The yellow rear axle steering warning lamp is lit while the engine is running. The rear axle steering is malfunctioning. ▶ Note the messages on the driver display.
 Rear axle steering warning lamp (red)	* The red rear axle steering warning lamp is lit while the engine is running. The rear axle steering is malfunctioning. ⚠ **WARNING** Risk of accident if steering capability is impaired If the steering does not function as intended, the vehicle's operating safety is jeopardised. ▶ Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ▶ Consult a qualified specialist workshop. ▶ Note the messages on the driver display.

Engine

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
 Coolant warning lamp (red)	* The red coolant warning lamp is lit while the engine is running. Possible causes: • The temperature sensor is malfunctioning • The coolant level is too low • The air supply to the radiator is obstructed • The radiator fan is faulty • The engine coolant pump is faulty If there is an additional warning tone, the coolant temperature has exceeded 120 °C. ⚠ **WARNING** Risk of burns when opening the bonnet If you open the bonnet when the engine has overheated or when there is a fire in the engine compartment, the following situations may occur: • You could come into contact with hot gases. • You could come into contact with other hot, escaping operating fluids. ▶ Before opening the bonnet, allow the engine to cool down. ▶ In the event of a fire in the engine compartment, keep the bonnet closed and call the fire service.

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
	▶ Stop the vehicle immediately in accordance with the traffic conditions and switch off the engine. Do not continue driving. ▶ Note the messages on the driver display. If the coolant temperature display is at the lower end of the temperature scale: ▶ Consult a qualified specialist workshop. If the coolant temperature display is at the upper end of the temperature scale: ▶ Exit the vehicle and keep a safe distance from it until the engine has cooled down. ▶ Make sure that the air supply to the radiator is not obstructed. ▶ Avoiding high loads on the engine, drive to the nearest qualified specialist workshop. In doing so, ensure that the coolant temperature display remains below 120°C.
 Coolant warning lamp (yellow)	* The yellow coolant warning lamp is lit while the engine is running. Possible causes: • The temperature sensor is malfunctioning • The charge air, transmission oil or battery cooling is faulty • The radiator shutters are blocked or defective ▶ Avoiding high loads on the engine, drive to the nearest qualified specialist workshop.

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
 Engine diagnosis warning lamp	* The yellow engine diagnostics warning lamp is lit while the engine is running. A malfunction has occurred in the engine, the exhaust system or the fuel system. The emissions limit value may have been exceeded and the engine may be running in emergency operation mode. ▶ Have the vehicle checked as soon as possible at a qualified specialist workshop.
 Electrical fault warning lamp	* The red electrical fault warning lamp is lit. There is a fault in the electrics. ▶ Note the messages on the driver's display.
 Fuel reserve warning lamp lights up	* The yellow fuel reserve warning lamp lights up while the engine is running. The fuel supply has dropped into the reserve range. ▶ Refuel.

Brakes

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
 Electric parking brake indicator lamp (red)  Electric parking brake indicator lamp (yellow)	* The red electric parking brake indicator lamp flashes or is lit. The yellow electric parking brake indicator lamp also lights up in the event of a malfunction. ▶ Note the messages on the driver's display.
 Brake system warning lamp (yellow)	* The yellow brake system warning lamp is lit while the engine is running. ⚠ **WARNING** Risk of an accident due to a brake system malfunction If the brake system is malfunctioning, braking characteristics may be impaired. ▶ Drive on carefully. ▶ Have the brake system checked immediately at a qualified specialist workshop. The hill start assist may be malfunctioning. ▶ Adjust your speed and drive on carefully, leaving a suitable distance to the vehicle in front.

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
	▶ If the driver's display shows a display message, observe it. ▶ Consult a qualified specialist workshop.
 Brake system warning lamp (red)	* The red brake system warning lamp is lit while the engine is running. Possible causes: • The brake force boosting is malfunctioning and the braking characteristics may be affected. • There is insufficient brake fluid in the brake fluid reservoir. ▶ Note the messages on the driver's display. **⚠ WARNING** Risk of accident and injury if brake force boosting is malfunctioning If brake force boosting is malfunctioning, increased brake pedal force may be necessary for braking. The braking characteristics may be impaired. The braking distance can increase in emergency braking situations. ▶ Stop in a safe location immediately. Do not continue driving! ▶ Consult a qualified specialist workshop. **⚠ WARNING** Risk of an accident due to low brake fluid level If the brake fluid level is too low, the braking effect and the braking characteristics may be impaired. ▶ Stop the vehicle as soon as possible, paying attention to road and traffic conditions. Do not continue driving. ▶ Consult a qualified specialist workshop.

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
	▶ Do not top up the brake fluid.

Driving systems

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
 Warning lamp for distance warning function	* The red distance warning lamp lights up while the vehicle is in motion. The distance to the vehicle in front is too small for the speed selected. If there is an additional warning tone, you are approaching an obstacle at too high a speed. ▶ Be prepared to brake immediately. ▶ Increase the distance. Function of Active Brake Assist (→ page 242).
 Suspension warning lamp (yellow)	* The yellow AIRMATIC warning lamp is lit. A fault has occurred in AIRMATIC. ▶ Note the messages on the driver display.

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
 Suspension warning lamp (red)	* The red AIRMATIC warning lamp is lit. A fault has occurred in AIRMATIC. **!** **NOTE** The vehicle's driving characteristics will have changed significantly. ▶ Consult a qualified specialist workshop. ▶ Note the messages on the driver display. ▶ Consult a qualified specialist workshop.
 Active Brake Assist warning lamp	* The Active Brake Assist yellow warning lamp is lit. The system is restricted or unavailable. ▶ Note the messages on the driver display.

Driving safety systems

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
 ABS warning lamp	* The yellow ABS warning lamp is lit while the engine is running. ABS is malfunctioning. If there is an additional warning tone, EBD is malfunctioning. Other driving systems and driving safety systems may also be malfunctioning. ▶ Note the messages on the driver's display. **⚠ WARNING** There is a risk of skidding if EBD or ABS is malfunctioning The wheels may lock during braking. The steerability and braking characteristics are heavily impaired and the braking distance may increase. In addition, other driving safety systems are switched off. ▶ Drive on carefully. ▶ Have the brake system checked immediately at a qualified specialist workshop.
 ESP® warning lamp flashes	* The yellow ESP® warning lamp flashes while the vehicle is in motion. One or more wheels has reached its grip limit (→ page 222). ▶ Adapt your driving style to suit the road and weather conditions.

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
 ESP® warning lamp lights up	* The yellow ESP® warning lamp is lit while the engine is running. ESP® is malfunctioning. Other driving systems and driving safety systems (e.g. BAS) may also be malfunctioning. ▶ Comply with the messages on the driver's display. ⚠ **WARNING** Risk of skidding if ESP® is malfunctioning If ESP® is malfunctioning, ESP® cannot carry out vehicle stabilisation. In addition, other driving safety systems are switched off. ▶ Drive on carefully. ▶ Have ESP® checked at a qualified specialist workshop.
 ESP® OFF warning lamp	* The yellow ESP® OFF warning lamp is lit while the engine is running. ESP® is deactivated. Other driving systems and driving safety systems may also be inoperative. ⚠ **WARNING** Risk of skidding when driving with ESP® deactivated ESP® does not act to stabilise the vehicle. The availability of further driving safety systems is also limited. ▶ Drive on carefully. ▶ Deactivate ESP® only for as long as the situation requires.

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
	If ESP® cannot be activated, ESP® is malfunctioning. ▶ Have ESP® checked immediately at a qualified specialist workshop. ▶ Observe the notes on deactivating ESP® (→ page 222).

Mercedes me connect

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
SOS NOT READY Mercedes me connect warning lamp	*At least one of the main functions of the Mercedes me connect system or of the SOS emergency call system is malfunctioning. ▶ Consult a qualified specialist workshop.

Tyre pressure monitor

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
 Tyre pressure monitoring system warning lamp flashes	*The yellow tyre pressure monitor warning lamp (pressure loss/malfunction) flashes for approximately one minute and then remains lit. The tyre pressure monitor is malfunctioning. ⚠ **WARNING** There is a risk of an accident if the tyre pressure monitoring system is malfunctioning The tyre pressure monitoring system cannot issue a warning if there is pressure loss in one or more of the tyres. Tyres with insufficient tyre pressure may impair the driving characteristics as well as steering and braking. ▶ Have the tyre pressure monitoring system checked at a qualified specialist workshop.
 Tyre pressure monitoring system warning lamp lights up	* The yellow tyre pressure monitoring system warning lamp (pressure loss/malfunction) is lit. The tyre pressure monitoring system has detected tyre pressure loss in at least one of the tyres. ⚠ **WARNING** Risk of an accident due to insufficient tyre pressure • The tyres can burst. • The tyres can wear excessively and/or unevenly. • The driving characteristics as well as the steering and braking may be greatly impaired. You could then lose control of the vehicle. ▶ Observe the recommended tyre pressures. ▶ Adjust the tyre pressure if necessary.

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
	▶ Stop the vehicle in accordance with the traffic conditions. ▶ Check the tyre pressure and the tyres.

1, 2, 3 ...

3D driver display, 3D instrument cluster
Function/notes ... 278
4MATIC, All-wheel drive
Function ... 209
360° Camera, Camera, Driving system, Surround View
Activating using GPS (reversing camera) ... 263
Button ... 262
Care ... 344
Function ... 258
Opening the camera cover (reversing camera) ... 263
Selecting a view ... 262
Setting (reversing camera) ... 262, 263
Switching automatic operation on/off (reversing camera) ... 262

A

A/C function
Activating/deactivating (MBUX multimedia system) ... 179
ABS (Anti-lock Braking System), Anti-lock braking system ... 221
Accident and Breakdown Management
Mercedes me connect ... 313
Acoustic locking verification signal
Activating/deactivating ... 82
Activating a commuter route ... 306
Active Blind Spot Assist, Driving system
Activating/deactivating ... 253
Brake application ... 252
Function ... 250
System limitations ... 250
Active bonnet (pedestrian protection), Pedestrian protection
Operation ... 336
Active Brake Assist
Function/notes ... 242
Setting ... 246
Active Distance Assist DISTRONIC, Adaptive cruise control, Automatic distance control, DISTRONIC, Distance control, Driving system
Active Emergency Stop Assist ... 238
Active Lane Change Assist ... 239
Calling up a speed ... 231
Function ... 228
Increasing/decreasing speed ... 231
Requirements: ... 231
Route-based speed adaptation ... 234
Selecting ... 231
Steering wheel buttons ... 231
Storing a speed ... 231
Switching off/deactivating ... 231
Switching on/activating ... 231
System limitations ... 228
Active Emergency Stop Assist, Driving system ... 238
Active headlamps ... 162
Active Lane Change Assist, Driving system
Activating/deactivating ... 242
Function ... 239
Active Lane Keeping Assist, Driving system, Lane Keeping Assist, Lane detection (automatic)
Activating/deactivating ... 256
Activating/deactivating the warning ... 256
Function ... 254

Setting the sensitivity ... 256
System limits ... 254

Active Parking Assist, Driving system, Parking assistance systems
Cross traffic warning ... 275
Drive Away Assist ... 274
Exiting a parking space ... 269
Function ... 266
Manoeuvring brake function ... 276
Parking ... 268
System limitations ... 266

Active Speed Limit Assist, Driving system
Display ... 233
Function ... 233

Active Steering Assist, Driving system
Activating/deactivating ... 238
Active Emergency Stop Assist ... 238
Active Lane Change Assist ... 239
Function ... 236
System limits ... 236

Active Traffic Jam Assist
Function ... 236

Adaptive brake lights ... 225

Adaptive Highbeam Assist Plus
Function ... 166
Switching on/off ... 167

Additional door lock ... 85

Additives, Additives (engine oil), Lubricant additives
Engine oil ... 465
Fuel ... 463

Air conditioning menu
Calling up ... 179

Air distribution
Setting ... 177
Setting (MBUX multimedia system) ... 179

Air vents, Vents
Adjusting (front) ... 189
Adjusting (rear) ... 190
Glove box ... 191

Air-recirculation mode ... 180

Air-water duct, Air inlet, Water tank
Keeping free ... 341

Airbag, Occupant safety
Activation ... 40
Belt airbag ... 43
Centre airbag (driver, front passenger) ... 46
Cushionbag ... 46
Front airbag (driver, front passenger) ... 46
Installation locations ... 46
Knee airbag ... 46
Overview ... 46
PASSENGER AIR BAG indicator lamp ... 52
Protection ... 48
Rear airbag ... 46
REAR SEAT AIR BAG indicator lamps ... 56
Reduced protection ... 49
Side airbag ... 46
Window airbag ... 46

Airflow
Setting ... 177

AIRMATIC, ADS PLUS damping system, Air suspension, Driving system, Level control system
Setting ... 257
Suspension ... 256

Ambient lighting
Setting (MBUX multimedia system) ... 169

Animals
Pets in the vehicle ... 80

Anti-theft protection
Additional door lock ... 85
Immobiliser ... 110

ASSYST PLUS, Active Service System PLUS, After-sales service centre, Inspection, Maintenance, Service, Service interval display, Vehicle maintenance
Battery disconnection periods ... 336
Displaying the service due date ... 335
Function/notes ... 335
Regular maintenance work ... 335
Special service requirements ... 335

ATA (anti-theft alarm system), Alarm system, Warning system
Deactivating the alarm ... 110
Function ... 110
Function of interior protection ... 111
Priming/deactivating interior protection ... 112
Priming/deactivating tow-away protection ... 111
Tow-away protection function ... 111

ATTENTION ASSIST, Detecting inattentiveness
Setting ... 227
System limits ... 225

ATTENTION ASSIST with microsleep detection, Attention assistant, Coffee cup symbol, Driving system, Drowsiness detection, Fatigue detection, Nodding off
Function ... 225

Augmented reality
Function on the head-up display ... 281

Automatic driving lights, Headlamps ... 160

Automatic engine start (ECO start/stop function) ... 200

Automatic engine stop (ECO start/stop function) ... 200

Automatic front passenger front airbag shutoff, Automatic front passenger front airbag deactivation system, Occupant safety, PASSENGER AIR BAG status display
Function of the automatic front passenger front airbag deactivation system ... 50
PASSENGER AIR BAG indicator lamp ... 52

Automatic lateral support adjustment
Setting ... 129

Automatic measures after an accident, Occupant safety ... 58

Automatic mirror folding function
Activating/deactivating ... 175

Automatic seat adjustment
Setting ... 128

Automatic transmission
DIRECT SELECT lever ... 205
Drive program display ... 204
Drive programs ... 203
DYNAMIC SELECT button ... 203
Engaging drive position ... 207
Engaging neutral ... 206
Engaging park position ... 207
Engaging reverse gear ... 206
Kickdown ... 208
Manual gear changing ... 207
Steering wheel gearshift paddles ... 207
Transmission position display ... 205
Transmission positions ... 205

Axle load
Permissible ... 459

B

Bad weather light ... 164
Bag hook ... 146
BAS (Brake Assist System), Brake Assist System, Braking assistance ... 221
Battery
Remote control (stationary heater) ... 188
Battery (key)
Replacing ... 83
Battery (vehicle), 12 V battery
Charging ... 359
Charging (Remote Online) ... 194
Notes ... 355
Notes (starting assistance and charging) ... 357
Replacing ... 360
Starting assistance ... 359
Belt airbag
Activation ... 40
Function/notes ... 43
Boot lid
Activating/deactivating the boot lid opening limiter ... 99
Closing ... 94
HANDS-FREE ACCESS ... 96
Locking separately ... 98
Opening ... 93
Opening dimensions ... 469
Power closing function ... 94
Unlocking (emergency key) ... 98
Brake fluid
Notes ... 467
Brake force distribution
EBD (Electronic Brake force Distribution) ... 223
Brakes
ABS (Anti-lock Braking System) ... 221
Active Brake Assist ... 242
Adaptive brake lights ... 225
BAS (Brake Assist System) ... 221
Driving tips ... 196
EBD (Electronic Brake force Distribution) ... 223
HOLD function ... 224
Limited braking effect (salt-treated roads) ... 196
New/replaced brakepads/brake discs ... 195
Post-collision brake ... 58
Running-in notes ... 195
Breakdown
Overview of the help functions ... 18
Tow-starting ... 364
Towing away ... 362
Transporting the vehicle ... 363
Wheel change ... 377

C

Calls
Mercedes me ... 314
Car wash (care) ... 341
Car-to-X-Communication
Displaying hazard warnings ... 308
Care, Car wash, Cleaning
360° camera ... 344
Air-water duct ... 341
Automatic car wash ... 341
Carpet ... 346
Decorative foil ... 344
Display ... 346
EASY-PACK boot box ... 346
Exterior lighting ... 344
High-pressure cleaner ... 342

Paintwork ... 343
Plastic trim ... 346
Real wood/trim elements ... 346
Roof lining ... 346
Seat belt ... 346
Seat cover ... 346
Sensors ... 344
Steering wheel ... 346
Tailpipes ... 344
Washing by hand ... 343
Wheels/rims ... 344
Windows ... 344
Wiper blades ... 344

Carpet (Care) ... 346

Centre airbag (driver, front passenger) ... 46

Changing gears, Selecting a gear
Manually ... 207

Changing hub caps ... 377

Charging
Battery (vehicle) ... 359
Mobile phone (wireless) ... 155
USB port ... 152

Chauffeur mode
Folding the head restraint back/up ... 122
Information ... 119
Moving the front passenger seat into the chauffeur position ... 120
Moving the front passenger seat into the normal position ... 123

Child safety lock
Rear door ... 78
Rear side windows ... 79

Child seat, Occupant safety
Approval categories ... 64
Attaching (notes) ... 63
Basic instructions ... 59
Front passenger seat (notes) ... 76
Front passenger seat (without automatic airbag shutoff) ... 75
ISOFIX/i-Size (fitting) ... 67
Notes on risks and dangers ... 59
Rear airbag ... 70
Recommended child restraint systems ... 62
Seats suitable for belt-secured child restraint systems ... 72
Seats suitable for i-Size child restraint systems ... 67
Seats suitable for ISOFIX child restraint systems ... 66
Securing on the co-driver seat ... 77
Securing on the rear seat ... 74
Top Tether ... 69

Children
Avoiding dangers in the vehicle ... 59
Basic instructions ... 59

Chock
Storage location ... 376

City lighting ... 164

Climate control, Air-conditioning system, Blower, Cooling, Heating, Ventilation
Activating/deactivating (rear operating unit) ... 179
Activating/deactivating the A/C function (MBUX multimedia system) ... 179
Activating/deactivating the synchronisation function (MBUX multimedia system) ... 180
Air-recirculation mode ... 180
Automatic control ... 179
Calling up the air conditioning menu ... 179
Demisting the windscreen ... 177
Demisting windows ... 180
Front air vents ... 189

Glove box air vent ... 191
Immediate pre-entry climate control ... 185
Information on the windscreen heater ... 182
Inserting/removing the flacon (fragrance system) ... 181
Ionisation ... 181
Note ... 177
Pre-entry climate control at departure time ... 183
Rear air vents ... 190
Rear operating unit ... 178
Residual heat ... 180
Residual heat (rear operating unit) ... 181
Setting (MBUX multimedia system) ... 179
Setting the air distribution ... 177
Setting the airflow ... 177
Setting the fragrance system ... 181
Setting the temperature ... 177
Stationary heater/ventilation ... 185
Switching on/off ... 178
Switching the rear window heater on/off ... 177
THERMOTRONIC control panel ... 177
Ventilating the vehicle (convenience opening) ... 101

Cockpit, Dashboard
Overview ... 6
Collision detection (parked vehicle)
Information ... 217
Combination switch ... 161
Consumption indicator
Calling up ... 205
Content sharing menu
Overview ... 286
Control elements
Touch-sensitive ... 23
Convenience closing ... 102
Convenience doors
Setting (multimedia system) ... 91
Convenience opening ... 101
Coolant (engine)
Check level ... 340
Notes ... 467
Copyright ... 38
Cornering light ... 163
Crosswind Assist
Function/notes ... 223
Cup holder
Switching the cooling/heating function on/off ... 149
Cushionbag ... 46

D

Data acquisition
Vehicle ... 35
Data protection rights
Data storage ... 38
Data storage
Data protection rights ... 38
Electronic control units ... 35
Online services ... 37
Vehicle ... 35
Deactivating the alarm (ATA) ... 110
Declaration of conformity
Electromagnetic compatibility ... 25
Jack ... 30
Specific absorption rate ... 26
TIREFIT kit ... 31
Wireless vehicle components ... 26
Decorative foil (cleaning instructions) ... 344

Destination entry
Entering a POI or address ... 304
Diagnostics connection, On-board diagnostics interface ... 31
Diesel
Low outside temperatures ... 464
Notes ... 464
DIGITAL LIGHT
Active headlamps ... 162
Assistance functions ... 164
Bad weather light ... 164
City lighting ... 164
Cornering light ... 163
Fog light (enhanced) ... 163
Intelligent Light System ... 162
Motorway mode ... 163
Switching the Intelligent Light System on/off ... 165
Topographical compensation ... 164
Digital Owner's Manual ... 20
Dipped beam
Setting ... 168
DIRECT SELECT lever, Selector lever
Engaging drive position ... 207
Engaging neutral ... 206
Engaging park position ... 207
Engaging park position automatically ... 207
Engaging reverse gear ... 206
Function ... 205
Display (care) ... 346
Display (driver display)
Messages in the driver display ... 283
Display (MBUX multimedia system)
Home screen ... 286
Operating the touchscreen ... 287
Settings ... 283
Display message, Error message, Message (driver display)
Calling up (driver display) ... 471
Notes ... 471
Display messages
--- km/h ... 499
LIM --- km/h ... 498
12 V on-board electrical system Visit workshop ... 514
48 V battery See Owner's Manual ... 516
Active Light System inoperative ... 478
Add 1 litre engine oil when next refuelling ... 521
ATTENTION ASSIST inoperative ... 497
ATTENTION ASSIST Microsleep Take a break! ... 498
ATTENTION ASSIST: Take a break! ... 498
Automatic driving lights inoperative ... 477
Beginning emergency stop ... 501
Brake immediately ... 496
Change key batteries ... 475
Check brake fluid level ... 496
Check brake pads See Owner's Manual ... 497
Check tyre(s) ... 518

Coolant Stop vehicle Switch engine off..... 487
currently unavailable Camera dirty..... 505
Currently unavailable Radar dirty..... 504
currently unavailable See Owner's Manual..... 509
currently unavailable See Owner's Manual..... 510
Engine oil level cannot be measured..... 522
Engine oil level Reduce oil level.... 521
Engine oil level Stop vehicle Switch engine off..... 521
Engine oil pressure Stop Switch off engine..... 522
Fault Drive at max. 80 km/h..... 506
Front left malfunction Consult workshop (example)..... 472
inoperative Battery low..... 480
Inoperative Refuel vehicle..... 480
inoperative See Owner's Man..... 480
inoperative See Owner's Manual.. 510
inoperative See Owner's Manual.. 511
inoperative See Owner's Manual.. 512
Inoperative..... 513
Intensive cleaning activated for 30 s..... 486
Key not detected (red display message)..... 476
Key not detected (white display message)..... 476
Left dipped beam (example)..... 477
Left windowbag malfunction Consult workshop (example)..... 472
Malfunction See Owner's Manual..... 477
Max. speed 20km/h..... 507
Maximum speed exceeded..... 500
Off..... 499
Off..... 497
Parking brake See Owner's Manual..... 493
passive..... 498
Please wait 48 V battery charging..... 516
Rear axle steering currently malfunctioning..... 483
Rear axle steering Malfunction Stop immediately..... 484
Rear axle steering Malfunction Visit workshop..... 483
Rectify tyre pressure..... 519
Release parking brake..... 495
Replace key..... 475
Reserve fuel level..... 489
Restraint system malfunction Consult workshop..... 472

Steering malfunction Drive carefully Visit workshop..... 482
Steering malfunction Increased physical effort See Owner's Manual..... 482
Steering malfunction Stop immediately See Owner's Manual..... 483
Stop the vehicle Leave the engine running to charge the 12 V battery..... 515
STOP Vehicle level too low..... 507
Stop vehicle See Owner's Manual..... 514
Stop vehicle See Owner's Manual..... 515
suspended..... 499
Switch off lights..... 478
Switch on headlamps..... 478
Switch on the engine to charge the 12 V battery..... 515
Top up coolant See Owner's Manual..... 487
Top up washer fluid..... 486
Turn on the ignition to release the parking brake..... 496
Vehicle is operational Switch off ignition before exiting..... 482
Vehicle rising Please wait..... 508
Warning tyre defect..... 519
Wheel sensor(s) missing..... 518
Active Blind Spot Assist currently unavailable See Owner's Manual..... 503
Active Blind Spot Assist inoperative..... 503
Active bonnet malfunction See Owner's Manual..... 484
Active Brake Assist Functions currently limited See Owner's Manual..... 512
Active Brake Assist Functions limited See Owner's Manual..... 513
Active Distance Assist available again..... 500
Active Distance Assist currently unavailable See Owner's Manual..... 499
Active Distance Assist inoperative..... 500
Active Emergency Stop Assist currently unavailable See Owner's Manual... 501
Active Emergency Stop Assist inoperative..... 501
Active Lane Change Assist currently unavailable See Owner's Manual..... 502
Active Lane Change Assist inoperative... 502
Active Lane Keeping Assist currently unavailable See Owner's Manual..... 503
Active Lane Keeping Assist inoperative... 503
Active Parking Assist and PARKTRONIC inoperative See Owner's Manual..... 508
Active Steering Assist currently unavailable due to multiple emergency stops..... 501

Active Steering Assist currently unavailable See Owner's Manual..... 500
Active Steering Assist inoperative..... 501
Active Stop-and-Go Assist currently unavailable see Owner's Manual..... 502
Active Stop-and-Go Assist inoperative See Owner's Manual..... 502
Adaptive Highbeam Assist Plus currently unavailable See Owner's Manual... 479
Adaptive Highbeam Assist Plus inoperative..... 479
Ambient light warning support inoperative..... 486
Anti-theft alarm system Malfunction..... 486
Apply brake and start engine to shift out of P or N..... 489
Apply brake to deselect P position..... 489
Apply brake to engage D or R..... 490
Apply brake to engage R..... 490
Apply parking brake to park Visit workshop..... 490
Auxiliary battery malfunction..... 492
Cannot start engine See Owner's Manual..... 516
Change steering wheel/ seat position until 6 dots are visible on the upper edge of the screen..... 506
Check dipped-beam setting (left/ right-side traffic)..... 479
Consult workshop without changing the transmission position..... 492
Device detected at diagnostics connection See Owner's Manual..... 513
DIGITAL LIGHT Functions limited..... 478
Dipped-beam setting (left/right-side traffic) Manual adjustment only..... 479
Driver camera inoperative See Owner's Manual..... 506
Driver camera view currently restricted See Owner's Manual..... 505
Front passenger airbag disabled See Owner's Manual..... 473
Front passenger airbag enabled See Owner's Manual..... 474
Hazard warning lamp system Malfunction..... 479
Limited availability of Active Parking Assist manoeuvring assistant See Owner's Manual..... 508
Limiter inoperative..... 499
Motor can be started again..... 517
MULTIBEAM LED Functions limited..... 478
N automatically activated Please engage transmission position again..... 491
Only select P when vehicle is stationary..... 489
PARKTRONIC inoperative See Owner's Manual..... 508

Place the key in the marked space See Owner's Manual ... 476
PRE-SAFE impulse side inoperative See Owner's Manual ... 475
PRE-SAFE inoperative See Owner's Manual ... 475
Push rear left seat belt extender back manually See Owner's Manual (example) ... 473
Reduce speed ... 520
Reversing not poss. Consult workshop ... 492
Risk of vehicle rolling away Apply parking brake to park ... 490
Risk of vehicle rolling away Driver's door open Transmission not in P ... 490
Risk of vehicle rolling away N activated manually No automatic switch to P ... 491
Snow chain mode Maximum speed exceeded ... 484
Speed limit (winter tyres) XXX km/h ... 500
Stop vehicle Leave engine running Wait Transmission cooling ... 492
To switch off the engine, press the Start/Stop button for at least 3 seconds or 3 times ... 487
Traffic Sign Assist currently unavailable See Owner's Manual ... 502
Traffic Sign Assist inoperative ... 503
Transmission Malfunction Stop ... 492
Tyre press. monitor currently unavailable ... 517
Tyre press. monitor inoperative ... 517
Tyre press. monitor inoperative No wheel sensors ... 518
Tyre(s) overheated ... 520

Door, Rear doors
- Additional door lock ... 85
- Child safety lock (rear door) ... 78
- Closing the convenience doors ... 88
- Locking/unlocking (emergency key) ... 92
- Opening (from inside) ... 86
- Opening the convenience doors ... 88
- Power closing function ... 92
- Unlocking (from inside) ... 86

Door control panel, Function seat ... 14
Door control panel (rear) ... 16
Drive Away Assist ... 274
Drive position
- Engaging ... 207

Drive program display ... 204
Driver camera, Camera
- Activating/deactivating ... 295
- Overview ... 294

Driver display, Instrument cluster
- 48 V on-board electrical system ... 283
- Displaying the service due date ... 335
- EQ Boost technology ... 283
- Function/notes ... 278
- Menu notes ... 279
- Operating ... 278
- Overview of displays ... 283

Driver display with driver camera ... 10
Driver's display
- Indicator/warning lamps ... 523

Driving abroad
Light adjustment (low beam)..... 159
Driving safety system, Assistance systems, Driving system, Safety systems
ABS (Anti-lock Braking System)..... 221
Active Brake Assist..... 242
Adaptive brake lights..... 225
BAS (Brake Assist System)..... 221
Cameras..... 219
EBD (Electronic Brake force Distribution)..... 223
ESP® Crosswind Assist..... 223
Overview..... 220
Radar and ultrasonic sensors..... 219
Responsibility..... 219
STEER CONTROL..... 223
Driving tips, Moving away
Driving abroad (low beam light adjustment)..... 159
General driving tips..... 196
Optimised acceleration..... 195
Running-in notes..... 195
DYNAMIC SELECT, Drive programs, Programme
Configuring drive program I..... 204
Displaying engine data..... 205
Displaying vehicle data..... 205
Drive program display..... 204
Drive programs..... 203
Function..... 203
Operating (DYNAMIC SELECT switch)..... 204
Selecting the drive program..... 204

E

E10..... 462
Easy entry feature
Function/notes..... 134
Setting..... 135
Easy exit feature
Function/notes..... 134
Setting..... 135
EASY-PACK boot box, Boot box
Adjusting the height to any position..... 146
Care..... 346
Installing/removing..... 148
EBD (Electronic Brake force Distribution)
Function/notes..... 223
ECO Assist
Function/notes..... 201
ECO display
Function..... 201
ECO start/stop function, Start/stop function
Automatic engine start..... 200
Automatic engine stop..... 200
Operation..... 200
Switching off/on..... 201
Electric parking brake, Handbrake, Parking, Parking brake
Applying automatically..... 215
Applying/releasing manually..... 217
Emergency braking..... 217
Releasing automatically..... 216
Electromagnetic compatibility
Declaration of conformity..... 25
Emergency
Fire extinguisher..... 349
First-aid kit (soft sided)..... 349
Overview of the help functions..... 18
Removing the warning triangle..... 348
Safety vest..... 348
Setting up the warning triangle..... 349
Emergency braking..... 217

Emergency engine start ... 364
Emergency key
Inserting/removing ... 83
Locking/unlocking the doors ... 92
Unlocking the boot lid ... 98
Emergency operation mode
Starting the vehicle ... 193
Emergency spare wheel, Spare wheel
Notes ... 382
Engine
ECO start/stop function ... 200
Engine number ... 459
Starting (emergency operation mode) ... 193
Starting (Remote Online) ... 194
Starting (start/stop button) ... 193
Starting assistance ... 359
Switching off (start/stop button) ... 212
Engine bonnet
Function (active bonnet) ... 336
Opening/closing ... 336
Engine data
Displaying ... 205
Engine electronics
Notes ... 384
Engine number ... 459
Engine oil, Oil
Additives ... 465
Capacity ... 466
Checking the oil level with the driver display ... 338
MB-Freigabe or MB-Approval ... 466
Quality ... 466
Topping up ... 339
EQ Boost
Qualified specialist workshop ... 33
EQ Boost technology, 48 V on-board electrical system
Notes ... 283
Operating safety ... 24
ERA-GLONASS test mode
Starting/ending ... 326
ESP®
Crosswind Assist ... 223
ESP® (Electronic Stability Program), Dynamic handling control system, ESC (Electronic Stability Control), Electronic Stability Program
Activating/deactivating ... 223
Function/notes ... 222
EU general operating permit number ... 459
Exterior lighting
Care ... 344

F

Favourites
Adding ... 297
Fire extinguisher ... 349
First-aid kit (soft sided) ... 349
Flacon
Inserting/removing ... 181
Flat tyre
MOExtended tyres ... 350
Notes ... 350
TIREFIT kit ... 351
Wheel change ... 377
Floor mats ... 157
Fog light (enhanced) ... 163
Foil covering
Radar and ultrasonic sensors ... 219
Folding table ... 142

Footrest
Rear passenger seat ... 121
Fragrance system, Air freshener system, Fragrance, Perfume, Perfume vial
Inserting/removing the flacon ... 181
Setting ... 181
Free software ... 38
Frequencies
Mobile phone ... 385
Two-way radio ... 385
Front airbag (driver, front passenger) ... 46
Front passenger head restraint
Folding back/up (chauffeur mode) ... 122
Front passenger seat
Adjusting from the driver's seat ... 116
Adjusting from the rear ... 117
Folding the head restraint back/up (chauffeur mode) ... 122
Fuel, Additives (fuel)
Additives ... 463
Diesel ... 464
E10 ... 462
Fuel reserve ... 465
Low outside temperatures ... 464
Petrol ... 462
Quality (diesel) ... 464
Quality (petrol) ... 462
Refuelling ... 209
Sulphur content ... 462
Tank content ... 465
Fuses, Electrical fuses
Before replacing a fuse ... 365
Fuse assignment diagram ... 365
Fuse box in the boot ... 368
Fuse box in the engine compartment ... 365
Fuse box in the front passenger footwell ... 368
Fuse box on the dashboard ... 367
Notes ... 365

G

Garage door opener
Clearing the memory ... 215
Programming buttons ... 213
Resolving problems ... 214
Synchronising the rolling code ... 214
Garage door openers
Opening/closing the door ... 215
Gearshift recommendation ... 208
General operating permit number (EU) ... 459
Genuine parts ... 22
Genuine wood (Care) ... 346
Glide mode ... 208
Glove box
Air vent ... 191

H

Handling characteristics (unusual) ... 369
HANDS-FREE ACCESS ... 96
Handset
Stowage compartment (rear) ... 143
Hazard warning lights ... 162
Head restraint
Activating/deactivating neck heating ... 126
Attaching/removing the additional cushion (front) ... 125
Attaching/removing the additional cushion (rear) ... 126
Front (luxury head restraint) ... 124
Front passenger side (chauffeur mode) ... 122

Rear (folding into position/folding back mechanically)..... 127
Rear (lowering from the front)..... 125
Rear (luxury head restraint)..... 126

Head-up display
Augmented reality..... 281
Function..... 280
Operating..... 282
Operating (with augmented reality)..... 282
Operating the memory function..... 136
Switching on/off..... 283

Headlamp flashing..... 161

High beam
Activating/deactivating..... 161
Adaptive Highbeam Assist Plus..... 166

High-pressure cleaner (care)..... 342

Hill Start Assist, Starting-off aid..... 225

HOLD function, Driving system, Roll away protection
Function/notes..... 224
Switching on/off..... 224

Home screen (central display)
Overview..... 286

I

i-Size child seat securing system
Fitting..... 67
Seats suitable for attaching..... 67

Identification plate
Engine..... 459
vehicle..... 459

Ignition
Switching on (Start/Stop button)..... 192

Immediate pre-entry climate control..... 185

Immobiliser..... 110

Implied warranty
Vehicle..... 34

In-Car Office
Features..... 318

Indicator/warning lamp, Indicator lamp, Lamps (driver's display), Warning lamp
Overview..... 523

Individual drive program
Configuring..... 204
Selecting..... 204

Intelligent Light System
Activating/deactivating..... 165
Active headlamps..... 162
Adaptive Highbeam Assist Plus..... 166
Assistance functions..... 164
Bad weather light..... 164
City lighting..... 164
Cornering light..... 163
Fog light (enhanced)..... 163
Motorway mode..... 163
Overview..... 162
Topographical compensation..... 164

Interior lighting, Lamp, Lighting, Reading lamp
Adjusting..... 168
Ambient lighting..... 169
Reading lamp..... 168
Switch-off delay time..... 171

Interior protection
Function..... 111
Priming/deactivating..... 112

Ionisation
Activating/deactivating (MBUX multi-media system)..... 181

ISOFIX child seat anchor
Seats suitable for attaching..... 66
ISOFIX child seat securing system
Fitting..... 67

J

Jack
Declaration of conformity..... 30
Storage location..... 376
Jump-start connection, Starting assistance
General notes..... 357

K

Key, Car key, Ignition key, Vehicle key
Acoustic locking verification signal..... 82
Battery..... 83
Deactivating a function..... 82
Emergency key..... 83
Energy consumption..... 82
Features..... 81
Key ring attachment..... 83
Overview..... 81
Problem..... 85
Unlocking setting..... 82
KEYLESS-GO
Deactivating a function..... 82
Locking/unlocking the vehicle..... 86
Problem..... 88
Unlocking setting..... 82
Kickdown, Acceleration
Using..... 208
Knee airbag..... 46

L

Light adjustment
Low beam (driving abroad)..... 159
Light switch
Overview..... 159
Lights, Lighting
Active headlamps..... 162
Adaptive Highbeam Assist Plus..... 166
Automatic driving lights..... 160
Bad weather light..... 164
City lighting..... 164
Combination switch..... 161
Cornering light..... 163
Driving abroad (low beam light adjustment)..... 159
Fog light (enhanced)..... 163
Hazard warning lights..... 162
Headlamp flashing..... 161
High beam..... 161
Intelligent Light System..... 162
Light switch..... 159
Low beam..... 159
Motorway mode..... 163
Parking lights..... 159
Rear fog light..... 159
Responsibility for lighting systems..... 159
Setting the dipped beam..... 168
Setting the exterior lighting switch-off delay time..... 168
Standing lights..... 159
Switching the Intelligent Light System on/off..... 165
Switching the locator lighting on/off..... 168
Turn signal indicator..... 161
Limiter, Driving system, Limiting speed, Maximum speed
Function..... 227
Passive mode..... 227
Permanent setting..... 228
System limitations..... 227

Live Traffic Information
Switching the traffic information display on... 308
Loading
Bag hook... 146
Notes... 139
Loading guidelines... 139
Loads
Securing... 139
Locator lighting
Activating/deactivating... 168
Locking/unlocking, Unlocking
Activating/deactivating the automatic locking feature... 88
Additional door lock... 85
Emergency key... 92
KEYLESS-GO... 86
Unlocking/opening the doors from the inside... 86
Low beam
Light adjustment (driving abroad)... 159
Switching on/off... 159
Luggage
Net hooks... 143
Securing... 139
Luggage net hooks... 143

M

MAGIC VISION CONTROL
Windscreen wipers... 172
Malfunction
Restraint system... 40
Manoeuvring assistance
Cross traffic warning... 275
Drive Away Assist... 274
Manoeuvring assistant
Activating/deactivating... 277
Manoeuvring brake function... 276
Map, Setting the map scale
Displaying online map contents... 308
Displaying weather information... 308
Moving... 307
Selecting the map orientation... 307
Setting the map scale... 307
Massage programmes
Overview... 129
Resetting the settings... 130
Selecting the front seats... 129
Massage settings
Resetting... 130
Maximum gross vehicle weight... 459
Maximum permissible gross vehicle weight... 459
MBUX in-car assistant (multimedia system)
Overview... 289
MBUX Interior Assistant
Anticipatory exit warning... 291
Automatic preselection of the outside mirror... 293
Switching the reading light for the driver and front passenger on/off contact-free... 292
Switching the search light for the driver on/off... 292
MBUX Interior Assistant (multimedia system)
Calling up favourites with the V pose... 294
Operating a function with the favourites pose... 294

MBUX multimedia system
Activating/deactivating snow chain mode ... 370
Activating/deactivating standby mode ... 219
Collision detection (parked vehicle) ... 217
Configuring display settings ... 283
Configuring drive program I ... 204
Driver camera ... 294
Home screen ... 286
Notes ... 285
Operating the touchscreen ... 287
Overview ... 285
Setting route-based speed adaptation ... 235
Setting the footwell temperature ... 180
Setting the rear climate control ... 180
Setting the stationary heater/ventilation ... 187

MBUX Voice Assistant
Function ... 288
Voice prompting ... 288

Media
Overview of the functions and symbols ... 328

Medical aids ... 34

Memory function
Function ... 135
Head-up display – Calling up stored settings ... 136
Head-up display – Storing settings ... 136
Operating ... 136
Outside mirrors – Calling up stored settings ... 136
Outside mirrors – Storing settings ... 136
Seat – Calling up stored settings ... 136
Seat – Storing settings ... 136
Steering wheel – Calling up saved settings ... 136
Steering wheel – Saving settings ... 136

Memory function in the rear passenger compartment
Function ... 136
Operating rear seats ... 137
Operating the front passenger seat and rear seat ... 138

Menus
Notes ... 279

Menus (driver display)
Notes ... 279

Mercedes me app
Information ... 318

Mercedes me calls
Arranging a service appointment ... 316
Calling the Mercedes-Benz Customer Centre ... 315
Calling the Mercedes-Benz Customer Centre after automatic accident or breakdown detection ... 315
Consenting to data transfer ... 316
Information ... 314
Making a call via the overhead control panel ... 314
Transferred data ... 316

Mercedes me connect
Accident and Breakdown Management ... 313
Information ... 312
Transferred data ... 313

Mercedes-Benz emergency call system, Emergency call, Help call
Automatic emergency call ... 323
Information ... 320
Information on data processing ... 326
Information on data transfer ... 324
Manual emergency call ... 323

Overview ... 322
Self diagnosis ... 326
Starting/ending ERA-GLONASS test mode ... 326
Message memory ... 471
Mobile phone
Authorising (Remote Parking Assist) ... 274
Frequencies ... 385
Transmission output (maximum) ... 385
Wireless charging (rear) ... 157
MOExtended tyres ... 350
Motorway mode ... 163
MULTIBEAM LED
Intelligent Light System ... 162
Multimedia system
Collision detection (parked vehicle) ... 218
Coupling the steering wheel heater to the seat heating ... 133
Enabling/disabling the rear airbag ... 57

N

Navigation
Notes ... 303
Overview ... 303
Switching on ... 303
Neutral
Engaging ... 206

O

On-board electronics
Engine electronics ... 384
Notes ... 384
Two-way radios ... 384
Online services
Data storage ... 37
Open-source software ... 38
Opening the boot lid using your foot
HANDS-FREE ACCESS ... 96
Operating fluids
Additives (fuel) ... 463
Brake fluid ... 467
Coolant (engine) ... 467
Engine oil ... 465
Fuel (diesel) ... 464
Fuel (petrol) ... 462
Notes ... 461
Windscreen washer fluid ... 468
Operating safety
48 V on-board electrical system ... 24
Declaration of conformity (electromagnetic compatibility) ... 25
Declaration of conformity (jack) ... 30
Declaration of conformity (TIREFIT kit) ... 31
Declaration of conformity (wireless vehicle components) ... 26
EQ Boost technology ... 24
Information ... 24
Optimised acceleration, Start-off assist
Activating ... 195
Outside mirrors, Mirrors
Anti-dazzle mode (automatic) ... 174
Automatic mirror folding function ... 175
Automatic preselection (MBUX Interior Assistant) ... 293
Folding in/out ... 173
Operating the memory function ... 136
Parking position ... 174
Setting ... 173
Overhead control panel
Overview ... 12

Owner's Manual
Vehicle equipment ... 23
Owner's Manual (digital) ... 20

P

Paint code ... 459
Paintwork (cleaning instructions) ... 343
Panel heating
Setting ... 131
Park position
Inserting ... 207
Selecting automatically ... 207
Parking Assist PARKTRONIC, Driving system, Parking aid
Activating ... 265
Adjusting warning tones ... 266
Deactivating ... 265
Function ... 263
System limitations ... 263
Parking lights ... 159
Parking position
Outside mirrors ... 174
Storing the position of the passenger outside mirror using reverse gear ... 175
Parking up ... 218
Period out of use
Activating/deactivating standby mode ... 219
Standby mode function ... 218
Permissible axle load ... 459
Permitted towing methods ... 361
Petrol ... 462
Pets in the vehicle, Occupant safety ... 80
Plastic trim (Care) ... 346
Post-collision brake, Occupant safety ... 58
Power closing function
Boot lid ... 94
Door ... 92
Power supply
Switching on (Start/Stop button) ... 192
Pre-entry climate control (immediate) ... 185
Pre-entry climate control at departure time
Activating/deactivating ... 184
Function ... 183
Setting ... 184
PRE-SAFE® (anticipatory occupant protection), Anticipatory occupant protection, Occupant safety, Preventative occupant protection system
Function ... 57
PRE-SAFE® Sound ... 57
Reversing measures ... 57
PRE-SAFE® Impulse Side, Occupant safety
Activation ... 40
Function ... 58
PRE-SAFE® PLUS (anticipatory occupant protection plus), Anticipatory occupant protection, Occupant safety, Preventative occupant protection system
Function ... 57
Reversing measures ... 57
Profile
Notes ... 295
Protection against collision ... 276
Protection of the environment
Notes ... 21
Take-back of end-of-life vehicles ... 21

Q

QR code
Rescue card 34

Qualified specialist workshop, Authorised workshop, Dealership, Mercedes-Benz service centre, Service centre, Workshop 33

R

Radar and ultrasonic sensors
Damage 219

Radio
Overview of the functions and symbols 332

Radio operating permits 386

Rain-closing feature
Side windows 101
Sliding sunroof 106

REACH regulation 33

Reading light
Switching on/off with hand movements 292

Rear airbag, Occupant safety, REAR SEAT AIR BAG status display
Activating/deactivating 57
Points to remember when the rear seat is occupied 54
REAR SEAT AIR BAG indicator lamps 56

Rear axle steering 199

Rear climate control
Setting (MBUX multimedia system) 180

Rear door (child safety lock) 78

Rear fog light
Switching on/off 160

Rear seat belt
Status display 46

Rear window
Roller sunblind 108

Rear window heater 177

Rear-view mirror
Anti-dazzle mode (automatic) 174

Refrigerator box
Removing/fitting 153
Stowage compartment 154
Using 152

Refuelling
Refuelling the vehicle 209

Registration
Vehicle 33

Remote control (stationary heater/ventilation)
Displays 188
Problems 189
Replacing the battery 188
Setting 187

Remote Online
Charging the starter battery 194
Cooling/heating the vehicle interior 194
Starting the vehicle 194

Remote Parking Assist, Driving system
Authorising a mobile phone 274
Function 270
Operating 271
System limitations 270

Rescue card 34

Reserve
Fuel 465

Residual heat
Rear operating unit 181

Restraint system, Occupant safety
Basic instructions for children 59

Function in an accident ... 40
Functionality ... 39
Malfunction ... 40
Protection ... 39
Reduced protection ... 39
Self-test ... 39
Warning lamp ... 39

Reverse gear
Inserting ... 206

Reversing camera
Activating using GPS (360° Camera) ... 263
Function ... 258
Opening the camera cover (360° Camera) ... 263
Setting (360° Camera) ... 262, 263
Switching automatic operation on/off (360° Camera) ... 262

Rims (care) ... 344

Roller sunblind, Cover
Rear window ... 108
Side windows (electric) ... 108
Sliding sunroof ... 103

Roof lining (care) ... 346

Roof load ... 470

Route, Alternative route
Activating a commuter route ... 306
Calculating ... 306
Selecting a type ... 306
Selecting an alternative route ... 306

Route guidance with augmented reality
Activating ... 306
Displaying street names and house numbers ... 306

Route-based speed adaptation
Function ... 234
Setting ... 235

Run-flat characteristics
MOExtended tyres ... 350

Running-in notes ... 195

S

Safety vest ... 348

Search light
Switching on/off with hand movements ... 292

Seat, Driver's seat
Adjusting (electrically) ... 113
Adjusting a reclining rear seat ... 117
Adjusting the front passenger seat from the rear ... 117
Automatic seat adjustment ... 128
Configuring the settings ... 128
Correct driver's seat position ... 113
Massage programme overview ... 129
Operating the memory function ... 136
Panel heating ... 131
Rear footrest ... 121
Resetting the settings ... 130
Setting automatic lateral support adjustment ... 129
Setting options ... 14
Setting the fully reclined position ... 118
Workout programme overview ... 129

Seat (rear), Function seat (rear)
Setting options ... 16

Seat belt, Belt, Occupant safety, Seat belt warning
Activating/deactivating seat belt adjustment ... 45
Adjusting the height ... 44
Belt airbag ... 43
Care ... 346
Fastening ... 44

Protection ... 41
Rear seat belt status display ... 46
Reduced protection ... 42
Releasing ... 45
Seat belt adjustment (function) ... 45
Seat belt extender ... 44
Warning lamp ... 45
Seat belt adjustment
Activating/deactivating ... 45
Function ... 45
Seat belt extender ... 44
Seat belt tensioners
Activation ... 40
Seat cover (Care) ... 346
Seat heater
Activating/deactivating ... 130
Seat ventilation
Switching on/off ... 131
Self-test
Automatic front passenger front air-bag shutoff ... 52
Sensors (care) ... 344
Setting the footwell temperature
Setting ... 180
Shifting gears
Gearshift recommendation ... 208
Side airbag ... 46
Side windows, Window lifter
Automatic function ... 101
Child safety lock in the rear ... 79
Closing using the key ... 102
Convenience closing ... 102
Convenience opening ... 101
Opening with the key ... 101
Opening/closing ... 99
Problem ... 102
Rain-closing feature ... 101
Roller sunblind (electric) ... 108
Sliding sunroof, Panorama sliding sunroof
Automatic features ... 106
Closing ... 103
Closing using the key ... 102
Opening ... 103
Opening with the key ... 101
Problem ... 106
Rain-closing feature ... 106
Smartphone integration, Android Auto, Apple CarPlay®, Smartphone, iPhone®
Overview ... 319
Snow chain mode
Activating/deactivating ... 370
Snow chains, Anti-skid chains ... 369
Socket (12 V)
Rear ... 149
Socket (230 V), 230 V socket
Rear ... 150
Software update
System updates ... 299
Sound
PRE-SAFE® Sound ... 57
Wheels and tyres ... 369
Sound menu
Functions overview ... 334
Specific absorption rate ... 26
Speed limit for winter tyres
Setting ... 228
Standby mode
Activating/deactivating ... 219

Function..... 218
Standing lights..... 159
Start/stop button
Parking the vehicle..... 212
Starting the vehicle..... 193
Switching on the power supply or ignition..... 192
Starter battery
Charging (Remote Online)..... 194
Stationary heater/ventilation
Displays (remote control)..... 188
Problems (remote control)..... 189
Replacing the battery (remote control)... 188
Setting (MBUX multimedia system)..... 187
Setting (remote control)..... 187
Switching on/off (control panel)..... 186
STEER CONTROL
Function/notes..... 223
Steering
Rear axle steering..... 199
Steering wheel
Adjusting (electrically)..... 132
Care..... 346
Operating the memory function..... 136
Steering wheel heater..... 133
Steering wheel gearshift paddles, Shift paddles..... 207
Steering wheel heater
coupling to seat heating..... 133
Switching on/off..... 133
Stowage compartment
Handset (rear)..... 143
Luggage net hooks..... 143
Stowage space, Stowage areas, Stowage compartments
Armrest..... 142
Centre console..... 142
Door..... 142
Glove compartment..... 142
USB ports..... 142
Sulphur content..... 462
Suspension
Setting the suspension level (AIRMATIC)..... 257
Suspension level (AIRMATIC)
Setting..... 257
SVHC (substances of very high concern)..... 33
Switch-off delay time
Exterior..... 168
Interior..... 171
Synchronisation function
Activating/deactivating (MBUX multimedia system)..... 180
System settings
Overview of the system settings menu.... 299

T

Tailpipes (care)..... 344
Take-back of end-of-life vehicles, Recycling
Protection of the environment..... 21
Tank content
Fuel..... 465
Reserve (fuel)..... 465
Technical data
Information..... 384
Radio operating permits..... 386
Telephone, Smartphone
Authorising a mobile phone (Remote Parking Assist)..... 274
Connecting a mobile phone (Passkey).... 311

Connecting a mobile phone (Secure Simple Pairing)..... 311
Functions in the telephone menu..... 312
Notes..... 309
Operating modes..... 311
Telephone menu overview..... 311
Wireless charging (mobile phone in the rear)..... 157

Telephony operating modes
Bluetooth® Telephony..... 311
Making calls in the vehicle..... 311

Temperature..... 177

Through-loading feature
Locking..... 145

Through-loading feature in the rear compartment
Opening..... 144

TIREFIT kit, Tyre inflation compressor
Declaration of conformity..... 31
Storage location..... 351
Using..... 351

Toll system
Windscreen..... 176

Top Tether..... 69

Touch Control
Driver display..... 278, 279
Operating..... 287

Touch-sensitive controls..... 23

Touchscreen
Operating..... 287

Tow-away protection
Function..... 111
Priming/deactivating..... 111

Tow-bar system, Dinghy towing, Drawbar, Flat towing..... 277

Tow-starting..... 364

Towing away..... 362

Towing eye
Installing..... 364
Storage location..... 364

Towing methods..... 361

Traffic information
Switching on the display..... 308

Traffic light view
Activating/deactivating..... 250
Information..... 250

Traffic Sign Assist, Driving system
Function/notes..... 246
Setting..... 249
System limitations..... 246

Transmission position display..... 205

Transporting
Loading guidelines..... 139
Vehicle..... 363

Trim element (Care)..... 346

TuneIn, Internet radio
Calling up..... 333

Turn signal indicator
Activating/deactivating..... 161

TV
Information..... 331

Two-way radios
Frequencies..... 385
Notes on installation..... 384
Transmission output (maximum)..... 385

Tyre pressure, Air pressure
Checking (tyre pressure monitoring system)..... 372

Notes ... 370
Restarting the tyre pressure monitoring system ... 372
TIREFIT kit ... 351
Tyre pressure monitoring system (function) ... 371
Tyre pressure table ... 371

Tyre pressure monitor
Function ... 371

Tyre pressure monitoring system
Checking the tyre pressures ... 372
Checking the tyre temperature ... 372
Restarting ... 372

Tyre pressure table ... 371

Tyre temperature
Checking (tyre pressure monitoring system) ... 372
Tyre pressure monitoring system (function) ... 371

Tyre tread ... 369

Tyre-change tool kit
Overview ... 376

Tyres
Checking ... 369
Checking the tyre pressure (tyre pressure monitoring system) ... 372
Fitting ... 380
Flat tyre ... 350
Interchanging ... 376
MOExtended tyres ... 350
Noise ... 369
Notes on fitting ... 373
Removing ... 380
Replacing ... 373, 377
Replacing the wheel trim ... 377
Restarting the tyre pressure monitoring system ... 372
Selection ... 373
Snow chains ... 369
Storing ... 376
TIREFIT kit ... 351
Tyre pressure (Notes) ... 370
Tyre pressure monitoring system (function) ... 371
Tyre pressure table ... 371
Unusual handling characteristics ... 369

U

Unlocking setting ... 82

Updates
Important system updates ... 299

USB port
Rear ... 152

User profiles
Adding a user ... 297
Selecting user options ... 297

V

Vehicle, Starting the engine
Activating/deactivating standby mode ... 219
Additional door lock ... 85
Collision detection (parking) ... 217, 218
Correct use ... 33
Data acquisition ... 35
Data storage ... 35
Diagnostics connection ... 31
Equipment ... 23
Implied warranty ... 34
Locking (automatically) ... 88
Locking (from inside) ... 86
Locking/unlocking (emergency key) ... 92
Locking/unlocking (KEYLESS-GO) ... 86
Lowering ... 381
Medical aids ... 34

Parking up..... 218
QR code rescue card..... 34
Qualified specialist workshop..... 33
Raising..... 378
REACH regulation..... 33
Registration..... 33
Standby mode function..... 218
Starting (emergency operation mode)..... 193
Starting (Remote Online)..... 194
Starting (start/stop button)..... 193
SVHC (substances of very high concern)..... 33
Switching off (start/stop button)..... 212
Towing..... 277
Unlocking (from inside)..... 86
Ventilating (convenience opening)..... 101

Vehicle data
Displaying (DYNAMIC SELECT)..... 205
Roof load..... 470
Vehicle height..... 469
Vehicle length..... 469
Vehicle width..... 469
Wheelbase..... 469

Vehicle dimensions..... 469

Vehicle identification plate, Model series
EU general operating permit number..... 459
Maximum permissible gross vehicle weight..... 459
Paint code..... 459
Permissible axle load..... 459
VIN..... 459

Vehicle interior
Cooling or heating (Remote Online)..... 194

Vehicle tool kit, Tool
TIREFIT kit..... 351
Towing eye..... 364

Ventilating
Convenience opening..... 101

VIN, Vehicle identification number
Identification plate..... 459
Seat..... 459
Windscreen..... 459

Vision
Demisting windows..... 180
Windscreen heater..... 182

W

Warning triangle
Removing..... 348
Setting up..... 349

Warning/indicator lamp
ABS warning lamp..... 534
Active Brake Assist warning lamp..... 533
Brake system warning lamp (red)..... 531
Brake system warning lamp (yellow)..... 530
Coolant warning lamp (red)..... 527
Coolant warning lamp (yellow)..... 528
Electric parking brake indicator lamp (red)..... 530
Electric parking brake indicator lamp (yellow)..... 530
Electrical fault warning lamp..... 529
Engine diagnosis warning lamp..... 529
ESP® OFF warning lamp..... 535
ESP® warning lamp flashes..... 534
ESP® warning lamp lights up..... 535

Fuel reserve warning lamp lights up... 529
SOS NOT READY Mercedes me connect warning lamp... 536
Power steering warning lamp (red)... 525
Power steering warning lamp (yellow)... 525
Rear axle steering warning lamp (red)... 526
Rear axle steering warning lamp (yellow)... 526
Restraint system warning lamp... 524
Seat belt warning lamp flashes... 524
Seat belt warning lamp lights up... 525
Suspension warning lamp (red)... 533
Suspension warning lamp (yellow)... 532
Tyre pressure monitoring system warning lamp flashes... 537
Tyre pressure monitoring system warning lamp lights up... 537
Warning lamp for distance warning function... 532
REAR SEAT AIR BAG... 56

Warning/indicator lamps
PASSENGER AIR BAG... 52

Warranty... 34

Washing by hand (care)... 343

Weather information... 308

Web browser
Overview... 319

Wheel change
Fitting a new wheel... 380
Lowering the vehicle... 381
Preparation... 377
Raising the vehicle... 378
Removing a wheel... 380
Removing/fitting hub caps... 377

Wheel rotation... 376

Wheels
Care... 344
Checking... 369
Checking the tyre pressure (tyre pressure monitoring system)... 372
Fitting... 380
Flat tyre... 350
Interchanging... 376
MOExtended tyres... 350
Noise... 369
Notes on fitting... 373
Removing... 380
Replacing... 373, 377
Replacing the hub cap... 377
Restarting the tyre pressure monitoring system... 372
Selection... 373
Snow chains... 369
Storing... 376
TIREFIT kit... 351
Tyre pressure (Notes)... 370
Tyre pressure monitoring system (function)... 371
Tyre pressure table... 371
Unusual handling characteristics... 369

Wi-Fi
Configuring... 301

Window airbag..... 46
Windows
Care..... 344
Windscreen
Demisting..... 177
Infrared reflective coating..... 176
Radio waves..... 176
Replacing wiper blades (MAGIC VISION CONTROL)..... 172
Windscreen heater..... 182
Windscreen washer fluid, Washer fluid
Notes..... 468
Windscreen washer system
Topping up..... 340
Windscreen wipers
Replacing wiper blades (MAGIC VISION CONTROL)..... 172
Switching on/off..... 171
Winter operation
Activating/deactivating snow chain mode..... 370
Snow chains..... 369
Winter tyres
Setting the permanent speed limit..... 228
Wiper blades
Care..... 344
Replacing (MAGIC VISION CONTROL)..... 172
Wireless charging
Function/notes..... 155
Mobile phone..... 156
Mobile phone (rear)..... 157
Wireless vehicle components
Declaration of conformity..... 26
Specific absorption rate..... 26
Workout program
Overview..... 129

Publication details

Internet

Further information about Mercedes-Benz vehicles and about Mercedes-Benz AG can be found on the following websites:

https://www.mercedes-benz.com

https://www.daimler.com

Documentation team

You are welcome to forward any queries or suggestions you may have regarding this Owner's Manual to the technical documentation team at the following address:

Mercedes-Benz AG, HPC: CAC, Customer Service, 70546 Stuttgart, Germany

©Mercedes-Benz AG: Not to be reprinted, translated or otherwise reproduced, in whole or in part, without written permission from Mercedes-Benz AG.

Vehicle manufacturer

Mercedes-Benz AG

Mercedesstraße 120

70372 Stuttgart

Germany

As at 06.07.20

P223 0210 02



Digital – in the vehicle

Familiarise yourself with the contents of the Owner's Manual directly via the vehicle's multimedia system (menu item "Vehicle information"). Start with the quick guide or broaden your knowledge with practical tips.



Vehicle document wallet

Here you can find comprehensive information about operating your vehicle and about services and guarantees in printed form.



Digital – on the Internet

You can find the Owner's Manual on the Mercedes-Benz homepage.



Digital – as an App

The Mercedes-Benz Guides App is available free-of-charge in familiar App stores.

Apple® iOS

Android™

Order no. P223 0210 02
Edition NA2020-12f